www.philips.com/welcome

HTS3375



EN	User manual
ES_LA	Manual del usuario
PT_BR	Manual do Usuário



México



Es necesario que lea cuidadosamente su instructivo de manejo.



Descriptión: Reproductor de Disco de Video Digital

Modelo: HTS3375

Alimentacón: 100-127V/220-240V; 50-60 Hz intercambiable.

Consumo: 180 W

Importador: Philips Mexicana, S.A. de C.V.

Domicilio: Av. La Palma No. 6.

Col. San Fernando, La Herradura Huixquilucan, Edo de Mexico

C.P. 52784, Mexico

Localidad y Tel.: Tel. 52 69 90 00

Exportador: Philips Electronics HK, Ltd.

País de Origen: China

N^ode Serie:

LEA CUICADOSAMENTE ESTE INSTRUCTIVO ANTES DE USAR SU APARATO Evite o uso prolongado do aparelho com volume superior a 85 decibéis pois isto poderá prejudicar a sua audição.

Nível de Decibéis	Exemplos
30	Biblioteca silenciosa, sussurros leves
40	Sala de estar, refrigerador, quarto longe do trânsito
50	Trânsito leve, conversação normal, escritório silencioso
60	Ar condicionado a uma distância de 6 m, máquina de costura
70	Aspirador de pó, secador de cabelo, restaurante ruidoso
80	Tráfego médio de cidade, coletor de lixo, alarme de despertador a uma distância de 60 cm
	OS ABAIXO PODEM SER PERIGOSOS) DE EXPOSIÇÃO CONSTANTE
90	Metrô, motocicleta, tráfego de caminhão, cortador de grama
100	Caminhão de lixo, serra elétrica, furadeira pneumática
120	Show de banda de rock em frente às caixas acústicas, trovão
140	Tiro de arma de fogo, avião a jato
180	Lançamento de foguete

AVISO IMPORTANTE

Philips Mexicana, S.A. de C.V. no se hace responsable por daños o desperfectos causados por:

- Maltrato, descuido o mal uso, presencia de insectos o roedores (cucarachas, ratones etc.).
- Cuando el aparato no haya sido operarado de acuerdo con el instructivo del uso, fuera de los valores nominales y tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación elétrica y las características que deben renuir las instalaciones auxiliares.
- Por fenómenos naturales tales como: temblores, inundaciones, incendios, descargas electricas, rayos etc. o delitos causados por terceros (choques asaltos, riñas, etc.).

Contents

1	Important	4
	Safety and important notice	4
	Trademark notice	5
2	Your Home Theater System	6
	Feature highlights	6
	Product overview	7
3	Connect	10
	Place the Home Theater System	10
	Connect video cables	10
	Connect speakers and subwoofer	12
	Connect radio antenna	13
	Connect audio cables/other devices	13
	Connect power cord	15
4	Get started	16
	Insert the remote control batteries	16
	Find the correct viewing channel	17
	Select menu display language	17
	Turn on Progressive Scan	18
	Change speaker settings	19
	Use Philips EasyLink	20
	Select a play source	22
5	Play	23
	Play a disc	23
	Play video	23
	Play music	27
	Play photo	28
	Play from USB device	29
	Play from portable media player	30
	Play from radio	30
6	Advanced features	32
	Create MP3 audio files	32

7	Adjust sound Control the volume Select surround sound Select a preset sound Adjusting microphone volume level Karaoke settings Turning vocals off (voice cancel)	33 33 33 34 34 35
8	Adjust settings General setup Audio setup Video setup Preferences	36 36 38 40 42
9	Additional Information Update software Care	44 44 44
10	Specifications	45
11	Troubleshooting	47
12	Glossary	49

Important

Safety and important notice

Warning

- · Risk of overheating! Never install the Home Theater System in a confined space. Always leave a space of at least 4 inches around the Home Theater System for ventilation. Ensure curtains or other objects never cover the ventilation slots on the Home Theater System.
- Never place the Home Theater System, remote control or batteries near naked flames or other heat sources, including direct sunlight.
- · Only use this Home Theater System indoors. Keep this Home Theater System away from water, moisture and liquid-filled objects.
- Never place this Home Theater System on other electrical equipment.
- · Keep away from this Home Theater System during lightning storms.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Visible and invisible laser radiation when open. Avoid exposure to beam.

Recycling notice



This electronic equipment contains a large number of materials that can be recycled or reused if disassembled by a specialised company. If you are disposing of an old machine, please take it to a recycling centre. Please observe the local regulations regarding disposal of packaging materials, exhausted batteries and old equipment.

Copyright notice



Be responsible Respect copyrights

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protected technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation, Reverse engineering or disassembly is prohibited.

About Progressive Scan

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artefacts to be displayed on the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service centre.

Trademark notice



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories



DivX, DivX Ultra Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Official DivX® Ultra Certified product. Plays all versions of DivX® video (including DivX® 6) with enhanced playback of DivX® media files and the DivX® Media Format. Plays DivX® video with menus, subtitles and audio tracks.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.



ENERGY STAR and the ENERGY STAR mark are registered U.S. trademarks.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



Your Home Theater System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Feature highlights

Video upscaling to 1080p

Enjoy watching discs in the highest picture quality available for your HDTV. This Home Theater System offers full high-definition video playback up to 1080p resolution that provides a highly detailled picture and increased sharpness that delivers a more true-to-life picture for an amazing viewing experience.

Philips EasyLink

Your Home Theater System supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.



 Philips does not guarantee 100% interoperability with all HDMI CEC devices.

Listen to rich uncompressed multi-channel surround sound

This Home Theater System supports 5.1 channels of uncompressed audio that delivers a real-to-life sound experience as if you are listening to it live.

High speed USB 2.0 Link and MP3 link

Simply plug your USB device into the USB jack to play your MP3/WMA/IPEG/DivX files; or plug your portable media player to the MP3 LINK jack to enjoy the music play in superb sound quality.

Sync the audio output with the video play

Synchronise audio and video by delaying the audio output if the video signal sent to the TV is slower than the audio streams.

Create MP3 files

Convert your favourite audio tracks from an audio CD into MP3 format. The created MP3 files are saved in your USB device.

Screen Fit

View the movie in full screen display on any

Karaoke scoring function

Karaoke scoring gives a score and a comment for each performance. Have your singing performance scored for even more karaoke fun at home!

 
Region codes

You can play discs with the following region codes

DVD region code	Countries
	Latin America

Product overview

Main unit



(1) (Standby-On)

• Turns on the Home Theater System or switches to standby mode.

(2) Disc compartment

(3) ≜ (Open/Close)

• Opens or closes the disc compartment.

4 ►II (Play/Pause)

- Starts, pauses or resumes disc play.
- In radio mode, automatically tunes radio stations during first-time setup.

⑤ **■** (Stop)

- Stops disc play.
- In radio mode, erases the current preset radio station.

6 SOURCE

 Selects a media to play or listen to audio from the connected device.

7 Display panel

• Displays the current status or disc information.

(8) IR sensor

 Detects signals from the remote control. Point the remote control at the IR sensor.

- 9 VOL
 - Increases or decreases volume.

(10) MP3 LINK

• Connects a portable audio player


(11) MIC

• Connects a microphone.

(12) ← (USB)

Connects a USB supported device.

Remote Control

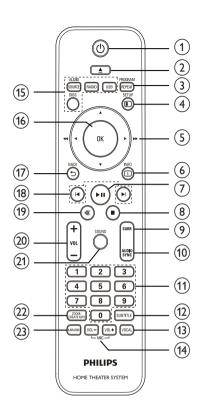

① (Standby-On)

- Turns on the Home Theater System or switches to standby mode.
- Press and hold to turn off the Home Theater System and all HDMI CEC compliant devices.

(2) ≜ (Open/Close)

Opens or closes the disc compartment.

3) PROGRAM / REPEAT

- In radio mode, resets the list of preset stations: press to manually reset; press and hold to automatically reset.
- Selects or turns off repeat or shuffle mode.

(4) © SETUP

Accesses or exits the setup menu.

(5) AT IN (Navigation buttons)

- Navigates through the menus.
- Press left and right for fast backward or forward search.
- In radio mode, press up and down to tune the radio frequency.
- In radio mode, press left or right to start auto search.

(6) **I**INFO

- For discs, displays information about the current status or the disc.
- For slideshows, displays a thumbnail view of photo files.

(7) ► II (Play/Pause)

- Starts, pauses or resumes disc play.
- In radio mode, automatically tunes radio stations during first-time setup.

8 ■(Stop)

- Stops disc play.
- In radio mode, erases the current preset radio station.

9 SURR (Surround Sound)

• Switches to supported surround sound or stereo sound.

(10) AUDIO SYNC

- Selects an audio language or channel.
- Press and hold to access the setting for audio sync, then press VOL +/- to set the audio delay time.

(11) Numeric buttons

Selects an item to play.

(12) SUBTITLE

• Select DVD or DivX subtitle languages.

(13) VOCAL

 Changes the audio channel of a karaoke disc.

(14) MIC (VOL +/-)

Increases or decreases microphone volume

(15) Source buttons

- AUDIO SOURCE: Selects an audio input source.
- RADIO: Switches to FM band.
- USB: Switches to the USB source.
- DISC: Switches to the disc source.

(16) OK

Confirms an entry or selection.

(17) **→** BACK

- Returns to a previous screen.
- For DVD, goes to the title menu.
- For VCD version 2.0 or SVCD with PBC turned on, returns to the menu during playback.

(18) I◀ / ► (Previous/Next)

 Skips to the previous or next title, chapter or track.

(Mute) **№** (Mute)

• Mutes or restores audio output.

20 VOL +/-

Increases or decreases volume.

②1) SOUND

Selects a predefined sound effect.

22) ZOOM / CREATE MP3

- Zooms in or out of the picture.
- Accesses the menu to create MP3.

23) KARAOKE

• Accesses or exits the karaoke menu.

Connect

Make the following connections to use your Home Theater System.

Basic connections:

- Video
- Speakers and subwoofer
- Power

Optional connections:

- Radio antenna
- Audio
 - Audio from TV
 - Audio from digibox/recorder/game console
- Other devices
 - Portable media player
 - USB device




Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all the devices are disconnected from the power outlet.

Place the Home Theater System

- Place the Home Theater System where it cannot be pushed, pulled over or knocked down. Do not place it in an enclosed cabinet.
- Make sure that you have full access to the power cord for easy disconnection of the Home Theater System from the power supply.

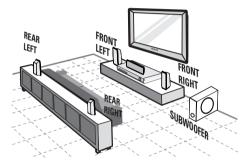

- Place this Home Theater System near the
- Place the speakers system at normal listening ear-level and directly parallel to the listening area.
- Place the subwoofer in the corner of the room or at least 3 feet away from the TV.



• To avoid magnetic interference or unwanted noise, never place this Home Theater System too close to any radiation devices.

Connect video cables

Connect this Home Theater System to TV to view disc play. Select the best video connection that the TV can support.


- Option 1: Connect to the HDMI jack (for a HDMI, DVI or HDCP-compliant TV).
- Option 2: Connect to the component video jacks (for a standard TV or progressive scan TV).
- Option 3: Connect to the video (CVBS) jack (for a standard TV).



Note

You must connect this Home Theater System directly to a TV.

Option 1: Connect to the HDMI jack

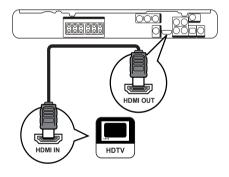

1 Connect an HDMI cable to the **HDMI**OUT jack on this Home Theater System and the HDMI input jack on the TV.



Note


 If your device supports HDMI CEC, you can control compliant devices with a single remote control. (see 'Get started' > 'Use Philips EasyLink').



Гір

- If the TV has a DVI connection only, connect via a HDMI/DVI adaptor. Connect an audio cable for sound output.
- You can optimise the video output. (see 'Adjust settings' > 'Video setup' > [HDMI Setup]).
- This type of connection provides the best picture quality.

Option 2: Connect to the component video jack

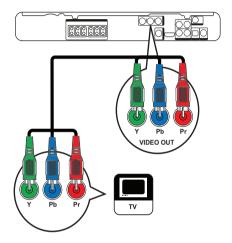


- 1 Connect the component video cable (not supplied) to the Y Pb Pr jacks on this Home Theater System and the COMPONENT VIDEO input jacks on the TV.
 - If a progressive scan TV is used, you may turn on the progressive scan mode. (see 'Get started' > 'Turn on progressive scan').



Vote

- The component video input jack on the TV might be labelled as Y Pb/Cb Pr/Cr or YUV.
- This type of connection provides good picture quality.

Option 3: Connect to the Video (CVBS) jack

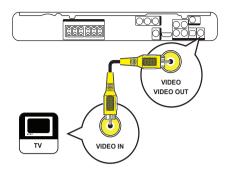


Connect a composite video cable to the **VIDEO** jack on this Home Theater System and the VIDEO input jack on the TV.



Note

- The video input jack on the TV might be labelled as A/V IN, VIDEO IN, COMPOSITE or BASEBAND.
- This type of connection provides standard picture quality.

Connect speakers and subwoofer

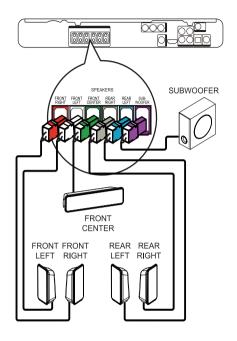


Connect the speakers and subwoofer to the matching jacks on the Home Theater System.



Note

• Ensure that the colours of the plugs and jacks are matched.

 Connect radio antenna



- 1 Connect the FM antenna to the FM75 Ω jack on this Home Theater System (for some models, this cable is already connected).
- 2 Extend the FM antenna and fix its ends to the wall.




 For better FM stereo reception, connect to an external FM antenna.

Connect audio cables/other devices

Route the audio from other devices to this Home Theater System to enjoy audio play with multi-channel surround capabilities.

Connect audio to TV

(also used for EasyLink control)

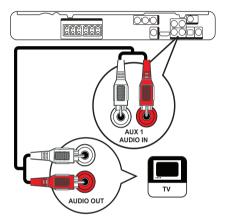

1 Connect the audio cables (not supplied) to the AUDIO IN-AUX1 jacks on the Home Theater System and the AUDIO output jacks on the TV.




Note

 To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'AUX1' is displayed on the display panel.

Connect audio from cable box/ recorder/game console

You can choose to connect to analogue or digital jacks depending on the device capabilities.

Connect to analogue jacks

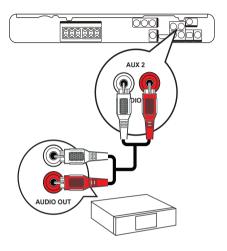


Connect the audio cables (not supplied) to the AUDIO IN-AUX2 jacks on the Home Theater System and the AUDIO output jacks on the device.



 To listen to the audio output from this connection. press AUDIO SOURCE repeatedly until 'AUX2' is displayed on the display panel.

Connect to coaxial jack

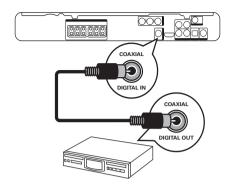


Connect a coaxial cable (not supplied) to the COAXIAL DIGITAL-IN jack on the Home Theater System and the COAXIAL/DIGITAL output jack on the device.



· To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'COAX IN' is displayed on the display panel.

Connect to optical jack

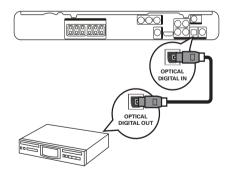


Connect an optical cable (not supplied) to the OPTICAL DIGITAL-IN jack on the Home Theater System and the OPTICAL/ SPDIF output jack on the device.



To listen to the audio output from this connection. press AUDIO SOURCE repeatedly until 'OPTI IN' is displayed on the display panel.

 Connect portable media player




Connect a 3.5mm stereo audio cable (not supplied) to the MP3 LINK jack on this Home Theater System and the phone jack on the portable media player (such as MP3 player).



Note

 To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'MP3 LINK' is displayed on the display panel.

Connect USB device

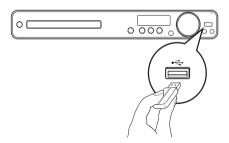

Connect the USB device to ◆ USB jack on this Home Theater System.



- This Home Theater System can only play/view MP3. WMA, DivX (Ultra) or IPEG files that are stored on such devices.
- Press USB to access the content and play the files.

Connect power cord




Warning

- · Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the Home Theater System.
- · Before connecting to a socket, set the voltage selector (at the rear or bottom of this Home Theater System) to the local power line voltage.
- Connect the power cord to the socket when all the required connections are made.
 - → The Home Theater System is ready to be set up for use.

Get started

Insert the remote control **batteries**

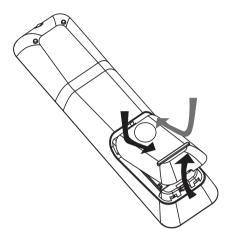

- On the back of the remote control, slide the battery cover to remove it.
- Insert the 2 supplied batteries (AAA). Be sure the + and - ends of the batteries line up with the markings inside the case.
- Slide the cover back into position.




Note

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- · Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- · Batteries contain chemical substances, they should be disposed of properly.

Control a play source

- Press RADIO. USB or DISC button to select the source you wish to control.
- Select the desired function (for example **|4**, **▶**|).

 Navigate through the menu



- Point the remote control directly at the remote sensor on the Home Theater System and select the desired function.
- Press the following buttons on the remote control to navigate through the on-screen menus.

Button	Action
AV	Move up or down
◆	Move left or right
OK	Confirm a selection
1 2 3 4 5 6 7 8 9	Enter numbers

Find the correct viewing channel

- 1 Press \circ to turn on the Home Theater System.
- Press DISC to switch to disc mode.
- Turn on the TV and switch to the correct video-in channel in one of the following ways:
 - Go to the lowest channel on your TV, then press the Channel Down button until you see the Philips screen.
 - Press the SOURCE button repeatedly on the remote control of your TV.



 The video-in channel is between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO, HDMI etc. See the TV user manual on how to select the correct input on the TV.

Select menu display language



Note

 Skip this setting if this Home Theater System is connected to a HDMI CEC compliant TV. It switches automatically to the same OSD menu language as per your TV setting.

General Setup	
EasyLink Setup	• Auto
Disc Lock	English
Display Dim	O Español
OSD Language	O Português
Screen Saver	
Sleep Timer	
DivX(R) VOD Code	

- 1 Press DISC.
- 2 Press © SETUP.
 - → [General Setup] menu is displayed.
- 3 Press ▶.
- 4 Press ▲▼ to select [OSD Language] in the menu, then press ▶.
 - The language options are different depending on your country or region. It may not correspond to the illustration shown here.
- 5 Press ▲▼ to select a language, then press OK.



Пр

 You can set the default language for DVD disc menu (see 'Adjust settings' > 'Preferences' > [Disc Menu]).

Turn on Progressive Scan

If the TV supports progressive scan output, you can connect this Home Theater System and the TV using component video connection. (see 'Connect video cables' > 'Option 2: Connect to the component video jack').

Video Setup	
TV System	On On
TV Display	O Off
Screen Fit	
Picture Setting	
HDMI Setup	
Closed Caption	
Progressive	

- 1 Turn on the TV and ensure that the TV progressive scan mode is deactivated (see the TV user manual).
- 2 Switch the TV to the correct viewing channel for this Home Theater System.
- 3 Press DISC.
- 4 Press SETUP.
- Press ▼ to select [Video Setup] in the menu, then press ►.
- 6 Select [Progressive] > [On], then press OK
 - → A warning message is displayed.
- 7 To proceed, select [Ok] and press OK.
 - → The progressive setup is complete.



- If a blank/distorted screen is displayed, wait for 15 seconds for the auto recover.
- If no picture is displayed, turn off the progressive scan mode as follows: 1) Press ≜ to open the disc compartment. 2) Press ◀. 3) Press AUDIO SYNC.

- 8 Press SETUP to exit the menu.
- **9** You can now turn on the progressive scan mode on the TV.



 During play, when progressive scan mode is on for both this Home Theater System and the TV, distorted picture may be displayed. Turn off the progressive scan feature on both this Home Theater System and the TV.

Change speaker settings


Ideally, the distance between listening position and all the speakers should be the same. If not, change the speaker settings based on their distance from the listening position to obtain the best possible surround sound.

Audio Setup	
Speakers Volume	
Speakers Delay	
HDMI Audio	
CD Upsampling	
Audio Sync	

- 1 Press DISC.
- 2 Press SETUP.
- 3 Press ▼ to select [Audio Setup] in the menu, then press ▶.
 - If the speaker setup option is not accessible, press ■ twice before you try the above steps again.

To set the speakers level


1 Select [Speakers Volume] in the menu, then press ▶.

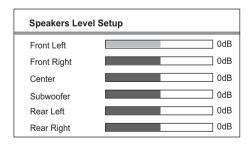

- 2 Press ◆ to change the volume level, then press OK.
 - → The test tone is emitted from the speaker.
 - Repeat the above setting for other speakers until all the speakers' output level sounds equally balance.
 - To exit the menu, press © SETUP.

To set the output delay time (centre and rear speakers only)

 1 Select [Speakers Delay] in the menu, then press ▶.



- Press ◆ to set the delay time, then press OK.
 - Repeat the above setting for other speakers until the sound output from different speakers reach the listening position at the same time.
 - To exit the menu, press **SETUP**.



- Set a longer delay time if the centre speaker or rear speaker is closer to the listening position than the front speaker.
- Allow 1ms setting for every 1 foot distance between the speaker and the listening position.

Use Philips EasyLink

Your Home Theater System supports
Philips EasyLink, which uses the HDMI CEC
(Consumer Electronics Control) protocol.
EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.



Note

- Philips does not guarantee 100% interoperability with all HDMLCFC devices.
- Turn on the HDMI CEC operations on the TV and other connected devices. See TVs/devices manual for details.
- 2 You can now enjoy the following Philips EasyLink controls.

EasyLink

You can turn off or turn on all EasyLink features.

One-touch play

When you connect your Home Theater System to devices that support one-touch play, you can control your Home Theater System and the devices with one remote control. For example, when you press Play on your Home Theater System remote control, your TV automatically switches to the correct channel to show the DVD content. To enable One-touch play, a video disc must be placed in the disc compartment before operation.

One-touch standby

When you connect your Home Theater System to devices that support standby, you can use your Home Theater System remote control to put your Home Theater System and all connected HDMI devices in standby mode. You can perform one-touch standby using the remote control from any of the connected HDMI devices.

System Audio Control

When you connect your Home Theater System to HDMI CEC compliant devices, your Home Theater System can switch automatically to play audio from the connected device.

To use one-touch audio, you must map the audio input from the connected device to your Home Theater System.

Audio Input Mapping

When you map the audio input correctly, this Home Theater System switches to the audio from the played device automatically.

Map the audio inputs to the connected devices



Note

 Before you start, ensure that the audio output of the HDMI TV and other HDMI devices have been connected to the audio input jacks on this Home Theater System.

General Setup	
EasyLink Setup	O EasyLink
Disc Lock	One Touch Play
Display Dim	One Touch Standby
OSD Language	O System Audio Control
Screen Saver	 Audio Input Mapping
Sleep Timer	
DivX(R) VOD Code	

- 1 Press DISC
- 2 Press SETUP.→ [General Setup] menu is displayed.
- 3 Press ►.
- 4 Select [EasyLink Setup], then press ▶.
 - [One Touch Play] and [One Touch Standby] functions are turned on by default in the factory.

- 5 Select [System Audio Control] > [On], then press OK to start scanning devices.
 - → Once complete, audio input mapping menu is displayed.


Audio Input Mapp	ping
Aux 1	o [TV]
Aux 2	O [DVD 3400]
Coaxial In	O other (Non-HDMI)
Optical In	

For example, if the TV audio is connected to the **AUX1** jack on this Home Theater System, select **[Aux1]** and map with the TV (brand name) at the right panel.

- 6 Select the audio input of this Home Theater System that is used to connect to other HDMI devices (e.g. AUX1, AUX2), then press ▶.
- 7 Select the correct connected device, then press OK.
 - → Repeat steps 5–7 to map other connected devices.
- 8 Press SETUP to exit the menu.


Select a play source

 On the main unit



Press **SOURCE** button repeatedly to select: DISC > USB > FM > AUX 1 > AUX 2 > COAX IN > OPTI IN > MP3 LINK > DISC ...

 On the remote control



Press AUDIO SOURCE repeatedly to switch to the connected audio source:

Display	Device connected to
AUX 1	AUDIO IN-AUX1 jacks
AUX 2	AUDIO IN-AUX2 jacks
COAX IN	COAXIAL DIGITAL IN
	socket
OPTI IN	OPTICAL DIGITAL IN
	socket
MP3 LINK	MP3 LINK socket

- Press RADIO to switch to FM band.
- Press **USB** to switch to USB mode.
- Press **DISC** to switch to disc mode.

Play

Play a disc



Caution

- Never place any objects other than discs into the disc compartment.
- Never touch the disc optical lens inside the disc compartment.
- 1 Press ≜ to open the disc compartment.
- 2 Insert a disc with its label facing up.
 - For double-sided discs, load the side to play face up.
- 3 Press ≜ to close the disc compartment and start disc play.
 - To view disc play, turn on the TV to the correct viewing channel for this Home Theater System.
 - To stop disc play, press ■.



Note

- Check the types of discs supported. (see 'Specifications' > 'Playback media').
- If the password entry menu is displayed, enter the password before you can play the locked or restricted disc.
- If you pause or stop a disc for about 5 minutes, the screen saver activates. To deactivate the screen saver, press DISC.
- After you pause or stop a disc and no buttons are pressed within 15 minutes, this Home Theater System automatically switches to standby mode.

Play video



Note

 For video disc, playback always resumes from the point where it was last stopped. To start play from the beginning, press | while the message is displayed.

Control video play

- Play a title.
- 2 Use the remote control to control the title.

Button	Action
►II	Starts, pauses or resumes disc
	play.
	Stops disc play.
▶I	Skips to the next title or chapter.
I◀	Skips to the beginning of the
	current title or chapter. Press
	twice to jump to the previous
	title or chapter.
44 / >>	Searches fast-forward (right)
	or fast-backward (left). Press
	repeatedly to change the search
	speed.
	In pause mode, slow motion
	backward or forward play.
▲ / ▼	Searches slow-forward (down)
	or slow-backward (up). Press
	repeatedly to change the search
	speed.
	For VCD, only slow-forward play
	is possible.

Change video play

Play a title.

Use the remote control to change the video play.


Button	Action
AUDIO	Selects an audio language or
SYNC	channel on a disc.
SUBTITLE	Selects the subtitle language on
	a disc.
REPEAT	Selects or turns off repeat or
	shuffle mode.
	Repeat options vary depending
	on the disc type.
	For VCDs, repeat play is only
	possible if the PBC mode is
	turned off.
ZOOM	Zooms in or out of the picture.
	To pan through the zoomed
	image, press the Navigation
	buttons.
1 INFO	Displays the current status or
	disc information.
	You can change the video
	play options here without
	interrupting disc play.



Note

· Some operations may not work with some discs. See the information accompanying the disc for details.

 Access DVD menu



- Press **DISC** to access disc main menu.
- Select a play option, then press **OK**.
 - In some menus, press the Numeric buttons to input your selection.
 - To return to the title menu during play, press **SACK**.

Access VCD menu or preview menu

The PBC (Playback Control) for VCD is activated by default in the factory. When you load a VCD, the contents menu is displayed.

- 1 Press ▲▼ to select a play option, then press OK to start play.
 - If PBC is off, it skips the menu and starts play from the first title.
 - To return to the menu during play, press SACK (only possible if the PBC mode is on).
- 2 Press **DISC** to preview the contents of the disc.
 - To exit the menu, press **DISC**.

Select Digest Type:

Track Digest
Disc Interval
Track Interval

3 Select a preview play option, then press OK

[Track Digest]

Plays the first few seconds of each track in a disc.

[Disc Interval]

Divides the total disc time by six and play the first few seconds of these intervals.

[Track Interval]

Divides the current track by six and play the first few seconds of these intervals.

This option is not available in stop mode.

 


Tip

 You can change the PBC setting (see 'Adjust settings' > 'Preferences' > [PBC]).

Sync audio output with video play

If the video play is slower than the audio output (sound does not match with the pictures), you can delay the audio output to match the video.



- Press and hold AUDIO SYNC until 'AUDIO SYNC' is displayed.
- Within five seconds, press VOL +/- to set the delay time for audio output.



Note

 If the volume control is not used within five seconds, it resumes normal volume control function.

Quick skip play to a specific time



- 1 During play, press INFO.
 - → The disc status menu is displayed.
- Press ▲▼ to view information, then press OK
 - **[TT Time]** (title time)
 - [Ch Time] (chapter time)
 - [Disc Time] (disc time)
 - [Track Time] (track time)
- Press the Numeric buttons to enter the time where you want to skip to, then press OK.



Note

· The options are different depending on the disc type.

Repeat play a specific section

- During playback, press
 ☐ INFO.The disc status menu is displayed.
- 2 Select [Repeat] in the menu, then press
- Move to [Repeat AB] in the menu, then press OK to set the starting point.
- 4 Press OK again to set the ending point.→ Repeat play starts.
- 5 To cancel repeat play, select [Off] and press OK.



 The marked section for repeat play is only possible within a track/title.

View video play from different camera angles

- 1 During play, press ① INFO.
 - → The disc status menu is displayed.
- 2 Select [Angle], then press ▶.
- 3 Press the Numeric buttons to select an angle, then press OK.
 - → Play changes to the selected angle.



Applicable only to discs containing multi-angle scenes.

Play DivX® video

DivX video is a digital media format that retains high quality despite a high rate of compression. You can enjoy DivX video on this DivX® Certified Home Theater System.

- 1 Insert a disc or USB device that contains the DivX videos.
- 2 Press DISC or USB.
 - → A contents menu is displayed.
- 3 Select a title to play, then press ►II.
- 4 Use the remote control to control the title.

Button	Action
AUDIO	Selects an audio language or
SYNC	channel.
SUBTITLE	Select DVD or DivX subtitle
	languages.
	Stops play.
	For DivX Ultra video, press
	this button again to display the
	contents menu.
■ INFO	Displays DivX Ultra video
	information.



- You can only play DivX videos that were rented or purchased with the DivX registration code of this Home Theater System (see 'Adjust settings' > 'General setup' > [DivX(R) VOD Code])
- · You can play DivX video files of up to 4GB.
- If the subtitle does not appear correctly, change the character set (see 'Adjust settings' > 'Preferences' > [DivX Subtitle]).
- This Home Theater System can display up to 45 characters in the subtitle.

Play music

Control audio track play

- 1 Play a track.
- 2 Use the remote control to control the track.

Button	Action
►II	Starts, pauses or resumes disc play.
	Stops disc play.
▶ I	Skips to the next track.
1 2 3 4 5 6 7 8 9	Skips to the beginning of the current track. Press twice to jump to the previous track. Selects an item to play.
44 / >>	Searches fast-forward (right) or fast-backward (left). Press repeatedly to change the search speed.
REPEAT	Selects or turns off repeat or shuffle mode.

Play MP3/WMA music

MP3/WMA is a type of highly compressed audio file (files with .mp3 or .wma extensions).

- Insert a disc or USB that contains the MP3/WMA music.
- 2 Press DISC or USB.
 - → A contents menu is displayed.
- 3 Select a folder, then press OK.
 - 4 Select a track to play, then press ►II.
 - To return to the main menu, press
 ⇒ BACK or press ▲ until 'Previous' folder is selected, then press OK.



Note

- For disc recorded in multiple sessions, only the first session is played.
- This Home Theater System does not support MP3PRO audio format.
- If any special characters are present in the MP3 track name (ID3) or album name, it might not be displayed correctly on the screen because these characters are not supported.
- Some WMA files are protected by Digital Rights Management and cannot be played on this Home Theater System.
- Folders/files that exceed the supported limit of this Home Theater System will not be displayed or played.



Tip


 You can select the display of data contents, view folders or files (see 'Adjust settings' > 'Preferences' > [MP3/JPEG Display]).

Play photo

Play photo as slideshow

This Home Theater System can play JPEG photos (files with .jpeg or .jpg extensions).

- Insert a disc or USB that contains the IPEG photos.
- 2 Press DISC or USB.
 - Slideshow begins (for Kodak disc) or a contents menu (for JPEG disc) is displayed.
- 3 Select the folder/album you want to play.
 - To preview the photos in the folder/ album, press
 INFO.

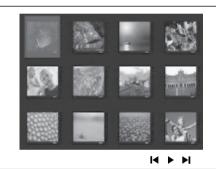

- To go to previous or next screen display, press ◄ / ►I.
- To select a photo, press the Navigation buttons.
- To display the selected photo only, press **OK**.
- 4 Press ►II to start slideshow play.
 - To return to the menu, press

 → BACK.



Note

- You may require longer time to display the disc content on the TV due to the large number of songs/ photos compiled onto one disc.
- If the JPEG photo is not recorded with an 'exif' type file, the actual thumbnail picture is not shown on the display. It is replaced by a 'blue mountain' thumbnail picture.
- This Home Theater System can only display digital camera pictures according to the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG and pictures in formats other than JPEG, or sound clips associated with pictures.
- Folders/files that exceed the supported limit of this Home Theater System are not displayed or played.

Control photo play

- 1 Play photo slideshow.
- 2 Use the remote control to control the photo.

Button	Action
◀	Skips to the previous photo.
>	Skips to the next photo.
A	Rotates the photo clockwise.
▼	Rotates the photo anti-
	clockwise.
ZOOM	Zooms in or out of the
	picture.
	Play pause in zoom mode.
	Stops play.

Play musical slideshow


Play MP3/WMA music files and JPEG photo files simultaneously to create musical slideshow. The MP3/WMA and JPEG files must be stored on the same disc or USB device

- 1 Play MP3/WMA music.
- 2 Navigate to the photo folder/album and press **OK** to start slideshow play.
 - → Slideshow begins and continues till the end of the photo folder or album.
 - → Audio continues to play till the end of the disc.
 - To stop slideshow play, press ■.
 - To stop music play, press again.

Play from USB device

This Home Theater System plays/views MP3, WMA, DivX (Ultra) or JPEG files on the following USB devices:

- digital camera that complies with the PTP standard
- flash drive
- memory card reader
- HDD (external power source needed)

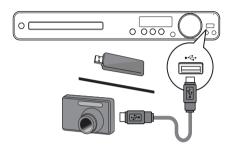


- 1 Connect a USB device to the ← (USB) jack.
- 2 Press USB.
 - → A contents menu is displayed.
- 3 Select a file to play, then press ►II.
 - → Play starts.
 - To stop play, press or remove the USB device.



- If the device does not fit into the USB jack, connect it through a USB extension cable.
- If you connect a multiple USB card/device reader, only one card/device can be accessed.

Play from portable media player

 Simply connect your portable media player (e.g. MP3 player) to this Home Theater System to enjoy superb sound quality from your music collections.




- 1 Connect a 3.5 mm stereo audio cable (not supplied) from the MP3 LINK jack on this Home Theater System to the 'headphone' jack on the portable media player.
- Press AUDIO SOURCE repeatedly until 'MP3 LINK' is displayed.
- 3 Start play on your portable media player.
 - To stop play, press **STOP** on the portable media player.



- Control playback is only possible on the portable media player.
- Stop play on the portable media player before you switch to other play media/source.

Play from radio

 Check if the FM antenna has been connected to this Home Theater System. If not, connect the supplied FM antenna to the **FM75** Ω jack and fix its ends to the wall.





Tip

- For better FM stereo reception, connect an external FM antenna (not supplied).
- Position the antenna as far away as possible from your TV, VCR or other radiation source to prevent interference.

First time tuning

When you access radio mode for the first time, follow the instructions to install the radio stations.

- 1 Press RADIO.
 - → 'AUTO INSTALL ... PRESS PLAY' is displayed.
- 2 Press ►II.
 - → All detected radio stations are stored
 - → Once complete, it tunes to the first preset radio station.
 - To stop auto tuning, press ■.



- This Home Theater System can store up to a maximum of 40 radio stations.
- If auto installation is not activated or less than 5 radio stations are stored, you will be prompted to install the radio stations again.

Listen to radio

- 1 Press RADIO.
- 2 Use the remote control to control the radio.

Button	Action
 ♦ 	Selects a preset radio station.
▲▼	Tunes the radio frequency up or
	down.
	Press and hold this button to
	erase the current radio station
	from the preset list.
	The preset number for other
	radio stations remain unchanged.

Reinstall all the radio stations

- 1 Press RADIO.
- Press and hold **PROGRAM** for more than 5 seconds.
 - → All previously stored radio stations are replaced.



 Check the radio antenna connection if no stereo signal is detected or less than 5 stations are detected during radio installation.

Search and store radio stations individually

- 1 Press RADIO
- 2 Press ◀◀ / ▶▶.
 - → It starts searching until a radio station is detected.
- **3** Repeat step 2 until you tune to the radio station you wish to store.
 - To finetune the radio frequency, press ▲ / ▼.
- 4 Press PROGRAM.
 - → The preset station number blinks.
 - → If no action is carried out within 20 seconds after the above step, it exits the preset mode.
- 5 Press **◄** / **▶** (or the **Numeric buttons**) to select a preset number to store.
- 6 Press **PROGRAM** to confirm.

Change the tuning grid

In some countries, the frequency step between adjacent channels in FM band is 50 kHz or 100 kHz.



- This feature is only applicable for certain regions.
- Changing the tuning grid erases all preset radio stations.
- 1 Press RADIO.
- **2** Press ■.
- Press and hold ►II until 'GRID 9' or 'GRID 10' is displayed.
 - → 'GRID 9' for 50 kHz and 'GRID 10' for 100 kHz.

Advanced features

Create MP3 audio files

You can convert audio CDs into MP3 audio files with this Home Theater System. The created MP3 audio files are saved in your USB device.

Option	Description
[Speed]	Selects the write-to-file speed.
	If [Normal] speed is selected,
	music play can be heard while
	creating the MP3 file.
[Bitrate]	Selects the quality level. Higher
	bitrate for better sound quality
	and bigger file size.
	Default setting is [128kbps].

CREATE MP3			
OPTIONS		TRACK	
Speed	Normal	O Track01	04:14
Bitrate	128kbps	O Track02	04:17
	·	O Track03	03:58
		O Track04	04:51
		O Track05	03:53
SUMMARY		O Track06	04:09
Select Track 0		O Track07	04:38
Time	00:00	,	•
Start	Exit	Select All	Deselect All

- Insert an audio CD. (CDDA/HDCD)
- Connect the USB flash drive to •<--(USB) jack on this Home Theater System.
- 3 During disc play, press CREATE MP3.
- Select the conversion options in the [OPTIONS] panel, then press OK.
- Press ▶ to access the [TRACK] panel.

- Select the audio track, then press **OK**.
 - To select another track, repeat step
 - To select all tracks, select [Select All] in the menu and press OK.
 - To deselect all tracks, select [Deselect all] in the menu and press OK.
- Select [Start] in the menu to convert, then press OK.
 - → Once complete, a new folder is created automatically in the USB device to store all the new MP3 files.
 - To exit the menu, select [Exit] and press OK.



 
- · While you convert, do not press any buttons.
- DTS CDs and copy-protected CDs cannot be converted.
- Write-protected or password-protected USB devices cannot be used to store MP3 files.

7 Adjust sound

Control the volume

- 1 Press VOL +/- to increase or decrease the volume.
 - To mute, press ♥.
 - To restore the volume, press
 [™] again or press VOL +.

Select surround sound



1 Press SURR repeatedly to select the best surround output that's available on the disc.

Option	Description
5 CH	Enhances the stereo channel
STEREO	output by duplicating the
	sound output to the centre
	and rear speakers. Ideal for
	party music.
MULTI-	Multi-channel surround
CHANNEL/	output: DTS (Digital Theatre
DPLII	Systems), Dolby Digital, and
	Dolby Pro Logic II.
STEREO	Stereo sound from two front
	speakers.


Select a preset sound



1 Press **SOUND** repeatedly to select the sound effect that most suitable for the video or music you play.

,	. ,
Video/Music	Description
ACTION /	Enhance low and
ROCK	high range for
	great sounding
	movie effects and
	atmosphere. Great
	for action movies and
	rock/pop music.
CONCERT/	Flat and pure sound
CLASSIC	mode. Ideal for
	listening to classical
	music and watching
	live concert disc.
DRAMA /	Clear mid and high
JAZZ	range. Recreates the
	atmosphere of a live
	club with the artist
	just in front of you.
	Good for jazz music
	and watching dramas.
SPORTS	Moderate mid range
	and surround effects
	for clear vocals and
	the atmosphere of a
	live sports venue. It
	is also ideal for video
	gaming.
NIGHT	Dynamically
	controlled sound
	mode suitable
	for watching
	movies at night or
	for nonintrusive
	background music.

 Adjusting microphone volume level



- Connect a microphone (not supplied) to the MIC jack on this Home Theater System.
- Turn on the microphone output. (see 'Karaoke settings'.)
- 3 Press MIC (VOL +/-).
 → 'MIC XX' is displayed.
- 4 Adjust the volume control (or press VOL +/- repeatedly) to set the level for microphone volume.
 - Sing or speak into the microphone to find the desired volume level



Note

 If the volume control is not used within 10 seconds, it resumes normal volume control function.

Karaoke settings



- 1 Turn on the TV to the correct viewing channel for this Home Theater System.
- 2 Press KARAOKE.
 - → [Karaoke Setup Page] menu is displayed.
- 3 Select an option and change the setting, then press OK.
 - To exit the menu, press KARAOKE.

[Mic]

Turns microphone output on and off.

- [On] Turns microphone on.
- [Off] Turns microphone off.

[Echo Level]

Press ▲▼ to set the echo level.

[Key]

Press ▲▼ to set the pitch level that matches your voice.

[Score]

Selects a karaoke rating score level.

- [Off] No score rating display.
- [Basic] Basic rating.
- [Intermediate] Intermediate rating.
- [Advance] Advance rating.

Turning vocals off (voice cancel)

1 Press **VOCAL** repeatedly until 'VOICE CANCEL' is displayed.



Note

• You cannot cancel the voice output from MP3 or WMA audio.

Adjust settings

You can customise various kinds of settings as you prefer. Refer to the following instructions to navigate through the setup menus.

Symbol	Options
*	[General Setup]
	[Audio Setup]
0	[Video Setup]
 ✓	[Preferences]



Note

· If the setup option is greyed out, it means the setting cannot be changed in the current state.

General setup

General Setup	
EasyLink Setup	
Disc Lock	
Display Dim	
OSD Language	
Screen Saver	
Sleep Timer	
DivX(R) VOD Code	

- Press SETUP.
 - → [General Setup] menu is displayed.
- Press ▶.
- Select an option, then press OK.
- Select a setting, then press **OK**.
 - To return to the previous menu, press **SACK**.
 - To exit the menu, press SETUP.



See the explanations of the above options in the following pages.

[EasyLink Setup]

If this Home Theater System is connected to HDMI CEC compliant TV/devices, all connected devices can respond to the following commands simultaneously:

Option	Description
[EasyLink]	Turns off or on all EasyLink
	features.
	To disable this feature, select
	[Off].
[One	When you press PLAY , the
Touch	TV and Home Theater System
Play]	are turned on. Disc play starts
	if there is a disc in the Home
	Theater System.
	To disable this feature, select
	[Off].
[One	When you press and hold
Touch	STANDBY, connected HDMI
Standby]	CEC devices simultaneously
	switch to standby.
	To disable this feature, select
FC	[Off].
[System Audio	When you play audio that is routed from the connected
Control]	devices, this Home Theater
Control	System switches to the
	corresponding audio source
	automatically.
	To enable this feature, select
	[On]. Then proceed to [Audio
	Input Mapping] to scan and map
	all the connected devices.
[Audio	When you map the audio
Input	input correctly, this Home
Mapping]	Theater System switches to the
	audio from the played device
	automatically.



- You must turn on the HDMI CEC operations on the TV/devices before you can enjoy the EasyLink controls. See the TV/devices manual for details.
- Philips does not guarantee 100% interoperability with all HDMI CEC compliant devices.

[Disc Lock]

Sets play restriction for specific discs. Before you start, place the disc in the disc compartment (maximum 40 discs can be locked).

- [Lock] Restricts access to the current disc. Once activated, a password is needed to unlock and play the disc.
- [Unlock] Plays all discs.



Tip

You can set or change the password (see 'Adjust settings' > 'Preferences' > [Password]).

[Display Dim]

Changes the brightness level of the display panel on this Home Theater System.

- [100%] Normal brightness.
- [70%] Medium brightness.
- [40%] Dimmest display.

[OSD Language]

Selects the default on-screen menu language.

[Screen Saver]

Turns off or on the screen saver mode. Helps to protect the TV screen from being damaged due to over exposure to a static image for too long.

- **[On]** Sets the screen saver to appear after 5 minutes of inactivity (for example, in pause or stop mode).
- [Off] Disable screen saver mode.

[Sleep Timer]

Switches to standby automatically after the preset time.

- [15 mins], [30 mins], [45 mins], [60 mins]

 Selects the count down time before the Home Theater System switches to standby.
- [Off] Disables sleep timer mode.

[DivX(R) VOD Code]

Displays the DivX® registration code.



• Enter this Home Theater System DivX registration code when you rent or purchase a video from www. divx.com/vod. The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

Audio setup

Audio Setup	
Speakers Volume	
Speakers Delay	
HDMI Audio	
CD Upsampling	
Audio Sync	

- Press SETUP.
 - → [General Setup] menu is displayed.
- Press ▼ to select [Audio Setup], then press ▶.
- Select an option, then press **OK**.
- Select a setting, then press **OK**.
 - To return to the previous menu, press **SACK**.
 - To exit the menu, press SETUP.



Note

· See the explanations of the above options in the following pages.

[Speakers Volume]

Sets the volume level of each speaker to get the ideal audio balance

- 1) To start, press OK.
- 2) Select a speaker in the menu, then press
- **◆►** to adjust the volume level.
- 3) Press **OK** to confirm and exit.



Note

The test tone is emitted from the speaker which you adjust.

[Speakers Delay]

Sets the delay time for the centre and rear speakers if they are placed closer to the listening position, so that the sound output from all speakers reaches the listening position at the same time

- 1) To start, press **OK**.
- 2) Select a speaker in the menu, then press
- **◆►** to set the delay time.
- 3) Press **OK** to confirm and exit.



Note

 Allow 1ms setting for every 1 foot distance between the speaker and the listening position.

[HDMI Audio]

Selects the HDMI audio setting when you connect this Home Theater System and the TV with a HDMI cable.

- [On] Allows audio output through the TV and the speaker system. If the audio format on the disc is not supported, it will be downmixed to two-channel sound (linear-PCM).
- [Off] Disables audio output from the TV. The sound is only output through the speaker system.

[CD Upsampling]

Converts the music CD to a higher sampling rate using sophisticated digital signal processing for better sound quality.

- [Off] Disables CD-upsampling.
- [88.2kHz (X2)] Converts the sampling rate of the CDs twice as high as the original rate.



Note

CD upsampling is only available in stereo mode.

[Audio Sync]

Sets the default delay time for audio output when you play a video disc.

- 1) To start, press **OK**.
- 2) Select a speaker delay in the menu, then press ◀▶ to set the delay time.
- 3) Press **OK** to confirm and exit.

Video setup

- 1 Press SETUP.→ [General Setup] menu is displayed.
- Press ▼ to select [Video Setup], then press ▶.
- 3 Select an option, then press **OK**
- 4 Select a setting, then press **OK**.
 - To return to the previous menu, press → BACK.
 - To exit the menu, press SETUP.



Note

 See the explanations of the above options in the following pages.

[TV System]

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- [PAL] For PAL-system TV.
- [NTSC] For NTSC-system TV.
- [Multi] For TV that is compatible with both PAL and NTSC.

[TV Display]

Selects one of the following display formats:







4:3 Pan Scan (PS)

4:3 Letter Box (LB)

16:9 (Wide Screen)

- [4:3 Pan Scan] For 4:3 screen TV: full-height display with the trimmed sides.
- [4:3 Letter Box] For 4:3 screen TV: wide-screen display with black bars on the top and bottom of the screen.
- **[16:9 Wide Screen]** For wide-screen TV: display ratio 16:9.

[Screen Fit]

Fits the picture format to the TV screen to enjoy watching disc play in full screen mode.

- [Select] Displays various types of full screen format, press OK to select a suitable picture format that best fits to the TV screen.
- [Off] Returns to normal screen display.

[Picture Setting]

Selects a predefined set of picture color settings or customize the personal setting.

- [Standard] Original color setting.
- [Bright] Vibrant color setting.
- [Soft] Warm color setting.
- [Personal] Customizes the color setting. Set the level of brightness, contrast, sharpness/tint and color saturation, then press OK.

[HDMI Setup]

Selects the HDMI video setting when you connect this Home Theater System and the TV with a HDMI cable.

• [Wide Screen Format] – Defines the wide screen format for disc play.

Option	Description
[Superwide]	Center position of the screen is stretched less than the side. Applicable only to 720p and above video resolution setting.
[4:3 Pillar Box]	No stretching of the picture. Black bars are displayed on both sides of the screen.
[Off]	Picture is displayed according to the format of the disc.



Jota

• This setting is only available if you have set the [TV Display] setting to [16:9 Wide Screen].

 [HDMI Video] – Selects the HDMI video output resolution that is compatible with your TV display capability.

Option	Description
[Auto]	Detects and selects
	the best supported
	video resolution
	automatically.
[480i], [576i],	Selects a video
[480 _P], [576 _P],	resolution that is best
[720 _P], [1080i],	supported by the TV.
[1080 _P]	See the TV manual for
	details.



Note

 If the setting is not compatible with your TV, a blank screen appears. Wait for 15 seconds for auto recover or switch to its default mode as follows: 1) Press ▲ 2) Press ◀, 3) Press ZOOM.

[Closed Caption]

Turns off or on display captions.

- [On] Shows the sound effects in subtitles. Applicable only to discs with Closed Caption information included and the TV supports this feature.
- [Off] Disables closed caption.

[Progressive]

If the TV supports progressive scan output, you can turn on the progressive scan mode to enhance the picture quality. Video connection through Component Video is required.

- [On] Turns on progressive scan mode.
- [Off] Disables progressive scan mode.



Tip

• There is more detailed description available (see 'Get started' > 'Turn on Progressive Scan').

Preferences



Note

Stop disc play before you can access to [Preferences].

Preferences		
Audio		
Subtitle		
Disc Menu		
Parental		
PBC		
MP3/JPEG Display		
Password		
DivX Subtitle	▼	

- Press SETUP
 - → [General Setup] menu is displayed.
- Press ▼ to select [Preferences], then press .
- Select an option, then press **OK**.
- Select a setting, then press **OK**.
 - To return to the previous menu, press **SACK**.
 - To exit the menu, press SETUP.



Note

See the explanations of the above options in the following pages.

[Audio]

Selects the default audio language for disc play.

[Subtitle]

Selects the default subtitle language for disc play.

[Disc Menu]

Selects the language for disc menu.



- · If the language you have set is not available on the disc, the disc uses its own default language.
- For some discs, the subtitle/audio language can only be changed from the disc menu.
- To select the languages that are not listed in the menu, select [Others]. Then check the Language Code list at the back of this user manual and enter the respective 4-digit language code.

[Parental]

Restricts access to discs that are unsuitable for children. These types of discs must be recorded with ratings.

- 1) Press OK.
- 2) Select a rating level, then press **OK**.
- 3) Press the **Numeric buttons** to enter the password.



Note

- Rated discs above the level you set in [Parental] require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select '8'.
- · Some discs have ratings printed on them but are not recorded with ratings. This function has no effect on such discs.



You can set or change the password (see 'Preferences' > [Password]).

[PBC]

Turns off or on the content menu of VCDs/ SVCDs with PBC (playback control) feature.

- [On] Displays index menu when you load a disc for play.
- **[Off]** Skips the menu and start play from the first title.

[MP3/JPEG Display]

Selects to display the folders or display all the files.

- [View Folders] Displays the folders of MP3/WMA files.
- [View Files] Displays all the files.

[Password]

Sets or changes the password for locked discs and play restricted DVDs.

Change Password	
Old Password	
New Password	
Confirm Password	
	ОК

- 1) Press the **Numeric buttons** to enter '136900' or the last set password at **[Old Password]** field.
- 2) Enter the new password at [New Password] field.
- 3) Enter the new password again at [Confirm Password] field.
- 4) Press **OK** to exit the menu.



Note

 If you forget the password, enter '136900' before you set a new password.

[DivX Subtitle]

Selects a character set that supports the DivX subtitle.

[Standard]	English, Irish, Danish,
	Estonian, Finnish,
	French, German,
	Italian, Portuguese,
	Luxembourgish, Norwegian
	(Bokmål and Nynorsk),
	Spanish, Swedish, Turkish
[Central	Polish, Czech, Slovak,
Europe]	Albanian, Hungarian,
	Slovene, Croatian, Serbian
	(Latin script), Romanian
[Cyrillic]	Belarusian, Bulgarian,
	Ukrainian, Macedonian,
	Russian, Serbian
[Greek]	Greek
[Hebrew]	Hebrew
[Chinese(Simp)]	Simplified Chinese
[Korean]	Korean



Note

 Ensure that the subtitle file has the exact same file name as the movie file. If for example the file name of the movie is 'Movie.avi', then you will need to name the text file 'Movie.sub' or 'Movie.srt'.

[Version Info.]

Displays the software version of this Home Theater System.



Tip

 This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this Home Theater System.

[Default]

Resets all the settings of this Home Theater System to factory default, except for [Disc Lock], [Password] and [Parental] settings.

9 Additional Information

Update software

To check for new updates, compare the current software version of your Home Theater System with the latest software version (if available) at the Philips website.

Preferences	
Disc Menu	A .
Parental	
PBC	
MP3/JPEG Display	
Password	
DivX Subtitle	_
Version Info.	
Default	

- 1 Press © SETUP.
- 2 Select [Preferences] > [Version Info.], then press OK.
- Write down the version number, then press SETUP to exit the menu.
- **4** Go to www.philips.com/support to check the latest software version available for this Home Theater System.
- 5 If the latest software version is higher than the software version of this Home Theater System, download it and store onto a CD-R or USB flash drive.
- 6 Insert the CD-R or USB flash drive to this Home Theater System.

- 7 Press DISC or USB, then follow the instruction on the TV to confirm update operation.
 - Once software update is complete, this Home Theater System turns off to standby automatically.



Note

- Do not remove the CD-R or USB when software updating is in progress.
- **8** Disconnect the power cord for a few seconds and connect again to reboot the system.

Care



Caution

 Never use solvents such as benzene, thinner, cleaners available commercially or anti-static sprays intended for discs.

Clean discs

Wipe the disc with a micro fibre cleaning cloth from the centre to the edge in a straight line movement.

Clean main unit screen

Wipe the screen surface with a micro fibre cleaning cloth.

10 Specifications



Note

 Specification and design are subject to change without notice

Playback media

 DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture CD, MP3-CD, WMA-CD, DivX-CD, USB flash drive

Amplifier

- Total output power:
 - Home theatre mode: 1000 W RMS (6 X 167)
- Frequency response: 40 Hz ~ 20 kHz
- Signal-to-noise ratio:
 - > 60 dB (A-weighted)
- Input sensitivity:
 - AUX1: 400 mV
 - AUX2: 400 mV
 - MP3 LINK: 250 mV

Disc

- Laser Type: Semiconductor
- Disc diameter: 12cm / 8cm
- Video decording:

MPEG1/ MPEG2 / DivX / DivX Ultra

- Video DAC: 12 bits, 108 MHz
- Signal system: PAL / NTSC
- Video S/N: 56 dB
- Audio DAC: 24 bits / 96 kHz
- Frequency response:
 - 4 Hz 20 kHz (44.1 kHz)
 - 4 Hz 22 kHz (48 kHz)
 - 4 Hz 44 kHz (96 kHz)
- PCM: IEC 60958
- Dolby Digital: IEC 60958, IEC 61937
- DTS: IEC 60958, IEC 61937

Radio

- Tuning range: FM 87.5-108 MHz (50/100 kHz)
- 26 dB quieting sensitivity: FM 22 dBf
- IF rejection ratio: FM 60 dB
- Signal-to-noise ratio: FM 50 dB
- Harmonic distortion: FM 3%
- Frequency response:
 FM 180 Hz~10 kHz / ±6dB
- Stereo separation: FM 26 dB (1 kHz)
- Stereo Threshold: FM 29 dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support:
 - UMS (USB Mass Storage Class)
- File system: FAT12, FAT16, FAT32

Main Unit

- Power supply: 110-127V/220-240V;
 ~50-60Hz switchable
- Power consumption: 180 W
- Standby power consumption: < 1 W
- Dimensions (WxHxD): 360 x 57 x 331 (mm)
- Weight: 3.01 kg

Speakers

- System: full range satellite
- Speaker impedance:
 - 4 ohm (centre), 4 ohm (front/rear)
- Speaker drivers:
 - Centre/front/rear: 3" full range
- Frequency response: 150 Hz ~ 20 kHz
- Dimensions (WxHxD):
 - Centre: $244 \times 103 \times 74$ (mm)
 - Front/rear: $103 \times 203 \times 71$ (mm)
- Weight:
 - Centre: 0.85 kg
 - Front: 0.58 kg
 - Rear: 0.55 kg

45

Subwoofer

- Impedance: 4 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Frequency response: 40 Hz ~ 150 Hz
- Dimensions (WxHxD): 163 x 363 x 369 (mm)
- Weight: 4.7 Kg

Laser specification

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 645 665 nm (DVD),

770 - 800 nm (CD)

- Output power: 6 mW (DVD),
 - 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

11 Troubleshooting

A

Warning

 Risk of electric shock, Never remove the casing of the Home Theater System.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the Home Theater System, check the following points before requesting service. If the problem remains unsolved, register your Home Theater System and get support at www.philips.com/welcome

If you contact Philips, you will be asked for the model and serial number of your Home Theater System. The model number and serial number are on the back or bottom of your Home Theater System. Write the numbers here:

Model No	
Social No	

Main unit

The buttons on this Home Theater System do not work.

 Disconnect this Home Theater System from the power outlet for a few minutes, then connect again.

Picture

No picture.

- See TVs manual for correct video input channel selection. Change the TV channel until you see the DVD screen.
- Press DISC.
- If you have changed the [TV Display] setting, switch back to default mode:
 - 1) Press ≜ to open the disc compartment.
 - 2) Press ◀.
 - 3) Press SUBTITLE.
- If this happens when you turn on the progressive scan setting, you have to switch to its default mode:
 - 1) Press ▲.
 - 2) Press ◀.
 - 3) Press AUDIO SYNC.

No picture on HDMI connection.

- Check if the HDMI cable is faulty. Replace a new HDMI cable.
- If this happens when you change the HDMI video resolution, you have to switch to its default mode:
 - 1) Press ▲.
 - 2) Press ◀.
 - 3) Press ZOOM.

Sound

No sound.

 Ensure that the audio cables are connected and press the correct input source (for example, AUDIO SOURCE, USB) to select the device you want to play.

No sound on HDMI connection.

- Sound cannot transmit through HDMI connection if the connected device is non-HDCP compliant or only DVIcompatible. Make an analog or digital audio connection.
- Ensure that the [HDMI Audio] setting is turned on

No sound from TV program.

 Connect an audio cable from the AUDIO input on this Home Theater System to the AUDIO output on your TV. Then press AUDIO SOURCE repeatedly to select the corresponding audio input source.

No surround sound effect from the speakers.

- Press SURR to select a correct surround sound setting.
- Ensure that the source you are playing is recorded or broadcast in surround sound (Dolby Digital, etc). Sound cannot transmit through HDMI connection if the connected device is non-HDCP compliant or only DVI-compatible. Make an analog or digital audio connection.

Play

DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

The aspect ratio of the screen is not aligned with the TV display setting.

• The aspect ratio is fixed on the disc.

DivX subtitle does not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set:
 - 1) Press SETUP.
 - 2) Select [Preferences], then press ▶.
 - 3) Select [DivX Subtitle], then press OK.
 - 4) Select the character set that supports the subtitle.

The contents of the USB flash drive cannot be read.

- The USB flash drive format is not compatible with this Home Theater System.
- Drive is formatted with different file system which is not supported by this unit (e.g. NTFS).
- Maximum size of memory supported is 160GB.

12 Glossary

Α

Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

D

DivX®

The DivX® codec is a patent-pending, MPEG-4 based video compression technology developed by DivX®, Inc. It can shrink the file size of digital video and still maintain the high visual quality.

Dolby Digital

A surround sound system developed by Dolby Laboratories that contains up to six channels of digital audio (front left and right, surround left and right, centre and subwoofer.)

Н

HDCP

High-bandwidth Digital Content Protection. This is a specification that provides a secure transmission of digital contents between different devices (to prevent unauthorised copyright.)

HDMI

High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality, completely free from noise. HDMI is fully backward-compatible with DVI.

As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High-bandwidth Digital Content Protection) will result in no Video or Audio output.

J

JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognized by their file extension '.jpg' or '.jpeg.'

M

MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

MPEG

Motion Picture Experts Group. A collection of compression systems for digital audio and video

P

PBC

Playback Control. A system where you navigate through a Video CD/Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

PCM

Pulse Code Modulation. A digital audio encoding system.

Progressive scan

The progressive scan displays twice the number of frames per second than in an ordinary TV system. It offers higher picture resolution and quality.



WMA

Windows Media™ Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded with Windows Media player version 9 or Windows Media player for Windows XP. Files are recognized by their file extension 'wma.'

WMV

Windows Media Video. Refers to a video compression technology developed by Microsoft Corporation. WMV content can be encoded by using Windows Media® Encoder 9 series. Files are recognised by their file extension '.wmv'.

Language Code

Abkhazian	6566	Inupiaq	7375	Pushto	8083
Afar	6565	Irish	7165	Russian	8285
Afrikaans	6570	Íslenska	7383	Quechua	8185
Amharic	6577	Italiano	7384	Raeto-Romance	8277
Arabic	6582	lvrit	7269	Romanian	8279
Armenian	7289	Japanese	7465	Rundi	8278
Assamese	6583	Javanese	7486	Samoan	8377
Avestan	6569	Kalaallisut	7576	Sango	8371
Aymara	6589	Kannada	7578	Sanskrit	8365
Azerhaijani	6590	Kashmiri	7583	Sardinian	8367
Bahasa Melayu	7783	Kazakh	7575	Serbian	8382
Bashkir	6665	Kernewek	7587	Shona	8378
Belarusian	6669	Khmer	7577	Shqip	8381
Bengali	6678	Kinyarwanda	8287	Sindhi	8368
Bihari	6672	Kirghiz	7589	Sinhalese	8373
Bislama	6673	Komi	7586	Slovensky	8373
Bokmål, Norwegian	7866	Korean	7579	Slovenian	8376
Bosanski	6683	Kuanyama; Kwanyama	7574	Somali	8379
Brezhoneg	6682	Kurdish	7585	Sotho; Southern	8384
Bulgarian	6671	Lao	7679	South Ndebele	7882
Burmese	7789	Latina	7665	Sundanese	8385
Castellano, Español	6983	Latvian	7686	Suomi	7073
Catalán	6765	Letzeburgesch;	7666	Swahili	8387
Chamorro	6772	Limburgan; Limburger	7673	Swati	8383
Chechen	6769	Lingala	7678	Svenska	8386
Chewa; Chichewa; Nyanja		Lithuanian	7684	Tagalog	8476
中文	9072	Luxembourgish;	7666	Tahitian	8489
Chuang; Zhuang Church Slavic; Slavonic	9065 6785	Macedonian	7775 7771	Tajik Tamil	8471 8465
Chuvash	6786	Malagasy	7285	Tatar	8484
Corsican	6779	Magyar Malayalam	7776	Telugu	8469
Česky	6783	Maltese	7784	Thai	8472
Dansk	6865	Manx	7186	Tibetan	6679
Deutsch	6869	Maori	7773	Tigrinya	8473
Dzongkha	6890	Marathi	7773	Tonga (Tonga Islands)	8479
English	6978	Marshallese	7772	Tsonga (Tonga Islands)	8483
Esperanto	6979	Moldavian	7779	Tswana	8478
Estonian	6984	Mongolian	7778	Türkce	8482
Euskara	6985	Nauru	7865	Turkmen	8475
Ελληνικά	6976	Navaho; Navajo	7886	Twi	8487
Faroese	7079	Ndebele, North	7868	Uighur	8571
Français	7082	Ndebele, South	7882	Ukrainian	8575
Frysk	7089	Ndonga	7871	Urdu	8582
Fijian	7074	Nederlands	7876	Uzbek	8590
Gaelic; Scottish Gaelic	7168	Nepali	7869	Vietnamese	8673
Gallegan	7176	Norsk	7879	Volapuk	8679
Georgian	7565	Northern Sami	8369	Walloon	8765
Gikuyu; Kikuyu	7573	North Ndebele	7868	Welsh	6789
Guarani	7178	Norwegian Nynorsk;	7878	Wolof	8779
Gujarati	7185	Occitan; Provencal	7967	Xhosa	8872
Hausa	7265	Old Bulgarian; Old Slavonic	6785	Yiddish	8973
Herero	7290	Oriya	7982	Yoruba	8979
Hindi	7273	Oromo	7977	Zulu	9085
Hiri Motu	7279	Ossetian; Ossetic	7983		
Hrwatski	6779	Pali	8073		
Ido	7379	Panjabi	8065		
Interlingua (International	1)7365	Persian	7065		
Interlingue	7365	Polski	8076		
Inuktitut	7385	Português	8084		

POLIZA DE GARANTIA

ESTA POLIZA ES GRATUITA

Este aparato ha sido cuidadosamente diseñado y se ha fabricado con los mejores materiales bajo un estricto control de calidad, garantizando su buen funcionamiento por los periodos establecidos según el aparato (ver lista en la parte inferior) a partir de la entrega del aparato al consumidor.

Esta póliza incluye la reparación o reposición gratuita de cualquier parte o componente que eventualmente fallase y la mano de obra necesaria para su reparación, así como los gastos de transportación razonablemente erogados dentro de nuestros centros de servicio, misma que se hará efectiva en cualquiera de nuestros centros de servicio autorizados en el país.

Si su aparato llegase a requerir de nuestro servicio de garantía, acuda al centro de servicio más cercano a su domicilio, de tener alguna duda por favor llame a nuestro **CENTRO DE INFORMACIÓN AL CLIENTE LADA** sin costo en toda la republica al **01 800 504 62 00** en donde con gusto le indicaremos el centro de servicio autorizado más cercano a su domicilio.

PHILIPS MEXICANA S.A. de C.V. a través de sus centros de servicio autorizados **reparará y devolverá a usted su aparato en un plazo no mayor a 20 días hábiles**, contados a partir de la fecha de ingreso, impresa en la orden de servicio de cualquiera de nuestros centros de servicio autorizados.

La garantía de esta póliza cubre cualquier desperfecto o daño eventualmente ocasionado por los trabajos de reparación y/o traslado del aparato en el interior de nuestros centros de servicio autorizados.

Esta póliza sólo tendrá validez, si está debidamente requisitada, sellada por la casa vendedora, en caso de extravío de esta póliza, podrá hacer efectiva su garantía con la presentación de su factura de compra.

ESTA POLIZA NO SE HARA EFECTIVA EN LOS SIGUIENTES CASOS:

- -Cuando el aparato sea utilizado en condiciones distintas a las normales.
- -Cuando el aparato no haya sido operado de acuerdo con el instructivo de uso que se le acompaña.
- -Cuando la causa de la falla o mal funcionamiento sea consecuencia de una reparación inadecuada o alteración producida por personas no autorizadas por PHILIPS MEXICANA S.A. de C.V.

PERIODOS DE GARANTIA

36 MESES - Monitores para computadora.

12 MESES.- Televisores con y sin reproductor de video digital DVD, videocassetteras, reproductores de discos de video digital DVD, reproductores de disco de video digital con pantalla incluida, grabadores reproductores de disco de video digital DVD, grabadores reproductores de disco compacto, Radiograbadoras con y sin reproductor de disco compacto, reproductores de disco compacto portátil, video proyectores (excepto la lámpara), cámaras de video, decodificadores de señal (IRD), televisores para hotel, sistemas de observación, televisores de proyección, teléfonos celulares, pagers, minisitemas de audio, minisistemas de audio con reproductor de disco de video digital integrado, microsistemas de audio, sistemas de cine en casa, sistemas reproductores de disco de video digital, equipos modulares, sintoamplificadores, facsímils, LNB, antenas de recepción de satélite, DVD ROM, CDR ROM y CDRW ROM para computadora.

6 MESES.- reproductores de cassette portátil, radio relojes, radios A.M./F.M., reproductores de audio digital MP3 (Internet), auto estéreos, teléfonos, teléfonos inalámbricos, cámaras digitales.

3 MESES.- Accesorios, controles remotos, bocinas, cintas para fax y para cámaras de videoconferencia, micrófonos, audífonos.

PHILIPS

MC - 719 - ARCO

Philips Mexicana, S.A. de C.V.

Producto Importado por: Phillips Mexicoana, S.A. de C.V. Av. La Palma No.6 Col. San Fernando La Herradura Huixquilucan, Edo. de México. C.P. 52784 Tel. 52 69 00 00 Centro de Informacion al Cliente Información General LADA SIN COSTO PARA TODA LA REPUBLICA 01 800 504 62 00 CORREO ELECTRONICO philips@merkafon.com

MODELO		No. DE SERIE_			
La presente garantía contará a partir de:	DIA	MES	AÑO		

En caso que en su producto presente alguna falla, acuda al centro de servicio más cercano a su domicilio (según listado de talleres anexo) y en caso de tener alguna duda o pregunta por favor llame a nuestro Centro de información al Cliente, en donde con gusto le atenderemos en todo lo relativo a:

* Servicio de sus aparatos Philips

* Información de productos y Talleres Autorizados Philips

* Asesoria en el manejo e instalación de su producto Philips

* Información en donde puede adquirir productos y accesorios Philips

Para hacer efectiva la garantía de su producto, es necesario presentar esta póliza debidamente requisitada o de lo contrario, presentar su factura de compra.

CENTROS DE SERVICIO AUTORIZADOS PHILIPS EN LAS PRINCIPALES CIUDADES

NOTA: Los Centros que tengan (S) solo proporcionan Servicio y los que tengan (SR) venden refacciones, accesorios y proporcionan Servicio

CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO		CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO	
ACAPULCO, GRO	744	483-32-96	serproa@yahoo.com.mx	s	MEXICO, D. F. ZONA NORTE	55	55-67-19-92 55-67-22-56	chyr_electronica@yahoo.com.mx	s
AGUASCALIENTES, AGS	449	915-51-81	jimsaele@hotmail.com	S	MEXICO, D. F. ZONA ORIENTE	55	57-58-89-37	cnoguedam@terra.com.mx	s
CAMPECHE. CAMP.	981	816 25 75	oreza@hotmail.com	s	MEXICO, D. F. ZONA PONIENTE	55	58 12 44 12	raulmtzm@avantel.net	s
CANCUN, Q ROO.	998	984 18 74	gammacancun@webtelmex.net.mx	s	MONTERREY, N.L.	818	375-16-17 400-54-03	mcesa@prodigy.net.mx	s
CD. JUAREZ, CHIH	656	618-21-28 623-46-20	teleservicio@prodigy.net.mx	s	MORELIA, MICH	443	312-03-17	multiservicios_profesionales_de_zamora@msn.c om	s
CD. OBREGON, SON	644	412-41-51 416-20-93	mena747@prodigy.net.mx	s	NEZAHUALCOYOTL EDO: MEX	55	57-33-34-98	vicentegutierrez@prodigy.net.mx	s
CD. VICTORIA, TAMPS	834	315-66-03 312-51-93	eeii_smiller@yahoo.com.mx	s	OAXACA, OAX	951	516-47-37	elfrancistor@prodigy.net.mx	S
COLIMA, COL	312	314-03-01	tv antenas@hotmail.com	s	ORIZABA, VER	272	724 38 53	barreda_electronics@hotmail.com	S
CUERNAVACA, MOR	777	313-00-49 313-90-92	centroserviciohertz@hotmail.com	S	PACHUCA, HGO	771	714-15-81	zarateelc@hotmail.com	S
CULIACAN, SIN	667	716-15-10	stereovox@cln.megared.net.mx	S	POZA RICA, VER	782	824 47 82	sonydigital@prodigy.net.mx	S
CHIHUAHUA, CHIH	614	421-59-30 421-63-61	comercialdomestica@hotmail.com	s	PUEBLA, PUE	222	248-77-64 231-63-77	rascon12@prodigy.net.mx	s
CHILPANCINGO, GRO.	747	471 72 73	ingelec gro@hotmail.com	S	QUERETARO, QRO	442	216-10-09		S
DURANGO, DGO	618	825-00-05	evsurdgo@yahoo.com	s	SALTILLO, COAH	844	415 35 80	electronicadigital 07@hotmail.com	S
GUADALAJARA, JAL	33	36-15-72-62 36-16-83-27	www. Leecom.com.mx	s	SAN LUIS POTOSI, S.L.P	444	815-34-07	centro_servicioslp@prodigy.net.mx	S
HERMOSILLO, SON	662	210-54-95 210-05-86	manuelw@prodigy.net.mx	S	SATELITE. EDO. MEX	55	55 62 59 73	missus_satelite@hotmail.com	S
IRAPUATO, GTO	462	626-51-10	tv_gase@hotmail.com	s	TAMPICO, TAMPS	833	214 13 60	electromovie@prodigy.net.mx	s
LA PAZ, B.C.S	612	122-95-99	cenalfa@prodigy.net.mx	s	TEPIC, NAY	311	212-66-93	spe_tn@hotmail.co	s
LEON, GTO	477	770-26-99	tecespecializados@hotmail.com	s	TIJUANA, B.C.N	664	621-22-15	wwwegi1@telnor.net	s
MATAMOROS, TAMPS	868	813-50-13	digitalelectronica@comunicable.net	s	TOLUCA, EDO. MEX	722	214-83-09		s
MAZATLAN, SIN	669	982-42-21	e_santel@hotmail.com	s	TOLUCA, EDO. MEX	722	213 62 94		s
MERIDA, YUC	999	928-59-05	evia2@prodigy.net.mx	s	TORREON, COAH	871	732-49-49	jomar02@prodigy.net.mx	s
MEXICALI, B.C.N	686	561-98-08 561-98-18	bajaelectronics@aol.com	s	TUXTLA GUTIERREZ, CHIS	961	618-19-08	kcvideo@prodigy.net.mx	S
MEXICO D.F. ZONA ARAGON	55	57 94 06 34	philipservicio@hotmail.com	S	URUAPAN, MICH	452	524-08-38 524-37-78	rosaliaq@mich1.telmex.net.mx	S
MEXICO D.F. ZONA CENTRO	55	55 21 60 07	unitelmex@yahoo.com.mx	SR	VERACRUZ, VER	229	932-78-23 932-44-44	antza@ver.megared.net.mx	s
MEXICO, D. F. ZONA SUR	55	55-36-71-03 55-36-25-75	centrodeservicioelectronico@hotmail.com	s	VILLAHERMOSA, TAB	993	314-31-36 314-61-67	villatec@intrasur.net.mx	s
MEXICO, D. F. ZONA NORTE	55	53 68 30 21	tissaser@prodigy.net.mx	s	ZACATECAS, ZAC.	492	922 31 63	sertecmur@hotmail.com	s

Para mayor referencia de Talleres de Servicio Autorizados en otras ciudades comunicarse al 01 800 504 62 00 (lada sin costo)

CERTIFICADO DE GARANTÍA INTERNACIONAL



Validez de la garantía

Todos los productos de la línea de audio y video Philips, se regirán por un año de garantía internacional (365 días), salvo para Chile donde los productos de las líneas CD Portable y RCR CD, los cuales se rigen por 6 meses de garantía (182 días)

Condiciones de la garantía

Esta garantía perderá su validez sí:

- El defecto es causado por uso incorrecto o en desacuerdo con el manual de instrucciones
- El aparato sea modificado, violado por una persona no autorizada por Philips
- El producto esté funcionando con un suministro de energía (red eléctrica, batería, etc.) de características diferentes a las recomendadas en el manual de instrucciones
- El número de serie que identifica el producto se encuentre de forma adulterada.

Están excluidos de garantía,

- Los defectos que se generen debido al incumplimiento del manual de instrucciones del producto
- Los casos fortuitos o de la fuerza mayor, como aquellos causados por agentes de la naturaleza y
 accidentes, descargas eléctricas, señales de transmisión débiles.
- Los defectos que se generen debido al uso de los productos en servicios no doméstico/residencial regulares o en desacuerdo con el uso recomendado
- Daños ocasionados por fluctuaciones de voltajes, voltaje fuera de norma o por causas fuera de Philips, como cortocircuitos en los bafles o parlantes.
- En las ciudades en donde no existe el taller autorizado del servicio de Philips, los costos del transporte del aparato y/o el técnico autorizado, corren por cuenta del cliente.
- La garantía no será válida si el producto necesita modificaciones o adaptaciones para que funcione en otro país que no es aquél para el cual fue mercadeado.

El único documento válido para hacer efectiva la garantía de los productos, es la Factura o Boleta de compra del consumidor final.

Aquellos productos que hayan sido adquiridos en otros países y que no estén en el rango normal del país donde se efectuará la reparación, dicha prestación de servicio tomará mas tiempo de lo normal ya que es necesario pedir las partes/piezas al centro de producción correspondiente.

Centros de información

Líneas de atención al consumidor

Chile: 600-7445477

Colombia: 01-800-700-7445 Costa Rica: 0800-506-7445 Ecuador: 1-800-10-1045 El Salvador: 800-6024 Guatemala: 1-800-299-0007

Panama: 800-8300 Peru: 0800-00100

Rep. Dominicana: 1-800-751-2673

Venezuela: 0800-100-4888

LISTA DE SERVIÇO AUTORIZADO-BRASIL

ACRE		BARRA S FRANCISCO	27-37562245	BELO HORIZONTE	31-32257262	PORTO TROMBETAS	93-35491606
CRUZEIRO DO SUL	68-33224432	CASTELO	28-35420482	BELO HORIZONTE	31-32254066	SANTAREM	93-35235322
RIO BRANCO RIO BRANCO	68-32217642 68-32249116	COLATINA GUARAPARI	27-37222288 27-33614355	BELO HORIZONTE BELO HORIZONTE	31-34420944 31-34181919	PARAÍBA	
RIO BRANCO	68-32249116	LINHARES	27-33614355	BELO HORIZONTE	31-34181919	CAMPINA GRANDE	83-3212128
ALAGOAS		S GARRIEL DA PALHA	27-33710148	BELO HORIZONTE BELO HORIZONTE	31-32957700 31-34491000	ESPERANCA	83-3212128 83-3612273
ARAPIRACA	82-5222367	SAO MATEUS	27-37633806	BELO HORIZONTE	31-21027373	GUARABIRA	83-2711159
MACEIO	82-3222307	VII A VEI HA	27-37891233	BETIM BETIM	31-35322088	IOAO PESSOA	83-32469689
PALMEIRA DOS INDIOS	82-4213452	VITORIA	27-32233899	BOM DESPACHO	37-35212906	JOAO PESSOA	83-32446044
LINIAO DOS PAI MARES	82-32811305	***************************************	27-32233077	BOM DESPACHO	37-35272700	IOAO PESSOA	83-32210460
OTATIO DOSTITALISTA	02-52011505	GOÍAS		CARANGOLA	32-37412017	NOVA FLORESTA	83-3741014
AM APÁ		ANAPOLIS	62-3243562	CASSIA	35-35412293	SAPE	83-2832479
MACAPA	96-2175934	CACU	64-6561811	CONGONHAS	31-37311638	SOLANEA	83-3631241
SANTANA	96-2811080	CALDAS NOVAS	64-4532878	CONS LAFAIETE	31-37637784		
		CATALAO	64-4412786	CONTAGEM	31-33912994	PARANÁ	
AMAZONAS		FORMOSA	61-6318166	CONTAGEM	31-33953461	AMPERE	46-5471605
MANAUS	92-36333035	GOIANIA	62-32919095	CORONEL FABRICIANO	31-38411804	ANTONINA	41-34321782
MANAUS	92-36633366	GOIANIA	62-32292908	CURVELO	38-37213009	APUCARANA	43-34225306
MANAUS	92-32324252	GOIATUBA	94-34952272	DIVINOPOLIS	37-32212353	ARAPONGAS	43-2753723
		INHUMAS	62-5111840	FORMIGA	37-33214177	ASSIS CHATEAUBRIAND	44-5285181
BAHIA		IPAMERI	62-4511184	FRUTAL	34-34235279	BANDEIRANTES	43-5421711
ALAGOINHAS	75-4211128	ITAPURANGA	62-3551484	GOV. VALADARES	33-32716650	CAMPO MOURAO	44-35238970
BARREIRAS	77-36117592	ITUMBIARA	64-34310837	GUAXUPE	35-35513891	CASCAVEL	45-32254005
BOM JESUS DA LAPA	77-4814335	JUSSARA	62-3731806	GUAXUPE	35-35514124	CIANORTE	44-6292842
BRUMADO	77-4412381	LUZIANIA	61-6228519	IPATINGA	31-38222332	CURITIBA	41-33334764
CAETITE	77-34541183	MINEIROS	64-6618259	ITABIRA	31-38316218	CURITIBA	41-32648791
CAMACARI	71-36218288	PIRES DO RIO	64-4611133	ITAJUBA	35-36211315	CURITIBA	41-32534391
CICERO DANTAS	75-32782767	RIALMA	62-3971320	ITAPECERICA	37-33411326	FOZ DO IGUACU	45-35233029
CRUZ DAS ALMAS	75-6212839	RIO VERDE	64-36210173	ITAPECERICA	37-33411326	FOZ DO IGUACU	45-35234115
ESPLANADA	75-4271454	TRINDADE	62-5051505	ITAUNA	37-32412468	FRANCISCO BELTRAO	46-35233230
EUNAPOLIS	73-2815181	URUACU	62-3571285	ITUIUTABA	34-32682131	GUARAPUAVA	42-36235325
FEIRA DE SANTANA	75-32232882			JOAO MONLEVADE	31-38512909	IBAITI	43-5461162
FEIRA DE SANTANA	75-2213427	MARANHÃO		JOAO MONLEVADE	31-38521112	IBIPORA	43-2581863
GANDU ILHEUS	73-32541664	ACAILANDIA BACABAL	99-35381889 99-36212794	JOAO PINHEIRO	38-35611327	IRATI LAPA	42-34221337
	73-2315995			JUIZ DE FORA	32-30842584		41-36222410
IRECE ITABERABA	74-36410202 75-32512358	BALSAS CAROLINA	99-5410113 98-7311335	JUIZ DE FORA	32-32151514 37-32613493	LOANDA LONDRINA	44-4252053 43-33241002
ITABUNA	73-32512358	CAXIAS	99-35212377	LAGOA DA PRATA LAVRAS	37-32613493 35-38219188	MANDAGUARI	44-2331335
ITAPETINGA	77-2613003	CHAPADINHA	98-4711364	MANHUACU	33-38219188	MARINGA	44-2331335
IACOBINA	74-36211323	CODO	99-36611277	MONTE CARMELO	34-38422082	MEDIANEIRA	45-32642580
IEOUIE	73-35211323	CODO	99-36612942	MONTE CARMELO MONTE SANTO DE MINAS	35-35911888	PAI MEIRA	42-2523006
JUAZEIRO	74-36116456	COELHO NETO	98-34731351	MONTES CLAROS	38-32218925	PARANAGUA	41-34225804
ILIAZEIRO	74-36111002	IMPERATRIZ	99-35244969	MURIAF	32-37224334	PATO BRANCO	46-32242786
LAURO DE FREITAS	71-3784021	PEDREIRAS	99-36423142	MUZAMBINHO	35-5712419	PONTA GROSSA	42-32226590
MURITIBA	75-4241908	PRESIDENTE DUTRA	99-36631815	NANUOUE	33-36212165	RIO NEGRO	47-36450251
PAULO AFONSO	75-32811349	SANTA INES	98-36537553	NOVA LIMA	31-35412026	ROI ANDIA	43-2561947
POCOES	77-4311890	SAO JOSE DE RIBAMAR	98-2241581	OLIVEIRA	37-33314444	S DOS PINHAIS	41-32822522
RIBEIRA DO POMBAL	75-2761853	SAO LUIS	98-32323236	PARA DE MINAS	37-32316369	S MIGUEL DO IGUACU	45-5651429
SALVADOR	71-32473659	SAO LUIS	98-32315276	PARA DE MINAS	37-32321975	SANTA FE	44-2471147
SALVADOR	71-2675000			PARACATU	38-36711250	SAO JORGE D'OESTE	46-5341305
SALVADOR	71-32072070	MATO GROSSO		PASSOS	35-35214342	STO ANTONIO PLATINA	43-35341809
SALVADOR	71-33356233	ALTA FLORESTA	66-35212460	PATOS DE MINAS	34-38222588	TELEMACO BORBA	42-32726044
SANTO AMARO	75-32413171	ALTO ARAGUAIA	66-4811726	PATROCINIO	34-38311531	TOLEDO	45-32522471
SENHOR DO BONFIM	74-5413143	BARRA DO GARGAS	66-4011394	PITANGUI	37-32716232	UMUARAMA	44-36231233
SERRINHA	75-32611794	CUIABA	65-36230421	PIUMHI	37-33714632		
STO ANTONIO JESUS	75-36314470	LUCAS DO RIO VERDE	65-5491333	POCOS DE CALDAS	35-37121866	PERNAMBUCO	
TEIXEIRA DE FREITAS	73-30111600	PONTES E LACERDA	65-2662326	POCOS DE CALDAS	35-37224448	BELO JARDIM	81-37261918
VALENCA	75-6413710	PRIMAVERA DO LESTE	66-4981682	PONTE NOVA	31-38172486	CABO STO AGOSTINHO	81-35211823
VITORIA DA CONQUISTA	77-34241183	RONDONOPOLIS	66-4233888	POUSO ALEGRE	35-34212120	CAMARAGIBE	81-34581246
		SINOP	66-5314592	S SEBASTIAO PARAISO	35-35313094	CARUARU	81-37220235
CEARÁ		TANGARA DA SERRA	65-3261431	S SEBASTIAO PARAISO	35-35312054	FLORESTA	81-8771274
BREJO SANTO	88-5310133	VARZEA GRANDE	65-6826502	SANTOS DUMONT	32-32516369	GARANHUNS	87-37611090
CRATEUS	88-6910019			SAO JOAO DEL REI	32-33718306	GARANHUNS	87-37610085
CRATO	88-5212501	MATO GROSSO DO SUL		STO ANTONIO MONTE	37-32811258	PAULISTA	81-34331142
FORTALEZA	85-32875506	AMAMBAI	67-4811543	TEOFILO OTONI	33-35225831	RECIFE	81-32313399
FORTALEZA	85-40088555	CAMPO GRANDE	67-33242804	TIMOTEO	31-38482728	RECIFE	81-21262111
IBIAPINA IGUATU	88-36531223 88-35810512	CAMPO GRANDE CAMPO GRANDE	67-3831540 67-3213898	UBA UBERABA	32-35323626 34-33332520	RECIFE RECIFE	81-34656042
ITAPIPOCA	88-35810512 88-6312030	DOURADOS	67-3213898	UBERLANDIA	34-33332520	SALGUEIRO	81-34629090 87-38716309
JUAZEIRO DO NORTE	88-6312030 88-35112667	IVINHEMA	67-4217117 67-4421244	UBERLANDIA UBERLANDIA	34-32123636 34-32360764		
LIMOEIRO DO NORTE	88-35112667 88-4231938	NAVIRAI	67-4421244	VARGINHA	35-32227889	SERRA TALHADA	87-38311401
OROS	88-5841271	NOVA ANDRADINA	67-4413851	VARZEA DA PALMA	38-37311548	PIAUÍ	
SOBRAL	88-36110605	PONTA PORA	67-4314313	VAZANTE	34-38131420	CAMPO MAIOR	86-32521376
TIANGUA	88-36713336	RIO BRII HANTE	67-4527950	VICOSA	31-38918000	FLORIANO	89-5221154
UBAJARA	88-36/13336 88-6341233	TRES LAGOAS	67-5212007	VICUSA .	31-30710000	OEIRAS	89-4621066
-209000	00-0371233	.165 510013	07-3212007	PARÁ		PARNAIBA	86-3222877
DISTRITO FEDERAL		MINAS GERAIS		ARAFTETURA	91-37512272	PICOS	89-4221444
BRASILIA	61-32269898	ALFENAS	35-32927104	BELEM	91-32690400	PICOS	89-34155135
BRASILIA	61-33016666	ALMENARA	33-7211234	BELEM	91-32421090	TERESINA	86-32213535
GAMA	61-5564840	ANDRADAS	35-37312970	CAPANEMA	91-34621100	TERESINA	86-32230825
		ARAXA	34-36611132	CASTANHAL	91-37215052	TERESINA	86-32214618
ESPÍRITO SANTO		ARAXA	34-36691869	ITAITUBA	93-5181545		
ALEGRE	28-35526349	ARCOS	37-33513455	MARABA	94-3211891	RIO DE JANEIRO	
ARACRUZ	27-32561251	BAMBUI	37-34311473	OBIDOS	93-5472116	B JESUS ITABAPOANA	22-38312216
BAIXO GUANDU	27-37321142	BARBACENA	32-33310283	PARAGOMINAS	91-30110778	BELFORD ROXO	21-27616060

Lista de Serviço Autorizado-brasil

CABO FRIO	22-26451819	SAO BORJA	55-34311850	BOTUCATU	14-38821081	SAO PAULO	11-32222311
CAMPOS GOYTACAZES	22-27221499	SAO FCO DE PAULA	54-2441466	BOTUCATU	14-38155044	SAO ROQUE	11-47842509
CANTAGALO	22-25555303	SAO GABRIEL	55-2325833	CAMPINAS	19-32369199	SAO VICENTE	13-34628031
DUQUE DE CAXIAS	21-27711508	SAO JOSE DO OURO	54-3521216	CAMPINAS	19-32544819	SOROCABA	15-32241170
ITAOCARA	22-38612740	SAO LUIZ GONZAGA	55-33521365	CAMPINAS	19-32336498	SOROCABA	15-32241170
ITAPERUNA	22-38220605	SAO MARCOS	54-2911462	CAMPINAS	19-37372500	STA BARBARA D' OESTE	19-34631211
MACAE	22-27626235	SOBRADINHO	51-37421409	CAMPO LIMPO PAULISTA	11-40392000	TABOAO DA SERRA	11-47871480
MACAE	22-27591358	STA CRUZ DO SUL	51-37155456	CAMPOS DO JORDAO	12-36622142	TAQUARITINGA	16-32524039
MAGE	21-26330605	STA CRUZ DO SUL	51-37153048	CATANDUVA	17-35232524	TAUBATE	12-36219080
NITEROI						TUPA	
	21-26220157	TAPEJARA	54-3442353	CERQUILHO	15-32842121		14-34962596
NOVA FRIBURGO	22-25227692	TAPERA	54-3851160	CRUZEIRO	12-31433859	VINHEDO	19-38765310
NOVA IGUACU	21-26675663	TAQUARI	51-6531291	DIADEMA	11-40430669	VOTUPORANGA	17-34215726
PETROPOLIS	24-22312737	TORRES	51-6641940	DRACENA	18-38212479		
RESENDE	24-33550101	TRES DE MAIO	55-35352101	FERNANDOPOLIS	17-34423921	SERGIPE	
RIO DE JANEIRO	21-25894622	TRES DE MAIO	55-35358727	FRANCA	16-37223898	ARACAJU	79-32119764
RIO DE JANEIRO	21-25892030	URUGUAIANA	55-34121791	FRANCO DA ROCHA	11-44492608	ARACAJU	79-32176080
RIO DE JANEIRO	21-25097136	VACARIA	54-2311396	GUARUJA	13-33582942	ESTANCIA	79-5222325
RIO DE JANEIRO	21-24315426	VENANCIO AIRES	51-37411443	GUARULHOS	11-64513576	ITABAIANA	79-4313023
RIO DE JANEIRO	21-31579290	VERA CRUZ	51-37181350	GUARULHOS	11-64431153	LAGARTO	79-6312656
	21-33916353	VERA CROZ	31-3/101330	IGARAPAVA	16-31724600	LAGAKTO	77-0312030
RIO DE JANEIRO							
RIO DE JANEIRO	21-22367814	RONDÔNIA		INDAIATUBA	19-38753831	TOCANTINS	
RIO DE JANEIRO	21-31592187	ARIQUEMES	69-35353491	ITAPETININGA	15-32710936	ARAGUAINA	63-4212857
RIO DE JANEIRO	21-38675252	CACOAL	69-4431415	ITAPIRA	19-38633802	ARAGUAINA	63-4111818
RIO DE JANEIRO	21-25714999	CEREJEIRAS	69-33422251	ITARARE	15-35322743	GUARAI	63-34641590
RIO DE JANEIRO	21-24451123	GUAJARA-MIRIM	69-35414430	ITU	11-40230188	GURUPI	63-33511038
SAO GONCALO	21-27013214	II- PARANA	69-34211891	ITUVERAVA	16-7293365	GURUPI	63-33124470
TERESOPOLIS	21-27439467	PORTO VELHO	69-32273377	JABOTICABAL	16-32021580		
TRES RIOS	24-22555687	ROLIM DE MOURA	69-4421178	IALES	17-36324479		
TRES RIOS	24-22521388	VILHENA	69-33223321	JAU	14-36222117		
				JUNDIAI	11-45862182		
RIO GRANDE DO NORTE		RORAIMA		LEME	19-35713528		
CAICO	84-4171844	BOA VISTA	95-32249605	LIMEIRA	19-34413179		
MOSSORO	84-33147809	BOA VISTA	95-6233456	MARILIA	14-34547437		
NATAL	84-32231249			MATAO	16-33821046		
NATAL	84-32132345	SANTA CATARINA		MAUA	11-45145233		
PAU DOS FERROS	84-3512334	BLUMENAU	47-3227742	MOGI DAS CRUZES	11-47941814		
FAU DOS FERROS	04-3312334	CANOINHAS					
			47-6223615	MOGI-GUACU	19-38181171		
RIO GRANDE DO SUL		CANOINHAS	47-6223615	MOGI-MIRIM	19-38624401		
AGUDO	55-2651036	CAPINZAL	49-35552266	OLIMPIA	17-2812184		
ALEGRETE	55-34221969	CHAPECO	49-33223304	OSASCO	11-36837343		
BAGE	53-32411295	CHAPECO	49-33221144	OURINHOS	14-33225457		
BENTO GONCALVES	54-4526825	CONCORDIA	49-34423704	PIRACICABA	19-34340454		
CAMAQUA	51-36711686	CRICIUMA	48-34375155	PIRASSUNUNGA	19-35614091		
CAMPINAS DO SUL	54-3661300	CUNHA PORA	49-6460043	PORTO FERREIRA	19-35812441		
CANFLA	54-32821551	CURITIRANOS	49-32410851	PRES PRI IDENTE	18-2225168		
CAPAO DA CANOA	51-6652638	DESCANSO	49-36230245	PRES. EPITACIO	18-2814184		
CARAZINHO	54-3302292	FLORIANOPOLIS	48-32254149	PRES.PRUDENTE	18-2217943		
CAXIAS DO SUL	54-32153107	INDAIAL	47-33333275	PROMISSAO	14-35411696		
CAXIAS DO SUL	54-2268020	IPORA DO OESTE	49-36341289	RIBEIRAO PRETO	16-36106989		
CERRO LARGO	55-33591973	ITAIOPOLIS	476-522282	RIBEIRAO PRETO	16-36368156		
CORONEL BICACO	55-35571397	ITAIAI	47-33444777	RIBEIRAO PRETO	16-36107553		
ERECHIM	54-3211933	JARAGUA DO SUL	47-33722050	RIO CLARO	19-35348543		
ESTANCIA VELHA	51-35612142	JOACABA	49-35220418	S BERNARDO CAMPO	11-41257000		
FARROUPILHA	54-32683603	JOINVILLE	47-34331146	S BERNARDO CAMPO	11-43681788		
FAXINAL DO SOTURNO	55-32631150	LAGES	49-2232355	S CAETANO DO SUL	11-42214334		
FLORES DA CUNHA	54-2922625	LAGES	49-32244414	S JOAO BOA VISTA	19-36232990		
FREDERICO WESTPHALEN	55-37441850	LAGUNA	48-36461221	S JOSE CAMPOS	12-39239508		
GETULIO VARGAS	54-3411888	LAURO MULLER	48-4643202	S JOSE DO RIO PARDO	19-36085760		
GIRUA	55-33611764	MARAVILHA	49-6640052	S JOSE RIO PRETO	17-32325680		
GRAVATAI	51-4882830	PINHALZINHO	497-661014	S. JOSE RIO PRETO	17-2352381		
HORIZONTINA	55-35371680	PORTO UNIAO	42-35232839	SALTO	11-40296563		
IBIRAIARAS	54-3551359	RIO DO SUL	47-5211920	SANTO ANDRE	11-49905288		
IIUI	55-33327766	SAO MIGUEL D'OESTE	49-36220026	SANTOS	13-32272947		
IJUI	51-36272704	SAO MIGUEL D'OESTE	49-36220026	SANTOS	13-322/294/		
LAJEADO	51-37145155	SOMBRIO	48-5331225	SAO CARLOS	16-33614913		
MARAU	54-33424571	TAIO	478-620576	SAO JOSE DO CAMPOS	12-39122728		
MONTENEGRO	51-6324187	TUBARAO	48-6224448	SAO JOSE RIO PRETO	17-2355241		
NONOAI	54-3621126	TUBARAO	48-6261651	SAO PAULO	11-2964622		
NOVA PRATA	54-32421328	TURVO	48-5250373	SAO PAULO	11-67036116		
NOVO HAMBURGO	51-35823191	URUSSANGA	484-651137	SAO PAULO	11-69791184		
OSORIO	51-36632524	VIDEIRA	49-35660376	SAO PAULO	11-38659897		
PALMEIRA MISSOES	55-37421407	XANXERE	49-4333026	SAO PAULO	11-62156667		
		MINNERE	77-7333026				
PANAMBI	55-33753488			SAO PAULO	11-69545517		
PASSO FUNDO	54-33111104	SÃO PAULO		SAO PAULO	11-36726766		
PELOTAS	53-32223633	AGUAS DE LINDOIA	19-38241524	SAO PAULO	11-66940101		
PORTO ALEGRE	51-32226941	AMERICANA	19-34062914	SAO PAULO	11-32077111		
PORTO ALEGRE	51-33256653	AMPARO	19-38072674	SAO PAULO	11-39757996		
PORTO ALEGRE	51-32268834	ARACATUBA	18-36218775	SAO PAULO	11-62976464		
RIO GRANDE	53-32323211	ARARAQUARA	16-33368710	SAO PAULO	11-56679695		
SANTA DO LIVRAMENTO	55-32411899	ATIBAIA	11-44118145	SAO PAULO	11-38751333		
SANTA MARIA	55-32222235	AVARE	14-37322142	SAO PAULO	11-55321515		
SANTA ROSA	55-35121991	BARRETOS	17-33222742	SAO PAULO	11-62809411		
SANTA KOSA SANTA VITORIA DA PALMAR	53-35121991	BATATAIS	16-37614455	SAO PAULO	11-62809411		
SANTA VITORIA DA PALMAR SANTO ANGELO	53-32633992 55-33131183	BATATAIS BAURU	16-37614455	SAO PAULO SAO PAULO	11-32217317		
SANTO AUGUSTO	55-37811511	BIRIGUI	18-36424011	SAO PAULO	11-25770899		

CERTIFICADO DE GARANTIA NO BRASIL

Este aparelho é garantido pela Philips da Amazônia Indústria Eletrônica Ltda., por um período superior ao estabelecido por lei. Porém, para que a garantia tenha validade, é imprescindível que, além deste certificado, seja apresentada a nota fiscal de compra do produto.

A Philips da Amazônia Indústria Eletrônica Ltda. assegura ao proprietário consumidor deste aparelho as seguintes garantias, a partir da data de entrega do produto, conforme expresso na nota fiscal de compra, que passa a fazer parte deste certificado:

Garantia para rádios e reprodutores de CD portáteis (sem caixa acústica destacável): 180 dias

Garantia para os demais produtos da marca Philips: 365 dias.

Esta garantia perderá sua validade se:

- O defeito apresentado for ocasionado por uso indevido ou em desacordo com o seu manual de instruções.
- O produto for alterado, violado ou consertado por pessoa não autorizada pela Philips.
- O produto for ligado a fonte de energia (rede elétrica, pilhas, bateria, etc.) de características
- diferentes das recomendadas no manual de instruções e/ou no produto.
- O número de série que identifica o produto estiver de alguma forma adulterado ou rasurado.

Estão excluídos desta garantia defeitos decorrentes do descumprimento do manual de instruções do produto, de casos fortuitos ou de força maior, bem como aqueles causados por agentes da natureza e acidentes. Excluem-se igualmente desta garantia defeitos decorrentes do uso dos produtos em serviços não doméstico/residencial regular ou em desacordo com o uso recomendado. ESTÃO EXCLUÍDAS DA GARANTIA ADICIONAL AS PILHAS OU BATERIAS FORNECIDAS JUNTO COM O CONTROLE REMOTO.

Nos municípios onde não exista oficina autorizada de serviço Philips, as despesas de transporte do aparelho e/ou do técnico autorizado, correm por conta do Sr. Consumidor requerente do serviço.

A garantia não será válida se o produto necessitar de modificações ou adaptações para habilitálo a operar em qualquer outro país que não aquele para o qual foi designado, fabricado, aprovado e/ou autorizado, ou ter sofrido qualquer dano decorrente deste tipo de modificação.

Philips da Amazônia Indústria Eletrônica Ltda.

Dentro do Brasil, para informações adicionais sobre o produto ou para eventual necessidade de utilização da rede de oficinas autorizadas, ligue para o Centro de Informações ao Consumidor (CIC). Em São Paulo - Capital e demais localidades com DDD 011 - tel. 2121-0203, nas demais localidades e estados - tel. 0800 701 02 03 (discagem direta gratuita), ou escreva para Caixa Postal: nº 21.315 - CEP04602-970 - São Paulo - SP, ou envie um e-mail para: cic@philips.com.br Horário de atendimento: de segunda à sexta-feira, das 08:00 às 20:00 h; aos sábados das 08:00às13:00h.

Para atendimento fora do Brasil, contate a Philips local ou a: Philips Consumer Service Beukenlaan 2 5651 CD Eindhoven The Netherlands

Certificado de Garantía en Argentina

Artefacto: Fabricante/Importador: Philips Argentina S.A. y/o Fábrica Austral de Productos Eléctricos S.A. Dirección: Vedia 3892 - Buenos Aires	Modelo:
Fecha de Venta:	Nro. de serie

Firma y sello de la casa vendedora.

PHILIPS ARGENTINA S.A. en adelante denominada "la empresa", garantiza al comprador de este artefacto por el término de (1) año a partir de la fecha de adquisición, el normal funcionamiento contra cualquier defecto de fabricación y/o vicio de material, y se compromete a reparar el mismo —sin cargo alguno para el adquirente— cuando el mismo fallare en situaciones normales de uso y bajo las condiciones que a continuación se detallan:

- Este certificado de garantía es válido únicamente en la Republica Argentina. El certificado debe ser completado por la casa vendedora y ser presentado por el usuario conjuntamente con la factura original de compra.
- 2 . Serán causas de anulación de esta garantía en los casos que corresponda:
 - 2.1. Uso impropio o distinto del uso doméstico.
 - 2.2. Exceso o caídas de tensión eléctrica que impliquen uso en condiciones anormales.
 - 2.3. Instalación y/o uso en condiciones distintas a las marcadas en el "Manual de instalación y uso" que se adjunta a esta garantía.
 - 2.4. Cualquier intervención al artefacto por terceros no autorizados por la empresa.
- 3. La garantía carecerá de validez si se observare lo siguiente:
 - 3.1. Enmiendas o raspaduras en los datos del certificado de garantía o factura.
 - 3.2. Falta de factura original de compra que detalle tipo de artefacto, modelo, número de serie y fecha que coincida con los del encabezamiento del presente certificado.
- 4. No están cubiertos por esta garantía los siguientes casos:
 - 4.1. Los daños ocasionados al exterior del gabinete.
 - 4.2. Las roturas, golpes, caídas o rayaduras causadas por traslados.
 - 4.3. Los daños o fallas ocasionados por deficiencias, sobretensiones, descargas o interrupciones del circuito de alimentación eléctrica o rayos, deficiencias en la instalación eléctrica del domicilio del usuario o conexión del artefacto a redes que no sean las especificadas en el Manual de Uso del mismo.
 - 4.4. Las fallas, daños, roturas o desgastes producidos por el maltrato o uso indebido del artefacto y/o causadas por inundaciones, incendios, terremotos, tormentas eléctricas, golpes o accidentes de cualquier naturaleza.
 - 4.5. Las fallas o daños ocasionados en desperfectos en la línea telefónica.
 - 4.6. Las fallas producidas por una mala recepción ocasionada en el uso de una antena deficiente o en señales de transmisión débiles.
- 5. Las condiciones de instalación y uso del artefacto se encuentran detalladas en el Manual de Uso del mismo.
- 6. La empresa no asume responsabilidad alguna por los daños personales o a la propiedad al usuario o a terceros que pudieran causar la mala instalación o uso indebido del artefacto, incluyendo en este último caso a la falta de mantenimiento.
- 7. En caso de falla, el usuario deberá requerir la reparación a la empresa a través del Service Oficial y/o Talleres Autorizados más próximos a su domicilio y cuyo listado se acompaña al presente. La empresa a segura al usuario la reparación y/o reposición de piezas para su correcto funcionamiento en un plazo no mayor a 30 días contados a partir de la fecha de solicitud de reparación, salvo caso fortuito o fuerza mayor.

- 8. Toda intervención del servicio técnico realizada a pedido del usuario dentro del plazo de garantía, que no fuera originada por falla o defecto alguno cubierto por este certificado, deberá ser abonado por el interesado de acuerdo a la tarifa vigente.
- 9. El presente certificado anula cualquier otra garantía implícita o explícita, por la cual y expresamente no autorizamos a ninguna otra persona, sociedad o asociación a asumir por nuestra cuenta ninguna responsabilidad con respecto a nuestros productos.
- 10. En caso de que durante el período de vigencia de esta garantía el artefacto deba ser trasladado a las Delegaciones Oficiales y/o Talleres Autorizados de Service para su reparación, el transporte será realizado por la empresa y serán a su cargo los gastos de flete y seguros y cualquier otro que deba realizarse para su ejecución.

Red de Talleres Autorizados en Argentina

CAPITAL FEDERAL

ATTENDANCE S.A.

- Av. Monroe 3351 (C1430BKA) Cap. Fed.
- Tel.: 4545-5574/0704 ó 6775-1300
- Ventas de Repuestos y Accesorios
- Tel.: 4545-0854

DIG TRONIC

- Av. San Martín 1762 (C1416CRS) Cap. Fed.
- Tel.: 4583-1501

ELECTARG S.R.L.

- Av. Córdoba 1357 (C1055AAD) Cap. Fed.
- Ventas de Repuestos y Accesorios
- Tel.: 4811-1050

Caballito Electarg J. M. Moreno 287 4903-6967/6854/8983

BUENOS AIRES

428719
1535329
424147
432919
424129
442754
516021
1108155
421750
729367
1945633
426134
472665
421177
418000

San Nicolás	Servitec	Bv. Alvarez 148 (034	61) 454729/42957
San Pedro	Electrónica Menisale	Mitre 1695	(03329) 425523
Tandil	Lazzarini Oscar Rafael	Pellegrini 524	(02293) 44216
Trenque Lauquen	Labrune Electrónica	Av. San Martín 426	(02392) 42324
Tres Arroyos	Saini Fabián y Sergio	Av. Belgrano 562	(02983) 427369
Zárate	Electrónica Spinozzi	Ituzaingó 1030	(03487) 427353

GRAN BUENOS AIRES

Avellaneda	Casa Torres S.A.	Av. Mitre 2559	4255-5854
Florencio Varela	Casa Torres S.A.	San Martín 2574	4255-5854
Gregorio de Laferrere	Electrónica Alvarez	Honorio Luque 6084	4626-1322
Lomas de Zamora	Attendance S.A. Lomas	Laprida 485	4292-8900
Merlo	Argentrónica S.H.	Pte. Cámpora 2175 (0220) 4837	177/4829934
Moreno	Argentrónica S.H.	Bmé. Mitre 2977 loc.2 (023	7) 4639500
Morón	Servotronic	Ntra. Sra. del Buen Viaje 1222	4627-5656
Olivos	Appliance	Av. Libertador 2684	4794-7700
Quilmes	Casa Torres S.A.	E. Ríos esq. Gran Canaria	4255-5854
Ramos Mejía	Electarg S.R.L. Suc.	Belgrano 224	4656-0619
San Miguel	Servotronic San Miguel	Belgrano 999	4664-4131
Villa Ballester	Servotronic	J. Hernández 3101 4767-2515	/4768-5249

CATAMARCA

Catamarca

CHACO			
Resistencia	Freschi Jorge Oscar	Av. Avalos 320	(03722) 426030
СНИВИТ			
Comodoro Rivadavia	C.A.S. S.R.L.	Alem 145	(0297) 4442629
Trelew	Fagtron Electrónica	Brasil 253	(02965) 427073
CORDOBA			
Córdoba Capital	Servelco S.R.L.	Pje. E. Marsilla 635 (0351)	4724008/4732024
Río Cuarto	Maurutto Víctor G.	Bv. Almafuerte 487	(0358) 4660204
Río Cuarto	Capaldi Abel	Paunero 832	(0358) 4623003
Río Tercero	Service Omega	Homero Manzi 149	(03571) 423330
San Francisco	Acuña Walter Electrónica	M. Moreno 360	(03564) 425367
Villa María	Grasso Electrónica	Bv. Alvear 541	(0353) 4521366
Villa María	Vanguard Sist. Electrónicos	México 421	(0353) 4532951

Omicron Central de Serv. San Martín 225

(03833) 427235



