



Register your product and get support at
www.philips.com/welcome




Quick start guide

- 1** Connect
- 2** Setup
- 3** Enjoy


AJL750

What's in the box

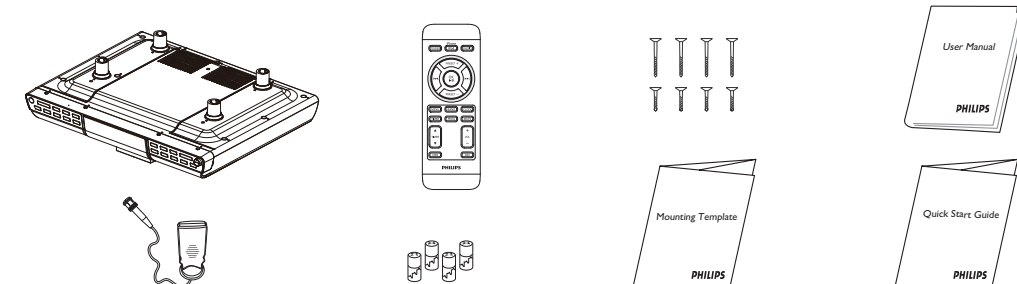


1 Connect

A Remove the protective tab

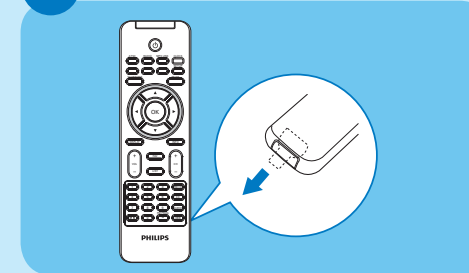

1 Remove the protective tab to activate the remote control battery.

B Connect power

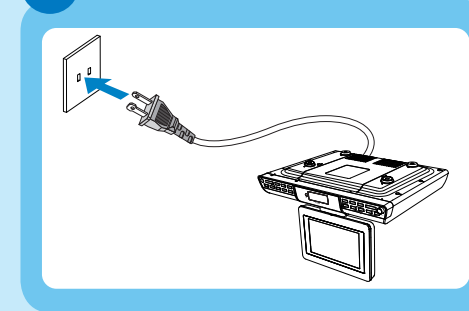

1 Connect the AC power cord to the wall outlet.

1 Connect

C Connect TV antenna

 
- 1 Connect the antenna to the **ANTENNA** jack.


2 Setup

A Set time

- 1 In standby mode, press and hold **CLOCK** for 2 seconds.
↳ The hour digits begin to blink.
- 2 Press **▲/▼** or **TIMER/VOL** to set the hour.
- 3 Press **OK/▶** to confirm.
↳ The minute digits begin to blink.
- 4 Press **▲/▼** or **TIMER/VOL** to set the minute.
↳ [12 HR] begins to blink.
- 5 Press **▲/▼** or **TIMER/VOL** to select the 12/24 hour format.
- 6 Press **OK** to confirm.

B Set the kitchen timer

- 1 At any operation mode, press **TIMER/VOL** for two seconds.
↳ The last time setting in minute or hour and minute blinks.
- 2 Rotate the knob clockwise/counter-clockwise to choose the desired timer.
- 3 Press **TIMER/VOL** to confirm.
↳ The timer is set and activated.
↳  is displayed and the timer starts counting down.

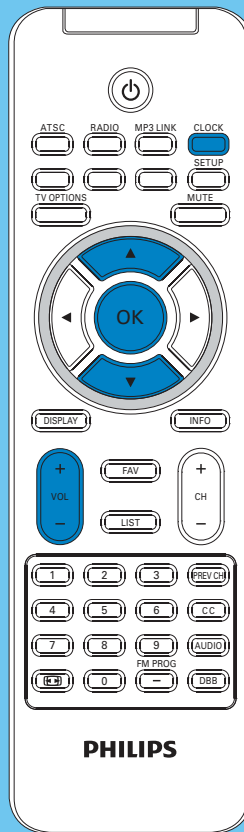

3 Enjoy

A Watch TV

- 1 Press **ATSC TV** to enter TV mode.
↳ [Atsc] (Atsc) is displayed.
↳ **First time installation** is displayed on the TV panel.
- 2 Press **▲/▼** to switch to an item.
- 3 Press **▲/▼** to select an option.
- 4 Select Air/Cable connecting.
↳ Auto search starts.
↳ All available TV channels will be searched and stored.

B Play from an external device

- 1 Press **PUSH** at the bottom of the set to release TV panel.
- 2 Pull down the panel.
- 3 Turn around the panel to face the rear of the panel.
- 4 Open the door to get the MP3 link cable.
- 5 Connect the built-in MP3 link cable to the headphone jack on an external device.
- 6 Press **MP3 LINK** to select the MP3 link source.
↳ [AUX IN] (AUX IN) is displayed for five seconds.
- 7 Start to play the device (see the device user manual).

3 Enjoy

C Tune to a radio station

- 1 Press **RADIO** to enter the FM mode.
- 2 Press **CH +/-** to select a preset radio station.
- 3 Press **◀/▶** repeatedly until you find optimal reception.
↳ The preset number for other radio stations remain unchanged.

