Register your product and get support at

## www.philips.com/welcome

HTS9221 HTS9241





EN User manual

MS-MY Manual pengguna

ZH-TW 使用手冊

ZH-CN 用户手册



## Contents

1	Using help Navigate the onscreen help	4 4
2	Help and support	5
	Update your onscreen help	5
	Tutorials	6
	FAQs	6
	Contact Philips	6
3	Notice	6
	Open source software	6
	Trademarks	6
4	Important	8
	Safety	8
	Care for your product	8
	Care of the environment	8
	3D health warning	9
5	Your home theater	9
	Main unit	9
	Remote control	10
6	Connect your home theater	12
	Speakers	12
	Connectors	13
	Connect to TV	14
	Connect audio from TV and other device	
	Computers and the Internet	16
	Name your home theater	18
7	Use your home theater	18
	Choose sound	18
	Discs	19
	USB storage devices	22
	DivX	22
	Audio, video, and picture options	23
	Radio	24
	MP3 player	25 25
	iPod or iPhone	
	Use smartphone	26 27
	Browse PC through DLNA Browse Net TV	30

	Rent online video Multiview EasyLink	30 31 31
8	Change settings Picture Sound Language Parental control Energy saving Apply factory settings	32 32 33 34 34 35 35
9	Update software Check software version Update software through the Internet Update software through USB	36 36 36 36
10	Product specifications	37
11	Troubleshooting	40
12	Language code	43
13	Index	44

## 1 Using help

Philips is committed to develop products that contribute to a greener environment. To save paper and the environment, access the help on your home theater through the onscreen interface.


The onscreen help contains all the information that you need to set up your home theater. However, if you prefer to print the user manual, download the PDF version from www.philips.com/ support. Follow the instructions on the website to select your language, and then enter your model number.

Access the onscreen help by pressing **HELP** (yellow button) on your remote control.

The onscreen help has two panels.

- The left panel contains the Contents and Index. Navigate the Contents or Index to select a page.
- The right panel contains the content of each page. Select **Related topics** for additional help on the content.

## Navigate the onscreen help

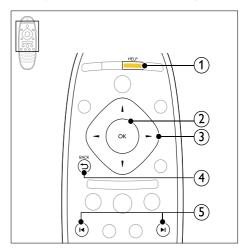

- 1 HELP
- Access the onscreen help.
- Display the selected page, or expand topics in **Contents**.
- (3) Navigation buttons
  - Up: Scroll up or move to the previous page.
  - Down: Scroll down or move to the next page.
  - Right: Navigate to the right panel or next index entry.
  - Left: Navigate to the left panel or previous index entry.
- (4) → BACK

Move up in the **Contents** or **Index**. From the right panel, move to the **Contents** on the left panel.

- (5) I ✓ / ►I (Previous/Next)
  - I◀: Display the last viewed page in history.
  - ▶I: Display the next page from history.

## 2 Help and support

Watch video tutorials, download a software update, and find answers to many frequently answered questions (FAQs) on your product at www.philips.com.

## Update your onscreen help

Philips continually tries to improve its products. To make sure that your onscreen help is up to date with the latest information, update your home theater with the latest onscreen help. Download the latest help from www.philips.com/support.

#### What you need

- A USB flash drive, with at least 35MB of memory. The USB flash drive must be FAT or NTFS formatted. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip® for Microsoft® Windows® or Stufflt® for Macintosh®).

## Step 1: Check the current version of help

Check the current version of onscreen help installed in your home theater. If the version is lower than the version available at www.philips.com/support, download and install the latest onscreen help.

The last two digits indicate the version of the onscreen help installed in your home theater. For example, if the version in the home theater is 'Subsystem SW: 35-00-00-05', '05' represents the version of the onscreen help currently installed.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Version Info.], and then press OK.

## Step 2: Download the latest onscreen help

Connect a USB flash drive to your computer.

- 2 In your web browser, go to www.philips. com/support.
- At the Philips support website, find your product and click on User manuals, and then locate the User Manual Upgrade Software.
  - → The help update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive.
- Use the archive utility to extract the help update file in the root directory of the USB flash drive.
  - → A file named 'HTSxxxxeDFU.zip' is extracted under the UPG\_ALL folder of your USB flash drive, 'xxxx' being the model number of your home theater:
- **6** Disconnect the USB flash drive from your computer.

#### Step 3: Update onscreen help

## !

#### Caution

- Before you connect the USB flash drive to your home theater, make sure that there is no disc in the disc compartment, and the disc compartment is closed.
- 1 Switch on the TV.
- 2 Connect the USB flash drive containing the downloaded file to your home theater.
- 5 Press ★ (Home).
- Enter 338 on the remote control.
  - → Follow the instructions on the TV to confirm the update. Do not switch off the home theater or remove the USB flash drive during the update.
- 5 Disconnect the USB flash drive from the home theater.



#### Warning

- If power fails during the update, do not remove the USB flash drive from the home theater.
- If an error occurs during the update, retry the procedure. If the error reoccurs, contact Philips Consumer Care.

## **Tutorials**

To set up your home theater and get additional information, refer to the video tutorials at www. philips.com/support.

## **FAQs**

If you have a problem, refer to the frequently asked questions (FAQs) for this home theater at www.philips.com/support.

If you still need help, contact Philips Consumer Care in your country.



#### Warning

 Do not attempt to repair your home theater yourself. This may cause severe injury, irreparable damage to your home theater, or void your warranty.

## Contact Philips

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Note the numbers before you call Philips:

Model INO	
Serial No	

## 3 Notice

This section contains the legal and trademark notices.

## Open source software

Philips Electronics Singapore Pte Ltd hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open.source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands''. If you do not receive timely confirmation of your letter, please email to the email address above. The texts of the licenses and acknowledgements for open source software used in this product are included in the user manual.

## **Trademarks**



"Blu-ray 3D" and "Blu-ray 3D" logo are trademarks of Blu-ray Disc Association.



'DVD Video' is a trademark of DVD Format/ Logo Licensing Corporation.



Java and all other Java trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.



#### **BONUSVIEW™**

'BD LIVE' and 'BONUSVIEW' are trademarks of Blu-ray Disc Association.

#### 

'AVCHD' and 'AVCHD' logo are trademarks of Matsushita Electric Industrial Co., Ltd and Sony Corporation.

## x.v.Colour

'x.v.Colour' is a trademark of Sony Corporation.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, and DTS-HD Master Audio | Essential and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



DivX °, DivX Certified °, DivX Plus™ HD and associated logos are trademarks of DivX, Inc. and are used under license.

ABOUT DIVX VIDEO: DivX ° is a digital video format created by DivX, Inc. This is an official DivX Certified ° device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified \*device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance.



"Made for iPod" and "Make for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.



SDHC Logo is a trademark of SD-3C, LLC.



## **Important**

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

## Safety

#### Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before
- Never place the product and accessories near naked flames or other heat sources. including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

#### Risk of short circuit or fire!

Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

#### Risk of injury or damage to the home theater!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.

- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

#### Risk of overheating!

Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

#### Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

#### Risk of swallowing batteries!

The product/remote control may contain a coin type battery, which can be swallowed. Keep the battery out of reach of children at all times!

## Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

## Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

## 3D health warning


If you or your family has a history of epilepsy or photosensitive seizures, consult a medical professional before exposing yourself to flashing light sources, rapid image sequences or 3D viewing.

To avoid discomfort such as dizziness, headache or disorientation, we recommend not watching 3D for extended periods of time. If you experience any discomfort, stop watching 3D and do not immediately engage in any potentially hazardous activity (for example driving a car) until your symptoms have disappeared. If symptoms persist, do not resume watching 3D without consulting a medical professional first. Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above. Watching 3D is not recommended for children under six years of age as their visual system is not fully developed yet.

## 5 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

### Main unit

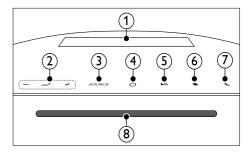


- 1 Display panel
- (2) 4+/- (Volume) Increase or decrease volume.
- (3) SOURCE
  Select an audio or video source for the home theater.
- (4)  $\circlearrowleft$  (Standby-On) Switch the home theater on or to standby.
- 5 FII (Play/Pause)
  Start, pause or resume play.
- 6 (Stop) Stop play.
- ⑦ ▲ (Open/Close) Open or close the disc compartment, or eject the disc.
- (8) Disc compartment

#### Remote control

This section includes an overview of the remote control.


#### Overview

Control your home theater with the remote control.

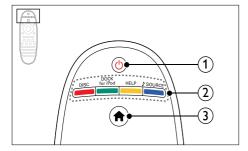

- 1 (Standby-On)
  - Switch the home theater on or to standby.
  - When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.
- 2 Source buttons / Color buttons
  - Color buttons: Select tasks or options for Blu-ray discs.
  - DISC: Switch to disc source.
  - DOCK for iPod: Switch to Philips dock for iPod or iPhone.
  - **HELP**: Access the onscreen help.
  - SOURCE: Select an audio input source or radio source.
- 3 ♠ (Home)

Access the home menu.

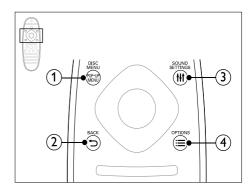


## 1) POP-UP MENU/DISC MENU

Access or exit the disc menu when you play a disc.

- 2 SACK
  - Return to a previous menu screen.
  - In radio mode, press and hold to erase the current preset radio stations.
- (3) HI SOUND SETTINGS

Access or exit sound options.

- (4) ≡ OPTIONS
  - Access more play options while playing a disc or a USB storage device.
  - In radio mode, set a radio station.

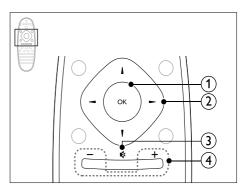

ok

Confirm an entry or selection.


- (2) Navigation buttons
  - Navigate menus.
  - In radio mode, press left or right to start auto search.
  - In radio mode, press up or down to tune the radio frequency.

## ③ **♦** (Mute)

Mute or restore volume.


## 4 +/- (Volume)

Increase or decrease volume.

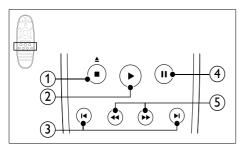

## 1 ■ (Stop) / ▲ (Eject/ Open/Close)

- Stop play.
- Press and hold for three seconds to open or close the disc compartment, or eject the disc.
- (2) ► (Play) Start or resume play.
- (3) I◄ / ►I (Previous/Next)
  - Skip to the previous or next track, chapter or file.
  - In radio mode, select a preset radio station.
- 4 II (Pause)
  Pause play.
- (5) ◀◀ / ▶▶ (Fast Backward/Fast Forward)
  Search backwards or forward. Press
  repeatedly to change the search speed.

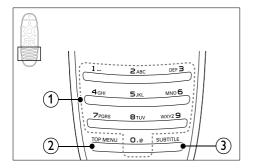

#### 1 Alphanumeric buttons

- Enter values or letters (using SMS style entry).
- In radio mode, select a preset radio station.

#### (2) TOP MENU

Access the main menu of a video disc.

## (3) SUBTITLE

Select subtitle language for video.

## EasyLink controls

With Easylink, you can control your home theater and the TV with the following buttons on your home theater remote control (see 'EasyLink' on page 31).

- O (Standby-On): Press and hold to switch your home theater, TV and the connected devices to standby.
- P(Play): When a video disc is in the disc compartment, wake up the TV from standby, and then play a disc.

# 6 Connect your home theater

This section helps you connect your home theater to a TV and other devices.

For information about the basic connections of your home theater and accessories, see the quick start guide. For a comprehensive interactive guide, see www.connectivityguide.philips.com.



#### Note

- For identification and supply ratings, refer to the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.


## **Speakers**

Position, connect, and set up your speakers for best surround sound.

#### **Position**

Speaker position plays a critical role in setting up a surround sound effect.

For best results, place your speakers and the subwoofer as shown below.

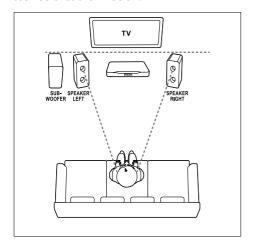



#### Vote

 Surround sound depends on various factors such as room shape and size, type of wall and ceiling, windows and reflective surfaces, and speaker acoustics.

Follow these general guidelines, and then set up your subwoofer.

- **1** Seating position:
  - This is the center of your listening area.
- 2 SPEAKER LEFT (speaker left) and SPEAKER RIGHT (speaker right) speakers: Placethe left and right speakers in the front, and equidistant from the main unit in an arc, so that the two speakers are at same distance from your seating position. For best effect, point the speakers towards the seating position and place the speakers close to the ear level (when seated).
- SUBWOOFER (subwoofer):

  Place the subwoofer at least one meter to

Place the subwoofer at least one meter to the left or right of the TV. Leave about ten centimeter clearance from the wall.

#### Connect

Connect your speakers and the subwoofer to your home theater as described in the quick start guide.

## Setup


Set up your subwoofer through the audio menu.

- 1 Connect your subwoofer as described in the quick start guide.
- Press ♠ (Home) on your home theater remote control, and select [Setup] > [Audio] > [Subwoofer volume].
- 3 Change the volume.

#### Connectors

Connect other devices to your home theater.


#### Side left

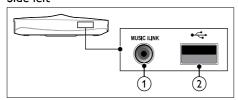

- (1) MUSIC iLINK


  Audio input from an MP3 player.
- (USB)
   Audio, video or picture input from a USB storage device.

#### Side right

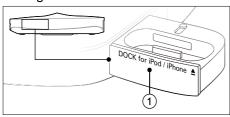


 ≜ DOCK for iPod/iPhone iPod or iPhone dock.

#### Rear left

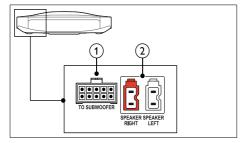

- 1 TO SUBWOOFER
  Connect to the supplied subwoofer.
- 2 SPEAKER RIGHT/SPEAKER LEFT Connect to the supplied speakers.

#### Rear center

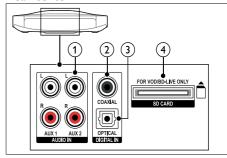


- (1) AUDIO IN-AUX 1/AUX 2
  Connect to an analog audio output on the
  TV or an analog device.
- 2 DIGITAL IN-COAXIAL

  Connect to a coaxial audio output on the
  TV or a digital device.
- 3 DIGITAL IN-OPTICAL

  Connect to an optical audio output on the
  TV or a digital device.
- (4) SD CARD-FOR VOD/BD-LIVE ONLY Slot for SD card. The SD card is used to rent online videos and access BD-Live.

## Rear right

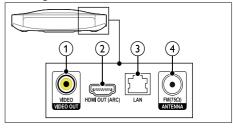

- (1) VIDEO OUT-VIDEO

  Connect to the composite video input on the TV.
- (2) HDMI OUT (ARC)
  Connect to the HDMI input on the TV.
- (3) LAN
  Connect to the LAN input on a broadband modem or router.
- (4) ANTENNA FM 75 Ω
  Signal input from an antenna, cable or satellite.

## Connect to TV

Connect your home theater to a TV to watch videos. You can listen to audio from TV programs through your home theater speakers. Use the best quality connection available on your home theater and TV.

## Option 1: Connect to TV through HDMI (ARC)


#### Best quality video

Your home theater supports HDMI version 1.4 - Audio Return Channel (ARC). If your TV is HDMI ARC compliant, connect your home theater to the TV through the HDMI ARC connection for easy and quick setup.

With HDMI ARC, you do not need an additional audio cable to play audio from TV through your home theater.

Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI ARC connector on the TV.

The **HDMI ARC** connector on the TV might be labeled **HDMI IN** or **HDMI**. For details on TV connectors, see the TV user manual.

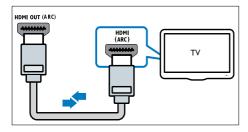

- On your TV, turn on HDMI-CEC. For details, see the TV user manual.
  - → When you play a disc on your home theater, the video is automatically displayed on TV and the audio is automatically played on the home theater.
- If audio from the TV does not play automatically on your home theater, set up the audio manually (see 'Set up audio for connected devices' on page 16).

#### Option 2: Connect to TV through HDMI


#### Best quality video

If your TV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.

With a standard HDMI connection, you need an additional audio cable to play the audio from the TV through your home theater (see 'Connect audio from TV and other devices' on page 15).

Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI connector on the TV.

The HDMI connector on the TV might be labeled **HDMI IN**.

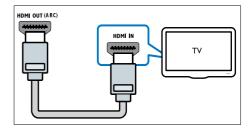

- 2 On your TV, turn on HDMI-CEC. For details, see the TV user manual.
  - When you play a disc on your home theater, the video is automatically displayed on TV and the audio is automatically played on the home theater.
- To play audio from TV programs through your home theater, connect an additional audio cable (see 'Connect audio from TV and other devices' on page 15).
- 4 If audio from the TV does not play automatically on your home theater, set up the audio manually (see 'Set up audio for connected devices' on page 16).



#### Note

• If your TV has a DVI connector, you can use an HDMI/DVI adapter to connect to TV.


## Option 3: Connect to the TV through composite video

#### Basic quality video

If your TV does not have HDMI connectors, connect your home theater to the TV through a composite connection. A composite connection does not support high-definition video.

With a composite connection, you need an additional audio cable to play the audio from the TV through your home theater (see 'Connect audio from TV and other devices' on page 15).

1 Using a composite video cable, connect the VIDEO connector on your home theater to the composite video connector on the TV. The composite video connector might be labeled AV IN, VIDEO IN, COMPOSITE, or BASEBAND.

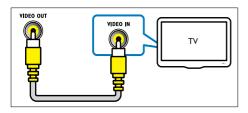

On your TV, switch to the correct video input.
To play audio from TV programs through your home theater, connect an additional audio cable (see 'Connect audio from TV and other devices' on page 15).

On your home theater, press **SOURCE** repeatedly to select the correct audio input.

# Connect audio from TV and other devices

Play audio from TV or other devices through your home theater.

Use the best quality connection available on your TV, home theater, and other devices.




- The audio connections in this user manual are only recommendations. You can use other connections too.
- When your home theater and TV are connected through HDMI ARC, an audio connection is not required.

## Option 1: Connect audio through a digital optical cable

#### Best quality audio

Using an optical cable, connect the **OPTICAL** connector on your home theater to the **OPTICAL OUT** connector on the TV or other device.

The digital optical connector might be labeled SPDIF. SPDIF OUT. or OPTICAL.

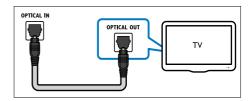


## Option 2: Connect audio through a digital coaxial cable

#### Good quality audio

Using a coaxial cable, connect the **COAXIAL** connector on your home theater to the **COAXIAL/DIGITAL OUT** connector on the TV or other device.


The digital coaxial connector might be labeled **DIGITAL AUDIO OUT**.

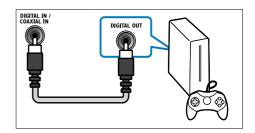

#### Option 3: Connect audio through analog audio cables

#### Basic quality audio

Using an analog cable, connect the AUX connectors on your home theater to the AUDIO OUT connectors on the TV or other device.

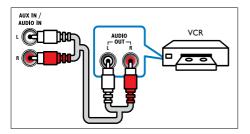

#### Set up audio for connected devices

When you connect a device to your home theater, check the audio settings.

- On your TV and other devices, turn on HDMI-CEC. For details, see the user manual of the TV and the other device.
- Select 'Amplifier' from the TV speakers menu. For details, see the TV user manual.
- On your home theater, turn on System Audio Control, and then map the audio of the connected device to the correct connectors on your home theater (see 'Play audio from home theater' on page 32).

If the connected device is not HDMI-CEC compliant, press SOURCE repeatedly on your home theater to select the correct audio input.

## Computers and the Internet

Connect your home theater to your computer network and the internet, and enjoy:

- Multimedia content streamed from your computer: Play music, photo, and video from a computer or other media server on your network (see 'Browse PC through DLNA' on page 27).
- Net TV (Not available in China): Browse Net TV services to access online information, games, news, music, and other services (see 'Browse Net TV' on page 30).

**Software update:**Update the home theater software through the network (see 'Update software through the Internet' on page 36).



#### Caution

• Before you try to connect the home theater to a computer network, familiarize yourself with the network router, media server software and networking principles. If necessary, read documentation that accompanies the network components. Philips is not responsible for lost, damaged, or corrupt data.

#### Wired connection


Connect your home theater to your router through a network cable.

#### What you need

- A network router (with DHCP enabled).
- A network cable (RI45 straight cable).
- A computer with media server software installed (see 'Set up media server software' on page 27).
- For Net TV and software update, make sure that the network router has access to the Internet, and is not restricted by firewalls or other security systems.

### Set up the wired network

Connect your home theater to your router as shown below, and then switch on the devices.

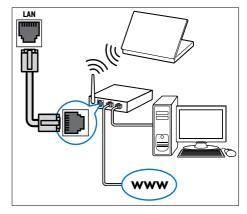

Connect the home theater to a network router through a wired connection (see 'Wired connection' on page 16).

- 2 Turn on your TV, and switch to the correct source for the home theater.
- 3 Press ♠ (Home).
- 4 Select [Setup], and then press OK.
- 5 Select [Network] > [Network Installation] > [Wired (Ethernet)], and then press OK.
- **6** Follow the instructions on the TV to complete the setup.
  - → The home theater connects to the internet. If connection fails, select [Retry], and then press OK.
- 7 Select [Finish], and then press OK to exit.

#### Check wired network settings

- 1 Press ♠ (Home).
  - Select [Setup], and then press OK.
- 3 Select [Network] > [View Network Settings], and then press OK.
  - → The current network settings are displayed.

#### Wireless connection

Connect your home theater to your router through a wireless connection.

#### What you need

- A network router (with DHCP enabled).
- A computer with media server software installed (see 'Set up media server software' on page 27).
- For Net TV and software update, make sure that the network router has access to the Internet and is not restricted by firewalls or other security systems.

## Set up the wireless network

Your home theater has built-in Wi-Fi for easy access to the wireless network. Connect your home theater to your router as shown below, and then switch on the devices.



- 1 Connect the home theater to a network router through a wireless connection (see 'Wireless connection' on page 17).
- 2 Turn on your TV, and switch to the correct source for the home theater.
- 3 Press ♠ (Home).
- 4 Select [Setup], and then press OK.
- 5 Select [Network] > [Network Installation] > [Wireless (Wi-Fi)], and then press OK.
- 6 Follow the instructions on the TV to complete the setup.
  - → The home theater connects to the internet. If connection fails, select [Retry], and then press OK.
- 7 Select [Finish], and then press OK to exit.

## Check wireless network settings

- 1 Press **(Home)**.
- 2 Select [Setup], and then press OK.
  - Select [Network] > [View Wireless Settings], and then press OK.
    - → The current Wi-Fi settings are displayed.

## Name your home theater

To easily identify your home theater on a network, name your home theater:

- Turn on your TV, and switch to the correct source for the home theater.
- 2 Press ♠ (Home).
- 3 Select [Setup], and then press OK.
- 4 Select [Network] > [Name your Product:], and then press OK.
- 5 Press the Alphanumeric buttons to enter the name.
- 6 Select [Done], and then press OK to exit.

# 7 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

#### Before you start

- Make the necessary connections described in the quick start guide and the onscreen help.
- Complete the first-time setup. First-time setup appears when you turn on the home theater for the first time. If you do not complete the setup, you are prompted to complete it each time you turn on the home theater.
- Switch the TV to the correct source for the home theater.

## Choose sound

This section helps you choose the ideal sound for your video or music.

Press Ht SOUND SETTINGS.

Press the Navigation buttons (left/right) to access the sound options on the display.

Sound settings	Description
AUTO VOLUME	Set a constant volume for the speakers. This option is best for TV audio input where the commercial signal level is usually louder than the content.
SOUND	Select a sound mode.
SURROUND	Select surround sound or stereo sound.
TREBLE	Change the high frequency output.
MID	Change the middle frequency output.
BASS	Change the low frequency output.
AUD SYNC	Delay the audio to match the video.

Select an option, and then press **OK**.

Press **SACK** to exit.

If you do not press a button within a minute, the menu exits automatically.

#### Auto volume

Turn the auto volume on to keep the volume constant when you switch to a different source.

- 1 Press Ht SOUND SETTINGS.
- 2 Select AUTO VOLUME, and then press OK.
- Press the Navigation buttons (up/down) to select ON or OFF.
- 4 Press **OK** to confirm.

#### Sound mode

2

Select predefined sound modes to suit your video or music.

1 Press III SOUND SETTINGS.

Select **SOUND**, and then press **OK**.

Press the **Navigation buttons** (up/down) to select a setting on the display:

- MOVIE: Enjoy a cinematic audio experience, specially enhanced for movies.
- MUSIC: Recreate the original recording environment of your music, in the studio or at a concert.
- ORIGINAL: Experience the original sound of your movies and music, without added sound effects.
- NEWS: Hear every word with optimized speech and clear vocals.
- GAMING: Enjoy thrilling arcade sounds, ideal for action-packed video games or loud parties.
- 4 Press OK to confirm.

#### Surround sound mode

Experience an immersive audio experience with surround sound modes.

- 1 Press ## SOUND SETTINGS.
- 2 Select **SURROUND**, and then press **OK**.

Press the Navigation buttons (up/down) to select the following settings:

- **AUTO**: Surround sound based on the audio stream.
- VIRTUAL SURR: Virtual Surround.
- STEREO: Two-channel stereo sound. Ideal for listening to music.
- 4 Press OK to confirm.

## Equalizer

Change the high frequency (treble), mid frequency (mid), and low frequency (bass) settings of the home theater:

- 1 Press Ht SOUND SETTINGS.
- 2 Select TREBLE, MID or BASS, and then press OK.
- 3 Press the **Navigation buttons** (up/down) to change the frequency.
- 4 Press OK to confirm.

## Discs

Your home theater can play DVDs, VCDs, CDs, and Blu-ray discs. It can also play discs that you've made at home, such as CD-R discs of photos and music.

#### What you need

#### For audio or 2D video:

- Audio and video connection between your home theater and the TV.
- An audio or a video disc.

#### For 3D video:

- A 3D TV.
- An HDMI connection between your home theater and the TV.
- A Blu-ray 3D disc.
- A pair of 3D glasses that are compatible with your 3D TV.

## Play discs

- 1 Insert a disc into the home theater.
  - → Your TV switches to the correct source and the disc plays automatically.
- 2 If the disc does not play automatically, press DISC or select [play Disc] in the home menu, and then press OK.
- For a 3D video, put on your 3D glasses.
- 4 Press the play buttons to control play (see 'Play buttons' on page 20).



 For a 3D video, during search forward or backward, and in some other play modes, the video displays in 2D. It returns to 3D display when you play normally again.



• To avoid flickering, change the brightness of the display (see 'Display panel' on page 35).

#### Play buttons

•	
Button	Action
Navigation buttons	Navigate menus.
OK	Confirm an entry or selection.
► (Play)	Start or resume play.
II	Pause play.
	Stop play.
<b>I</b> ◀/▶ <b>I</b>	Skip to the previous or next track, chapter or file.
<b>44</b> / <b>&gt;&gt;</b>	Fast backwards or fast forwards. Press repeatedly to change the search speed.
Navigation buttons (up/ down)	Rotate the picture clockwise or counter-clockwise.
SUBTITLE	Select subtitle language for video.
POP-UP MENU/DISC MENU	Access or exit the disc menu.
<b>≡</b> OPTIONS	Access the advanced options when you play your audio, video, or media files (see 'Audio, video, and picture options' on page 23).

For video formats such as DivX and WMV:

- To stop play, press ■.
- To resume the video from where you stopped, press ► (Play).
- To play the video from the start, press OK.

## Play 3D discs in 2D mode

If you do not have a 3D TV, watch the 3D disc in 2D mode.

- 1 Press ♠ (Home).
- Select [Setup] > [Video] > [Watch 3D video] > [Off].
- **3** Press **OK**.
- 4 Play your Blu-ray 3D disc.
  - → The 3D video is displayed in 2D.

### Display menu for VCD and SVCD

Display the content menu on VCD and SVCD discs.

- 1 Press ♠ (Home).
- 2 Select [Setup] > [Preference], and then press OK.
- 3 Select [VCD PBC] > [On], and then press OK.



#### Note

• To skip the content menu, select [Off].

#### Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

- 1 Press HI SOUND SETTINGS.
- 2 Select AUD SYNC, and then press OK.
- Press the Navigation buttons (up/down) to synchronize the audio with the video.
- 4 Press **OK** to confirm.

#### Bonus View on Blu-ray

On Blu-ray discs that support the Bonus View, enjoy extra content, such as a director's commentary, while you watch the main feature. Bonus View is also known as picture-in-picture.

- 1 Enable Bonus View (picture-in-picture) in the Blu-ray disc menu.
- While you play the main feature, press **□** OPTIONS.
  - → The options menu is displayed.
- 3 Select [PIP Selection] > [PIP], and then press OK.
  - → Depending on the video, PIP option [1] or [2] is displayed.
  - → The picture-in-picture video is displayed in a small window.
- 4 Select [2nd Audio Language] or [2nd Subtitle Language], and then press OK.
- **5** Select the language, and then press **OK**.



To turn off Bonus View, press 

OPTIONS, select [PIP Selection] > [Off], and then press OK.

#### BD-Live on Blu-ray

On Blu-ray discs with BD-Live content, access additional features, such as internet chats with the director, the latest movie trailers, games, wallpaper, and ringtones.

#### What you need

- a Blu-ray disc with BD-Live content
- an internet connection
- a storage device:
  - a USB storage device, with at least 1 GB of memory, or
  - an SD memory card of type SDHC Class 6, with at least 8 GB of memory.



#### Note

- BD-Live services vary from country to country, and depend on the disc.
- When you use BD-Live, data on the disc and home theater are accessed by the content provider.

## Access BD-Live with a USB storage device

- 1 Connect your home theater to the home network and internet (see 'Computers and the Internet' on page 16).
- 2 Connect the USB storage device to the home theater.
  - The USB storage device is used to store the downloaded BD-Live content.
- 3 Press ♠ (Home).
- 4 Select [Setup], and then press OK.
- 5 Select [Advanced] > [Local Storage] > [USB], and then press OK.
- 6 Select the BD-Live icon in the disc menu, and then press **OK**.
  - → BD-Live starts to load. The loading time depends on the disc and your internet connection.
- 7 Press the Navigation buttons to navigate BD-Live, and then press OK to select an item.

#### Access BD-Live with an SD card

- 1 Connect your home theater to the home network and internet. (see 'Computers and the Internet' on page 16)
- 2 Insert the SD memory card into the SD CARD slot on your home theater.
  - The first time you insert an SD memory card, the card is formatted. After formatting, leave the card in the home theater (see 'Format an SD card' on page 30).
  - 3 Press ♠ (Home).
- Select [Setup], and then press OK.
- 5 Select [Advanced] > [Local Storage] > [SD card], and then press OK.
- 6 Select the BD-Live icon in the disc menu, and then press **OK**.
  - → BD-Live starts to load. The loading time depends on the disc and your internet connection.
- Press the Navigation buttons to navigate BD-Live, and then press OK to select an item.

## Clear memory

If your storage device does not have enough memory for the BD-Live content, clear the memory on the storage device.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Clear memory], and then press OK.
  - → This clears the local memory and deletes the BD-Live files that you downloaded on your storage device.

#### Disable BD-Live

To restrict access to BD-Live, turn on the BD-Live security.

- 1 Press  $\stackrel{,}{\spadesuit}$  (Home).
- 2 Select [Setup], and then press OK.
- Select [Advanced] > [BD-Live security] > [On], and then press OK.
  - → BD-Live access is restricted.



#### Note

 You cannot restrict internet access on commercial Blu-ray discs.

## USB storage devices

Enjoy pictures, audio and video on a USB storage device.

#### What you need

- A USB storage device that is formatted for FAT or NTFS file systems, and complies with the Mass Storage Class.
- A USB extension cable, if the USB storage device does not fit into the connector.



#### Note

- You can use digital cameras connected by USB if they can play the files without using a special computer program.
- To play DivX DRM protected files from a USB storage device, connect your home theater to a TV through an HDMI cable.

#### Play files

- 1 Connect the USB storage device to the home theater.
- 2 Press ♠ (Home).
  - → The home menu is displayed.
- 3 Select [browse USB], and then press OK.
  - → A content browser is displayed.
- 4 Select a file, and then press **OK**.
- Press the playback buttons to control play (see 'Play buttons' on page 22).

#### Play buttons

Button	Action
Navigation buttons	Navigate menus.
ОК	Confirm an entry or selection.
► (Play)	Start or resume play.
II	Pause play.
	Stop play.
<b>I</b> ◀ / ▶ <b>I</b>	Skip to the previous or next track, chapter or file.
<b>44/</b>	Fast backwards or fast forwards. Press repeatedly to change the search speed.
Navigation buttons (up/ down)	Rotate the picture clockwise or counter-clockwise.
SUBTITLE	Select subtitle language for video.
≡ OPTIONS	Access the advanced options when you play your audio, video, or media files (see 'Audio, video, and picture options' on page 23).

For video formats such as DivX and WMV:

- To stop play, press
- To resume the video from where you stopped, press ► (Play).
- To play the video from the start, press **OK**.

## DivX

Play DivX videos from:

- a disc (see 'Discs' on page 19),
- a USB storage device (see 'USB storage devices' on page 22), or
- an online video store (see 'Rent online video' on page 30).



#### Note

 To play DivX DRM protected files from a disc, a USB storage device, or an online video store, connect your home theater to a TV through an HDMI cable.

#### VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

- 1 Press **A** (Home).
- 2 Select [Setup], and then press OK.
- Select [Advanced] > [DivX® VOD Code], and then press OK.
  - → The DivX VOD registration code for your home theater is displayed.

#### Subtitles

If your video has subtitles in multiple languages, select a subtitle language.

1 While playing video, press **SUBTITLE** to select a language.



#### Note

- Make sure that the subtitle file has the same name as the video file. For example, if the video file is named 'movie.avi', save the subtitle file as 'movie.srt' or 'movie.sub'.
- Your home theater can play subtitle files in the following formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. These files do not appear in the file navigation menu.
- If the subtitles do not appear correctly, change the character set.

#### Subtitle character set

If the subtitles do not appear correctly, change the character set that supports the DivX subtitle.

- 1 Press **≡ OPTIONS**.
  - → The options menu is displayed.
- Press the Navigation buttons to select [Character Set], and then press OK.
- **3** Select a character set.

Character Set	Language
[Standard]	Albanian, Danish, Dutch, English, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish, Turkish
[Chinese]	Simplified Chinese
[Chinese- Traditional]	Traditional Chinese
[Korean]	English and Korean

## Audio, video, and picture options

Use advanced features when you play audio, video, or media files from a disc or a USB storage device.

#### Audio options

While playing audio, repeat an audio track, a disc, or a folder.

- 1 Press **≡ OPTIONS** repeatedly to cycle through the following functions:
  - RPT TRACK / RPT FILE : Repeat the current track or file.
  - RPT DISC / RPT FOLDER : Repeat all the tracks on the disc or the folder.
  - **RPT RANDOM**: Play audio tracks in random order.
  - RPT OFF: Turn off the repeat mode.

## Video options

While watching video, select options such as subtitles, audio language, time search, and picture settings. Depending on the video source, some options are not available.

- 1 Press ≡ OPTIONS.
  - → The video options menu is displayed.
- Press the Navigation buttons and OK to select and change:
  - [Audio Language]: Select audio language for video.
  - [Subtitle Language]: Select subtitle language for video.
  - [Subtitle Shift]: Change the subtitle position on the screen.
  - [Info]: Display information about what is playing.
  - [Character Set]: Select a character set that supports the DivX subtitle.
  - [Time Search]: Skip to a specific part of the video by entering the time of the scene.
  - [2nd Audio Language]: Select the second audio language for Blu-ray video.
  - [2nd Subtitle Language]: Select the second subtitle language for Blu-ray video.
  - [Titles]: Select a specific title.
  - [Chapters]: Select a specific chapter.
  - [Angle List]: Select a different camera angle.
  - [Menus]: Display the disc menu.

- [PIP Selection]: Display Picture-in-Picture window when playing a Blu-ray disc that supports the Bonus View.
- [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
- [Repeat]: Repeat a chapter or title.
- [Repeat A-B]: Mark two points within a chapter or track to repeat play, or turn off the repeat mode.
- [Picture Settings]: Select a predefined color setting.

## Picture options

While viewing a picture, zoom into the picture, rotate it, add animation to a slideshow, and change the picture settings.

- 1 Press ≡ OPTIONS.
  - → The picture options menu appears.
- Press the Navigation buttons and OK to select and change the following settings:
  - **[Rotate +90]**: Rotate the picture 90 degree clockwise.
  - [Rotate -90]: Rotate the picture 90 degree counter-clockwise.
  - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
  - [Info]: Display picture information.
  - [Duration per slide]: Select the display speed for each picture in a slide show.
  - [Slide Animation]: Select animation for the slide show.
  - [Picture Settings]: Select a predefined color setting.
  - [Repeat]: Repeat a selected folder.

#### Slideshows

While playing audio, access fun features such as picture and musical slideshows.

#### Picture slideshows

View a slideshow of your pictures stored in your disc or a USB storage device.

- Select a picture from a disc or USB storage device, and then press ► (Play).
- 2 Press ≡ OPTIONS.

- Press Navigation buttons and OK to select the following settings:
  - [Slide Animation]: Select an animation for the slideshow.
  - [Duration per slide]: Select a display speed for each picture in a slideshow.
- 4 Press to stop the slideshow.

#### Musical slideshows

Create a musical slideshow to play music and pictures at the same time.

- 1 Select a music track, and then press **OK**.
- 2 Press SACK, and go to the picture
- 3 Select a picture, and then press ► (Play) to start the slideshow.
- **4** Press to stop slideshow.
- 5 Press again to stop music.

## Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.

#### What you need

FM antenna.



#### Note

- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

#### Tune stations

- 1 Connect the FM antenna as described in the quick start guide.
- Press SOURCE repeatedly until RADIO appears on the display panel.
  - → If you have already installed the radio stations, the last channel that you listened to is played.
  - If you have not installed any radio stations, the message AUTO INSTALL... PRESS PLAY appears on the display panel. Press ► (Play).

3 Press the following buttons to listen or to change radio stations:

Button	Action
I ✓ / ►I or Alphanumeric buttons	Select a preset radio station.
Navigation buttons (left/right)	Search for a radio station.
Navigation buttons (up/ down)	Fine tune a radio frequency.
	Press to stop the installation of radio stations.
<b>→</b> BACK	Press and hold to erase the preset radio station.
<b>≡</b> OPTIONS	Manual: Press once to access program mode, and press again to store the radio station. Automatic: Press and hold for three seconds to reinstall the radio stations.

#### Listen to radio

- 1 Press > SOURCE repeatedly until RADIO appears on the display panel.
  - To listen to a preset station, press I
     or ►I.
  - To search for a radio station, and then listen, press Navigation buttons (left/ right).
- 2 Press +/- (Volume) to change the volume.

## Tuning grid

In some countries, you can toggle the FM tuning grid between 50 kHz and 100 kHz. Switching the tuning grid erases all preset radio stations.

- 1 Press J SOURCE repeatedly until RADIO appears on the display panel.
- 2 Press ■.
- Press and hold ► (Play) to toggle between 50 kHz or 100 kHz

## MP3 player

Connect your MP3 player to play your audio files or music.

#### What you need

- An MP3 player.
- A 3.5mm stereo audio cable.

## Play music

- 1 Connect the MP3 player to the home theater as described in the quick start guide.
- Press J SOURCE repeatedly until MUSIC I-LINK appears on the display panel.
- 3 Press the buttons on the MP3 player to select and play audio files or music.

## iPod or iPhone

Use the dock of your home theater to play music, movies and photos from your iPod or iPhone.

#### What you need

An HDMI cable.



#### Note

• Charge your iPod/iPhone on the dock while the home theater is in iPod mode.

## Dock your iPod or iPhone

- 1 Press **≜ DOCK for iPod/iPhone** to open the iPod/iPhone dock of your home theater.
- 2 Connect the HDMI cable to your home theater and the TV.
- 3 Switch on the iPod or iPhone, and place it on the dock.

## Play music

- 1 Dock your iPod or iPhone (see 'Dock your iPod or iPhone' on page 25).
- 2 Press DOCK for iPod on the home theater remote control.
- Browse on the iPod or iPhone screen to select music tracks.
  - To view the playlist on your TV and use the home theater remote control to select a track, press DOCK for iPod again.

#### Play video and slideshows

- Dock your iPod or iPhone (see 'Dock your iPod or iPhone' on page 25).
- 2 Press ♠ (Home).
- **3** Select [browse iPod], and then press **OK**.
- 4 Switch the TV to the **AV/VIDEO** source (corresponding to the HDMI cable).
  - → The TV screen goes blank.
- 5 Press DOCK for iPod.
  - → The playlists are displayed on the TV.
- 6 Press the Navigation buttons and OK to select and play videos or photos.

## Use smartphone

Turn your iPhone or Android smartphone into a virtual remote control, or use it to browse the contents of a disc or USB storage device on your home theater:

#### What you need

- An iPhone (iOS 3.1.3 and above) or Android (Android 2.1 and above) smartphone.
- A wired or wireless home network.

#### Before you start

- Connect your home theater to your home network (see 'Computers and the Internet' on page 16).
- Name your home theater (see 'Name your home theater' on page 18).
- Connect your smartphone to the same home network. For details, see your smartphone user manual.

## Download MyRemote application

Download the Philips application, **MyRemote** (MyRemote) to your smartphone. This application is free.



Note

- Philips **MyRemote** is only available for iPhones and Android smartphones.
- Tap the App Store (App Store) icon on the iPhone or the Market (Market) icon on the Android smartphone.
- 2 Search for 'Philips MyRemote' application.

- Follow the instructions on your smartphone to download the application.
  - → The MyRemote (MyRemote) icon is added to the home screen of your smartphone.

## Access MyRemote application

Access the **MyRemote** application from your smartphone, and then identify your home theater on the home network.

- 1 Tap MyRemote (MyRemote) on your smartphone.
  - → Your home theater and the other devices on the network are displayed on your smartphone. A browsing bar with Devices, Remote, and Source tabs is also displayed.
- If your home theater is not found, check the network connection (see 'Computers and the Internet' on page 16).
  - Then, tap the **Devices** (Devices) tab on your smartphone to search again.
- **3** Tap the home theater icon on the smartphone.
  - → The virtual remote control is displayed on the smartphone.
- 4 To exit the application, press the home button on your smartphone.

## Use your smartphone as a remote control

The virtual remote control is displayed in multiple screens on the smartphone. To access the buttons, swipe the smartphone screen to the left or right.

Only the control buttons that are relevant to the play mode are enabled on your smartphone. For example, if you play pictures, only the remote control buttons that are used to control the pictures are enabled. However, if you play a video, additional buttons, such as **SUBTITLE** and **TOP MENU**, are enabled on your smartphone.

- Launch the application on your smartphone (see 'Access MyRemote application' on page 26).
  - → Depending on the play mode, the relevant remote control buttons are enabled.

- 2 If the remote control buttons do not appear, tap the **Remote** (Remote) tab on your smartphone.
- 3 Swipe to the left or right screen to access more buttons.



#### Note

 Some control functions are not available on smartphones.

## Browse a disc or USB storage device

Browse a disc or USB storage device from your smartphone, and play an audio, video, or multimedia file.

- 1 Launch the remote control application on your smartphone (see 'Access MyRemote application' on page 26).
- 2 Load a data disc or connect a USB storage device into your home theater.
- 3 On your smartphone, tap the Source (Source) tab, and then select DISC (DISC) or USB (USB).
  - → The folders in your disc or USB storage device are displayed.
- 4 Select a folder to browse, and then select a file to play.
  - → The relevant remote control buttons are enabled on your smartphone.
- To access the remote control while you browse the contents, tap the **Remote** (Remote) tab on your smartphone.

## Browse PC through DLNA

When you connect your home theater to your home network, you can enjoy music, photo, and video stored on a computer or other media server on the network.

#### What you need

- A wired or wireless home network, connected with a Universal Plug and Play (uPnP) router.
- A LAN cable to connect your home theater to your home network.
- A media server such as:
  - PC running Windows Media Player 11 or higher; or
  - Mac running Twonky Media Server.



#### Note

 For help to use other media servers, such as TVersity, see the web site of the media server.

#### Set up media server software

To enable media sharing, set up the media server software.

#### Before you start

- Connect your home theater to your home network (see 'Computers and the Internet' on page 16).
- Connect your computer to the same home network.
- Make sure that your PC firewall allows you to run Windows Media Player programs.
- Switch on your computer and the router.

## Microsoft Windows Media Player 11



#### Note

- Depending on your version of Microsoft Windows, the screens might look different to the following screens.
- 1 Start Windows Media Player on your PC.
- 2 Click the **Library** tab, and then select **Media Sharing**.




- The first time you select Media Sharing on your PC,a pop-up screen appears. Check the Share my media box and click OK.
  - → The **Media Sharing** screen is displayed.
- 4 In the Media Sharing screen, make sure that you see a device marked as Unknown Device.



- → If you don't see an unknown device after a minute or so, check that your PC firewall is not blocking the connection...
- 5 Select the unknown device and click Allow.
- A green tick appears next to the device.
  By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, select Library > Add to Library.



- → The Add to Library screen is displayed.
- If necessary, select Advanced options to display a list of monitored folders.

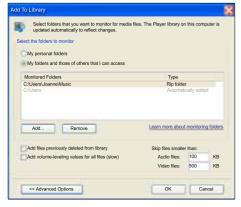


- 7 Select My folders and those of others I can access, and then click Add.
- Follow the onscreen instructions to add the other folders that contain your media files.

## Microsoft Windows Media Player 12



- Depending on your version of Microsoft Windows, the screens might look different to the following screens.
- 1 Start Windows Media Player on your PC.
- 2 In Windows Media Player, click the Stream tab, and then select Turn on media streaming.
  - → The Media streaming options screen is displayed.

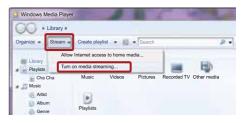


3 Click Turn on media streaming.



- → You return to Windows Media Player screen.
- 4 Click the Stream tab and select More streaming options.
  - → The Media streaming options screen is displayed.



- 5 Make sure that you see a media program in the Local network screen.
  - If you don't see a media program, check that your PC firewall is not blocking the connection.
- 6 Select the media program and click Allowed.
  - → A green arrow appears next to the media program.
- By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, click the Organize tab and select Manage libraries > Music.
  - → The Music Library Locations screen is displayed.

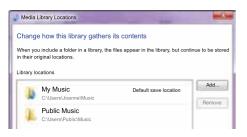

Follow the onscreen instructions to add the other folders that contain your media files.

## Macintosh OS X Twonky Media (v4.4.2)



#### Note

- Depending on which version of the Mac operating system you use, your screens might look different to the following screens.
- 1 Visit http://www.twonkymedia.com to purchase the software, or download a free 30-day trial to your Macintosh.
- Start Twonky Media on the Macintosh.
- In the Twonky Media Server screen, select Basic Setup and First Steps.
  - → The First steps screen is displayed.



- 4 Type a name for your media server, and then click **Save changes**.
- Back in the Twonky Media screen, select Basic Setup and Sharing.
  - → The **Sharing** screen is displayed.



- 6 Browse and select folders to share, and then select **Save Changes**.
  - → Your Macintosh rescans the folders automatically so that they are ready to share.

## Play files from your PC



#### Note

- Before you play multimedia content from the computer, make sure that the home theater is connected to the home network, and the media server software is properly set up.
- 1 Switch your TV to the correct HDMI source for your home theater.
- Press ♠ (Home).
  - → The home menu is displayed.
- 3 Select [browse PC], and then press OK.

  → A content browser is displayed.
- 4 Select a file, and then press **OK**.
- Press the playback buttons to control play (see 'Play buttons' on page 22).

### Browse Net TV

#### Not available in China

Use NetTV to access variety of internet applications and specially adapted internet websites.

For interactive discussions on NetTV services, visit the NetTV forum at www.supportforum.philips.com



#### Note

 Koninklijke Philips Electronics N.V. bears no responsibility for content provided by Net TV service providers.

#### Access Net TV

- 1 Connect your home theater to a home network and the Internet (see 'Computers and the Internet' on page 16).
- 2 Press ♠ (Home).
  - → The home menu is displayed.
- 3 Select [browse Net TV], and then press OK.
  - → The NetTV home page is displayed. The first time you access NetTV, follow the onscreen instructions to agree to the terms and conditions, and then register with Club Philips.
- 4 Press the Navigation buttons to select App Gallery (App Gallery) or Internet (Internet), and then press OK.
  - Access **App Gallery** (App Gallery) to add more Apps to your screen.
  - Access Internet (Internet) to browse the Internet.
- Press → BACK to return to the previous page, or press ♠ (Home) to exit.

## Clear browsing history

Clear the browsing history to remove passwords, cookies, and browsing data from your home theater.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Network] > [Clear Net TV Memory], and then press OK.

## Rent online video

#### Not available in China

Rent videos from online stores, through your home theater. You can watch them right away or later

Many online video stores offer a huge choice of video, with different rental prices, periods, and conditions. For some stores, you must create an account before you can rent.


#### What you need

- A high-speed internet connection to the home theater
- An HDMI connection between your home theater and TV.
- An SD memory card of type SDHC Class 6, with at least 8 GB of memory.

#### Format an SD card

Before you download any online video or BD-Live content, your SD card must be in the SD card slot of your home theater, and formatted.

- 1 Switch your TV to the correct HDMI source for your home theater.
- 2 Insert the SD memory card into the SD CARD slot on your home theater.

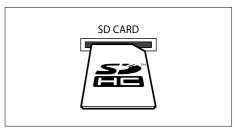

- **3** Follow the onscreen instructions to format the card.
  - → Any content on the card is erased during formatting.
- 4 After formatting, leave the card in the SD CARD slot.

## Rent and play online video

- 1 Connect your home theater to the home network and internet (see 'Computers and the Internet' on page 16).
- 2 Press ♠ (Home).

- 3 Select [browse Net TV], and then press OK.
  - → The online services available in your country are displayed.
- 4 Press the Navigation buttons to go to a video store, and then press OK.
- If prompted, follow the video store instructions to register or log in to an account.
  - → You see an option to rent videos.
  - → If you have rented videos and are still
    within the rental period, you also see an
    option to watch the videos.
- 6 Follow the video store instructions to rent or watch a video.
  - The video is downloaded to your SD memory card. You can watch it now or at any time within the rental period.
  - When you have downloaded a video to your card, you can watch it only on your home theater. You can't move the card and watch it on another device.
  - If you move the card and format it in another device, your downloaded video is erased. Download your video again before you watch.
- 7 Press the play buttons on your remote control to play, pause, search, or stop the video.

## Multiview

You can watch two video sources side by side on some of the Philips TVs. The sources can be:

- video from your home theater,
- TV broadcasts, and
- Net TV.

For information about how to set up multiview, see your TV user manual.

## **EasyLink**

The home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI can be controlled by a single remote control.

Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

#### What you need

- HDMI-CEC compliant devices.
- An HDMI connection between the connected devices.

#### Switch on

- On the TV and other connected devices, turn on the HDMI-CEC operations. For details, see the manual of the TV or other devices.
- 2 Press ♠ (Home).
- Select [Setup], and then press OK.
- 4 Select [EasyLink] > [EasyLink], and then press OK.
- 5 Select [On], and then press OK.

#### Control devices

Control the home theater and the other connected HDMI-CEC compliant devices with a single remote control.

#### One-touch play

If you enable One-touch play, the TV automatically switches to the correct channel when you play a disc in your home theater.

#### One-touch standby

When you press and hold  $\circ$  (Standby) on the remote control, the home theater and all the connected HDMI-CEC devices (that support one-touch standby) switch to the standby mode.

If one-touch standby is enabled on your home theater, you can switch to standby with the remote control of the TV or other HDMI-CEC devices

#### System Audio Control

When you play a device that has its audio output routed to the home theater, the home theater switches to the corresponding audio source automatically.

To use one-touch audio, turn on System Audio Control and follow the instructions on the TV to map connected devices to the audio input connectors of the home theater.

#### Audio Input Mapping

When you connect a new device to your home theater, map the device to the audio input connector (see 'Play audio from home theater' on page 32).

#### Play audio from home theater

Play the audio from a connected device through your home theater.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [EasyLink] > [System Audio Control] > [On], and then press OK.
  - To play the audio from the TV speakers, select [Off], and skip the following steps.
- 4 Select [EasyLink] > [Audio Input Mapping], and then press OK.
- Follow the instructions on the TV to map the audio of the connected device to the audio inputs on your home theater.



 If you connect your home theater to the TV through an HDMI ARC connection, make sure that the TV audio is mapped to the ARC input on your home theater.

## 8 Change settings

This section helps you to change the settings of your home theater.



#### Caution

 Most of the settings are already configured with the best value for your home theater.
 Unless you have a reason to change a setting, it is best to leave it at the default value.



#### Note

- · You cannot change a setting that is grayed out.
- To return to the previous menu, press 

  BACK. To exit the menu, press 

  (Home).

#### **Picture**

Change the picture settings to suit your preferences.



#### Note

 The best setting is automatically selected for the TV. If you change the setting, make sure that the TV supports the new settings.

## Picture settings and format

- 1 Press ♠ (Home).
- Select [Setup], and then press OK.
- Select [Video], and then press OK.
- 4 Change the following settings, and then press **OK**:
  - **[TV Display]**: Picture format.
  - [Picture Settings]: Predefined color settings.

#### Picture color

Deep Color recreates the natural world on your TV screen and displays vivid images in over a billion of colors.

If your TV supports Deep Color and is connected to your home theater through an HDMI cable, you can change the Deep Color.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video] > [HDMI Deep Color], and then press OK.
- Select the following options, and then press OK:
  - [Auto]: Automatically select HDMI Deep Color.
  - [On]: View vivid images.
  - [Off]: Display standard 24-bit color.

#### Picture resolution

For HDMI video settings, connect your home theater to the TV through an HDMI cable.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video] > [HDMI Video], and then press OK.
- Change the HDMI resolution setting, and then press **OK**.

## Blu-ray 3D video

To play 3D video, connect your home theater to a 3D TV through an HDMI cable.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video] > [Watch 3D video] > [Auto], and then press OK.

## Subtitle position

Automatically change the position of the subtitles to fit your TV screen.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
  - Select [Preference] > [Auto Subtitle Shift] > [On], and then press OK.

## Sound

Change the sound settings to suit your preference.

#### HDMI audio

To hear an HDMI audio output from your TV, connect your home theater to the TV through an HDMI cable.

- 1 Press **(Home)**.
- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [HDMI Audio], and then press OK.
- 4 Select the following options, and then press OK:
  - **[Bitstream]**: Enable bitstream output over HDMI.
  - [Auto]: Automatically select the best supported audio format.
  - [Off]: Disable audio from the TV.

## Audio post processing

To select a predefined sound mode, enable audio post processing at the speaker (see 'Sound mode' on page 19).

- **1** Press **♠** (**Home**).
- Select [Setup], and then press OK.
- 3 Select [Advanced] > [Enhanced Audio] > [On], and then press OK.



#### Vote

To play the original audio of the disc, select [Off].

## Night mode

For quiet listening, decrease the volume of loud sounds when you play discs. Night mode is only available for Dolby-encoded DVD and Blu-ray discs.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [Night Mode] > [On], and then press OK.

#### Restore sound mode settings

Restore the equalizer settings of all the sound modes to the default values.

1 Press ♠ (Home).

2 Select [Setup], and then press OK.

Select [Audio] > [Default sound settings], and then press OK.

## Language

Select a language for the home menu, audio, and subtitles.

#### Home menu

1 Press **A** (Home).

Select [Setup], and then press OK.

3 Select [Preference] > [Menu language], and then press OK.

4 Select a menu language, and then press OK.

#### Disc audio

1 Press ♠ (Home).

2 Select [Setup], and then press OK.

Select [Preference] > [Audio], and then press OK.

4 Select an audio language for discs, and then press **OK**.



• If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 43).

 If you select a language that is not available on a disc, the home theater uses the default language of the disc.

#### Disc subtitle

1 Press ♠ (Home).

2 Select [Setup], and then press OK.

3 Select [Preference] > [Subtitle], and then press OK.

4 Select a subtitle language for discs, and then press **OK**.

#### Disc menu

1 Press ♠ (Home).

2 Select [Setup], and then press OK.

Select [Preference] > [Disc Menu], and then press OK.

4 Select a menu language for discs, and then press **OK**.



#### Note

- If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the the end of this user manual (see 'Language code' on page 43).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

## Parental control

Restrict access to discs that are recorded with ratings.

#### **Password**

You can set or change your password to play a restricted disc.

1 Press ♠ (Home).

Select [Setup], and then press OK.

Select [Preference] > [Change Password], and then press OK.

→ A change password menu is displayed.

Follow the instructions on the TV to set or change password.

 If you do not have a password or you have forgotten, enter 0000.

5 Press OK.

#### Ratings

Some discs are recorded with ratings according to age. You can set up your home theater to play only discs with an age rating lower than your child's age.

- 1 Press **A** (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Parental Control], and then press OK.
  - → A message prompts you to enter the password.
- 4 Enter the password with the Numeric buttons.
- 5 Select an age rating, and then press OK.
  - To play all discs irrespective of the rating, select level 8 or [Off].

## Energy saving

Save energy by changing the following settings.

## Auto standby

When playing a disc or a USB storage device, automatically switch your home theater to standby if:

- it is in pause or stop mode, and
- no button is pressed for 30 minutes.
- 1 Press ♠ (Home).
- Select [Setup], and then press OK.
- 3 Select [Preference] > [Auto Standby] > [On], and then press OK.

## Sleep timer

Set timers to switch the home theater to standby after a specified time.

- 1 Press **♠** (**Home**).
- 2 Select [Setup], and then press OK.
- Select [Preference] > [Sleep Timer], and then press OK.
- **4** Select the duration of the sleep timer.
  - The sleep timer can be set up to 60 minutes. If the sleep timer is set to [Off], it switches off.
- **5** Press **OK** to activate.
  - → The home theater switches to standby after the specified time.

#### Screen saver

Automatically switch your home theater to screen saver mode if:

- it is in pause or stop mode, and
- no button is pressed for 10 minutes.
  - Press 角 (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Screen Saver] > [On], and then press OK.

## Display panel

Change the brightness of the home theater display panel.

- **1** Press **♠** (**Home**).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Display Panel], and then press OK.
- 4 Select the brightness, and then press **OK**.

## Apply factory settings

Reset your home theater to the default settings. You cannot reset the parental control settings.

- 1 Press ♠ (Home).
- Select [Setup], and then press OK.
- 3 Select [Advanced] > [Restore default settings], and then press OK.
- 4 Select [OK], and then press OK.

## 9 Update software

To continue to get the best features and support for your home theater, update the software regularly. Compare the version of your current software with the latest version on www.philips.com/support.

## Check software version

1 Press ♠ (Home).

2 Select [Setup], and then press OK.

3 Select [Advanced] > [Version Info.], and then press OK.

→ The software version is displayed.

# Update software through the Internet

- Connect your home theater to the network, Use a
  - wired network connection (see 'Set up the wired network' on page 16), or
  - wireless network connection (see 'Set up the wireless network' on page 17).
- Press ♠ (Home).
- Select [Setup], and then press OK.
  - Select [Advanced] > [Software Update] > [Network].
    - → If an upgrade media is detected, you are prompted to start or cancel the update.
- 5 Follow the instruction on the TV to confirm the update.
  - When the software update is complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it.



 If the home theater cannot connect to the Philips server, press ♠ (Home), and then select [Setup] > [Network] > [Network Installation] to set up the network.

## Update software through USB

#### What you need

- A USB flash drive, with at least 75MB of memory. The USB flash drive must be FAT or NTFS formatted. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip® for Microsoft® Windows® or Stufflt® for Macintosh®).

#### Step 1: Download the latest software

- 1 Connect a USB flash drive to your computer.
- In your web browser, go to www.philips. com/support.
- 3 At the Philips Support website, find your product and locate the Software and drivers.
  - The software update is available as a zip
- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the software update file in the root directory of the USB flash drive.
  - → The files are extracted under the UPG\_ ALL folder of your USB flash drive.
- **6** Disconnect the USB flash drive from your computer.

#### Step 2: Update the software



#### Caution

- Before you connect the USB flash drive to your home theater, make sure that there is no disc in the disc compartment, and the disc compartment is closed.
- 1 Connect the USB flash drive to your home theater.
- 2 Switch your TV to the correct source for your home theater.
- 3 Press ♠ (Home), and then select [Setup].
- 4 Select [Advanced] > [Software Update] > [USB].
- Follow the instructions on the TV to confirm the update.
  - → When the software update is complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds, and then reconnect it.



#### Note

 When the software update is in progress, do not turn off the power or remove the USB flash drive.

## 10 Product specifications



#### Note

Specifications and design are subject to change without notice.

#### Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

Country	DVD	BD
Europe, United Kingdom		
Asia Pacific, Taiwan, Korea		
Latin America		
Australia, New Zealand		
Russia, India		0
China		

#### Media formats

 AVCHD, BD, BD-R/BD-RE, BD-Video, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX Plus HD media, USB storage device

#### File formats

- Audio: .aac, .mka, .mp3, .wma, .wav, .mp4, .m4a
- Video: .avi, .divx, .mp4, .mkv, .asf, .wmv, .mpg, .mpeg,
- Picture: .jpg, .jpeg, .gif, .png

#### Audio formats

Your home theater supports the following audio files.

Extension	Container	Audio codec	Bit rate
.mp3	MP3	MP3	32 kbps ~ 320 kbps
.wma	ASF	WMA	64 kbps ~ 160 kbps
.aac	AAC	AAC, HE- AAC	192 kbps
.wav	WAV	PCM	1.4 Mbps
.m4a	MKV	AAC	192 kbps
.mka	MKA	PCM	27.648 Mbps
.mka	MKA	Dolby Digital	640 kbps
.mka	MKA	DTS core	1.54 Mbps
.mka	MKA	MPEG	912 kbps
.mka	MKA	MP3	32 kbps ~ 320 kbps
.mka	MKA	WMA	64 kbps ~ 160 kbps
.mka	MKA	AAC, HE- AAC	192 kbps

#### Video formats

If you have a high definition TV, your home theater allows you to play your video files with:

- Resolution: 1920 x 1080 pixels at
- Frame rate: 6 ~ 30 frames per second.

#### .avi files in AVI container

Video codec	Bit rate
DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x	10 Mbps max
MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
MPEG 4 ASP	10 Mbps max
H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)
WMV9	20 Mbps
	DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x MPEG 1, MPEG 2 MPEG 4 ASP H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0

#### .divx files in AVI container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital, MP3, WMA	DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x	10 Mbps max
	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max

#### .mp4 or .m4v files in MP4 container

Audio codec	Video codec	Bit rate
Dolby Digital, MPEG, MP3, AAC, HE- AAC	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max
	H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)

#### .mkv files in MKV container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital, DTS core, MPEG, MP3, WMA, AAC, HE- AAC	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max

MPEG 4 ASP	10 Mbps max
H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)
WMV9	20 Mbps

#### .asf and .wmv files in ASF container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital, MP3, WMA	MPEG 4 ASP	10 Mbps max
	H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)
	WMV9	20 Mbps

#### .mpg and .mpeg files in PS container

Audio codec	Video codec	Bit rate
PCM, DTS core, MPEG, MP3	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)

#### **Amplifier**

- Total output power: 500W RMS (30% THD)
- Frequency response: 20 Hz-20 kHz / ±3 dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX1, AUX2: 500 mV
  - Music iLink: 250 mV

#### Video

- Signal system: PAL / NTSC
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p24

#### Audio

- S/PDIF Digital audio input:
  - Coaxial: IEC 60958-3
  - Optical: TOSLINK
- Sampling frequency:
  - MP3: 32 kHz, 44.1 kHz, 48 kHz
  - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 32 kbps 320 kbps
  - WMA: 48 kbps 192 kbps

#### Radio

- Tuning range:
  - Europe/China: FM 87.5-108 MHz (50 kHz)
  - Asia Pacific/Russia/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 55 dB
- Frequency response: FM 60 Hz-12.5 kHz / ±3 dB

#### **USB**

- Compatibility: Hi-Speed USB (2.0)
- Class support: USB Mass Storage Class (MSC)
- File system: FAT16, FAT32, NTFS
- Maximum memory support: < 160 GB</li>

#### Main unit

- Dimensions (WxHxD): 307.2 x 68.8 x 304.4 mm
- Weight: 2.4 kg

#### Subwoofer

- Power supply:
  - Europe/China: 220-240 V~, 50 Hz
  - Latin America/Asia Pacific: 110-127 V/220-240 V~, 50-60 Hz
  - Russia/India: 220-240 V~, 50 Hz
- Power consumption: 100 W
- Standby power consumption: ≤ 0.5 W
- Impedance: 3 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Frequency response: 20 Hz-150 Hz
- Dimensions (WxHxD): 196 x 397 x 342.3 mm
- Weight: 6.1 kg
- Cable length: 3 m

#### Speakers

- Output power: 2 x 135W RMS (30% THD)
- Speaker impedance: 5 ohm
- Speaker drivers: 2 x 76.2 mm (3") woofer + 1 x 31.8 mm (1.25") tweeter
- Frequency response: 150 Hz-20 kHz
- Dimensions (WxHxD): 99 x 334 x 130.6 mm
- Weight: 3.3 kg/each
- Cable length: 3 m

#### Remote control batteries

2 x AAA-R03-1.5 V

#### Laser

- Laser Type (Diode): InGaN/AIGaN (BD), AIGaInP (DVD/CD)
- Wave length: 405 +7 nm/-7 nm (BD), 655 +10 nm/-10 nm (DVD), 790 +10 nm/-20 nm (CD)
- Output power (Max. ratings): 20 mW (BD), 6 mW (DVD), 7 mW (CD)

## 11 Troubleshooting



#### Warning

 Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, register your product and get support at www.philips.com/welcome.

#### Main unit

#### The buttons on the home theater do not work.

 Disconnect the home theater from the power supply for a few minutes, then reconnect.

#### **Picture**

#### No picture.

 Make sure that the TV is switched to the correct source for the home theater.

#### No picture on a TV connected through HDMI.

- Make sure that you use a High Speed HDMI cable to connect the home theater and TV.
   Some Standard HDMI cables do not display properly for some images, 3D video, or Deep Color.
- Make sure that the HDMI cable is not faulty.
   If it is faulty, replace it with a new cable.
- Press (Home) and then 731 on the remote control to restore the default picture resolution.
- Change the HDMI video setting, or wait for 10 seconds for auto recovery (see 'Picture resolution' on page 33).

#### Disc does not play high-definition video.

- Make sure that the disc contains highdefinition video.
- Make sure that the TV supports highdefinition video.
- Use an HDMI cable to connect to the TV.

#### Sound

#### No sound from home theater speakers.

- Connect the audio cable from your home theater to your TV or other devices. You do not need a separate audio connection when:
  - the home theater and TV are connected through an HDMI ARC connection, or
  - a device is connected to the HDMI IN connector on your home theater.
- Set up the audio for the connected device (see 'Set up audio for connected devices' on page 16).
- Reset your home theater to its factory settings (see 'Apply factory settings' on page 35), and then switch it off and switch on again.
- On your home theater, press SOURCE repeatedly to select the correct audio input.

#### Distorted sound or echo.

 If you play audio from the TV through the home theater, make sure that the TV is muted

#### Audio and video are not synchronized.

1) Press III SOUND SETTINGS. 2) Press
the Navigation buttons (left/right) to select
AUD SYNC, and then press OK. 3) Press
the Navigation buttons (up/down) to
synchronize the audio with the video.

#### Play

#### Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 37).
- Make sure that the home theater supports the region code of the disc (see 'Region codes' on page 37).
- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized.

#### Cannot play a DivX file.

- Make sure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Make sure that the DivX file is complete.

#### DivX subtitles do not display correctly.

- Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 23).

## Cannot read the contents of a USB storage device.

- Make sure that the format of the USB storage device is compatible with the home theater.
- Make sure that the file system on the USB storage device is supported by the home theater.

#### 'No entry' or 'x' sign appears on the TV.

The operation is not possible.

#### EasyLink does not work.

 Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is on (see 'EasyLink' on page 31).

## When you switch on the TV, the home theater automatically switches on.

 This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

#### Cannot access BD-Live.

- Make sure that the home theater is connected to the network. Use a wired network connection (see 'Wired connection' on page 16) or wireless network connection (see 'Wireless connection' on page 17).
- Make sure that the network is set up.
  Use a wired network installation (see 'Set
  up the wired network' on page 16) or
  wireless network installation (see 'Wireless
  connection' on page 17).
- Make sure that the Blu-ray disc supports BD-Live.
- Clear memory storage (see 'Clear memory' on page 21).

## Cannot play video or photos from an iPod or iPhone on the TV.

- Browse and select videos and photos from the iPod or iPhone screen, and play them on your TV.
- Make sure that the iPod or iPhone software has not been tampered with or illegally modified.

## Cannot view pictures from an iPod or iPhone on the TV.

- Make sure that your home theater is connected to a TV through an HDMI cable.
- Switch the TV to the **AV/VIDEO** source (corresponding to the HDMI cable).
- Press the Navigation buttons and OK on the home theater remote control to select and play.
- Make sure that the iPod or iPhone software has not been tampered with or illegally modified.

#### Play 3D video in 2D mode.

- Make sure that your home theater is connected to a 3D TV through an HDMI cable.
- Make sure that the disc is a Blu-ray 3D disc, and the Blu-ray 3D video option is on (see 'Blu-ray 3D video' on page 33).

## TV screen is black when you play a Blu-ray 3D video or a DivX copy protected video.

- Make sure that the home theater is connected to the TV through an HDMI cable.
- Switch to the correct HDMI source on the TV

## Cannot download video from an online video store

- Make sure that your home theater is connected to the TV through an HDMI cable.
- Make sure that the SD card is formatted, has enough memory to download the video, and is of type SDHC Class 6.
- Make sure that you have paid for the video, and it is within the rental period.
- Make sure that the network connection is good. Use a wired network connection (see 'Wired connection' on page 16) or a wireless network connection (see 'Wireless connection' on page 17).
- Visit the video store website for more information.

#### Network

#### Wireless network distorted or not found.

- Make sure that the wireless network is not disturbed by microwave ovens, DECT phones, or other neighboring Wi-Fi devices.
- If the wireless network does not work properly, try a wired network installation (see 'Set up the wired network' on page 16).

## 12 Language code

Abkhazian	6566	Inupiaq
Afar	6565	Irish
Afrikaans	6570	Íslenska
Amharic	6577	Italiano
Arabic	6582	lvrit
Armenian	7289	Japanese
Assamese	6583	Javanese
Avestan	6569	Kalaallisu
Aymara	6589 6590	Kannada
Azerhaijani		Kashmiri Kazakh
Bahasa Melayu Bashkir	7783 6665	
Belarusian	6669	Kernewel Khmer
Bengali	6678	Kinyarwa
Bihari	6672	Kirghiz
Bislama	6673	Komi
Bokmål, Norwegian	7866	Korean
Bosanski	6683	Kuanyama
Brezhoneg	6682	Kurdish
Bulgarian	6671	Lao
Burmese	7789	Latina
Castellano, Español	6983	Latvian
Catalán	6765	Letzeburg
Chamorro	6772	Limburga
Chechen	6769	Lingala
Chewa; Chichewa; Nyan		Lithuaniar
中文	9072	Luxembo
Chuang; Zhuang	9065	Macedoni
Church Slavic; Slavonic	6785	Malagasy
Chuvash	6786	Magyar
Corsican	6779	Malayalan
Česky	6783	Maltese
Dansk	6865	Manx
Deutsch	6869	Maori
Dzongkha	6890	Marathi
English	6978	Marshalle
Esperanto	6979	Moldaviar
Estonian	6984	Mongolia
Euskara	6985	Nauru
Ελληνικά	6976	Navaho; N
Faroese	7079	Ndebele,
Français	7082	Ndebele,
Frysk	7089	Ndonga
Fijian	7074	Nederlan
Gaelic; Scottish Gaelic	7168	Nepali
Gallegan	7176	Norsk
Georgian	7565	Northern
Gikuyu; Kikuyu	7573	North No
Guarani	7178	Norwegia
Gujarati	7185	Occitan; F
Hausa	7265	Old Bulgar
Herero	7290	Oriya
Hindi	7273	Oromo
Hiri Motu	7279	Ossetian;
Hrwatski	6779	Pali
ldo	7379	Panjabi
Interlingua (Internation		Persian
Interlingue	7365	Polski
Inuktitut	7385	Portuguê:

Inupiaq	7375
Irish	7165
Íslenska	7383
Italiano	7384
lvrit	7269
Japanese	7465
Javanese	7486
Kalaallisut	7576
Kannada	7578
Kashmiri	7583
Kazakh	7575
Kernewek	7587
Khmer	7577 8287
Kinyarwanda	7589
Kirghiz Komi	7586
Korean	7579
Kuanyama; Kwanyama	7574
Kurdish	7585
Lao	7679
Latina	7665
Latvian	7686
Letzeburgesch;	7666
Limburgan; Limburger	7673
Lingala	7678
Lithuanian	7684
Luxembourgish;	7666
Macedonian	7775
Malagasy	7771
Magyar	7285
Malayalam	7776
Maltese	7784
Manx	7186
Maori	7773
Marathi	7782
Marshallese	7772
Moldavian	7779
Mongolian	7778
Nauru	7865
Navaho; Navajo	7886
Ndebele, North	7868
Ndebele, South	7882
Ndonga	7871
Nederlands	7876
Nepali	7869
Norsk	7879
Northern Sami	8369
North Ndebele	7868
Norwegian Nynorsk;	7878
Occitan; Provencal	7967
Old Bulgarian; Old Slavonic	6785
Oriya	7982
Oromo	7977
Ossetian; Ossetic	7983
Pali	8073
Panjabi	8065
Persian Paralai	7065
Polski	8076
Português	8084

Pushto	8083
Russian	8285
Quechua	8185
Raeto-Romance	8277
Romanian	8279
Rundi	8278
Samoan	8377
Sango	8371
Sanskrit	8365
Sardinian	8367
Serbian	8382
Shona	8378
Shqip	8381
Sindhi	8368
Sinhalese	8373
Slovensky	8373
Slovenian	8376
Somali	8379
Sotho; Southern	8384
South Ndebele	7882
Sundanese	8385
Suomi	7073
Swahili	8387
Swati	8383
Svenska	8386
Tagalog	8476
Tahitian	8489
Tajik	8471
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga (Tonga Islands)	8479
Tsonga	8483
Tswana	8478
Türkçe	8482
Turkmen	8475
Twi	8487
Uighur	8571
Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapuk	8679
Walloon	8765
Welsh	6789
Wolof	8779
Xhosa	8872
Yiddish	8973
Yoruba	8979
Zulu	9085

13 Index		Drowse	20
		disc from iPhone	20 27
2		from iPod	26
2		Net TV	30
2D video	20	online video stores	30
		USB storage device	22
2		built-in Wi-Fi	17
3		bulle-iii **I-11	17
3D			
3D disc in 2D mode	20	C	
3D safety	9	care	
3D video	19	environment	8
		health	9
^		product	8
A		character set	23
advanced		close disc compartment	9
BD-Live security	21	computer	ŕ
enhanced audio	33	connect to	16
restore default settings	35	DLNA	27
software update	36	media server software	27
software version	36	computer network	16
amplifier	39	connect	
audio	20	audio (analog cable)	16
formats	38	audio (coaxial cable - digital)	15
HDMI audio	33	audio (optical cable - digital)	15
input mapping	31	audio from TV and other devices	15
language	34	computer	27
night mode	33	home network	16
options	23	speakers	12
post processing	33	to Internet	16
predefined modes	19	TV (Composite)	15
quality	15	TV (HDMI ARC)	14
settings	33	TV (HDMI)	14
source	16	connectors	
specifications	39	back connectors - center	13
subwoofer volume	12 38	back connectors - left	13
audio formats	32	back connectors - right	13
audio input mapping	32 34	side connector-right	13
audio language	23	side connectors-left	13
audio options	35	control	
auto standby	33	disc play	20
		Easylink (HDMI-CEC)	11
В		main unit	9
bass	19	parental control	34
BD-Live	17	radio	24
	21	USB storage device	22
BD-Live (SD card)	21		
BD-Live (USB) clear memory	21		
disable	21	D	
	41	disable	
troubleshooting	19	audio post processing	33
Blu-ray Bonus View	20	BD-Live	21
brightness	20 35	HDMI-CEC	31

discs		F	
2D video	20		2.5
3D disc in 2D mode	20	factory settings	35
3D video	19	FAQs	6
audio	23	FM antenna	13
audio language	34	format	39
BD-Live	21	format SD card	30
Bonus View	20		
control buttons	20	11	
DivX	22	Н	
	9	HDMI	
eject disc	34	audio	33
menu language	23	Deep color	33
options	23 24	TV (HDMI ARC)	14
picture	29	video	33
picture-in-picture	19	HDMI-CEC	3′
play		help	
subtitle	34	navigate	4
synchronize picture and sound	20	read	4
time search	23	update	
titles	23	'	
display panel	9		
DivX	2.2		
character set	23	Internet	
subtitles	23	BD-Live	2′
VOD code	23	connect to	16
DLNA	27	online video stores	30
dock your iPod or iPhone	25	update home theater software	36
		iPod and iPhone	30
		dock your iPod or iPhone	2.5
E		music	25
EasyLink (HDMI-CEC)		Philips dock	13
audio input mapping	32	video and slideshow	26
control buttons	11	video and slideshow	20
one-touch play	31		
one-touch standby	31	L	
system audio control	31	language	
eject disc	9	2nd audio language	20
enable			20
auto standby	35	2nd subtitle language audio	34
auto subtitle shift	33	disc menu	3-
BD-Live	21		43
HDMI-CEC	31	language code	34
predefined sound mode	33	onscreen menu	34
screen saver	35	subtitle	) <del>'</del>
energy		legal notices	Ċ
auto standby	35		
brightness	35	M	
screen saver	35		27.20
sleep timer	35	Macintosh Twonky Media	27, 29
•		main unit	_
		overview	9
		specifications	4(
		troubleshooting	4(
		media formats	37

media server software	27	Р	
Microsoft Windows Media Player 11	27	· · · · · · · · · · · · · · · · · · ·	
Microsoft Windows Media Player 12	28	parental control	34
MP3		password	35
play	25	ratings	35 34
multimedia content		password	3 <del>1</del>
from disc	19	PC	47
from online stores	30	connect to	16
from PC	27	DLNA	27
from USB storage device	22	media server software	27
nom OSB storage device	22	Philips Easylink	31
		picture	
N		options	24
		rotate	24
Net TV	20	settings	32
access	30	slideshows	24
clear browsing history	30	troubleshooting	40
online video stores	30	zoom	24
watch Net TV page	30	picture options	24
network		picture-in-picture	
built-in Wi-Fi	17	2nd audio language	20
home network	16	2nd subtitle language	20
name a device	18	play	
settings	16	discs	19
troubleshooting	42	DivX	22
update home theater software	36	from PC	29
wired connection	16	MP3	25
wireless connection	17	online video	30
night mode	33	radio	39
		troubleshooting	41
		USB	22
0		position	22
one-touch play	31	connectors	13
one-touch standby	31	position	12
online video stores		subtitle	33
format SD card	30		33
rent and play video	30	power options	35
troubleshooting	41	auto standby	35 35
open disc compartment	9	brightness	35 35
open source software	6	screen saver	
options	Ö	sleep timer	35
audio	23	preference	22
picture	24	audio	33
video	23	auto standby	35
overview	23	auto subtitle shift	33
browse PC	27	change password	34
connectors	13	disc menu	34
HDMI-CEC	31	display panel	35
	9	menu language	34
main unit		parental control	34
Net TV	30	screen saver	35
online video stores	30	sleep timer	35
remote control	10	subtitle	34
settings	32	product specifications	37

R		slideshows	
radio		animation	24
control buttons	24	duration	24
FM antenna	13	musical	24
listen to radio	25	picture	24
specifications	39	smartphone	
tune stations	24	browse disc or USB from smartphone	27
tuning grid	25	smartphone as remote control	26
ratings	35	software	
recycling	8	check current version	36
region codes	37	electronic user manual	
remote control	37	update	36
	40	sound	
batteries	10	auto volume	19
overview	10	bass	19
rent video	20	egualizer	19
format SD card	30	predefined sound mode	19
online video stores	30	surround sound	19
troubleshooting	41	synchronize picture and sound	20
repeat	23	treble	19
		troubleshooting	4
<u> </u>		speaker setup	
S		predefined modes	19
safety		settings	33
disposal	8	e	).
use of the product	8	speakers	12
watching 3D	9	2.1 speakers	12
screen saver	35	connect	
SD card	30	position	12
settings		specifications	4(
3D video	33	surround sound	19
audio	33	specifications	37
auto subtitle shift	33	standby	35
default	35	subtitle	
disc language	34	character set	23
HDMI audio	33	language	34
HDMI video	33	position	33
HDMI-CEC	31	subwoofer	
menu language	34	specifications	40
parental rating	3.	subwoofer volume	12
password	34	synchronize picture and sound	20
ratings	35	system audio control	3′
password	34		
picture	32	<del></del>	
power	35	T	
ratings	35	time search	23
resolution	33	titles	23
restore	35	trademarks	6
	35	treble	19
screen saver			
sleep timer	35		
subtitle language	34		
video	32		
side connectors	13		
sleep timer	35		

W	
wired network	
settings	17
wired connection	16
wireless network	
built-in Wi-Fi	17
settings	17
wireless connection	17

video options VOD code for DivX

# Philips Electronics Australia Limited and Philips New Zealand Limited Warranty against Defects

In this warranty:

We or us means Philips Electronics Australia Limited ACN 008 445 743 or Philips New Zealand Limited (Company Number 1723), and our contact details are set out at the end of this warranty;

You means the purchaser or the original end-user of the Goods;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or New Zealand; and

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand.

If you require assistance with the operation of the product, its features or specifications please call the Philips Consumer Care Centre on 1300 363 391 in Australia or 0800 658 224 in New Zealand.

Australia: Our Goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This is not a complete statement of your legal rights as a consumer.

**New Zealand:** Our Goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This guarantee applies in addition to the conditions and guarantees implied by that legislation.

#### **Additional Warranty:**

In addition to the rights and remedies that you have under the Australian Consumer Law, Consumer Guarantees Act of New Zealand or any other applicable law, we provide the following warranty against defects:

 If, during the first 12 months from their date of purchase from the Supplier (Warranty Period), the Goods prove defective by reason of improper workmanship or materials and none of your statutory rights or remedies apply, we will repair or replace the Goods without charge.

- 2. We do not have to repair or replace the Goods under this Additional Warranty if the Goods have been used for a commercial purpose; misused, improperly or inappropriately installed, operated or repaired; abused; damaged; or not maintained in accordance with the manufacturer's instructions.
- 3. Even when we do not have to repair or replace the Goods, we may decide to do so anyway. In some cases, we may decide to substitute the Goods with a similar alternative product of our choosing. All such decisions are at our absolute discretion.
- 4. All such repaired, replaced or substituted Goods continue to receive the benefit of this Additional Warranty for the time remaining on the original Warranty Period.
- 5. This Additional Warranty is limited to repair, replacement or substitution only. As far as the law permits, we will not be liable for any loss or damage caused to property or persons arising from any cause whatsoever.
- 6. In order to claim under this Additional Warranty you must telephone us on 1300 363 391 in Australia or 0800 658 224 in New Zealand within the Warranty Period. You will be asked for details of the Goods, a description of the defect and your personal details. Upon accepting your claim, we shall assist you with either returning the Goods to the Supplier for replacement or to the most convenient Philips Authorised Service Centre for your Goods to be repaired. In some case we may require that you return to the Goods to us (at the address below) for repair, replacement or substitution.
  - \* All returned Goods must be accompanied by satisfactory proof of purchase which clearly indicates the name and address of the Supplier, the date and place of purchase and identifies product. It is best to provide a legible and unmodified receipt or sales invoice.
  - \* You must bear any expense for return of the Goods or otherwise associated with making your claim under this Additional Warranty.
- 7. This warranty is only valid and enforceable in Australia and New Zealand.

Contact us or the place of purchase for further details.

Philips Electronics Australia Limited Level 1, 65 Epping Rd, North Ryde, SYDNEY NSW 2113 Consumer Care: 1300 363 391 E-mail: pceinfo.australia@philips.com Website: www.philips.com/support Philips New Zealand Limited Level 2, 1 Nugent St, Grafton, AUCKLAND, 1023 Consumer Care: 0800 658 224 Email: pceinfo.australia@philips.com Website: www.philips.com/support

