

Quick Start Guide

DIGITAL VIDEO DISC RECORDER DVDR3475/37

Playable Discs

This unit is compatible to play back the following discs / files.

DVD is a trademark of DVD Format/Logo Licensing Corporation.

Playable discs	Logos	Playable discs	Logos
DVD-video		CD-DA (audio CD)	
DVD+RW		video CD	
DVD+R		CD-RW	
DVD+R Double Layer		CD-R	
DVD-RW (Finalized video mode discs only)		Playable files	Media
DVD-R (Finalized video mode discs only)		CD-DA	
		MP3	CD-RW/-R
		Windows Media™ Audio	
		JPEG	
		DivX*	CD-RW/-R DVD+RW/+R DVD-RW/-R

Region Codes

The number inside the globe refers to region of the world. This unit can play back DVDs that are labeled for ALL regions or for region 1.



Recordable Discs

This unit can record to DVD+RW, DVD+R, DVD-RW and DVD-R. DVD+R/DVD-R can only be recorded to once. DVD+RW/DVD-RW can be recorded to and erased many times.

- Following discs are recommended for good recording quality and are proven to be compatible with this unit. However, depending on the media condition the unit may not read the disc properly. Verbatim DVD+R 8x, DVD+RW 4x, DVD-R 8x, DVD-RW 2x, JVC DVD-RW 4x, Maxell DVD+R 4x/8x/16x, DVD-R 8x/16x, SONY DVD+R 4x/8x/16x, DVD+RW 4x, TDK DVD+R 4x/8x/16x. Performance of any other discs are not guaranteed.
- You can play back DVD+RW on most DVD players without finalizing. However, if you have added or deleted chapters, or made chapters hidden, you must perform "Make Edits Compatible" before being able to see those effects on other units (see page 72 in the user manual). To play back discs other than DVD+RW on other DVD players, you will need to finalize.

Unrecordable Discs

- DVD-RW recorded in the mode other than +VR is not recordable on this unit unless you erase all contents in the disc (see page 71 in the user manual).
- DVD-R recorded in the mode other than +VR is not recordable on this unit.


Logo	Attributes
	8cm/12cm, single-sided, single layer disc Approx. max. recording time (SLP mode): 360 minutes (4.7GB) (for 12cm) 108 minutes (1.4GB) (for 8cm)
DVD+RW DVD+R	
DVD-RW DVD-R	

1

Connections

Connection to an External Tuner

- 1) Disconnect the power cords of the devices from the AC outlet.
- 2) Make the connection as illustrated below. e.g.)

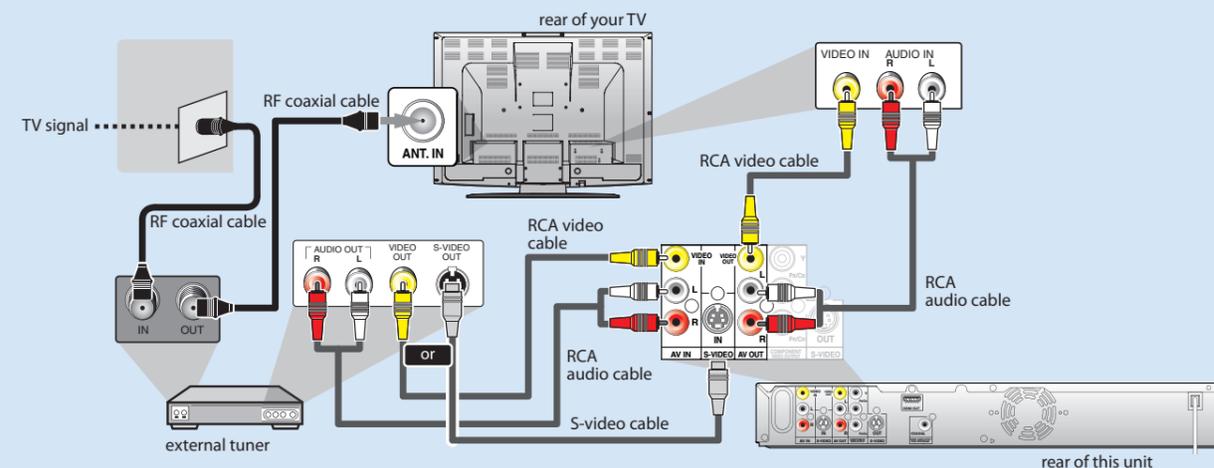

- 3) Plug in the power cords of the devices to the AC outlet. * Refer to the user manual for other connection methods.


How to Select External Input Channel on Your TV

After you have completed the connections, switch the input selector on your TV to an appropriate external input channel. Press a button on the TV's original remote control that selects an external input channel repeatedly until the DVD recorder's opening picture appears. Check your TV owner's manual for details.

Settings For the Video Input

You must let the unit know which video input jack you are using before making a recording.

- 1 Press [SETUP] and use [▲/▼] to select "General Setting", then press [OK].
- 2 Use [▲/▼] to select "Video", then press [OK].
- 3 Use [▲/▼] to select "Video Input", then press [OK].
- 4 Use [▲/▼] to select desired external input position, then press [OK].
- 5 Use [▲/▼] to select the input jack type to connect, then press [OK].
- 6 Press [SETUP] to exit.

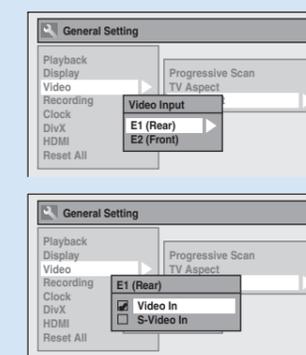


2

Initial Setting

You need to follow these steps when you turn on this unit for the first time.



- 1 Press [STANDBY-ON \odot].**
Turn the TV on. Select the input to which the unit is connected.
- 2 Use [\blacktriangle / \blacktriangledown] to select your desired language, then press [OK] to set language.**
- 3 Press [OK] to activate "Clock Setting".**
- 4 Use [\blacktriangleleft / \blacktriangleright] to select an item to set, and use [\blacktriangle / \blacktriangledown] to select the contents to suit your preference, then press [OK].**

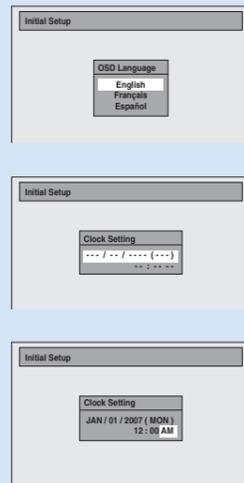

3


DVD Recording

3-1 Basic Recording

This unit has no tuner system so cannot receive TV broadcasts without external tuner or such devices.



- 1 Press [OPEN/CLOSE \blacktriangle].** to open the disc tray and insert your disc with its label facing up.

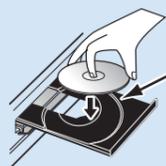

Align the disc to the disc tray guide.
* Make sure the disc is compatible with this unit. (Refer to page 24 in the user manual for the list of compatible discs.)

- 2 Press [REC MODE] to select a recording mode.**

Recording mode	Recording time		Video/sound quality
	8cm Disc	12cm Disc	
HQ (1Hr)	18 min	60 min	Good ↑ ↓ Poor
SP (2Hr)	36 min	120 min	
SPP (2.5Hr)	45 min	150 min	
LP (3Hr)	54 min	180 min	
EP (4Hr)	72 min	240 min	
SLP (6Hr)	108 min	360 min	

- 3 Press [SOURCE] to select the appropriate external input position (E1/E2) to which your external tuner is connected. Then select the desired channel to record on the external tuner.**
- 4 Press [REC \bullet] to start recording.**
- 5 Press [STOP \blacksquare] to stop recording.**

To set one-touch timer recording (OTR)...

This is a simple way to set the recording time in blocks of 30 minutes.
Press [REC \bullet] repeatedly until the desired recording time (30 minutes to 6 hours) appears on the TV screen. One-touch timer recording will start.
• To cancel one-touch timer recording within the specified time, press [STOP \blacksquare].


3-2 Timer Recording

You can program the unit to record up to 12 programs within a month in advance. Daily or weekly program recordings are also available.

Before recording, make sure

- Connect the external tuner to either E1 or E2 and set it to output audio/video signals when it comes to the time you want to start recording.
- Do not change the external tuner's channel while you are recording. You cannot watch one channel and record another at the same time.
- Set the clock before setting a timer programming.
- Insert a recordable disc with enough recordable space.

- 1 Press [TIMER].**
- 2 Use [\blacktriangle / \blacktriangledown] to select "New Program", then press [OK].**
- 3 Set a timer programming.**
- 4 Press [OK].**
- 5 Press [STANDBY-ON \odot] to set a timer programming.**

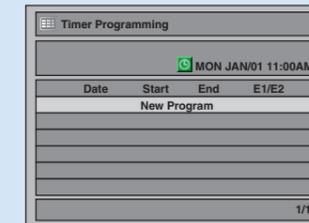

Set the date.

Set start and end time.


Select the appropriate external input position (E1/E2). Then select the desired channel to record on the external tuner.

Select a recording mode.

4

Playback

- 1 Press [OPEN/CLOSE \blacktriangle].**
- 2 Insert your disc with its label facing up.**
- 3 Press [PLAY \blacktriangleright] to start playback.**
- 4 Press [STOP \blacksquare] to stop playback.**

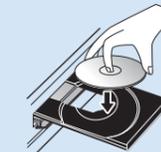

You will need to finalize DVD+R, DVD-RW or DVD-R to play them back on other DVD players (see page 40 in the user manual).