



PHILIPS



Important Safety Instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10 Only use attachments/accessories specified by the manufacturer.
- 11 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 13 Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- 14 Apparatus shall not be exposed to dripping or splashing.
- 15 Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 16 Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 17 Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

Notice



This product complies with the radio interference requirements of the European Community.
Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.
Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

2011 © Koninklijke Philips Electronics N.V. All rights reserved. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

Your Docking Entertainment System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

 
With this unit, you can enjoy audio from the iPod, iPhone, other audio devices, or the FM/DAB+ radio.
The radio, iPod, or iPhone can be set as the alarm timer. You can set two alarm timers to go off at different time.

What's in the box

Check and identify the contents of your package:


- 1 x Main unit
- 1 x Remote control
- 1 x Power adaptor
- 1 x MP3 link cable
- 1 x User manual
- 1 x Quick start guide

Overview of the main unit

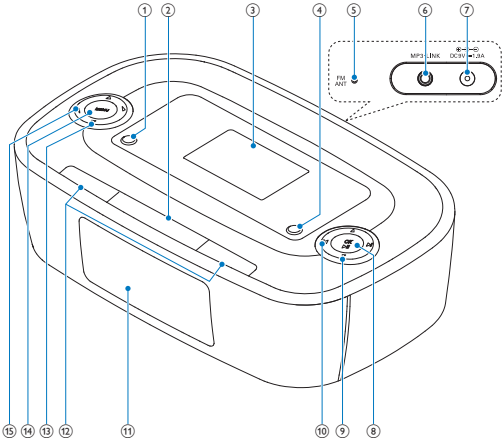

- 1 Turn on the unit or switch to standby mode.
- 2 REPEAT ALARM/BRIGHTNESS CONTROL
 - Repeat the alarm.
 - Adjust the display brightness.
- 3 Dock for iPod/iPhone
 - Load an iPod/iPhone.
- 4 SOURCE
 - Select a source: iPod/iPhone, DAB+/FM tuner, or MP3 link.
- 5 FM antenna
 - Improve FM reception.
- 6 MP3-LINK
 - Jack for an external audio device.
- 7 DC 9V
 - Power supply socket.
- 8 OK
 - Start or pause iPod/iPhone play.
 - Confirm selection.
- 9 PRESET + /PRESET -
 - Select a preset radio station.
 - Navigate through the iPod/iPhone menu.
 - Adjust time.
- 10 TUNING - /TUNING +
 - Skip to the previous/next audio file.
 - Search within an audio file.
 - Tune to a radio station.
 - Adjust time.
- 11 Display panel
 - Show the current status.
- 12 AL1/AL2
 - Set the alarm timer.
 - Turn off the alarm tone.
 - View alarm settings.
- 13 VOL + /VOL -
 - Adjust volume.
- 14 MENU
 - Select the iPod/iPhone menu.
 - Select the FM/DAB+ menu.
- 15 SET TIME/AUTO SCAN
 - Set the clock and date.
 - Scan radio stations automatically.
 - Set the sleep timer.

 Overview of the remote control

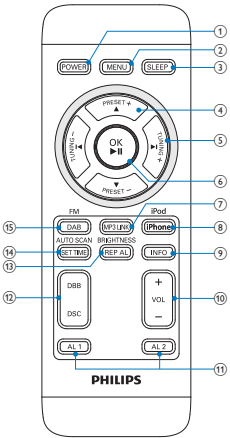

- 1 POWER
 - Turn on the unit or switch to standby mode.
- 2 MENU
 - Select the iPod/iPhone menu.
- 3 SLEEP
 - Set the sleep timer.
- 4 PRESET + /PRESET -
 - Select a preset radio station.
 - Navigate through the iPod/iPhone menu.
 - Adjust time.
- 5 TUNING - /TUNING +
 - Skip to the previous/next audio file.
 - Search within an audio file.
 - Tune to a radio station.
 - Adjust time.
- 6 OK
 - Start or pause iPod/iPhone play.
 - Confirm selection.
- 7 MP3 LINK
 - Select external audio device source.
- 8 iPod/iPhone
 - Select iPhone or iPod source.
- 9 INFO
 - Select different types of DAB+ station information.
 - In FM mode, select RDS information.
- 10 + VOL -
 - Adjust volume.
- 11 AL 1/AL 2
 - Set the alarm timer.
 - Turn off the alarm tone.
 - View alarm settings.
- 12 DBB
 - Turn on or off dynamic bass enhancement.
- 13 DSC
 - Select a preset sound setting.
- 14 REP AL/BRIGHTNESS
 - Adjust the display brightness.
 - Repeat the alarm.
- 15 SET TIME/AUTO SCAN
 - Set the time and date.
 - Scan radio stations automatically.
- 16 FM/DAB
 - Select the FM tuner/DAB+ source.

3 Get started

Caution

 
- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.
If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the rear of the apparatus. Write the numbers here:
Model No. _____
Serial No. _____

Install batteries

Note

- You can only use AC power as power supply. Batteries (not supplied) are for backup purpose.

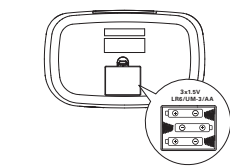

- 1 Open the battery compartment.
- 2 Insert 3 x AA batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

Prepare the remote control

 
Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.

For first-time use:

- 1 Remove the protective tab to activate the remote control battery.

To replace the remote control batteries:

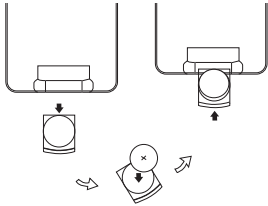

- 1 Open the battery compartment.
- 2 Insert one lithium CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

Note

- Before you press any function button on the remote control, first select the correct source with the remote control instead of the main unit.

Connect power

 
Caution

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the apparatus.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC adaptor, ensure that you have completed all other connections.
- Use the supplied AC power adaptor only.

Note

- The type plate is located on the bottom of the main unit.

- 1 Connect the AC power adaptor to:
 - the DC socket on the main unit
 - the power socket.

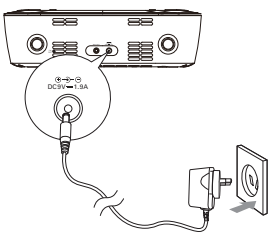

Set time and date

- 1 In standby mode, press and hold SET TIME/AUTO SCAN for 2 seconds.
 - ↳ [SYNC ON] is displayed and [ON] begins to blink.
- 2 Press PRESET + /PRESET - to select ON or OFF.
 - ↳ If you select [ON], the unit reads the DAB+ or iPod/iPhone time and sets the clock automatically.
 - ↳ If you select [OFF], the unit turns off the time synchronization.
- 3 Press SET TIME/AUTO SCAN to confirm. The time format [24H] or [12H] begins to blink.
- 4 Press PRESET + /PRESET - to select 24H or 12H.
- 5 Press SET TIME/AUTO SCAN to confirm. The hour digits begin to blink.
- 6 Repeat steps 4-5 to set the hour, minute, year, month, and day.

Tip

- The accuracy of the transmitted time depends on the DAB+ station or the docked iPod/iPhone that transmits the time signal.

Turn on

- 1 Press POWER on the remote control.
 - ↳ The unit switches to the last selected source.

Switch to standby

- 1 Press POWER again to switch the unit to standby mode.
 - ↳ The time and date (if set) appear on the display panel.

4 Play

Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this unit.

 
Compatible iPod/iPhone

Apple iPod and iPhone models with a 30-pin dock connector: Made for:


- iPod touch (1st, 2nd, 3rd, and 4th generation)
- iPod classic
- iPod with video
- iPod nano (1st, 2nd, 3rd, 4th, 5th, and 6th generation)
- iPod with color display
- iPod mini
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Listen to the iPod/iPhone

- 1 Lift up the iPod/iPhone dock cover on the top panel.

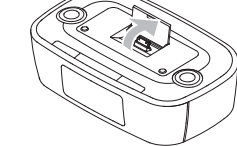

 - 2 Place the iPod/iPhone into the dock.

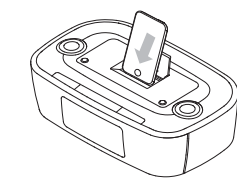

- 3 Press iPod/iPhone on the remote control to select iPod/iPhone source.
 - ↳ The connected iPod/iPhone plays automatically.
 - To pause/resume play, press OK .
 - To skip to a track, press TUNING - /TUNING + on the remote control.
 - To search during play, press and hold TUNING - /TUNING + , then release to resume normal play.
 - To go back to the previous iPod/iPhone menu, press MENU. To scroll through the menu, press PRESET + /PRESET - . To confirm a selection, press OK .
 - ↳ If no key is pressed for more than 10 seconds, OK acts back as the play/pause key.

Charge the iPod/iPhone

When the unit is connected to power, the docked iPod/iPhone begins to charge.

Tip

- For certain iPod models, it may take up to a minute before the charging indication appears.

Play from an external device

You can also listen to an external audio device through this unit.

- 1 Press MP3 LINK to select the MP3 link source.
- 2 Connect the supplied MP3 link cable to:
 - the MP3 LINK jack (3.5mm) on the back of the unit.
 - the headphone jack on an external device.
- 3 Start to play the device (see the device user manual).

5 Listen to radio

Listen to Digital Audio Broadcasts (DAB+)

Digital Audio Broadcasting (DAB+), is a way of broadcasting radio digitally through a network of transmitters. It provides you with more choice, better sound quality, and more information.

- 1 Press FM/DAB repeatedly to select DAB+.
 - ↳ The unit automatically scans DAB+ radio stations. The unit stores all available DAB+ radio stations and then broadcasts the first available station.
 - ↳ If no DAB+ service is available, [NO SERV] is displayed.

Scan DAB+ radio stations automatically

You can perform full scan to search for DAB+ radio stations.

- 1 In DAB+ mode, press and hold SET TIME/AUTO SCAN for more than 3 seconds.

