# Always there to help you

Register your product and get support at www.philips.com/support



AJ3275DZ



# User manual



# Contents

| 1 | Important   | 2      |
|---|---|--------|
|   | Risk of swallowing batteries                                      | 2      |
| 2 | Your clock radio  | 3      |
|   | Introduction  | 3<br>3 |
|   | What's in the box<br>Overview of the clock radio                  | 3<br>4 |
| 3 | Get started   | 5      |
|   | Install battery   | 5<br>5 |
|   | Connect power<br>Set clock  | 5<br>6 |
| 4 | Play from iPod/iPhone   | 7      |
|   | Compatible iPod/iPhone  | 7      |
|   | Listen to audio from iPod/iPhone<br>Charge the iPod/iPhone        | 7<br>7 |
|   | Adjust volume   | 7      |
| 5 | Listen to FM radio  | 8      |
|   | Tune to FM radio stations   | 8      |
|   | Store FM radio stations automatically                             | 8      |
|   | Store FM radio stations manually<br>Select a preset radio station | 8<br>8 |
| 6 | Other features  | 9      |
|   | Set alarm timer   | 9      |
|   | Set sleep timer   | 9      |
|   | Adjust display brightness   | 10     |
| 7 | Product information   | 11     |
|   | Specifications  | 11     |
| 8 | Troubleshooting   | 12     |
| 9 | Notice  | 13     |

# 1 Important

#### Warning

- Never remove the casing of this clock radio.
- Never lubricate any part of this clock radio.
- Never place this clock radio on other electrical equipment.
- Keep this clock radio away from direct sunlight, naked flames or heat.
- Make sure that you always have easy access to the power cord, plug or adaptor to disconnect the clock radio from the power.
- Make sure that there is enough free space around the product for ventilation.
- The clock radio shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

### Risk of swallowing batteries

- The product or remote control may contain a button cell battery, which is possible to be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

# 2 Your clock radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

### Introduction

With this clock radio, you can

- Enjoy audio from your Apple devices
- Listen to FM radio stations
- Set alarm timer and sleep timer

### What's in the box

Check and identify the contents of your package:


- The clock radio
- AC/DC adaptor
- Short user manual
- Safety and Notice sheet





### Overview of the clock radio



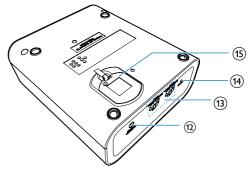

- (1) iPod/iPhone dock
- (2) iPhone
  - Select iPod/iPhone source.

#### 3 SCAN/PROG/SET TIME

- Scan FM radio stations automatically.
- Program radio stations.
- Set time.
- (4) SLEEP
  - Set sleep timer.
- 5 VOL/VOL +
  - Adjust volume.
- 6 AL1/AL2
  - Enable or disable alarm 1 or alarm 2.
- 7 SNOOZE/BRIGHTNESS
  - Snooze the alarm when it rings.
  - Adjust the LCD display brightness.

#### 8 LCD display panel

- 9 RADIO
  - Select FM radio source.
- 10 MIN/MIN +/PRESET
  - Adjust minute.
  - Select preset radio stations.
- 1 HR/HR +/TUNING
  - Adjust hour.
  - Tune to FM radio stations.

- (12) DC IN 5V
- (13) AL1/AL2
  - Select alarm sound.
- (14) FM ANT
- (15) Battery compartment

4 EN

# 3 Get started

Always follow the instructions in this chapter in sequence.

# Install battery

#### Warning

- Risk of explosion! Keep the battery away from heat, sunshine or fire. Never discard the battery in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery contains chemical substances, so it should be disposed of properly.

 


#### INOLE


- You can only use AC power as power supply. The lithium CR2032 battery can only back up time and alarm settings.
- When power is disconnected, the display backlight turns off.

#### For first-time use

Remove the protective tab to activate the battery.

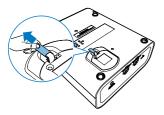


#### To replace the battery

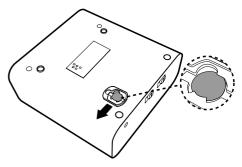

### **Connect** power




- Risk of product damage! Make sure that the power voltage corresponds to the voltage printed on the back
- or underside of the clock radio.Risk of electric shock! When you unplug the AC adapter, always pull the plug from the socket. Never pull the cord.

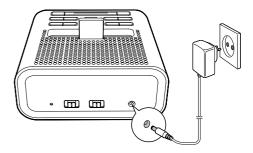

# Set clock

- 1 In standby mode, press and hold **SET TIME** for two seconds.
- 2 Press HR/HR + (or MIN/MIN +) to select 12/24 hour format.
- Press SET TIME to confirm.
  → The hour and minute digits blink.
- 4 Press HR/HR + and MIN/MIN + to set the hour and minute respectively.
- 5 Press SET TIME again to confirm.

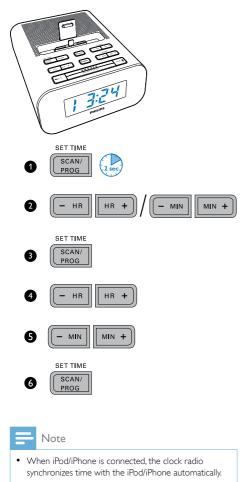

# 4 Play from iPod/ iPhone

You can enjoy audio from iPod/iPhone through this clock radio.

# Compatible iPod/iPhone

The clock radio supports these iPod and iPhone models:


Made for.

- iPod touch (5th generation)
- iPod nano (7th generation)
- iPhone 6 Plus
- iPhone 6
- iPhone 5
- iPhone 5s
- iPhone 5c

1

# Listen to audio from iPod/ iPhone

Place the iPod/iPhone in the dock

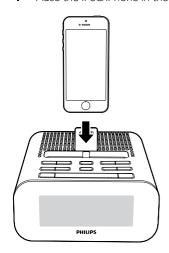

2 Press iPhone to enter iPod/iPhone mode.

- **3** Play audio on the iPod/iPhone.
  - To skip to a track, press HR/HR + (or
     MIN/MIN +).
  - To search during play, press and hold
    HR/HR + (or MIN/MIN +), then release to resume normal play.

### 🔆 Тір

• Press iPhone again to switch to standby mode.

#### To remove the iPod/iPhone:

Pull the iPod/iPhone out of the dock.

# Charge the iPod/iPhone

When the clock radio is connected to power, the docked iPod/iPhone starts charging.

# Adjust volume

Press - VOL/VOL + to adjust the volume.



# 5 Listen to FM radio

### Tune to FM radio stations



- Position the antenna as far as possible from TV, or other radiation source.
- For better reception, fully extend and adjust the position of the antenna.



#### Note

• To turn the radio on or off, press RADIO.

# Store FM radio stations automatically

You can store a maximum of 20 FM radio stations.

- 1 Press RADIO to turn on the radio.
- 2 Press and hold SCAN/PROG for two seconds.
  - ➡ The clock radio stores all the available FM radio stations, and then broadcasts the first available station automatically.

# Store FM radio stations manually

- 1 Tune to an FM radio station.
- 2 Press SCAN/PROG.
  - ightarrow The preset number begins to blink.
- 3 Press **PRESET +/-** repeatedly to select a number.
- 4 Press SCAN/PROG again to confirm.
- 5 Repeat steps 1-4 to store other stations.

#### Note

 To remove a pre-stored station, store another station in its place.

### Select a preset radio station

In tuner mode, press **PRESET +/-** to select a preset radio station.

# 6 Other features

## Set alarm timer

You can set two alarms to ring at different time.



- Make sure that you have set the clock correctly.
- 1 Press and hold AL1/AL2 for 2 seconds to enter alarm setting mode.
  - → The hour and minute digits blink.
  - $\mapsto$  **4** or **4** is displayed accordingly.
- 2 Press HR/HR + and MIN/MIN + to set hour and minute respectively.
- 3 Press AL1/AL2 again to confirm.

#### Select alarm sound

For the alarm sound, you can select buzzer, your last heard radio or played track on the iPod/ iPhone.



### 🔆 Тір

- When alarm time arrives and you are listening to radio or audio from the iPod/iPhone, buzzer can only be activated as alarm sound.
- If you have selected iPod/iPhone as the alarm source, yet no iPod/iPhone is connected, buzzer will sound when alarm time comes.

#### Activate/deactivate alarm timer

- 1 Press AL1/AL2 to view alarm settings.
- 2 Press AL1/AL2 again to activate or deactivate the alarm timer.
  - → **4** or **4** appears if alarm timer is on and disappears if it is off.
  - To stop alarm, press the corresponding AL1/AL2.
  - → The alarm repeats ringing for the next day.

#### Snooze the alarm

When alarm sounds, press **SNOOZE**.

→ The alarm snoozes and repeats ringing nine minutes later.

 
### Set sleep timer

This clock radio can switch to standby mode automatically after a preset period.

- Press **SLEEP** repeatedly to select the sleep timer period (in minutes).
  - ➡ When the sleep timer is activated, zZ appears.


#### To deactivate the sleep timer:

Press SLEEP repeatedly until [OFF] (off) appears.

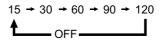

# Adjust display brightness

Press **SNOOZE/BRIGHTNESS** repeatedly to adjust the display brightness.

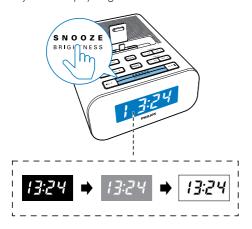

# 7 Product information

#### - Note

• Product information is subject to change without prior notice.

# Specifications

### Amplifier

Rated Output Power

2W RMS

### Tuner

| Tuning Range (FM)         | 87.5 - 108 MHz |
|---------------------------|----------------|
| Tuning Grid               | 50 KHz         |
| Sensitivity               | <22 dBf        |
| - Mono, 26dB S/N Ratio    | >43 dBf        |
| - Stereo, 46dB S/N Ratio  |                |
| Search Selectivity        | >28 dBf        |
| Total Harmonic Distortion | <3%            |
| Signal to Noise Ratio     | >50 dBA        |
|                           |                |

### General information

| AC Power                  | Model: AS100-050-<br>AE200; Input: 100-<br>240 V ~, 50/60Hz,<br>0.5A;Output: 5 V<br>== 2 A |  |
|---------------------------|--|--|
| Battery (for backup only) | CR2032 3V  |  |
| Operation Power           | <10 W  |  |
| Consumption               |  |  |
| Standby Power             | <2W  |  |
| Consumption               |  |  |
| Max. Load for iPod/       | 5 V === 1 A  |  |
| iPhone                    |  |  |
| Dimensions - Main Unit    |  |  |
| $(W \times H \times D)$   | 130 x 76 x 145 mm  |  |
| Weight - Main Unit        | 0.55 kg  |  |
|                           |  |  |

# 8 Troubleshooting

#### Warning

• Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

#### No response from the unit

• Disconnect and reconnect the AC power plug, then turn on the unit again.

#### Poor radio reception

- Increase the distance between the unit and your TV or other radiation sources.
- Fully extend the FM antenna.

# 9 Notice

# ()

This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

#### 🚽 Note

• The type plate is located on the bottom of the apparatus.

#### iPod []iPhone

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

#### Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

#### Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can

be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



This is CLASS II apparatus with double insulation, and no protective earth provided.



2015 © WOOX Innovations Limited.All rights reserved.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.

AJ3275DZ\_12\_UM\_V1.0

