





2

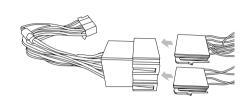

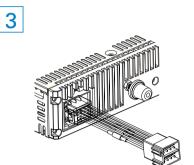


EN Quick Start Guide

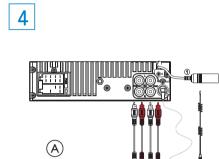

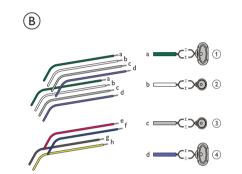

5

PHILIPS

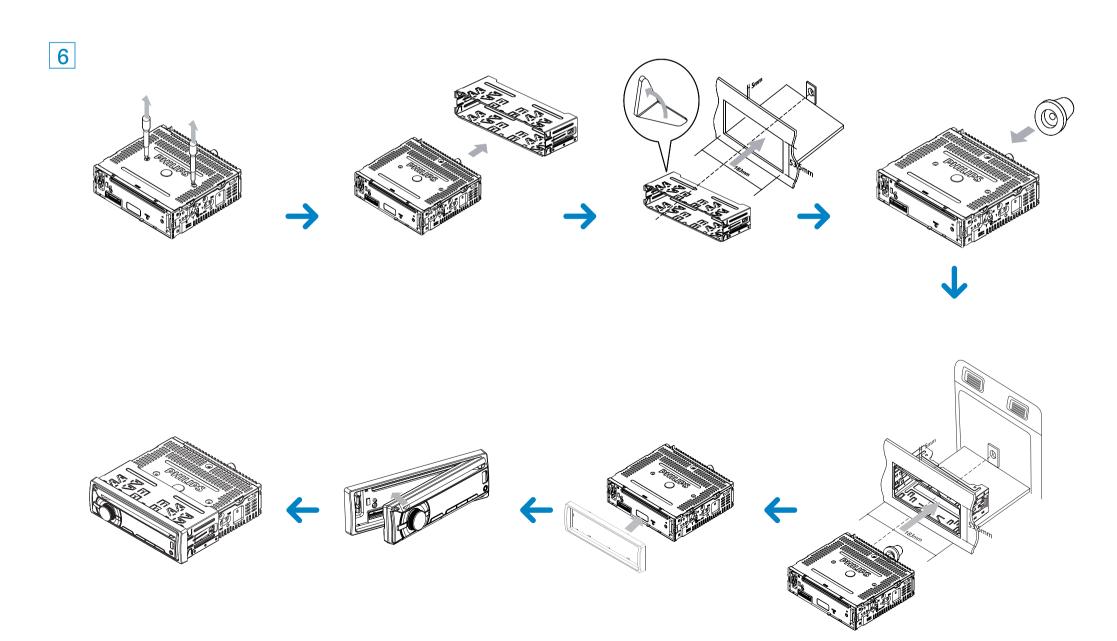

Overview of parts 1

These are the supplied parts needed to connect and install this unit.

- 1 In-car audio system
- 2 Sleeve
- 3 Front panel
- (4) Standard ISO connector
- 5 Trim plate
- 6 Rubber cushion
- 7 Disassembly tools
- (8) Screws (4 pieces)
- (9) DAB antenna

Connection

Caution

• Ensure that all loose leads are insulated with electrical tape.

For cars with ISO connectors 2 3 4

- 1 Pull out the ISO connectors from car dashboard and connect them to the bigger end of the supplied standard connector.
- 2 Connect the other end of the supplied standard connector to the unit.
- 3 Connect the antenna and amplifier as illustrated, if applicable. You can connect the car audio to the amplifier through RCA-TO-RCA cables (not supplied).

	Connector	Connect to
1	ANTENNA	Antenna
2	FRONT LINE OUT R (Socket)	Front right speaker
3	FRONT LINE OUT L (Socket)	Front left speaker
4	REAR LINE OUT R (Socket)	Rear right speaker
5	REAR LINE OUT L (Socket)	Rear left speaker
6	DAB Antenna	DAB Antenna

For cars with ISO connectors 4 5

Caution

- Be sure to connect the black ground (earth) lead first.
- 1 Connect the antenna and amplifier as illustrated, if applicable.
- 2 Cut off the bigger end of the supplied standard connector.
- 3 Check the car's wiring carefully and connect them to the supplied standard connector.
- 4 Connect the supplied standard connector to the unit.

Green/black strip Left speaker (Rear)

2	White/blac	k strip	Left speaker (Front)
3	Gray/black strip		Right speaker (Front)
4	Purple/black strip		Right speaker (Rear)
е	RED	Ignition	n key +12V DC when CC
f	BLUE	Motor/electric antenna relay control lead/Amplifier relay control lead	
g	BLACK	Ground	
h	YELLOW		+12V car battery is energized at all times

Mount in the dashboard 6

- If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
 - If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
 - If the car battery is not disconnected, to avoid short-circuit, ensure that bare wires do not touch each other.
- 2 Remove the two screws on the top of the unit.

NOTE

- Remove the mounting sleeve with the supplied disassembly tools.
- 4 Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.
- 5 Place the supplied rubber cushion over the end of the mounting bolt.
- 6 Slide the unit into the dashboard until you hear a click sound.
- 7 Reconnect the negative terminal of the car battery.

Attach the front panel 6

- 1 Attach the trim plate.
- 2 Insert the right side of the panel in the chassis until it is correctly engaged.
- Press the left side of the panel until the mechanism locks it into place.

Turn on

- 1 Press ① to turn on the unit.
 - To turn off the unit, press ⊕ for over 3 seconds.

Set clock

- 1 Press MENU.
- 2 Press ▲ or ▼ repeatedly until current time is displayed.
- 3 Turn ⊕ to set hour.
- 4 Press ⊕ to confirm.
- 5 Turn ① to set minute.
- 6 Press ① to confirm.

View clock

1 Press and hold **OPTIONS** repeatedly until the clock is displayed.

Listen to radio

- 1 Press **SOURCE** repeatedly to select Tuner.
- 2 Press ▲ or ▼ to select band: [FM1], [FM2], [FM3], [AM1], or [AM2].

- Press I◀ or ▶ to tune to a radio station manually.
 - To search for a radio station automatically, press I← or ►►I for over 3 seconds.

Listen to Digital Audio Broadcasts (DAB)

For the first time when DAB mode is switched on.

- 1 Press **SOURCE** on the main unit repeatedly to select **DAB/DAB+**.
 - → The system performs auto scan.
 - → All the available DAB stations is stored.
 - → The radio tunes to the first available station.

Play a disc

Insert a CD with the printed side facing up.→ Play starts automatically.

Play from USB

- 1 Slide the USB socket cover marked to the left
- Insert the USB device into the USB socket.
 - The unit starts playing from the USB device automatically.



Avoid prolonged use of the apparatus with volume above 85 decibels as this may damage your hearing.

