



AZ1316




PHILIPS

## 1 Choosing Power Supply

- a Connect the AC power cord to the **AC Mains** inlet and the wall socket.

-OR-


- b Open the **battery door** and insert 6 x C batteries (not included).

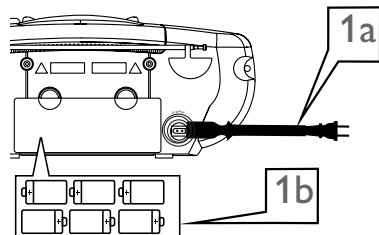

R-14, UM-2 or C-cells  
(not included)

## 2 Listening to the Radio

- a Push the **source selector** to **MW** or **FM**.
- b Press and hold **PROG** until **Auto** flashes.
- Available stations are programmed.
- c Press **ALBUM/ PRESET -, +** (on the remote control ▲, ▼) until the desired preset station is displayed.

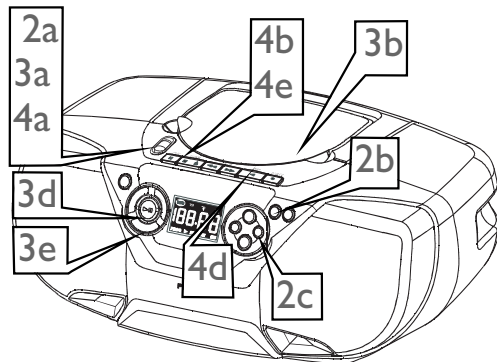

## 3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, and MP3-CD.

**IMPORTANT: For a disc with CD Audio tracks and MP3 files, only the CD audio tracks will be played.**

- a Adjust the **source selector** to **CD/MP3**.
- b Press **OPEN•CLOSE** to open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop disc playback, press **■**.

## 4 Playing a tape

- a Adjust the **source selector** to **TAPE/OFF**.
- b Press **■▲** to open the cassette holder.
- c Insert a cassette and close the door.
- d Press **◀** to start playback.
- e To stop the tape, press **■▲**.

## Telescopic antenna

Improves FM reception.

## Source selector

Slide to select function: CD/MP3, radio (MW, FM) or tape.



Skips & searches CD tracks backwards/ forwards;  
Tunes to radio stations (down/up).

## DBB

Press to turn the bass enhancement on/off.



Press to start or pause disc playback.



Press to stop disc playback or erase a disc program.

## Display

Shows disc functions

## CASSETTE RECORDER

Press to operate a tape.

## OPEN•CLOSE

Press to open/close the disc door.

## MODE

Press to select different play modes, such as REPEAT or SHUFFLE (random order)


## PROG

Use to program CD tracks or preset radio stations.

## VOL ▲, ▼

Press to adjust volume level.  
**ALBUM/ PRESET -, +**  
Press to select an album. (MP3 only);  
Press to select a preset radio station.

## REMOTE CONTROL

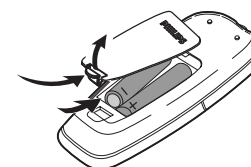

Insert 2 batteries, type **AAA, R03** or **UM4** (not included)

