# Quick Start Guide





 
# Step A Setup


### Connection

1 For radio reception, connect the supplied AM antenna to the MW aerial terminal.

2 Connect the speaker wires to the SPEAKERS terminals.


3 Connect the power cord of the system to the AC power outlet.



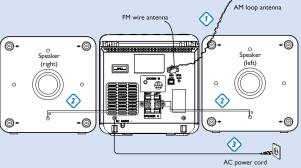

## Setting the clock


- 1 In standby mode, press PROG/CLOCK button. The clock digits for the hours flash.
- 2 Press | 1 b to set the hours.
- 3 Press PROG/CLOCK again. The clock digits for the minutes flash.
- 4 Press | Ito set the minutes.
- 5 Press PROG/CLOCK to confirm the time.

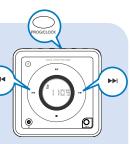

# Step B Enjoy

## Playing a disc

- 1 Select CD source.
- 2 Press OPEN•CLOSE on the top of the system to open the CD door.
- 3 Insert a disc with the printed side facing up and press down on OPEN•CLOSE to close the CD door.
- 4 Press ▶ II to start playback.
- 5 Press to stop playback.

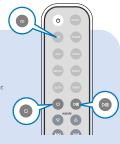

## Listening to radio

- 1 Select TUNER source.
- 2 Press BAND (TUNER on the remote control) once or more to select your waveband.
- **3** Turn **TUNING** to tune to a station.

# SOURCE BAND TUNING

#### Tip

Detailed playback features and additional functions are described in the accompanied owner's manual.


### Notes for the remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).
- Then select the desired function (►II, I✓, ►I for example).

## Step B Enjoy

### Playing iPod using the dock

- 1 Select the correct dock adaptor supplied, then snap the adaptor into the correct dock connector (iPod) to provide a snug fit for the player.
  - The indication on the adaptor's back fits specific iPod player.
- 2 Correctly place your player in the correct dock connector.
- 3 Connect the cables of the dock to DOCK IN jacks on the main set correspondingly.
- 4 Press SOURCE repeatedly or on the set (or DOCK on the remote) to select DOCK source.
  - The connected player will play automatically.
  - The iPod battery will be charged in either normal standby mode or power-on mode. The charging will not be available in the Eco power standby mode.

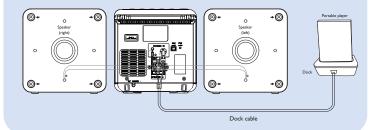

### Tip

Refer to the user manual supplied for detailed descriptions of "Compatible portable player", "Selecting the correct dock adaptor", "Installing the dock adaptor", and the important notes for dock operation.

