

Register your product and get support at
www.philips.com/welcome

SE659



Quick start guide

1 Connect

2 Install

 
3 Enjoy

PHILIPS

What's in the box




Handset with belt clip




Base station



 
Battery door




Bracket for wall mounting

 

2 AAA rechargeable batteries

 

Power supply

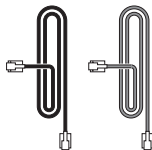

Line cords*



 
User manual



Guarantee



Do Not Return leaflet



Quick Start Guide

*The black line cord is a 4-pin telephone line cord, and the gray line cord is a 2-pin telephone line cord. Use these as explained in I Connect.

In multihandset packs, you will find one or more additional handsets, battery doors, chargers with power supply units and additional rechargeable batteries.



WARNING: Always use the line cord, power supply and batteries that came with your phone.



Connect

Connect the base station

1. Place the base station in a central location near the telephone line socket and electricity socket.

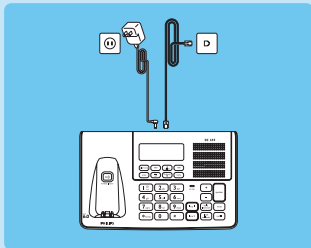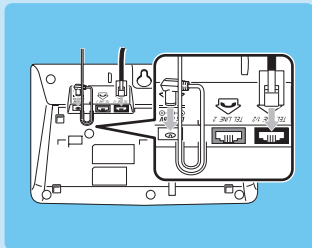

2. Connect the line cord(s) and the power cable to their corresponding connectors at the back of the base station.



Note

For 2 line subscriptions, connect the 4-pin telephone line cord (with black cord) to the black TEL LINE 1/2 phone jack and to the telephone wall jack for line 1. Connect the second telephone line cord (with gray cord) to the gray TEL LINE 2 phone jack and to the telephone wall jack for line 2.

If the two phone lines are on one modular wall jack, connect only the 4-pin telephone line cord (with black cord) to the black TEL LINE 1/2 phone jack and to the telephone wall jack. (Do not connect anything to the gray TEL LINE 2 phone jack.)

3. Connect the other end of the line cord(s) and power cable to their respective sockets.




Install

Insert rechargeable batteries and charge


A

Insert batteries

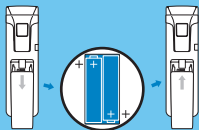



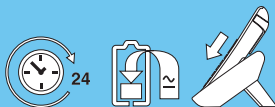

B




Charge handset for 24 hours



Make a call

Enter the number (maximum 24 digits) and then press . The default line is highlighted. If you want to switch to the other line, scroll . Press  or  **Select** to call on the highlighted line.

OR

Pick up the handset and press , and then dial the number to call on the default line. (To call on the other line, press  **Line 1** or  **Line 2** before dialing.)


Answer a call

When the phone rings,  or  indicate the incoming call line. To answer, press the appropriate soft key ( **Line 1** or  **Line 2**).

End a call

To end a conversation, press .

Adjust earpiece volume



 

 
 


 

 
During a call, scroll  to select from level 1 to level 5.

Note

The descriptions above are available from the handset. With this model, making and answering a call are also available from the base station. Refer to chapter 6 “Conventions Used in this manual” and chapter 8 “Using your phone” in the User Manual that came with this phone for details.

Setting the ring tones

Follow the procedure below to set ring tones on the handset or base station.

1. Press  in idle mode, scroll  to **Personal Set**, and press  **Select**.
2. Scroll  to **Handset Tones** on the handset or **Base Tones** on the base and press  **Select**. Then scroll  to **Ring Tones** and press  **Select**.
3. Scroll  to select **Line 1** or **Line 2** and press  **Select**.
4. Scroll  to your desired melody. The melodies will play as you scroll them.
5. Press  **Select** to set the ring tone.
 - A validation tone is emitted and the screen returns to the previous menu.

Note

Refer to the key chart in Chapter 6 “Conventions Used in this Manual” of the User Manual for base station keys that correspond to the handset keys appearing in the procedure above.

Store a contact in the phonebook

1. Press . **Phonebook** is highlighted; press **Select**.
2. **New Entry** is highlighted; press **Select**.
3. **Enter Name** is displayed. Enter the name of the contact (maximum 14 characters) and press **OK**.
4. **Enter Number** is displayed. Enter the number (maximum 24 digits) and press **OK**.
 - A validation tone is emitted.

Access phonebook

1. Press and scroll to browse the phonebook.
2. To view the details, press **View**.

Call from the phonebook

1. Press in idle mode.
2. Scroll to a phonebook entry.
3. Press twice.
 - The call is initiated from the default line.

Note

The descriptions above are available from the handset. With this model, using the phonebook is also available from the base station. Refer to chapter 6 “Conventions Used in this Manual” and chapter 10 “Using your Phonebook” in the User Manual that came with this phone for details.

Listen to messages recorded on the answering machine

Press to turn on the answering machine. (The icon is turned off.) The outgoing message is played.

Press to play phone messages (the first recorded message will be played first).

Press **Skip** to skip the current message and play the next message.

Press **Prev.** to go back to the previous message (if pressed within 1 second of current message playback).

Press **Prev.** to replay current message (if pressed after 1 second of current message playback).

Press or to adjust speaker volume during message playback.

Press to delete the current message.

Long press to delete all old messages.


Press to turn off the answering machine. (The icon is turned on.)

Refer to your SE659 User Manual for details about the answering machine functions.

Troubleshooting

For more information, please refer to the User Manual that came with your phone.

Problem

- There's no dialling tone!
- Caller does not hear me clearly!
- **Searching...** is displayed on handset and  icon is blinking!
- Caller number is not displayed!

Solution

- No power: Check the connections.
- Batteries are empty: Charge the batteries.
- Move closer to the base station.
- Wrong line cord used: Use the line cord provided.
- Move closer to the base station.
- Move the base station at least one metre (yard) away from any electronic appliances.
- Move closer to the base station.
- Make sure that your base station is on.
- Reset your unit and restart handset registration.
- Service is not activated: Check your subscription with your network operator.

Welcome to Philips!

Register your product and get support at
www.philips.com/welcome

Need help?

User Manual

Refer to the User Manual that came with your SE659.

Online Help

www.philips.com/support

©2008 Koninklijke Philips Electronics N.V.

All rights reserved

Reproduction in whole or in part is prohibited without the written consent of the copyright owner



Please Recycle
Printed in China

3111 285 47161 (US-EN)
UCZZ6991ZZ(0)