
 
| | - | I |
|--------------|--|---|
| 210mm | | <section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><text><text><text><text><text><text><text><text><text><text><text><text><text><text><text><list-item><list-item><list-item><list-item><list-item><list-item><list-item><list-item><list-item><list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></text></text></text></text></text></text></text></text></text></text></text></text></text></text></text></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header> |
| 310mm | <section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><image/><image/><image/><image/><section-header><image/><image/><image/></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header> | <complex-block> S1 Connections upgement to inserve the inserve to the inser</complex-block> |
| | 148mm | |



| | 2 Back Return to previous screen 3 OK Select an option from a menu 4 Instant replay | Once your Roku TV powers on, follow the on-screen instructions. Your Roku TV will walk you through initial setup at connect to your preferred wireless network. Your TV will automatically detect wireless networks in your area. Have your network name and password handy and the easy on-screen instructions. If you are not ready to connect your TV to a wireless network, you can still use it as a regular TV by selecting "Connect to the later". Once connected your TV will automatically update with the latest software. This can take a few minutes to update. |
|--------------------------|---|--|
| | Replay the last few seconds of streaming video 5 RWD scan Rewind streaming video, scroll left one page at a time 6 Home | Once you complete guided setup, your TV will automatically update with the latest software. Your new Philips Roku TV automatically receives regular software updates in the background when it's connected to the Internet. This allows it to give better experience over time. |
| | Return to Roku Home screen Directional keypad (D-Pad) Move up or down; The left arrow will bring up the antenna TV channel | 7 Activate your smart TV You need a Roku account to activate your Roku TV and to access entertainment across thousands of streaming channels. |
| | list or Smart Guide. The left and right arrow are used for Live TV Pause to select scenes. 8 Sleep Set the sleep timer 9 Options Access to picture settings, move streaming channel icons and more 10 FWD scan Fast forward streaming video, scroll right one page at a time. This button is also used to fast forward paused live TV using Live TV Pause. 11 Play / Pause | Your Roku account Follow the on-screen instructions on your Roku TV. You will need to activate your Roku TV using your smartphone, tablet, or computer to link to a Roku account. See more information below. Roku accounts are free, and while a valid credit card number is not required to create your account, providing your credit card information makes renting and purchasing entertainment from the Roku Channel Store fast and convenient. If you choose to provide a payment method, you will be able to seamlessly rent content, download channels and subscribe services without having to enter your credit card information each time. A unique PIN can be added to the account to prevent unauthorized purchases. |
| | Start or pause playback. This button is also used to activate and use the Live TV Pause feature when a 16 GB USB drive is attached to the TV. 12 Featured channel shortcut Lets you directly access featured channels 13 Volume / Mute Increase / Decrease volume and mutes the TV sound | Caution Skyworth USA Corporation Inc. does not warrant access to the portal or to any of the services, content, software and advertisin Skyworth USA Corporation Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time. Although Skyworth USA Corporation Inc. will strive to provide a good selection of services, content or software, Skyworth USA Corporation Inc. does not warrant continued access to any specific services, and content or software. |
| * The 🔭 gives you easy a | ccess to picture settings, display options and more. Try it on every screen. | |

| automatically receives regular software updates in the background when it's connected to the Internet. This allows it to give you a better experience over time. | | |
|--|---|--|
| | | |
| 7 | Activate your smart TV | |
| ou r | need a Roku account to activate your Roku TV and to access entertainment across thousands of streaming channels. | |
| Fo ll con | ir Roku account low the on-screen instructions on your Roku TV. You wi ll need to activate your Roku TV using your smartphone, tablet, or nputer to link to a Roku account. See more information below. oku accounts are free, and while a valid credit card number is not required to create your account, providing your credit card | |

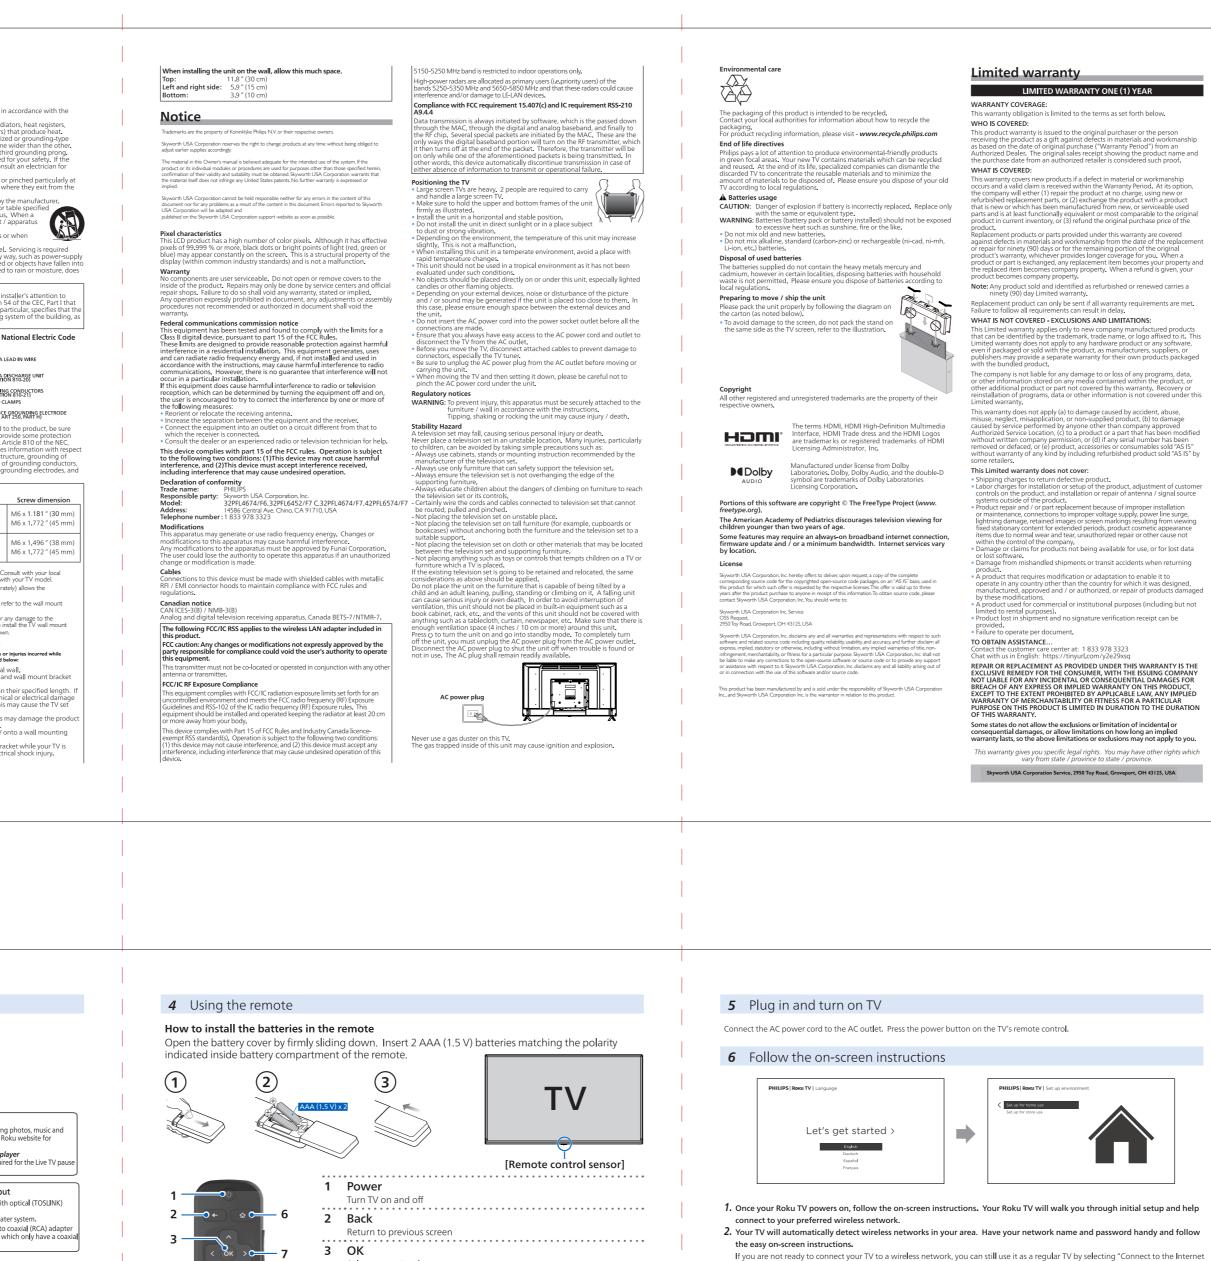



PHILIPS

Roku TV

4600/6500 series **Quick Start Guide**



 Register your product:
 www.philips.com/my-tv
 Early access to exclusive offers and more!
 Keep track of your product warranty coverage
 Comparison of your product warranty coverage Keep track of your product warranty coverage Get easy access to product support



User Manual: www.philips.com/support Scan to download



Scan to register

Call us: 1-833-978-3323 To obtain assistance, contact Philips customer care center, In the U.S.A., Canada, Puerto Rico, or the U.S. Virgin Islands.



 Chat with us:
 https://tinyurl.com/y https://tinyurl.com/y2e29xsq

8 Connect antenna or cable (optional)



1. When the setup wizard is complete, select the Live TV tile from the home screen. 2. Follow the on-screen instructions. . Whenever you want to watch local broadcast TV, select this tile.

While in the live TV input, you can use your remote to access additional features. • D-Pad left: Pressing this key brings up the smart guide, a list of antenna TV channels. Play/Pause: Pause live TV for up to 90 minutes when a 16 GB USB drive is connected. RWD scan and FWD scan: Allows you to fast forward and rewind while using the Live TV pause feature. • D-Pad left and right: Allows you to scroll through the paused Live TV and select scenes.

• Live TV Pause can pause content received on the antenna TV input for up to 90 minutes and requires a 16 GB or larger USB drive and a valid Roku account. All data on the USB drive will be deleted prior to use.

With the tuner built-in you can connect your TV to antenna or cable (free cable only, does not work with cable TV using a set-top box)

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. Roku, Roku TV, the Roku logo, and the purple d-pad design are trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners



注意: 正反双面印刷 红色虚线为折叠线,请勿印刷 黑色边框线无需印刷 请折叠后交货