


**PHILIPS**

## Linea V

Design cordless  
phone (M350)

Design cordless  
phone with answering  
machine (M355)

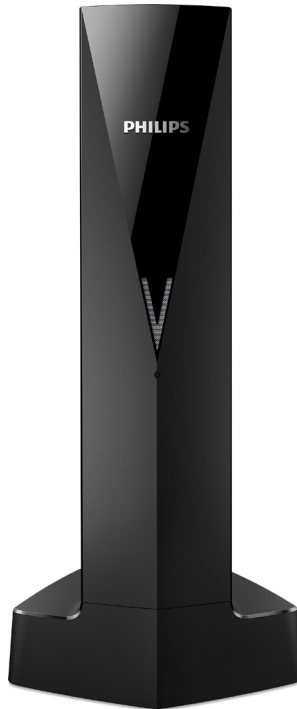

# Extended user documentation

Register your product and get support at  
[www.philips.com/support](http://www.philips.com/support)



# Contents

<b>1</b>	<b>Important safety instructions</b>	<b>3</b>	<b>6</b>	<b>Text and numbers</b>	<b>17</b>
				Enter text and numbers	17
				Switch between uppercase and lowercase	17
<b>2</b>	<b>Your phone</b>	<b>4</b>	<b>7</b>	<b>Phonebook</b>	<b>18</b>
	What is in the box	4		View the phonebook	18
	Overview of the phone	5		Search a record	18
	Overview of the base station	6		Call from the phonebook	18
				Access the phonebook during a call	18
<b>3</b>	<b>Get started</b>	<b>7</b>		Add a record	19
	Connect the base station	7		Edit a record	19
	Install the handset	8		Delete a record	19
	Configure your phone (country dependent)	8		Delete all records	19
	Change the remote access PIN code (for M355)	9	<b>8</b>	<b>Call log</b>	<b>20</b>
	Charge the handset	9		Call list type	20
	Check the battery level	10		View the call records	20
	What is standby mode?	10		Save a call record to the phonebook	21
	Display icons	10		Return a call	21
	Check the signal strength	11		Delete a call record	21
	Switch the handset on or off	11		Delete all call records	21
				Mark all call records as read records	21
<b>4</b>	<b>Calls</b>	<b>12</b>	<b>9</b>	<b>Redial list</b>	<b>22</b>
	Make a call	12		View the redial records	22
	Answer a call	12		Redial a call	22
	End a call	13		Save a call record to the phonebook	22
	Adjust the earpiece/speaker volume	13		Delete a redial record	22
	Mute the microphone	13		Delete all redial records	22
	Turn the speaker on or off	13			
	Make a second call	13			
	Answer a second call	13			
	Switch between two calls	13			
	Make a conference call with the external callers	14			
<b>5</b>	<b>Intercom and conference calls</b>	<b>15</b>			
	Make a call to another handset	15			
	Make a conference call	15			

<b>10 Phone settings</b>	<b>23</b>	<b>16 Notice</b>	<b>39</b>
Sound settings	23	Declaration of conformity	39
ECO+ mode	24	Use GAP standard compliance	39
Name the handset	24	Compliance with EMF	39
Set the date and time	24	Disposal of your old product and battery	39
Set the display language	24		
Auto answer	24		
Activate/Deactivate auto hang up	25	<b>17 Frequently asked questions</b>	<b>41</b>
<b>11 Alarm clock</b>	<b>26</b>	<b>18 Appendix</b>	<b>44</b>
Set the alarm	26	Text and number input tables	44
Turn off the alarm	26		
<b>12 Privacy mode</b>	<b>27</b>		
Call barring (block outgoing calls)	27		
Block incoming calls	27		
<b>13 Telephone answering machine</b>	<b>29</b>		
Turn the answering machine on or off	29		
Set the answering machine language	29		
Announcements	29		
Incoming messages	30		
Call screening	31		
Set the ring delay	32		
Remote access	32		
<b>14 Services</b>	<b>34</b>		
Call list type	34		
Auto conference	34		
Network type	34		
Auto prefix	34		
Select the recall duration	35		
Dial mode	35		
Auto clock	36		
Register your handset or additional handsets	36		
Unregister handsets	37		
Restore default settings	37		
<b>15 Technical data</b>	<b>38</b>		

# 1 Important safety instructions

## Power requirements

- This product requires an electrical supply of 100–240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



### Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

## To avoid damage or malfunction



### Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Do not dispose of batteries in fire.
- Always use the cables provided with the product.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.

- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not allow the product to come into contact with liquids.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.

## About operating and storage temperatures

- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.

## 2 Your phone

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

---

### What is in the box



Handset\*\*



Base station (with two connectors)



Charger (with one connector)\*\*



Power adapter\*\*



Line cord\*



Guarantee



Quick start guide



#### Note

- \* In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

#### Tip

- \*\* In multi-handset packs, there are additional handsets and chargers and power adapters.

# Overview of the phone

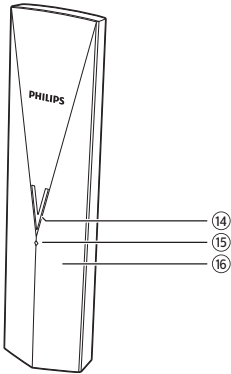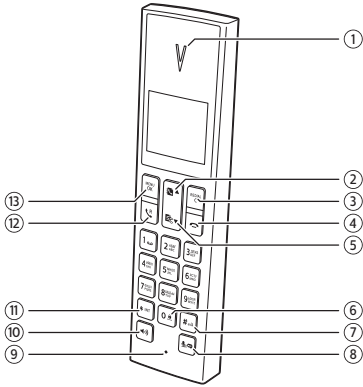

## ① Earpiece

## ② ▲

- Scroll up on the menu.
- Increase the earpiece/speaker volume.
- Access the phonebook in standby mode.

## ③ REDIAL/C

- Delete text or digits.
- Cancel operation.
- Access the redial list in standby mode.
- During answering machine recording mode, press to

temporarily disable or enable the call screening.

## ④

- End the call.
- Exit the menu/operation.
- Press and hold to switch the handset on or off.

## ⑤

- Scroll down on the menu.
- Decrease the earpiece/speaker volume.
- Access the call log in standby mode.

## ⑥ 0#

- Press to enter a space during text editing.
- Press and hold to lock/unlock the keypad in standby mode.

## ⑦ # a/A

- Press and hold to enter a pause when making a call.
- Switch to upper/lower case during editing.

## ⑧ (for M350) of / (for M355)

- Mute or unmute the microphone.
- Access to the answer machine menu in standby mode (for M355 only).
- Listen to new messages from the answering machine (for M355 only).

## ⑨ Microphone

## ⑩

- Turn the speaker phone on/off.
- Make and receive calls through the speaker.

## ⑪

- Set the dial mode (pulse mode to temporary tone mode). This function is country dependent.
- Press and hold to switch between the internal and

external call during a conference call.

- Press and hold to make an intercom call in standby mode (for multi-handset version only).

•

⑫  R

- Make and receive calls.
- Recall key (This function is network dependent.)

⑬ MENU/OK

- Access the main menu.
- Confirm selection.
- Enter the options menu.
- Press to access phonebook during a call.

⑭ Loudspeaker


⑮ LED indicator

- Off: no new event.
- Flashing: new missed calls/new messages on answering machine/new voice mails.
- Flashing once: when putting the handset on the base station.
- Flashing quickly: incoming calls.

⑯ Handset back cover

---

## Overview of the base station

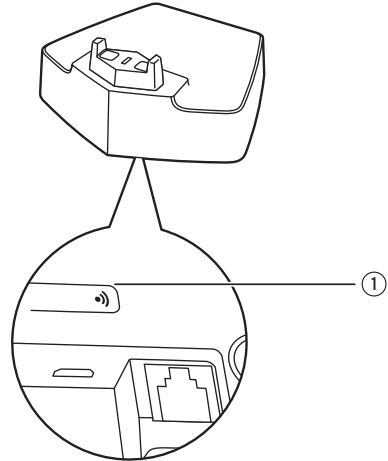

① 

- Press to find handsets.
- Press and hold to enter the registration mode.



# 3 Get started

## ! Caution

- Make sure that you have read the safety instructions in the 'Important safety instructions' section before you connect and install your handset.

## Connect the base station


## ! Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone.
- Use only the supplied power adapter to charge the batteries.

## ☰ Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.

- 1 Connect each end of the power adapter to:
  - the micro USB socket at the bottom of the base station;
  - the power socket on the wall.
- 2 Connect each end of the line cord to:
  - the telephone socket at the bottom of the base station;
  - the telephone socket on the wall.

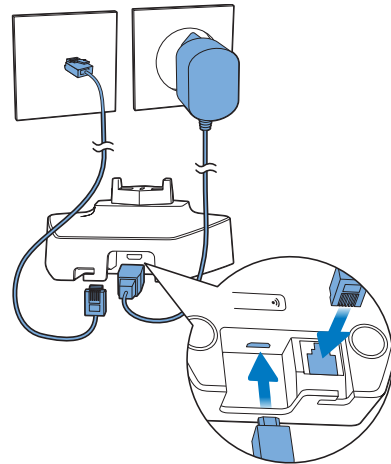


- 3 Connect each end of the power adapter to (for multi handset version only):
  - the micro USB socket at the bottom of the extra handset charger.
  - the power socket on the wall.

The base station is equipped with a micro-USB socket. It allows a connection to a power bank as an alternative source of power during AC power outage.

## Note

- For the minimum requirement of the power bank, see the chapter “Technical Data”.
- While using a power bank as an alternative power source, it may drain very soon if you charge the handset at the same time.

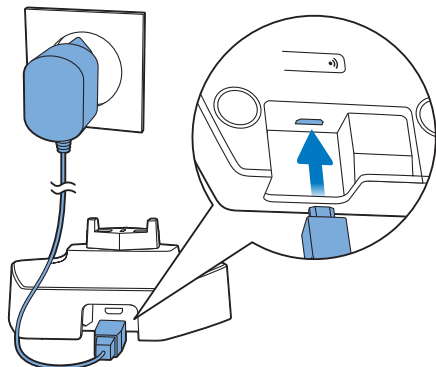

## Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.

## Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.


## Warning

- When replacing the batteries, check the battery polarity. Incorrect polarity may damage the product.

## Configure your phone (country dependent)

### Install the handset

The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

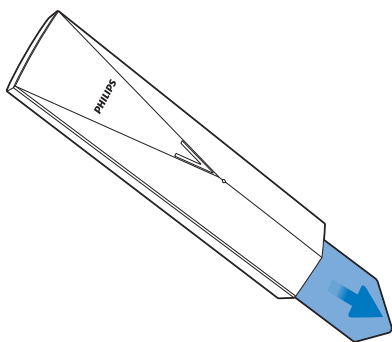

### Set the country/language

Select your country/language, then press **MENU/OK** to confirm.

- ↳ The country/language setting is saved.

## Note



- The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time.

To reset the language, see the following steps.

- 1 Select MENU/OK > [Phone setup] > [Language], then press MENU/OK to confirm.
- 2 Select a language, then press MENU/OK to confirm.  
↳ The setting is saved.

---

## Set the date and time



- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Date & time], then press MENU/OK to confirm.
- 3 Press the numeric buttons to enter the date, then press MENU/OK to confirm.  
↳ The time setting menu is displayed on the handset.
- 4 Press the numeric buttons to enter the time.
  - If the time is in 12-hour format, press ▲ / ▼ to select [am] or [pm] (Country dependent).
- 5 Press MENU/OK to confirm.

---

## Change the remote access PIN code (for M355)


### Note

- The default answering machine remote access PIN code is 0000 and it is important to change it to ensure the security.

- 1 Press  /  or MENU/OK > [Answer machine].
- 2 Select [Remote access] > [Change PIN], then press MENU/OK to confirm.
- 3 Enter the old PIN/passcode, then press MENU/OK to confirm.
- 4 Enter the new PIN/passcode, then press MENU/OK to confirm.
- 5 Enter the new PIN/passcode again, then press MENU/OK to confirm.  
↳ The setting is saved.

---

## Charge the handset

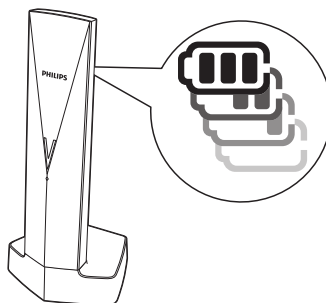

Charge your handset by docking it in either direction. When the handset is placed correctly on the base station, you hear a docking tone (see 'Set the docking tone' on page 23). The LED at the back of the handset flashes once.  
↳ The handset starts charging.





## Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.
- Over time, capacity of batteries decreases. This is a normal battery behavior.

Your phone is now ready to use.

## Check the battery level

The battery icon displays the current battery level.

	When the handset is off the base station, the bars indicate the battery level (full, medium and low). When the handset is on the base station/charger, the bars keep scrolling until charging is complete.
	
	
	The empty battery icon flashes. The battery is low and needs recharging.














The handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning.






## What is standby mode?

Your phone is in standby mode when it is idle. The standby screen displays the handset name or date and time, and handset number.

## Display icons


In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
  	When the handset is off the base station/charger, the bars indicate the battery level (from full to low). When the handset is on the base station/charger, the bars keep scrolling until charging is complete.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
  	It displays the connection status between the handset and base station. The more bars are shown, the better the signal strength is.
	It remains steadily on when browsing answered incoming calls in the call log.
	It indicates an outgoing call in the redial list.
	It flashes when there is a new missed call or when browsing the unread missed calls in call log. It remains steadily on when browsing the read missed calls in call log.
	It flashes when receiving incoming call. It remains steadily on when you are in a call.
	The speaker is on.
	The ringer is off.

	The alarm is activated.
	Answering machine (M355 only): it flashes when there is a new message or when the memory is full. It is displayed when the telephone answering machine is turned on.
	It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message.
	It is displayed when you scroll up / down a list or increase / decrease the volume.
	There are more digits on the right. Press REDIAL/C to read.
ECO+	The ECO+ mode is activated.

---

## Check the signal strength

	The number of bars indicates the connection status between the handset and base station. The more bars are shown, the better the connection is.
--	---

- Make sure the handset is connected to the base station before you make or receive calls and carry out the phone functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge

the battery or move the handset nearer to the base station.

### Note

- When ECO+ is on, the signal strength is not displayed.

---

## Switch the handset on or off

Press and hold  to switch the handset on or off.

# 4 Calls

## Note

- When the power fails, the phone cannot access emergency services.

## Tip

- Check the signal strength before you make a call or when you are in a call (see 'Check the signal strength' on page 11).



## Make a call

You can make a call in these ways:



- Normal call
- Redial call

You can also make a call from the redial list (see 'Redial a call' on page 22), phonebook list (see 'Call from the phonebook' on page 18) and call log (see 'Return a call' on page 21).

### Normal call

- 1 Press  or .
- 2 Dial the phone number.
  - ↳ The number is dialed out.
  - ↳ The duration of your current call is displayed.

### Redial call

- 1 Dial the phone number.
  - To erase a digit, press REDIAL/C.
  - To enter a pause, press and hold #0/A.
- 2 Press  or  to dial out the call.

## Note

- The talk time of your current call is displayed on the call timer.
- If you hear warning tones, the phone is almost out of battery or out of range. Charge the battery or move the phone close to the base station.

## Answer a call

When there is an incoming call, the phone rings. Press  or  to answer the call.

## Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.

## Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.

## Tip

- When there is a missed call, a notification message appears.


## Turn off the ringer of the current incoming call

When the phone rings, press REDIAL/C to temporarily turn off the ringer of the current incoming call.

---

## End a call

You can end a call in these ways:



- Press ;
- Place the handset to the base station or charging cradle.

### Note

- Placing the handset to the base station or charging cradle does not end the call when the auto hangup feature is turned off.

---





## Adjust the earpiece/speaker volume

Press   to adjust the volume during a call.

- ↳ The earpiece/speaker volume is adjusted and the phone is back to the call screen.

---

## Mute the microphone

- 1 Press  /  during a call.
  - ↳ The handset displays [Mute on].
  - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press  /  again to unmute the microphone.
  - ↳ You can now communicate with the caller.

---

## Turn the speaker on or off


Press .

---

## Make a second call

### Note

- This service is network dependent.

- 1 Press  during a call.
  - ↳ The first call is put on hold.
- 2 Dial the second number.
  - ↳ The number displayed on the screen is dialed out.





---

## Answer a second call

### Note

- This service is network dependent.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press  and  to answer the call.
  - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press  and  to end the current call and answer the first call.

---

## Switch between two calls

### Note

- This service is network dependent.

Press  and .

- ↳ The current call is put on hold, and you are now connected to the other call.



---

## Make a conference call with the external callers



### Note

- This service is network and country dependent. Check with the service provider for additional charges.

When you are connected to two calls, press , then .

- ↳ The two calls are combined and a conference call is established.



# 5 Intercom and conference calls



An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between you, another handset user and the outside callers.

---

## Make a call to another handset

### Note

- If the base station only has 2 registered handsets, press and hold \*INT to make a call to another handset.

- 1 Press and hold \*INT.  
↳ The handsets available for intercom are displayed.
- 2 Select a handset, then press MENU/OK to confirm.  
↳ The selected handset rings.
- 3 Press  on the selected handset.  
↳ The intercom is established.
- 4 Press  to cancel or end the intercom call.

### Note

- If the selected handset is busy, [Unavailable] is displayed on the handset screen.

---

## While you are on the phone

You can go from one handset to another during a call:

- 1 Press and hold \*INT.  
↳ The current caller is put on hold.  
↳ For multi-handset versions, the handsets available for intercom are displayed, then go to step 2.
- 2 Select a handset number, then press MENU/OK to confirm.  
↳ Wait for the other side to answer your call.

---

## Switch between calls

Press and hold \*INT to switch between the outside call and the intercom call.

---

## Make a conference call



A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

---


## During an external call

- 1 Press and hold \*INT to initiate an internal call.  
↳ The external caller is put on hold.  
↳ For multi-handset versions, the handsets available for intercom

are displayed, then go to step 2.


- ↳ For two-handset versions, the other handset rings, then go to step 3.
- 2 Select a handset, then press MENU/OK to confirm.
    - ↳ The selected handset rings.
  - 3 Press  on the selected handset.
    - ↳ The intercom is established.
  - 4 Press MENU/OK.
    - ↳ You are now in a 3-way conference call with an external call and a selected handset.
  - 5 Press  to end the conference call.

#### Note

- Press  to join an ongoing conference with another handset if [Services] > [Conference] is set to [Auto] (see chapter 'Services', section 'Auto conference').

---

## During the conference call

- 1 Press and hold  to put the external call on hold and go back to the internal call.
  - ↳ The external call is put on hold.
- 2 Press and hold MENU/OK to establish the conference call again.

#### Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.

# 6 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

---

## Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **REDIAL/C** to delete a character. Press and hold **REDIAL/C** to delete all characters. Press **⏪ ▲** / **⏩ ▼** to move the cursor left and right.
- 3 Press **0a** to add a space.



### Note

- For information on key mapping of characters and numbers, see the chapter 'Appendix'.

---

## Switch between uppercase and lowercase

By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press and hold **#a/A** to switch between the uppercase and lowercase letters.

# 7 Phonebook

This phone has a phonebook that stores up to 50 records. You can access the phonebook from the base station. Each record can have a name up to 14 characters long and a number up to 24 digits long.

You have up to 2 direct access memories (Keys 1 and 2). Depending on your country, keys 1 and 2 are preset to the voice mail number and information service number of your service provider respectively. When you press and hold on the key in standby mode, the saved phone number is dialed automatically.

## Note

- The availability of direct access memory is country dependent.

## View the phonebook

### Note

- You can view the phonebook on one handset only each time.

- 1 Press ▲ or press MENU/OK > [Phonebook] > [View] > MENU/OK to access the phonebook list.
- 2 Select a contact and view the available information.

## Search a record

You can search the phonebook records in these ways:

- Scroll the contacts list.

- Enter the first character of the contact.

## Scroll the contact list

- 1 Press ▲ or press MENU/OK > [Phonebook] > [View] to access the phonebook list.
- 2 Press ▲ and ▼ to scroll through the phonebook list.

## Enter the first character of a contact

- 1 Press ▲ or press MENU/OK > [Phonebook] > [View] to access the phonebook list.
- 2 Press the alphanumerical key that matches the character.
  - ↳ The first record that starts with this character is displayed.

## Call from the phonebook

- 1 Press ▲ or press MENU/OK > [Phonebook] > [View] > MENU/OK to access the phonebook list.
- 2 Select a contact in the phonebook list.
- 3 Press to make the call.

## Access the phonebook during a call

- 1 Press MENU/OK.
- 2 Select the contact, then press MENU/OK to view the number.

---



## Add a record

### Note

- If your phonebook memory is full, a notification message is displayed on the handset. Delete some records to add new ones.
- When you change the number of a record, the new number will overwrite the old number.

- 1 Press MENU/OK.
- 2 Select [Phonebook] > [Add new], then press MENU/OK to confirm.
- 3 Enter the name, then press MENU/OK to confirm.
- 4 Enter the number, then press MENU/OK to confirm.
  - ↳ Your new record is saved.

### Tip

- Press and hold #\*# to insert a pause.
- Press once or several times on the alphanumeric key to enter the selected character.
- Press REDIAL/C to delete the character. Press  and  to move the cursor left and right.

---

## Edit a record

- 1 Press MENU/OK.
- 2 Select [Phonebook] > [Edit], then press MENU/OK to confirm.
- 3 Select a contact, then press MENU/OK to confirm.
- 4 Edit the name, then press MENU/OK to confirm.
- 5 Edit the number, then press MENU/OK to confirm.
  - ↳ The record is saved.

---

## Delete a record

- 1 Press MENU/OK.
- 2 Select [Phonebook] > [Delete], then press MENU/OK to confirm.
- 3 Select a contact, then press MENU/OK to confirm.
  - ↳ A confirmation request is displayed on the handset.
- 4 Press MENU/OK to confirm.
  - ↳ The record is deleted.

---

## Delete all records

- 1 Press MENU/OK.
- 2 Select [Phonebook] > [Delete all], press MENU/OK to confirm.
  - ↳ A confirmation request is displayed on the handset.
- 3 Press MENU/OK to confirm.
  - ↳ All records (except the 2 direct access memory records) are deleted.



# 8 Call log

The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider. Your phone can store up to 20 call records. The call log icon on the handset flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.

## Note

- Make sure that the number in the call list is valid before you can call back directly from the call list.

The icons shown on the screen tell you whether they are missed/received calls.

Icons	Description
	It remains steadily on when browsing incoming calls in the call log.
	It flashes when there is a new missed call. It remains steadily on when browsing the missed calls in call log.

## Call list type

You can set whether you can view all incoming calls or missed calls from this menu.


## Note

- This is a country dependent feature.

## Select the call list type


- 1 Press MENU/OK.
- 2 Select [Services] > [Call list type], then press MENU/OK to confirm.
- 3 Select an option, then press MENU/OK to confirm.

## View the call records

- 1 Press  ▼.  
↳ The incoming call log is displayed.
- 2 Select a record, then press MENU/OK and select [View] for more available information.



---

## Save a call record to the phonebook

- 1 Press  ▼.  
↳ The incoming call log is displayed.
- 2 Select a record, then press MENU/OK to confirm.
- 3 Select [Save number], then press MENU/OK to confirm.
- 4 Enter and edit the name, then press MENU/OK to confirm.
- 5 Enter and edit the number, then press MENU/OK to confirm.  
↳ The record is saved.


---

## Return a call

- 1 Press  ▼.
- 2 Select a record on the list.
- 3 Press  to make the call.


---

## Delete a call record

- 1 Press  ▼.  
↳ The incoming call log is displayed.
- 2 Select a record, then press MENU/OK to confirm.
- 3 Select [Delete], then press MENU/OK to confirm.  
↳ A confirmation request is displayed on the handset..
- 4 Press MENU/OK to confirm.  
↳ The record is deleted.

---


## Delete all call records

- 1 Press  ▼.  
↳ The incoming call log is displayed.
- 2 Press MENU/OK to enter the options menu.
- 3 Select [Delete all], then press MENU/OK to confirm.  
↳ A confirmation request is displayed on the handset..
- 4 Press MENU/OK to confirm.  
↳ All records are deleted.

---

## Mark all call records as read records

When there are unread missed calls in the call log, a notification message appears on the idle screen. You can mark the whole call records as all read. The notification message will disappear

- 1 Press  ▼.  
↳ The incoming call log is displayed.
- 2 Press MENU/OK to enter the options menu.
- 3 Select [Mark as read], then press MENU/OK to confirm.  
↳ A confirmation request is displayed on the handset.
- 4 Press MENU/OK to confirm.  
↳ All call records become read records.

## 9 Redial list

The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 10 redial records.


---

### View the redial records

Press REDIAL/C.

---

### Redial a call

- 1 Press REDIAL/C.
- 2 Select a record, then press .  
↳ The number is dialed out.

---

### Save a call record to the phonebook

- 1 Press REDIAL/C to enter the list of dialed calls.
- 2 Select a record, then press MENU/OK to confirm.
- 3 Select [Save number], then press MENU/OK to confirm.
- 4 Enter and edit the name, then press MENU/OK to confirm.
- 5 Enter and edit the number, then press MENU/OK to confirm.  
↳ The record is saved.

---

### Delete a redial record

- 1 Press REDIAL/C to enter the list of dialed calls.
- 2 Select a record, then press MENU/OK to confirm.
- 3 Press MENU/OK, select [Delete], then press MENU/OK to confirm.  
↳ A confirmation request is displayed on the handset.
- 4 Press MENU/OK to confirm.  
↳ The record is deleted.

---

### Delete all redial records

- 1 Press REDIAL/C to enter the list of dialed calls.
- 2 Press MENU/OK, select [Delete all], then press MENU/OK to confirm.  
↳ A confirmation request is displayed on the handset.
- 3 Press MENU/OK to confirm.  
↳ All records are deleted.



# 10 Phone settings

You can customize the settings to make it your own phone.

---

## Sound settings

---

### Set the handset's ringtone volume

You can select among 5 ringtone volume levels or [Off].

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Sounds] > [Ring volume], then press MENU/OK to confirm.
- 3 Select a volume level, then press MENU/OK to confirm.  
↳ The setting is saved.

---

### Set the handset's ringtone for internal calls

You can select from 10 ringtones.

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Sounds] > [Ringtone int.], then press MENU/OK to confirm.
- 3 Select a ringtone, then press MENU/OK to confirm.  
↳ The setting is saved.

---

### Set the handset's ringtone for external calls

You can select from 10 ringtones.

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Sounds] > [Ringtone ext.], then press MENU/OK to confirm.
- 3 Select a ringtone, then press MENU/OK to confirm.  
↳ The setting is saved.

---

### Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Sounds] > [Key tone], then press MENU/OK to confirm.
- 3 Select [On]/[Off], then press MENU/OK to confirm.  
↳ The setting is saved.

---

### Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger.

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Sounds] > [Docking tone], then press MENU/OK to confirm.
- 3 Select [On]/[Off], then press MENU/OK to confirm.  
↳ The setting is saved.

---

## Set the battery tone

Battery tone is the sound made when the battery is low and needs recharging.

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Sounds] > [Battery tone], then press MENU/OK to confirm.
- 3 Select [On]/[Off], then press MENU/OK to confirm.  
↳ The setting is saved.

---

## ECO+ mode

When the ECO+ mode is activated, it eliminates the radiation of the handset and base station in standby mode.

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [ECO+ mode], then press MENU/OK to confirm.
- 3 Select [On]/[Off], and press MENU/OK to confirm.  
↳ The setting is saved.  
↳ ECO+ is displayed in standby mode after a while.

### Note

- Make sure that all the handsets registered to the base station are M350/M355 in order to have the ECO+ feature functioning properly.
- When ECO+ is activated, the standby time is reduced. This is because in ECO+ mode the base station is not transmitting any signal in standby mode; therefore the handset needs to “listen” more frequently for signals from the base station to detect incoming calls or other requests from the base station. The time it takes for the handset to access features like call setup, call log, paging, and phonebook browsing is also delayed. The handset will not alert you to link loss in case of power loss or moving out of range.

---

## Name the handset

The name of the handset can be up to 12 characters. It is displayed on the handset screen in standby mode.

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Phone name], then press MENU/OK to confirm.
- 3 Enter or edit the name. To erase a character, press REDIAL/C.
- 4 Press MENU/OK to confirm.  
↳ The setting is saved.

---

## Set the date and time

For information, see 'Set the date and time' in the 'Get started' section.

---

## Set the display language

### Note



- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Language], then press MENU/OK to confirm.
- 3 Select a language, then press MENU/OK to confirm.  
↳ The setting is saved.

---

## Auto answer

When you activate the auto answer feature, you can connect to the incoming call automatically once

you pick up the handset. When you deactivate this feature, you have to press  or  to answer the incoming call.

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Auto answer], then press MENU/OK to confirm.
- 3 Select [On]/[Off], then press MENU/OK to confirm.  
↳ The setting is saved.

---

## Activate/Deactivate auto hang up

You can activate the auto hang up function so that you can end a call by simply placing the handset on the base station or charge cradle.

- 1 Press MENU/OK.
- 2 Select [Phone setup] > [Auto hang-up], then press MENU/OK to confirm.
- 3 Select [On]/[Off], then press MENU/OK to confirm.  
↳ The setting is saved.



### Note

- When auto hang up is deactivated, you can put the handset to the base station or charging cradle and continue with your call through the speaker.

# 11 Alarm clock

Your phone has a built-in alarm clock. Check the information below to set your alarm clock.

---

## Set the alarm

- 1 Press MENU/OK.
- 2 Select [Alarm], then press MENU/OK to confirm.
- 3 Select [On once] or [On daily], then press MENU/OK to confirm.
- 4 Enter an alarm time, then press MENU/OK to confirm.
  - ↳ The alarm is set and ⌚ is displayed on the screen.



### Tip

- Press  /  to switch between [am]/[pm] (Country dependent).

---

## Turn off the alarm

---

### When the alarm rings

Press any key to turn off the alarm.

---

### Before the alarm rings

- 1 Press MENU/OK.
- 2 Select [Alarm] > [Off], then press MENU/OK to confirm.
  - ↳ The setting is saved.

# 12 Privacy mode

You can access the privacy mode menu to block outgoing and incoming calls.

---

## Call barring (block outgoing calls)

You can block outgoing calls to numbers, such as overseas calls or undesirable hotlines by barring calls that start with certain digits. You can create 2 sets of numbers with 4 digits at maximum for each set of numbers. When you make a call that starts with one of these 2 sets of numbers, the outgoing call is then barred.

---

### Activate/deactivate the call barring mode

- 1 Press MENU/OK.
- 2 Select [Privacy mode], then press MENU/OK to confirm.
- 3 Enter the privacy mode PIN/passcode. The default PIN/passcode is 0000. Then press MENU/OK to confirm.
- 4 Select [Call barring] > [Barring mode] > [On]/[Off], then press MENU/OK to confirm.  
↳ The setting is saved.

---

### Add new numbers to the call barring list

- 1 Press MENU/OK.
- 2 Select [Privacy mode], then press MENU/OK to confirm.
- 3 Enter the privacy mode PIN/passcode. The default PIN is 0000. Then press MENU/OK to confirm.
- 4 Select [Call barring] > [Barring number], then press MENU/OK to confirm.
- 5 Select a number from the list, then press MENU/OK to confirm.
- 6 Edit the number, then press MENU/OK to confirm.  
↳ The setting is saved.

---

### Block incoming calls

You can put numbers into the blacklist to block incoming calls from certain undesirable numbers. You can create 4 sets of numbers with 24 digits at maximum for each set of numbers. When there is an incoming call with leading digits that match any one of these 4 sets of numbers, the ringer will be muted..

Example:

Block number = 0123

Incoming call number = 0123456789

The call is blocked.

Block number = 23456789

Incoming call number = 03123456789

The call is not blocked.

## Note

- When a call is blocked, the ringer is muted. The call is still displayed and logged. The telephone answering machine will still answer the call when enabled.
- Make sure you have subscribed to the caller ID service before you use this feature.
- The contact's name in phonebook will not be displayed if this contact's number matches the record saved in the blacklist.

## Activate/deactivate the blacklist

- 1 Press MENU/OK.
- 2 Select [Privacy mode], then press MENU/OK to confirm.
- 3 Enter the privacy mode PIN/passcode. The default PIN is 0000. Then press MENU/OK to confirm.
- 4 Select [Call block] > [Block mode] > [On]/[Off], then press MENU/OK to confirm.  
↳ The setting is saved.

## Add blacklist numbers

- 1 Press MENU/OK.
- 2 Select [Privacy mode], then press MENU/OK to confirm.
- 3 Enter the privacy mode PIN/passcode. The default PIN is 0000. Then press MENU/OK to confirm.
- 4 Select [Call block] > [Block number], then press MENU/OK to confirm.
- 5 Select a number from the list, then press MENU/OK to confirm.
- 6 Enter the number, then press MENU/OK to confirm.  
↳ The setting is saved.

## Change the privacy mode PIN/passcode

- 1 Press MENU/OK.
- 2 Select [Privacy mode], then press MENU/OK to confirm.
- 3 Enter the old privacy mode PIN/passcode. The default PIN is 0000. Then press MENU/OK to confirm.
- 4 Select [Change PIN], then press MENU/OK to confirm.
- 5 Enter the old PIN/passcode. The default PIN is 0000. Then press MENU/OK to confirm.
- 6 Enter the new PIN/passcode, then press MENU/OK to confirm.
- 7 Enter the new PIN/passcode again, then press MENU/OK to confirm.  
↳ The setting is saved.



# 13 Telephone answering machine

## Note

- Available only for M355.

Your phone includes a telephone answering machine that records unanswered calls when it is on. By default, the answering machine is set to the [Answer & rec.] mode. You can access the answering machine remotely and change the settings through the answering machine menu on the handset.

## Turn the answering machine on or off

- 1 Press  /  or MENU/OK > [Answer machine].
- 2 Select [On/off] > [On]/[Off], then press MENU/OK to confirm.
- 3 Select [Answer only]/[Answer & rec.] when the answering machine is on, then press MENU/OK to confirm.  
↳ The setting is saved.

## Note

- [Answer only] means the answering machine is on. Calls are only answered, messages are not recorded.
- [Answer & rec.] means the answering machine is on. Calls are answered and messages are recorded.
- When the answering machine is switched on, it answers incoming calls after a certain number of rings based on the ring delay setting.

## Set the answering machine language

### Note

- This feature only applies to models with multiple-language support.

The answering machine language is the language for the announcements.

- 1 Press MENU/OK > [Answer machine].
- 2 Select [Voice language], then press MENU/OK to confirm.
- 3 Select a language, then press MENU/OK to confirm.  
↳ The setting is saved.

## Announcements

The announcement is the message your caller hears when the answering machine picks up the call. The answering machine has 2 pre-recorded announcements: [Answer & rec.] and [Answer only].

---

## Record an announcement

The maximum length of the announcement you can record is 3 minutes. The newly recorded announcement automatically replaces the old one.

- 1 Press MENU/OK > [Answer machine].
- 2 Select [Announcement], then press MENU/OK to confirm.
- 3 Select [Answer only] or [Answer & rec.], then press MENU/OK to confirm.
- 4 Select [Record], then press MENU/OK to confirm.
- 5 Start recording close to the microphone after the beep.
- 6 Press MENU/OK to stop recording or the recording stops after 3 minutes.
  - ↳ You can listen to the newly recorded announcement on the handset.

### Note

- Make sure that you speak close to the microphone when you record an announcement.

---

## Listen to the announcement

- 1 Press MENU/OK > [Answer machine].
- 2 Select [Announcement], then press MENU/OK to confirm.
- 3 Select [Answer only] or [Answer & rec.], then press MENU/OK to confirm.
- 4 Select [Play], then press MENU/OK to confirm.
  - ↳ You can listen to the current announcement.

### Note

- You can no longer listen to the announcement when you pick up an incoming call.

---

## Restore the default announcement

- 1 Press MENU/OK.
- 2 Select [Answer machine] > [Announcement], then press MENU/OK to confirm.
- 3 Select [Answer & rec.] or [Answer only], then press MENU/OK to confirm.
- 4 Select [Use default], then press MENU/OK to confirm.
  - ↳ A confirmation request is displayed on the handset.
- 5 Press MENU/OK to confirm.
  - ↳ The default announcement is restored

---

## Incoming messages

Each message can be up to 3 minutes long. When you receive new messages,



the LED at the back of the handset flashes.

### Note

- If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly.

### Note

- If the memory is full, the answering machine switches to [Answer only] automatically. Delete old messages to record new ones.

## Listen to the incoming message

You can listen to the incoming messages in the sequence they are recorded.

- If there are new messages, press / to listen. If there is no new message, press / , then MENU/OK to listen to old messages.
- Press MENU/OK > [Answer machine] > [Play], then press MENU/OK to confirm; or
- press / , then press 2<sub>ABC</sub>.
  - ↳ New messages start playing.
  - Old messages start playing if there is no new message.
- Press REDIAL/C to stop listening.
- Press MENU/OK to enter the options menu.
- Press ▲ / ▼ to increase/decrease the volume.

Alternatively, you can use the following shortcut keys during message playback:

Key	Function
1	Listen to the previous message.
2	Listen to messages.

3	Skip to the next message.
6	Delete the current message.
8	Stop listening to the message.

### Tip

- The message counter, date and time are displayed during message playback.

## Delete an incoming message

- 1 When you listen to the message, press MENU/OK to enter the options menu.
- 2 Select [Delete], then press MENU/OK to confirm.
  - ↳ The current message is deleted.

## Delete all old incoming messages

- 1 Press / or MENU/OK > [Answer machine].
- 2 Select [Delete all], then press MENU/OK to confirm.
  - ↳ A confirmation request is displayed on the handset.
- 3 Press MENU/OK to confirm.
  - ↳ All old messages are permanently deleted.

### Note

- You can only delete the read messages. No deleted messages can be recovered.

## Call screening

You can hear the caller while he is leaving a message.

Press MENU/OK > [Answer machine] > [HS screening] > [On]/[Off], then press MENU/OK to confirm.

When the call screening function is activated, you can:

- press REDIAL/C to stop listening to the caller. Press REDIAL/C to listen to the caller again.
- press ▲ / ▼ to adjust the speaker volume during call screening.

---

## Set the ring delay

You can set the number of times the phone rings before the answering machine picks up the call.

- 1 Press / or MENU/OK > [Answer machine].
- 2 Select [Ring delay], then press MENU/OK to confirm.
- 3 Select a new setting, then press MENU/OK to confirm.  
↳ The setting is saved.

### Note

- Make sure that the answering machine is switched on before this feature can be applied.

### Tip

- When you access the answering machine remotely, you are recommended to set the ring delay to [Toll saver] mode. This is a cost effective way to manage your messages. When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings.

---

## Remote access

You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code.

### Note

- The remote access PIN code is the same as your system PIN. The preset PIN is 0000.

---

## Activate/deactivate the remote access

You can allow or block remote access to the answering machine.

- 1 Press / or MENU/OK > [Answer machine].
- 2 Select [Remote access], then press MENU/OK to confirm.
- 3 Select [Activate]/[Deactivate], then press MENU/OK to confirm.  
↳ The setting is saved.

---

## Change the PIN/passcode

- 1 Press / or MENU/OK > [Answer machine].
- 2 Select [Remote access] > [Change PIN], then press MENU/OK to confirm.
- 3 Enter the old PIN/passcode, then press MENU/OK to confirm.
- 4 Enter the new PIN/passcode, then press MENU/OK to confirm.
- 5 Enter the new PIN/passcode again, then press MENU/OK to confirm.  
↳ The setting is saved.

## Access the answering machine remotely

- 1 Make a call to your home number with a touch tone phone.
- 2 Enter # when you hear the announcement.
- 3 Enter your PIN code.  
↳ You now have access to your answering machine, and you can now listen to the new messages.

### Note

- You have 2 chances to enter the correct PIN code before your phone hangs up.

- 4 Press a key to carry out a function. See the Remote access commands table below for a list of available functions.

### Note

- When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds.
- When the answering machine is turned off but the remote access function is activated, the answering machine will still pick up the call in [Answer only] mode after 10 rings.

## Remote access commands

Key	Function
1	Listen to the previous message.
2	Listen to messages.
3	Skip to the next message.
6	Delete the current message.
7	Switch the answering machine on (not available when you listen to the messages).
8	Stop listening to the message.

- 9 Switch the answering machine off. (not available when you listen to the messages).

# 14 Services

The phone supports a number of features that help you handle and manage the calls.

---

## Call list type

You can set whether you can view all incoming calls or missed calls from this menu.

### Note

- This is a country dependent feature.

---

## Select the call list type

- 1 Press MENU/OK.
- 2 Select [Services]> [Call list type], then press MENU/OK to confirm.
- 3 Select an option, then press MENU/OK to confirm.

---

## Auto conference

To join an external call with another handset, press <sup>R</sup>.

### Note

- This feature is available only for multi-handset versions.

---

## Activate/Deactivate auto conference

- 1 Press MENU/OK.
- 2 Select [Services] > [Conference], then press MENU/OK to confirm.
- 3 Select [Auto]/[Off], then press MENU/OK to confirm.  
↳ The setting is saved.

---

## Network type

### Note

- This is a country dependent feature. It only applies to models with network type support.

- 1 Press MENU/OK.
- 2 Select [Services] > [Network type], then press MENU/OK.
- 3 Select a network type, then press MENU/OK.  
↳ The setting is saved.

### Tip

- Select [PSTN] if the phone is connected to a fixed line (e.g. at home).
- Select [PBX] if the phone is connected to a private telephone line (e.g. in the office).

---

## Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888,

your phone changes the number to 12503338888 when it dials out.

### Note

- The maximum length of a detect number is 10 digits. The maximum length of an auto prefix number is 10 digits.
- This is a country dependent feature.

---

## Set auto prefix

- 1 Press MENU/OK.
- 2 Select [Services] > [Auto prefix], then press MENU/OK to confirm.
- 3 Enter the detect number, then press MENU/OK to confirm.
- 4 Enter the prefix number, then press MENU/OK to confirm.  
↳ The setting is saved.

### Note

- This is a country dependent feature.
- To enter a pause, press and hold #\*#.A.
- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.
- The feature is unavailable if the dialed number starts with \* and #.

---

## Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: [Short], [Medium] and [Long]. The number of available options varies

with different countries. For details, consult your service provider.

- 1 Press MENU/OK.
- 2 Select [Services] > [Recall time], then press MENU/OK to confirm.
- 3 Select an option, then press MENU/OK to confirm.  
↳ The setting is saved.

---

## Dial mode

### Note

- This feature is country dependent and only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

---

## Set the dial mode

- 1 Press MENU/OK.
- 2 Select [Services] > [Dial mode], then press MENU/OK to confirm.
- 3 Select a dial mode, then press MENU/OK to confirm.  
↳ The setting is saved.

### Note

- If your phone is in pulse dial mode, press #INT during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

---

## Auto clock

### Note

- This service is network dependent.
- Make sure you have subscribed to the caller ID service before you use this feature.

It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. For the date to be synchronized, make sure the current year is set.

- 1 Press MENU/OK.
- 2 Select [Services] > [Auto clock], then press MENU/OK to confirm.
- 3 Select [On]/[Off]. Press MENU/OK.  
↳ The setting is saved.


---

## Register your handset or additional handsets

You can register additional handsets to the base station. The base station can register up to 4 handsets.

- 1 You can register your handset as follows:
  - If the handset is in [Unregistered] status, press MENU/OK.
  - If the handset is in [searching] and [Unavailable] status, press MENU/OK > [Services]

> [Register], then press MENU/OK.

- 2 Press and hold  on the base station for 10 seconds.
- 3 Enter the system PIN. Press REDIAL/C to make corrections. Then press MENU/OK to confirm the PIN.  
↳ Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.

### Note

- If the PIN is incorrect or no base is found within a certain period, a notification message will be displayed on your handset.
- If registration fails, unplug the power adapter from the base station and plug it back. Wait for 15 seconds, and then repeat the registration procedure.
- The preset PIN is 0000. No change can be made on it.
- The handset and the base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes.
- To register the handset to another GAP-compliant base station, follow the registration procedure of that base station.

---

## Unregister handsets

If two or more handsets share the same base station, you can unregister the handset or other handsets.

- 1 Press MENU/OK.
- 2 Select [Services] > [Unregister], then press MENU/OK to confirm.
- 3 Enter the system PIN. (The preset PIN is 0000). Press REDIAL/C to remove the number.
- 4 Select [Other handsets], then select a handset to be unregistered. For pre-registered handset, select [This handset].
- 5 Press MENU/OK to confirm.
  - ↳ The handset is unregistered.



### Tip

- The handset name is displayed beside the handset number in standby mode.



### Note

- A handset cannot unregister itself if it is the only handset registered to the base station.

---

## Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Press MENU/OK.
- 2 Select [Services] > [Reset], then press MENU/OK to confirm.
  - ↳ A confirmation request is displayed on the handset.
- 3 Press MENU/OK to confirm.
  - ↳ All settings (except the phonebook) are reset.

# 15 Technical data

## General specification and features

- Talk time: 10 hours
- Standby time: 180 hours
- Range indoor: 50 meters
- Range outdoor: 300 meters
- Phonebook list with 50 entries
- Redial list with 10 entries
- Call log with 20 entries
- Answering machine with 25 minutes recording time
- Caller identification standard support: FSK, DTMF

## Battery

- Philips: 2 x AAA Ni-MH 1.2V 300 mAh rechargeable batteries

## Power adapter

### Base and charger

- SPPS: SSY050050-EU, input: 100-240 V~, 50/60 Hz 200 mA, output: 5 Vdc 500 mA

### Alternative power source

- Power bank: output: 5Vdc, 500mA (minimum)

## RF output power

- < 24 dBm

## Frequency Band

- 1880 MHz ~ 1900 MHz

## Power consumption

- Power consumption in idle mode: around 0.7 W (M350), 0.75 W (M355)

## Weight and dimensions

- Handset: 148.5 grams  
195 x 49.8 x 28.2 mm (H x W x D)
- Base: 131 grams  
40 x 104.5 x 91.5 mm (H x W x D)
- Charger: 120 grams  
40 x 104.5 x 91.5 mm (H x W x D)



# 16 Notice

---

## Declaration of conformity

Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

## Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

---

## Compliance with EMF

This product complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

---

## Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

### Removing the disposable batteries

To remove the disposable batteries, see section 'Frequently asked questions'.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

**Environmental information**

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

# 17 Frequently asked questions

## **My handset displays [Searching] or [Unavailable], or [Register your Handset], what do I do??**

- Make sure that the base station has power supply.
- The handset is out of range. Move it closer to the base station.
- The handset is not paired with the base. Register the handset to the base station.



### Tip

- For further information, see 'Register the handset or additional handsets' on the Services section.

## **If I fail to pair (register) the additional handsets to the base station, what do I do?**

- Your base memory is full. Unregister the unused handsets and try again (see 'Unregister handsets' on page 37).
- If registration fails, unplug the power adapter from the base station and plug it back. Wait for 15 seconds, and then repeat the registration procedure (see 'Register your handset or additional handsets' on page 36).

## **The range is short. How can I improve it?**


The range is subject to environmental factors, like electrical devices or walls in between.

- Move the base station to another corner/room.
- Move the base station away from other electrical appliances nearby that could interfere with the range (like routers, TV, radio, etc.).
- Do not put the base station on a metallic desk or a metallic table top.

## **I have chosen a wrong country in Welcome screen, what do I do?**

Reset your phone settings to the original factory settings (see 'Restore default settings' on page 43).

## **I have chosen a wrong language which I cannot read, what do I do?**

- 1 Press  to go back to the standby screen.
- 2 Press MENU/OK to access the main menu screen.
- 3 One of the following texts appears on the screen:

---

Phone setup > Language

Réglages > Langue

Telefon-Setup > Sprache

Config. telef. > Idioma

---

- 4 Select it to access the language options.
- 5 Select your own language.

**The handset loses connection with the base or the sound interrupts during a call.**

- The handset is nearly out of range. Move it closer to the base station.
- Re-register the handset to the base station.

**No dialing tone/no free line.**

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.
- The handset is in [searching] or [Unavailable] status. Register the handset to the base station.

**No docking tone.**


- The handset is not placed properly on the base station/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

**[Voicemail] is displayed on the handset. What do I do?**

You receive the [Voicemail] alert when you have new voice messages stored in your network. The voice mail service is managed by your service provider but not on the phone itself. Contact your service provider for the settings.

**The handset on the charger does not charge or the battery discharges too fast.**

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The LED at the back of the handset flashes once when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- The battery is not fully recharged. Leave the handset on the charging cradle for at least 8 hours or until the battery icon on the handset stops scrolling and indicates full bar.
- The batteries are old or defective. Purchase and replace with new rechargeable batteries with the same specifications.

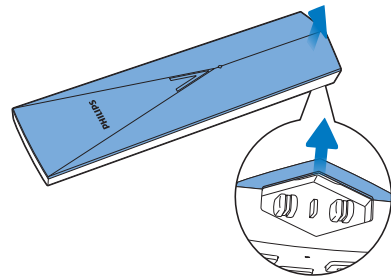

**No display**

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

**Bad audio (crackles, echo, etc.)**

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.
- The phone receives interference from the DSL (digital subscriber line) connection. Install a DSL filter to prevent the noise. Contact your service provider for the DSL filter.
- Other USB power supply may generate hum noise. Use only the original power supply listed in the user instruction.

**The handset does not ring.**

- Make sure the handset ringtone is turned on.
- Make sure the handset is registered to the base station.

**The caller ID does not display.**

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.
- The handset is registered to other DECT base station.

**Note**

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

# 18 Appendix

## Text and number input tables

Key Upper case characters (for English/French/ German/ Italian/Turkish/Portuguese/ Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish/ Romanian/Polish/Czech/ Hungarian/Slovakian/Slovenian/ Croatian/Lithuanian/Estonian/ Latvian/Bulgarian)

0	Space . 0 , / ; " ' ! j ? ç * + - % ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	A B C 2 À Á Â Æ Ã Ä Å Æ Ç Ć
3	D E F 3 È É Ê Ë Ì Í Î Ï Δ Φ
4	G H I 4 Ğ Ĩ Ĵ Ķ Ĳ Ĵ Ĵ Ĵ Ĵ Ĵ Ĵ
5	J K L 5 Λ
6	M N O 6 Ñ Ó Ô Õ Ö
7	P Q R S 7 Š Ś Π Θ Σ
8	T U V 8 Ù Ú Û Ü Û Ü
9	W X Y Z 9 Ø Ω Ξ Ψ Ž

Key Lower case characters (for English/French/ German/ Italian/Turkish/Portuguese/ Spanish/Dutch/Danish/Finnish/ Norwegian/Swedish)

0	Space . 0 , / ; " ' ! j ? ç * + - % ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	a b c 2 à â ä æ á ã ä å ā ā ç Ć
3	d e f 3 è é ê ë è ě ē Δ Φ
4	g h i 4 ğ ĩ ĵ ĳ Ĳ Ĵ Ĵ Ĵ Ĵ Ĵ Ĵ
5	j k l 5 λ
6	m n o 6 ñ ó ô õ ö ò

7	p q r s 7 β ς š Π Θ Σ
8	t u v 8 ù ú û ü ù ù μ μ
9	w x y z 9 ø Ω Ξ Ψ ž

Key Upper case characters (for Greek)

0	Space . 0 , / ; " ' ! j ? ç * + - % ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	A B Γ 2 A B C Æ Å Ä Ç
3	Δ E Z 3 D E F Ē
4	H Θ I 4 G H I
5	K Λ M 5 J K L
6	N Ξ O 6 M N O Ñ Ö
7	Π Ρ Σ 7 P Q R S β
8	T Υ Φ 8 T U V Û
9	X Ψ Ω 9 W X Y Z Ø

Key Lower case characters (for Greek)

0	Space . 0 , / ; " ' ! j ? ç * + - % ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	α β γ 2 a b c à æ ä å
3	δ ε ζ 3 d e f è é
4	η θ ι 4 g h i i
5	κ λ μ 5 j k l λ
6	ν ξ ο 6 m n o ñ ö ò
7	π ρ σ ς 7 p q r s β
8	τ υ φ 8 t u v ù ü
9	χ ψ ω 9 w x y z ø

Key Upper case characters (for Serbian)

0	Space . 0 , / ; " ' ! j ? ç * + - % ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	A B C Ћ Ć Ć 2 A B B Γ
3	D E F J Đ 3 D E Ж 3 Δ Φ
4	G H I Љ 4 И Й K Л Г
5	J K L Њ 5 M H O П Λ

6	MNOЋ6PCTY
7	PQRSЖЅ7ФХЦЧПΘΣΒ
8	TUV8ШЩЪЫ
9	WXYZŽ9ЬЭЮЯΩΞΨ

Key Lower case characters (for Serbian)

0	Space . 0 , / : ; " ' ! j ? ž * + - % \ ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	a b c Ћ Ć Ć 2 A B B Г
3	d e f J Đ 3 Д Е Ж 3
4	g h i Љ 4 И Й К Л
5	j k l Њ 5 М Н О П
6	m n o Ћ 6 P C T Y
7	p q r s Ж Ѕ 7 Ф Х Ц Ч П Θ Σ Β
8	t u v Љ 8 Ш Щ Ъ Ы
9	w x y z Ž 9 Ь Э Ю Я Ω Ξ Ψ



Copyright © Gibson Innovations Limited 2017. All rights reserved.

This product has been manufactured by and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

UM\_M350-355\_73\_EN\_V1.0  
WK1733

