

Welcome

Quick start guide

- 1 Connect
- 2 Install
- 3 Enjoy



PHILIPS

Troubleshooting

For more information, see the user manual that came with your CD140 or CD145.

Problem	Solution
• No dialing tone	<ul style="list-style-type: none"> • Check the connections • Charge the batteries for at least 24 hours • Use the line cable provided
• Poor audio quality	<ul style="list-style-type: none"> • Move closer to the base station • Move the base station at least one metre away from any electrical appliances
• The Y icon is blinking	<ul style="list-style-type: none"> • Register the handset to the base station • Move closer to the base station
• The handset LCD displays nothing	<ul style="list-style-type: none"> • Try again by disconnecting and connecting the base station power supply and follow the procedure to register a handset • Make sure the two supplied rechargeable batteries have been inserted into the battery compartment • Make sure the supplied batteries are charged up
• Caller Line Identification (CLI) service does not work	<ul style="list-style-type: none"> • Check your subscription with your network operator

Need help?

User Manual

See the User manual that came with your CD140 or CD145.

Online help

www.philips.com/support

Listen to new messages recorded on answering machine (applicable to CD145 only)

Press  on the base station to turn on the answering machine, the LED is turned on

Press  again to turn off the answering machine, the LED is turned off

Press  on the base station, playback of the oldest new message will begin

Press  to skip the current message and play the next message

Press  to go back to previous message if it is pressed within one second of current message playback

Press  to replay current message if it is pressed after one second of current message playback

Press  to increase or  to decrease speaker volume during message playback

Press  to delete the current message

See CD145 user manual for details about answering machine function



Country setting table

Code	Country	* Default outgoing message language	* Outgoing message languages available
01	Germany	German	1 – German
02	Austria	German	2 – Turkish
03	Turkey	Turkish	
04	UK	English	1 – English
05	Ireland	English	
06	France	French	1 – French
07	Italy	Italian	2 – Italian
08	Portugal	Portuguese	3 – Portuguese
09	Greece	Greek	4 – Greek
10	Spain	Spanish	5 – Spanish
11-1	Switzerland	German	1 – French
11-2	Switzerland	French	2 – German
11-3	Switzerland	Italian	3 – Italian
12	France	French	4 – English
13	Netherlands	Dutch	1 – Dutch
14-1	Belgium	Dutch	2 – French
14-2	Belgium	French	3 – German
			4 – English

Code	Country	* Default outgoing message language	* Outgoing message languages available
15	Sweden	Swedish	1 – Sweden
16	Norway	Norwegian	2 – Norwegian
17	Finland	Finnish	3 – Finnish
18	Denmark	Danish	4 – Danish
21	Romania	Romanian	1 – Romanian
22	Poland	Polish	2 – Polish
23	Czech	Czech	3 – Czech
24	Hungary	Hungarian	4 – Hungarian
25	Slovakia	Czech	5 – English
26	Slovenia	English	
27	Croatia	English	
28	Bulgaria	English	
29	Serbia	English	
30	Singapore	English	1 – English
31	Indonesia	English	2 – Bahasa
32	Malaysia	English	
35	Australia	English	
36	New Zealand	English	
39	Brazil	Brazilian	1 – Brazilian
40	Mexico	Spanish	2 – Spanish

*This is applicable to CD145 only. For more information about changing the outgoing message languages, see section 5.6.5 of the CD145 user manual.

What's in the box



CD140/CD145
Handset



CD140
Base station
OR



CD145
Base station



Power supply
unit for
base station



Line cord



2 x AAA
Rechargeable
batteries



Quick start guide



CD140 or CD145
User manual



Guarantee

The line adaptor may not be attached to the line cord. You may find the line adaptor in the box. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.



In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

WARNING Always use the cables and batteries that are supplied with your phone.

1 Connect

Connect the base station


1. Insert the plug of the power cord into the socket under the base station
2. Insert the plug of the line cord into the socket under the base station
3. Connect the other end of the line cord together with the line adaptor if necessary, to the telephone line socket and the other end of the power cable to the electricity socket

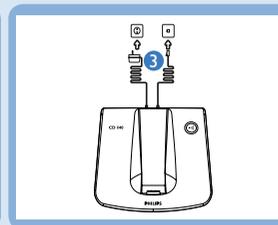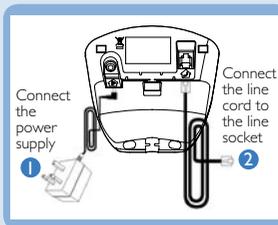

2 Install

Insert rechargeable batteries and charge

Insert batteries

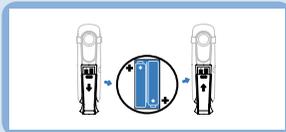

Charge handset for 24 hours



Configure your phone

1. Press **0** and the available country code blinks.
2. Press **↓** repeatedly to scroll to your desired country code. (See Country setting table)
3. Press **0** and your phone is configured according to your selected country code.

3 Enjoy

Make a call

Press **☎** and dial the number
OR

Dial the number and press **☎**
Answer a call

When the phone rings, press **☎**.

End a call

Press **☎**

Set the earpiece volume

1. Press **☎**
2. Press **4** and the current earpiece volume level settings is displayed
3. Press **1** (low), **2** (medium) or **3** (high) to select your desired earpiece volume level
4. Press **☎** to save the settings

Set the ring melody

1. Press **☎**
2. Press **5** and the current ring melody is played
3. Press one of the digit keys **0** through **9** to select your desired ring melody
4. Press **☎** to save the settings

Store a number in the phonebook

1. Press **☎**
2. Press **☎** and memory number 0 is shown
3. Press **☎** repeatedly to select another memory number from 0 through 19
4. Enter the phone number. If you enter the number wrongly, press **C** to erase a digit
5. Press **☎** to save the number