



Cleans and protects your CD/DVD player

Regular cleaning of your CD/DVD player's lens ensures optimum performance of your equipment. It is important to keep the optical laser lens clean and dust free. This dry-brush system safely removes dust, debris and other contaminants.

Maintain original sound quality

• Audio system check for correct setting

Maintain original sound and video quality

• Safe dry brush cleaning system

Easy to use

• Voice instructions in 14 languages

Lens cleaner SVC2330/10

Highlights

Dry brush system

The dry brush cleaning system safely removes dust, debris and other contaminants from the CD/DVD players laser lens, leaving it clean and performing optimally.

Audio system check

The audio system check determines whether the speakers are properly adjusted.

Voice instructions



The voice instructions on this easy to use CD lens cleaner guide you through the cleaning process in one of the 14 languages provided.

Specifications

Storage Media

Supported formats: CD-Audio, CD-ROM, DVD-ROM

Outer Carton

EAN: 87 12581 57360 7 Length: 54.3 cm

Number of consumer packagings: 72

Width: 37.6 cm Gross weight: 11 kg Height: 26.4 cm Nett weight: 5.904 kg Tare weight: 5.096 kg

Inner Carton

Length: 16.5 cm

Number of consumer packagings: 6

Width: 7.8 cm Height: 22.8 cm Nett weight: 0.492 kg Gross weight: 0.84 kg Tare weight: 0.348 kg EAN: 87 12581 57365 2

Packaging dimensions

Height: 22.2 cm

Packaging type: Blister

Type of shelf placement: Both

Width: 15.7 cm Depth: 1.18 cm

Number of products included: 1

EAN: 87 12581 56461 2 Gross weight: 0.123 kg Nett weight: 0.082 kg Tare weight: 0.041 kg

Accessories

User Manual: 15 languages

© 2024 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2024-03-25 Version: 2.0.12

EAN: 87 12581 56461 2

www.philips.com

