
Quick Start Guide





What's in the Box?

You should find these items upon opening the box.

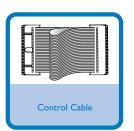



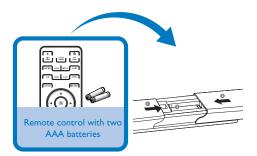

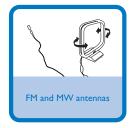








Tips


- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.

 - Connect the speaker cables.
- Connect the MW and FM antennas.
- Connect the control cable.
- Connect the composite video cable to a TV.
- Connect the power cords of the system and TV.

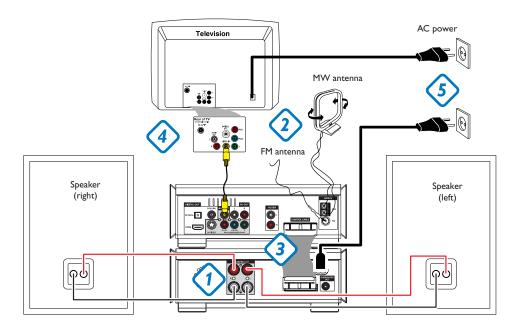







Setting up the TV

Press **SOURCE** (**DISC** on the remote) to select disc source.



Turn on the TV and set it to the correct Video In channel.



Setting the clock

0

In standby mode, press and hold **CLOCK** on the remote.

2


When the hour digits flash, turn **VOLUME-/+** on the system or press **VOLUME+/-** on the remote to set the hours.

3

Press CLOCK again and the minute digits flash. Then turn VOLUME-/+ on the system or press VOLUME+/- on the remote to set the minutes.

4

Press **CLOCK** again to confirm the time setting.

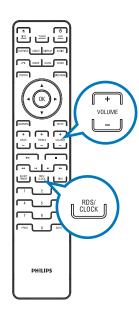



Setting DVD menu options

IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press SYSTEM on the remote to exit the system menu and then DISC and "1" to exit progressive scan.

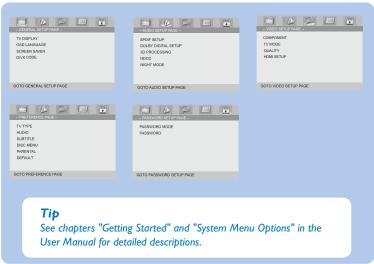

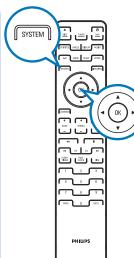



VIDEO NOSO SACO COMPANIA DE CO

Playing a disc

Press OPEN •CLOSE (on the remote) to open the disc tray and load in a disc, then press the same button again to close the disc tray.

→ Make sure the label side of the disc is facing up.

2

Playback will start automatically. If not press ▶ II.

3

To stop playback, press **STOP** (on the remote).

Programming and tuning to radio stations

- Press **SOURCE** (**TUNER** on the remote) to select tuner source.
- Press PROG on the remote for more than two seconds to program all available stations in order of waveband.
- Press PRESET+/- (◀ / ▶ on the remote) until the desired preset station is displayed.

Тiр

Detailed playback features and additional functions are described in the accompany owner's manual.

Notes for remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or TUNER, for example).
- Then select the desired function (\triangleright II, $\mid \triangleleft$, \triangleright I for example).





2005 © Koninklijke Philips Electronics N.V. All rights reserved.