


1 Connect

Basic Connection

A Before Connecting


You only need to make one video and audio connection, depending on the capabilities of your TV.

B Video connection to TV

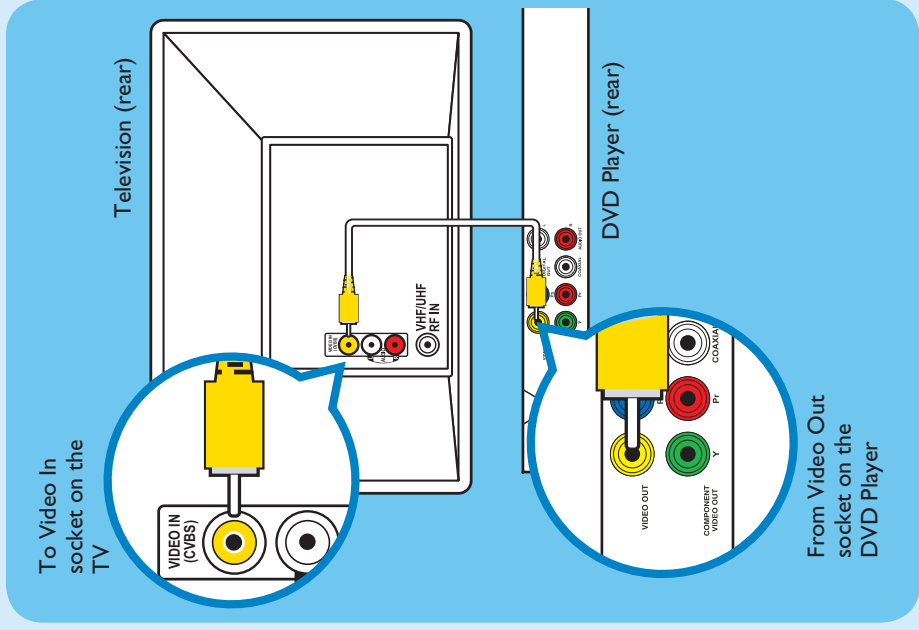

- 1 Use the supplied composite video cable (yellow plug) to connect the DVD player's Video Out (CVBS) socket to the Video In socket (or labeled as A/V In, Video In, Composite or Baseband) on the TV.

C Audio connection to TV

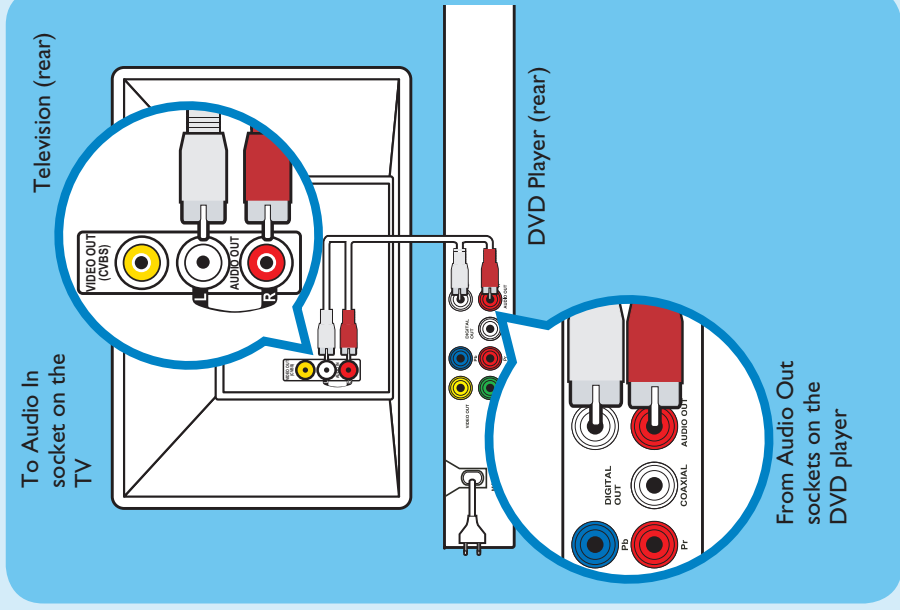


- 2 To hear the sound of this DVD player from the TV, use the supplied audio cables (red and white plugs) to connect {AUDIO OUT L/R} sockets of the DVD player to the corresponding Audio In sockets on the TV.
- 3 Plug in the power cable from the DVD player to an AC power outlet.

Note See the accompanying user manual for other possible connections (e.g. S-VIDEO, Component Video).

2 Set up


A Insert batteries in Remote Control

- 1 Remove batteries compartment cover.
- 2 Insert the provided batteries in the remote control. Take note of where the positive and negative ends should go.
- 3 Replace the batteries compartment cover.

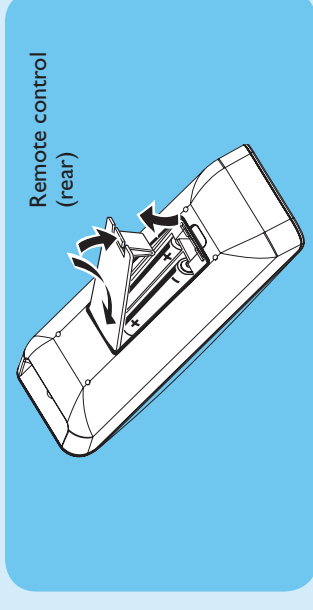


B Finding the viewing channel

- 1 Press **STANDBY-ON** on the DVD player's remote control.

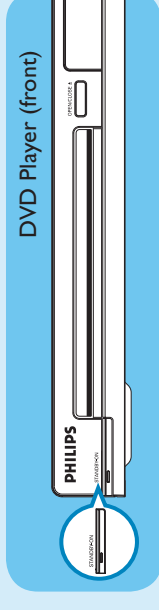


- 2 Switch on the TV.
- 3 Press **SETUP**

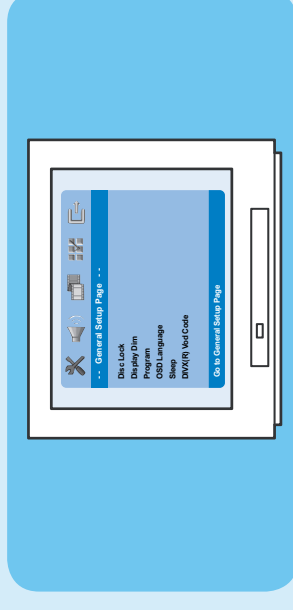

- 4 Press '0' on the TV's remote control, then repeatedly press the Channel Down button until you see the DVD background screen. This is the correct viewing channel for the DVD player.

Note For some TVs, to find the correct viewing channel, you can keep pressing the AV or SELECT buttons. If still unable to find the correct viewing channel, check the connections again or check your TV's user manual.

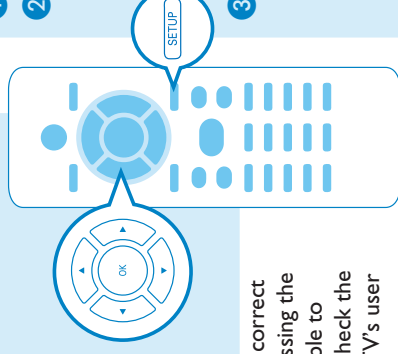

C TV settings basic setup

Use the DVD player's remote control to select the settings that matches your country of residence and the TV settings.

Selecting TV Settings

- 1 Press **▶** to select {Video Setup Page}.
- 2 Press **▲ ▼** to highlight one of the options, then press **▶** to enter into the submenu.
In {**TV Type**}, options to select {PAL/NTSC/Multi}
In {**TV Display**}, options to select {4:3 Panscan/4:3 Letterbox/16:9}
- 3 Press **▲ ▼** to highlight one of the options in the submenu according to your country of residence and the TV settings.
- 4 Select an option and press **OK**.

Note Follow the instructions shown on the TV to confirm the selection (if any).

D Language preference setup

Use the DVD player's remote control to select the desired On-screen language, Audio language, Subtitle language and Menu language you preferred.

Selecting On-screen language

- 1 Press **▶** to select {General Setup Page}.
- 2 Press **▲ ▼** to highlight {OSD Language}, then press **▶**.
- 3 Press **▲ ▼** to select a language and press **OK**.

Note The On-screen language for the setup menu will remain once you set it, regardless of various disc languages.


Selecting disc languages

- 1 Press **▶** to select {Preference Page}.
- 2 Press **▲ ▼** to highlight one of the options, then press **▶** to enter into the submenu.
In {**Audio**} - select disc's soundtracks languages
In {**Subtitle**} - select disc's subtitles languages
In {**Disc Menu**} - select disc's menu languages
- 3 Press **▲ ▼** to select a language and press **OK**.

Note If the language selected is not available on the disc, the disc's default language will be used instead.


3 Enjoy

A Inserting disc

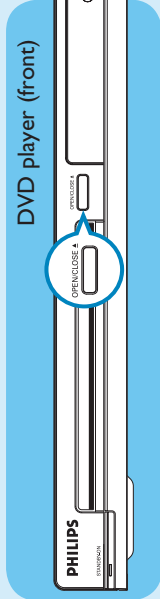

- 1 Press **OPEN/CLOSE** on the front of the DVD player.

Note You can also hold down the **STOP ■** button on the remote control to open and close the disc tray.

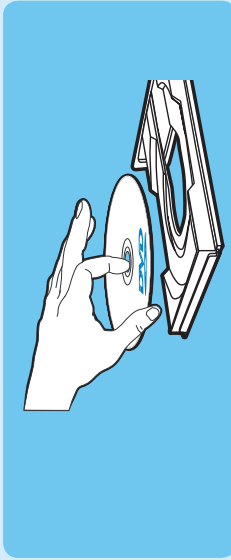

- 2 Place a disc into the disc tray with the label facing up. For doubled-sided discs, load the side you want to play facing up.
- 3 Press **OPEN/CLOSE** on the front of the DVD player again to close the disc tray.

Troubleshooting

For more troubleshooting tips, see the user manual.

Problem

No power

Tip

- Check if the AC power cord is properly connected.
- Press the **STANDBY-ON** on the front of the DVD player to turn on the power.
- Check connection to TV and ensure the plugs are firmly in place.

No picture

No sound or distorted sound

- Adjust the volume
- Check audio connections are in the correct input source.

Remote control does not work

- Check the batteries are loaded correctly or replace the batteries with new ones.
- Reduce the distance between the remote control and the DVD player.
- Point the remote control directly toward the IR sensor.

Need help?

User Manual

For more product information refer to the user manual of the DVD player

Online

Go to www.philips.com/support



2005 © Koninklijke Philips N.V.
All rights reserved.
www.philips.com
SL/0543/55_3

DVD Video Player

DVP 3040K

Quick Start Guide



1

Connect

 
2

Set up

3


Enjoy

What's in the box?




DVD Video Player


Remote Control
and 2 batteries

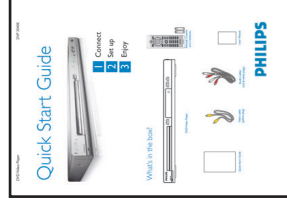

Quick Start Guide

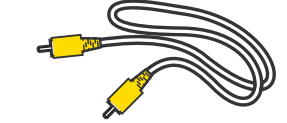

Video cable
(yellow plug)

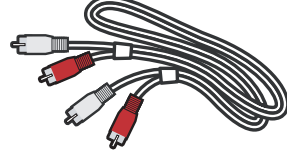

Audio cables
(red & white plugs)



User Manual

PHILIPS