 




User manual

Playing the speakers and subwoofer

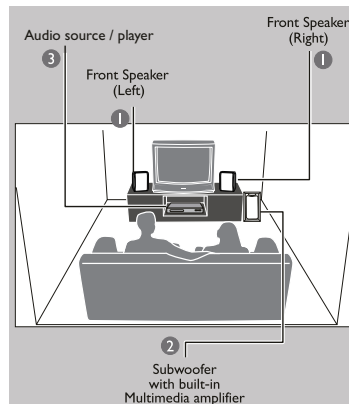

System positioning :

The subwoofer is recommended to be put on the floor to get a better acoustic effect.

For best possible surround sound, all the speakers (except subwoofer) should be placed at the same distance from the listening position.

Place the front left and right speakers at equal distances from the TV and at an angle of approximately 45 degrees (horizontal) from the listening position.

Helpful Hint:

- To avoid magnetic interference, do not position the speakers, too close to your TV.

总尺寸: 660x173mm
工艺: 风琴折
成品尺寸: 110x86.5mm

成品正面:



成品背面:



General information

Safety instructions

Please read carefully the safety mark on the back side

This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This mark is intended to alert the user for important operating and servicing instruction.

Warnings

• Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.

• Please switch off the system from the wall socket, when not in use.

• Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-serviceable parts are inside.

• Only for indoor use.

• Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.

• The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.

Care of the cabinet

- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Accessories


Item	3.5mm-3.5mm stereo cable	Remote control	User manual	FM Antenna cable
Quantity	1	1	1	1

Bluetooth Operating Instruction

1. Press SOURCE key from subwoofer's front panel or remote control to Bluetooth mode;
2. When selected the Bluetooth mode, in display, "bt" will start blinking and hear an audio tone which indicate in Bluetooth pairing mode.
3. For pairing with mobile phone or other Bluetooth devices, search the device named "Philips MMS2625B" and pair it. Once paired, "bt" stops blinking and an audio tone will come up.
4. Press and hold "M" for 3 seconds from remote control in order to force disconnect the Bluetooth connection.

Note: While using Bluetooth, if external call comes, then speaker system goes in mute mode in order to protect privacy of mobile phone user. Operation resumes once the call is disconnected.

 Connections

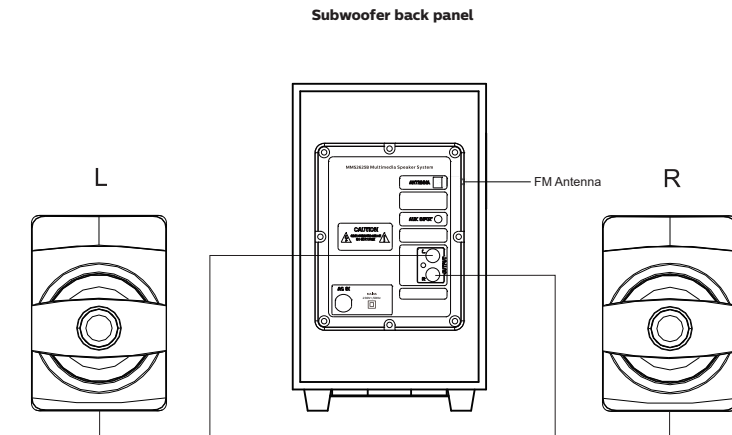


Troubleshooting

Warning -

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy the problem by following hints mentioned in below table.

Problem	Solution
1. No power.	Check if the AC power cord is properly inserted into the AC mains socket.
2. No sound or distorted sound.	Adjust the volume / select the correct source to choose the equipment that you want to hear through the system.
3. The remote control does not function properly.	Reduce the distance between the remote control and the system. Replace the batteries with new ones / Point the remote control directly towards the IR sensor (located on front panel of the subwoofer) / Check that the batteries are loaded correctly / Switch off the system for 30 seconds and then restart.
4. Low hum or buzz sound.	Place the product as far away as possible from electrical devices that may be causing interference / Check power supply voltage and consult electrician.
5. The content of the USB flash drive cannot be read.	The USB flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. NTFS).
6. Slow operation of the USB flash drive / cannot detect USB flash drive.	Big memory size USB flash drive will take longer time to read and play. / Take out USB drive and insert it again properly.
7. FM not properly tuned.	Match with local frequency.
8. FM reception not good.	While listening radio turn off TV / DVD or other radiation source.
9. BT not working.	Reduce the distance or device is not paired.

 Top panel operation

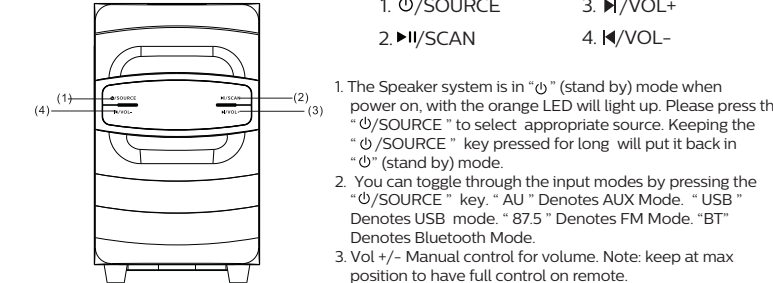

	AUX INPUT	USB/SD INPUT	FM TUNNER	BT INPUT
VOL+				
Short press		TRACK SELECTION PREVIOUS/NEXT	PREVIOUS/NEXT CHANNEL SELECTION	TRACK SELECTION PREVIOUS/NEXT
long time press	VOLUME+/VOL-	VOLUME+/VOL-	VOLUME+/VOL-	VOLUME+/VOL-
M/SCAN				
Short press		PLAY/PAUSE	MUTE	PLAY/PAUSE
long time press			AUTOMATIC SEARCH FM RADIO STATION/CHANNEL STORED AUTOMATICALLY	BLUETOOTH FUNCTION CAN BE FORCE-DISCONNECTED

* AVAILABLE IF CONNECTED

Warranty

This Philips 2.1 Multimedia Speaker System is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the warranty, **TPV Technology India Pvt. Ltd.**, affiliate of MMD Hong Kong Holding Limited, undertake to repair the apparatus FREE OF CHARGE at any of its Authorized Service Center in India.

The warranty is not valid in case :

1. Proof of purchase is not accompanied with this warranty card.
2. The warranty card is not completed immediately after purchase.
3. The apparatus is not used according to this user manual.
4. Defects are caused due to improper or reckless use.
5. Any repairs are done by unauthorized personnel.
6. The serial number is tampered with.
7. Defects due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to the purchaser's residence.

All Consumables and parts susceptible to normal wear and tear are not covered under this warranty.

Model No. _____ Product Sl. No. _____

Invoice Number _____ Date of Purchase: ___/___/___

 
Customer's Name and address: _____

PIN:

Always there to help you!
Visit us at www.support.philips.com
Helpline: 1800 425 6396
Email: india.callcentre@tpv-tech.com
(10 a.m. to 9 p.m. Mondays to Saturdays & 10 a.m. to 6 p.m. on Sundays)

Dealer Name & Stamp:

Remote controls

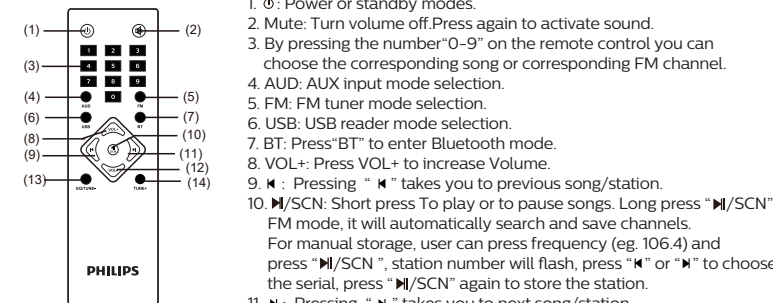

1. ϕ : Power or standby modes.
2. Mute: Turn volume off. Press again to activate sound.
3. By pressing the number "0-9" on the remote control you can choose the corresponding song or corresponding FM channel.
4. AUX: AUX input mode selection.
5. FM: FM tuner mode selection.
6. USB: USB reader mode selection.
7. BT: Press "BT" to enter Bluetooth mode.
8. VOL+: Press VOL+ to increase Volume.
9. \blacktriangleleft : Pressing " \blacktriangleleft " takes you to previous song/station.
10. \blacktriangleright /SCN: Short press To play or to pause songs. Long press " \blacktriangleright /SCN" in FM mode, it will automatically search and save channels. For manual storage, user can press frequency (eg. 106.4) and press " \blacktriangleright /SCN", station number will flash, press " \blacktriangleleft " or " \blacktriangleright " to choose the serial, press " \blacktriangleright /SCN" again to store the station.
11. \blacktriangleleft : Pressing " \blacktriangleleft " takes you to next song/station.
12. VOL-: Press VOL- to decrease Volume.
13. EQ: nor for Normal, CLA for Classic, COU for Country, POP for Pop, Jaz for Jazz, roc for ROCK mode. (works only in USB/BT mode)
14. TUNE+: To search channel step by step (each step= 0.1 MHz), press "TUNE+" and hold to search next channel, it will stop and play once next channel been searched.

* AVAILABLE IF CONNECTED

Product specifications*

Total system power	31W RMS	Satellite speaker power	1 Way, 2 Speakers
Treble speaker power	8 x2W RMS	Speaker size	3 inches
Bass speaker power	15W RMS	Impedance	2 Ohm
Separation	\geq 40db	Frequency range	120Hz - 20KHz
SNR	\geq 60db	Product Dimension (mm) W x H x D	90x 130 x 77
Audio input socket	3.5mm stereo	Net Weight	0.40 kg
Audio output socket	RCA cable	BT version	V4.2
Power consumption	38 W	BT range	Up to 10 meters
Subwoofer speaker	1 Way	capacity	Up to 32GB
Speaker size	4 inches	playability	MP3 track
Impedance	2 Ohm		
Frequency range	20Hz - 170Hz		
Dimension (mm) W x H x D	155 x 262 x 264		
Weight	3.15kg		

*Specification subject to change without prior notice. Measured under specific conditions.



Register your product and get support at www.philips.com/welcome

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

