
Quick Start Guide




What's in the Box?

You should find these items upon opening the box.



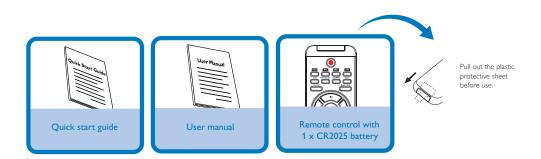



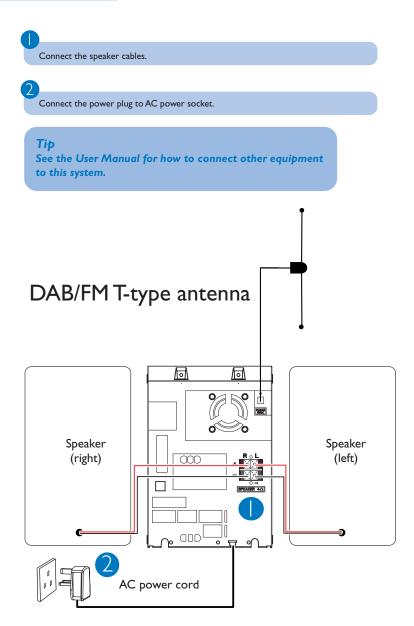



Setting the clock

IMPORTANT!

3

4

– To set clock in the Eco Power mode, press and hold ECO POWER/STANDBY-ON \circ on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

In the standby mode, press and hold **CLOCK** on the remote control. → The clock digits for the hours continue to flash.

Adjust VOLUME -/+ (or press VOL +/- on the remote control) to set the hours.

Press **CLOCK** to confirm. → The minute digits start flashing.

Adjust VOLUME -/+ (or press VOL +/- on the remote control) to set the minutes.

Press **CLOCK** to confirm the time.

Step C Enjoy

Notes for remote control:

- First select the source you wish to control by pressing one of the source select

keys on the remote control (for example FM, DISC).

- Then select the desired function (for example ▶, I ◄ , ▶►).

Playing a disc

Press **OPEN/CLOSE** to open the disc tray and load in a disc, then press the same button again to close the disc tray.

Make sure the label side of the disc is facing up.

2

Press **II** to start playback.

3


To stop playback, press **E**.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

Insert the USB device's USB plug into the socket +> on the set.

Press SOURCE once or more (or USB on the remote control) to select USB.

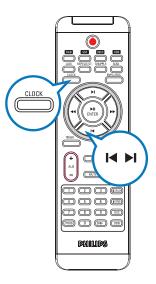



iPod playback via the USB port cannot be guaranteed.

Play the USB's audio files as you do with the albums/tracks on a CD.



Programming and tuning to FM radio stations

Press **SOURCE** repeatedly (or **FM** on the remote control) to select the tuner source.

2

Press **PROG** on the remote control) for more than two seconds to program all available stations in order of waveband.

3

3

Press **ALBUM/PRESET** \forall or \blacktriangle (or $|\blacktriangleleft|$ / \triangleright on the remote control) until the desired preset station is displayed.



Tuning to DAB stations

Press **SOURCE** on the system to select DAB (or press **DAB** on the remote control) to start automatic search for available DAB stations.

Press SCAN to search for all band III frequencies.

At the completion of full scan, press **ALBUM/PRESET** \forall or \land (or $|\checkmark\rangle$) on the remote control) to select your desired DAB channels backward/forward.

Press ENTER/ > II to confirm and tune to your selected channel.

Tip – See the User Manuals for detailed instructions on DAB operations.

