

Register your product and get support at
www.philips.com/welcome

PhotoFrame

SPF1007



EN User manuals

1

PHILIPS

Content

Introduction	
1. Important Information	2
1.1 Safety precautions and maintenance	2
1.2 Care of the PhotoFrame	2
1.3 Recycling	2
2. Your PhotoFrame	3
2.1 What's in the Box	3
2.2 Control Buttons and Menu	4
2.3 Connections	4
2.4 Product Highlights	4
3. Getting started	5
3.1 Placing the Product	5
3.2 Connecting to the Mains	5
3.3 Initial Setup	6
4. Using your PhotoFrame	7
4.1 View Photos	7
4.2 Find a Photo	7
4.3 Delete Photos using the PhotoFrame	8
5. Use More of your PhotoFrame	8
5.1 Menu Selection	8
5.2 Photo Menu	8
6. Settings	11
6.1 Slideshow Sequence	11
6.2 Transition Effects	11
6.3 Frequency	12
6.4 Collage	12
6.5 Background Color	13
6.6 Brightness	13
6.7 Language	14
6.8 Timer Function (Auto On/Off)	14
6.9 Check the Status of your Photoframe	16
6.10 Key Help	16
7. Technical data	17
8. Frequently asked questions	18
9. Service and Warranty	19

Introduction

Philips digital PhotoFrame can be placed either vertically or horizontally to fit the photos on display. You can place it somewhere in a room for a continuous display by connecting it to the mains power supply.

1. Important

1.1 Safety precautions and maintenance

Read and follow these instructions when connecting and using your PhotoFrame:

- To protect your display from possible damage, do not put excessive pressure on the LCD panel. When moving your PhotoFrame, grasp the frame to lift; do not lift it by placing your hand or fingers on the LCD panel.
- Unplug the PhotoFrame if you are not going to use it for an extensive period of time.
- Unplug the PhotoFrame if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use alcohol, solvents or ammonia-based liquids.
- Consult a service technician if the PhotoFrame does not operate normally when you have followed the instructions in this manual.
- The casing cover should be opened only by qualified service personnel.
- Keep the PhotoFrame out of direct sunlight and away from stoves or any other heat source.
- Keep the PhotoFrame dry. To avoid electric shock, do not expose it to rain or excessive moisture.
- When positioning the PhotoFrame, make sure the power plug and outlet are easily accessible.
- To avoid the risk of shock or permanent damage to the set, do not expose the PhotoFrame to rain or excessive moisture.

1.2 Care of the PhotoFrame

1 Do not drop

PhotoFrame is a complicated electronic device and cannot withstand shock from being dropped.

2 Do not expose to moisture

PhotoFrame is neither moisture proof nor moisture resistant. Exposing it to moisture or liquid of any kind will very likely damage your PhotoFrame.

3 Do not hit or scratch

The LCD panel of PhotoFrame is made of glass and is therefore sensitive to abnormal force and sharp edges.

4 Screen cleaning

Use only a dry soft cloth to clean your screen.

5 Keep the stand clear from cables

Make sure the stand of your PhotoFrame is clear from cables as cables could pull the stand out of PhotoFrame to the floor.

6 Temperature and humidity limitations

Operating temperature:

0° ~ 40° (Celsius) / 32° ~ 113° (Fahrenheit)

 
Humidity: 20% ~ 80%

1.3 Recycling

- The PhotoFrame uses materials that can be recycled. To minimize the amount of waste in the environment, check your area for companies that will recover used televisions for dismantling and collection of reusable materials, or contact your dealer for recycling.
- Please dispose of the carton and packing material through the proper waste disposal management in your area.

2. Your PhotoFrame


2.1 What's in the box

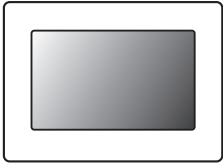

Digital PhotoFrame



 Stand



Power adapter



Quick start guide



User Manual

What else you'll need

 


Power outlet




Digital Photos on memory card

2.2 Control Buttons and Menu

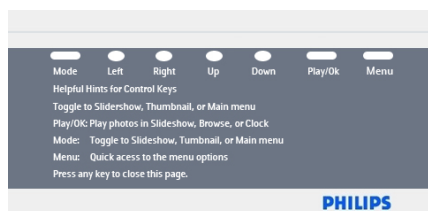

 - Use your PhotoFrame by pressing the control buttons in the back.
- The control buttons and instructions are shown at the bottom of the menu screen.

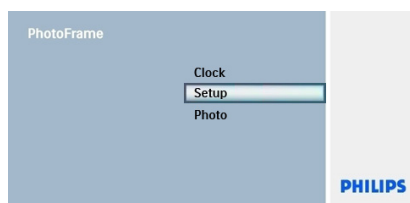


Use the **Up / Down keys** to move between the menus. Move it **left and right** to cycle through the menu tree.

2.3 Connections

2.3.1 Memory Card

 Photo display (underside)

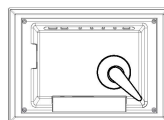

SD/ MMC /MS / xD Card

Inserting a memory card:

- Insert the memory card into the slot in the frame.
- For xD, SD, SDHC, MMC, MMC+, or Memory Stick cards slide the card until it locks in place.
- Push the USB drive in the slot.
- After a few seconds, photos on the memory card will display and a slideshow will start.

DO NOT remove the memory card immediately after inserting it in to the PhotoFrame or when PhotoFrame is counting the Photos. Wait until the screen is stable

Removing a memory card:

- To remove the xD, SD, SDHC, MMC, or Memory Stick card, push the card again to unlock and then pull out the card.



Note

For able to delete photo from the memory device, it must NOT be locked. To unlock the devices please follow the manufacturer's instruction.

2.4 Product highlights

The PhotoFrame is designed to be flexible and convenient to use and it provides the following features:

- High pixel density for sharp and crisp photo display.
- View photos directly from memory cards
- Rotating stand for best possible way of viewing photos.
- Clock

 
3. Getting started

3.1 Placing the Product

The PhotoFrame should be placed on a flat surface and close to a power socket. Keep it away from high temperatures and high levels of moisture


Install the stand

Place the head of the stand in the socket. Rotate counterclockwise until the stand clicks into place.

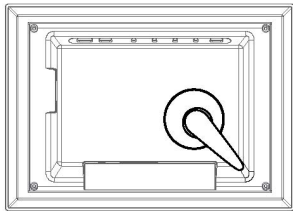

3.2 Connecting to the mains

 Connect the supplied power cable from PhotoFrame to a power outlet.

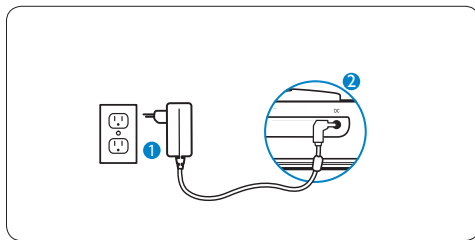

Note:

For safety reasons and best stability Philips recommend to install the stand well properly. Using other positions may cause the PhotoFrame to fall and it is the responsibility of the user.

3.3 Initial Setup

3.3.1 Setting the Language

Press the **Mode** button to toggle to the **Main Menu**, select the **Setup** and **Up / Down** to Language.

1 Press **Up** and **Down** to select your preferred language (select between English, French, Spanish, Italian, German, Dutch, Danish, Simplified Chinese

 
2 Press the **Play/OK** button to confirm your selection. The new setting will be effective immediately.

Press the **Mode** button to leave this menu and play the slideshow.


3.3.2 Setting Time, Date

Use this function to set the time and date of the PhotoFrame

- 1**
- Press the **Mode** button to access the Main Menu.
 - Press **Up /Down** to highlight **Clock** and press **Play/OK**.

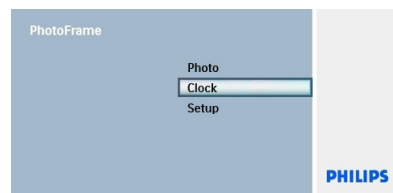

 - 2** • Press **Down** to **SlideShow/Time/ Date/ 12/24hr** and press the **Play/OK** button.

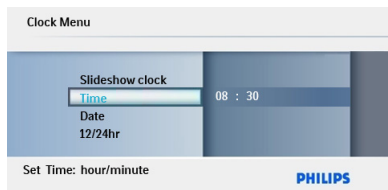

- 3 Time:**
- Press **Up** and **Down** to select the time.
 - Press **Left** and **Right** to move between hours and minutes.
 - Press the **Play/OK** button to confirm.

12 / 24Hr :

Press **Up** and **Down** to select **12HR** or **24HR**.

Date:

- Press **Up** and **Down** to select the date.
- Press **Left** and **Right** to move between days, months and years.
- Press the **Play/OK** button to confirm.



Press the **Play/OK** button to toggle between Clock, Slideshow or Browse mode. Press the **Mode** button to leave this menu and play the slideshow.

3.3.3 Choosing Clock Mode

Setting Slideshow Clock

 
The clock can be viewed in Slideshow displays the clock in the bottom right of the screen.

There are two ways to display photo in the clock mode:


1. To quick access the clock when in slideshow, press **Play/OK**.

2. To access the clock from the Main menu:

- 1** • Press the **Mode** button to access the Main Menu.
- Press **Down** to highlight Clock and press **Play/OK**.

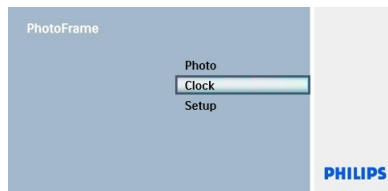

 - 2** • From the Clock screen, press **Menu**.
- Press **Up** to **Slideshow Clock Mode/** and press the **Play/OK** button.

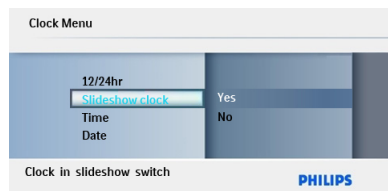

- 3** • Press **Up** and **Down** to select Yes /No.
- Press the **Play/OK** button to confirm selection.

Press the **Mode** button to leave this menu and play the slideshow, browse or calendar mode.

4. Using your PhotoFrame

4.1 View Photos

View pre-stored photos

- 1 Press the **Mode** button to go to the **Main Menu**.
- 2 In the **Main Menu** select photos, select the source as the type of memory card installed (SD/MMC, Memory Stick, xD Cards, USB).
- 3 Press **Play/OK**, to play the photos in Thumbnail mode.
- 4 Press **Play/OK**, once again to play the photos in Slideshow mode.

4.2 Find a Photo

4.2.1 Browse Mode

- 1 When displaying photos in the slideshow, move through the photos, pressing **Left** and **Right** to find and select a photo.
- 2 Press **Play/OK** to access the **Browse** modes.

4.2.2 Slideshow Mode

Slideshow mode is entered once you turn on the PhotoFrame. Press **Left** and **Right** to move quickly through the photos.

 
ⓘ Note 1:
The frequency of the slideshow can be adjusted. To do so please read “slideshow frequency” section.

ⓘ Note 2:
Photos are easily editable from slideshow mode by pressing the **Menu** button. To go directly to thumbnail mode from read the photo menu section. thumbnail mode from read the photo menu section.

4.2.3 Calendar Mode

To display photos in clock mode.


- 1 In slideshow mode, use the **Left** and **Right** to move quickly through the photos.
- 2 Press **Play/OK** to the access Browse Mode, press again to go to the calendar mode.

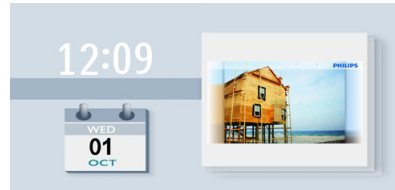

4.2.4 Thumbnail Access and Navigation

A large number of Photos can be viewed quickly using thumbnail mode

 - 1 • Press the **Mode** button to access the Main Menu.
• Press **Up** to photo and press the **Play/OK** button.
- 2 • Press **Down** to select the photo source to browse.
• Press **Play/OK** to access the source.
- 3 • Press **Left, Right, Up** and **Down** to move between photos and see a larger version of the image.

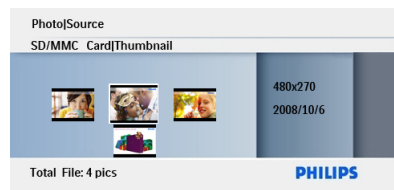


- 4 • Press the **Play/OK** button to leave this menu and to start playing the slideshow.

4.3 Delete Photos using the PhotoFrame

If you need to free up space on a memory card you can delete photos.

 - 1 • Press the **Mode** button to access the Main Menu.
- Press **Up** to **Photo** and press the **Play/OK** button.

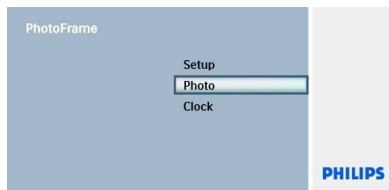

- 2 • Press **Down** to select the media to browse and press **Play/OK**.
- Press the **Up, Down, Left** or **Right** keys to find the image you want to delete.
- 3 • Press the **Menu** button and press **Up** to **Delete**.
- Press **Play/OK**
- Press **Up** or **Down** to **Yes** or **No**. Press **Play/OK**

Press the **Mode** button to leave this menu and play the slideshow.

5. Use more of your PhotoFrame

5.1 Menu Selection

The menu is key using the Selection controller and the menu buttons. When in a menu follow the onscreen instructions in the bottom right of the screen for details on how to navigate.

- The Key **Left** and **Right** to cycle through the menus.
- Press **Down** and **Up** to select options.
- Press the **Menu** button to go to the main menu.
- Press the **Play/OK** button to make a selection.
- Press the **Mode** button to exit the current menu and play a slideshow.

5.2 Photo Menu

There are two ways to access the menu. To quick access the menu while you are viewing photos, press the **Menu** button to see the menu options for photo editing or slideshow settings. To access the menu options starting from the main menu:

- 1 Press the **Mode** button.
 - 2 Press **UP / Down** to highlight the required menu (Photos and Setup).
 - 3 Press **Play/OK** to access the menu.
- To exit from the menus press the **Mode** button again to return to the slideshow.

5.2.1 Rotate, Zoom and Crop

 
PhotoFrame can change the orientation of photos and change the framing of photos.

 Note:


The crop function only applies to original photos stored on external memory card.

Rotating


- 1 • Press the **Mode** button to access the **Main Menu**.
- Press **Up** to **Photo** and press the **Play/OK** button.

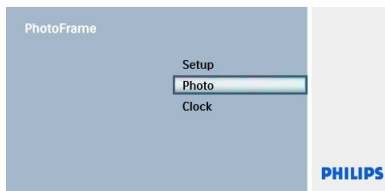

 - 2 • Press **Down** to select the media to **browse** and press **Play/OK**.
- Press the **Up**, **Down**, **Left** or **Right** keys to find the image you want to rotate.

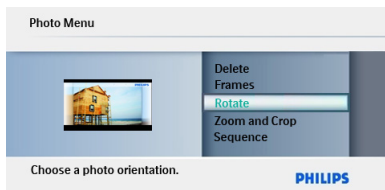

 - 3 • Press the **Menu** button and press **Up** to **Rotate**.
- Press **Play/OK** or press **Right**.
- Press **Up** or **Down** to the rotation required. Press **Play/ OK**.

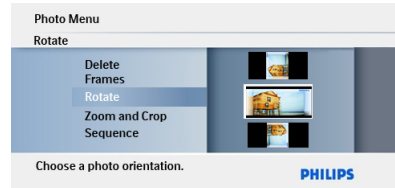

Press the **Mode** or **Menu** button to leave this menu and play the slideshow.

Zooming and Cropping


 Note 1:

To retain image quality it is recommended that zooming and cropping is carried out before the image is stored in the PhotoFrame.


 Note 2:

All photos processed by the PhotoFrame will be resized for optimal display on PhotoFrame and to save storage space.

 
- 1 • Press the **Mode** button to access the **Main Menu**
- Press **Up** to Photo and press the **Play/ OK** button.

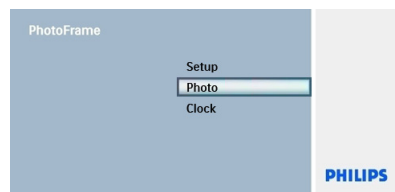

 - 2 • Press **Down** to select the media to browse and press **Play/OK**.
- Press the **Up, Down, Left** or **Right** keys to find the image you want to zoom & crop.

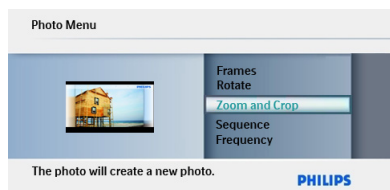

 
- 3 • Press the **Menu** button and press **Up** to **Zoom and Crop**.
- Press **Play/OK** or **Right**.
- Press **Up** or **Down** to the zoom in and out as required. Press **Play/OK**.
- Press **Up, Down, Left** and **Right** to pan around the image. Press **Play/OK** to apply.
- Press **Right** to **Yes** to confirm the crop and return to the thumbnail images.

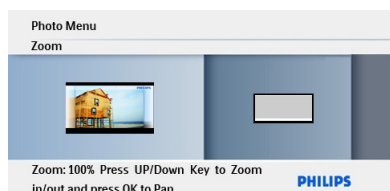

Press the **Mode** button to leave this menu and play the slideshow.

5.2.2 Frames

 - 1 • Press the **Mode** button to access the **Main Menu**.
- Press **Up** to Photo and press the **Play/Ok** button.

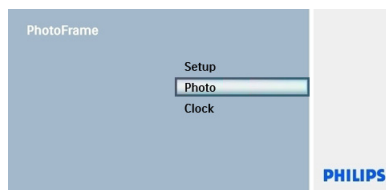

- 2 • Press **Down** to select the media to browse and press **Play/OK**.
- Press the **Up, Down, Left** or **Right** keys to find the image you want to add the frame to.
- 3 • Press the **Menu** button and navigate **Up** to **Frames**.
- Press **Play/OK** or **Right**.
- Press **Up** or **Down** to the required frame. Press **Play/OK** to confirm and return to the thumbnail images.

Press the **Mode** or **Menu** button to leave this menu and play the slideshow.



Note:
Frames can be removed by selecting **no frame**.

6. Settings

Use this section to setup the PhotoFrame slideshow sequences, transition effects, frequency of the change of image, collage effects, background color, brightness levels, display language, automatically turn on and off, turning on and off the key help screen when first starting the PhotoFrame

6.1 Slideshow Sequence

Slideshows can be played in one of two ways randomly or sequentially.

 
- 1 • Press the **Mode** button to access the **Main Menu**.
 - Press **Up /Down** to Setup and press the **Right , Play/OK** button.
- 2 • Press **Up/Down** to access **Sequence** and press **Right**.
 - Press **Up** and **Down** to select either **Sequential** or **Random**.
 - Press **Play/OK** to confirm.

Press the **Mode or Menu** button to leave this menu and play the slideshow.


6.2 Transition Effects

The photos can appear on the screen using special transitions.

- 1 • Press the **Mode** button to access the **Main Menu**.
 - Press **Up/Down** to Setup and press the **Right , Play/OK** button.

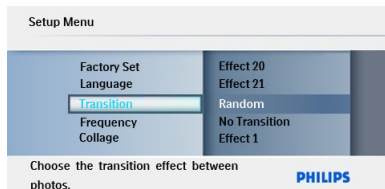

 - 2 • Press **Down** to **Transition** and press **Right**.
 - Press **Up** and **Down** to select from the list as follows: **Random, No Transition, Effect 1, Effect 2, Effect 3 , , Effect 21**.
 - Press **Play/OK** to confirm.

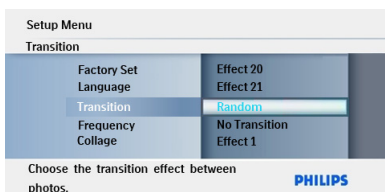

Press **Mode or Menu** to leave this menu and play the slideshow.



Note 1:

This function applies to all the slideshows stored on all media.




Note 2:

Random plays different effects out of sequence during the slideshow transition.

6.3 Frequency


Use this function to select how long each photo is displayed during the slide show.

 - 1 • Press the **Mode** button to access the **Main Menu**.
- Press **Up** to Setup and press the **Play/OK** button.

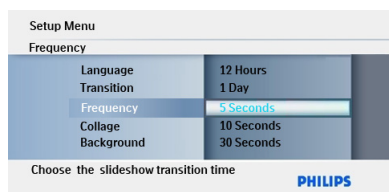

- 2 • Press **Down** to access Frequency and press **Right**.
- Press **Up** and **Down** to select **5 seconds, 10 Seconds, 30 Seconds, 1 Minute, 5 Minutes, 30 Minutes, 1 Hour, 4 Hours, 12 Hours** or **1 Day**.
- Press **Play/OK** to confirm.

Press the **Mode** button to leave this menu and play the slideshow.

 
 **Note:**
This function applies to all the slideshows stored on all media.

6.4 Collage


To show multiple photos arranged on the screen at the same time select collage.




- 1 • Press the **Mode** button to access the **Main Menu**.
- Press **Up/Down** to Setup and press the **Right, Play/OK** button.

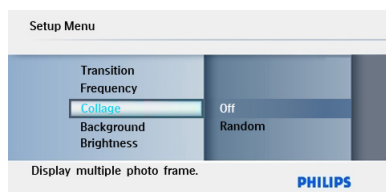

 - 2 • Press **Down** to access **Collage** and press **Right, Play/Ok**
- Press **Up** and **Down** to select **Off** or **Random**.
- Press **Play/OK** to confirm.

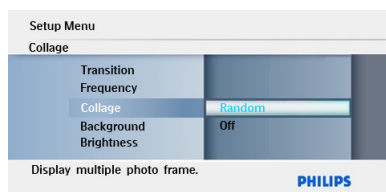


Press the **Mode** or **Menu** button to leave this menu and play the slideshow.

 **Note:**
If you select **random** the PhotoFrame will randomly use different collage layouts.

6.5 Background Color

Use this function to select the background border color for photos that are smaller than the PhotoFrame display (these photos appear with black borders).

 - 1 • Press the **Mode** button to access the **Main Menu**.
- Press **Up/Down** to Setup and press the **Right, Play/OK** button.
- 2 • Press **Down** to access **Background** and press **Right**.
- Press **Up** and **Down** to select **White**, **Black**, **Gray**, **AutoFit** or **RadiantColor**.
- Press **Play/OK** to confirm.

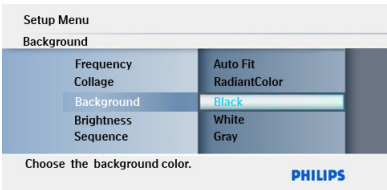

Press the **Mode or Menu** button to leave this menu and play the slideshow.

Radiant Color

 
Perform the RadiantColor to extends photo colors to full screen .




6.6 Brightness

Change the brightness settings of the PhotoFrame to achieve the best visibility depending on the light conditions.

- 1 • Press the **Mode** button to access the **Main Menu**.
- Press **Up/Down** to Setup and press the **Right, Play/OK** button.

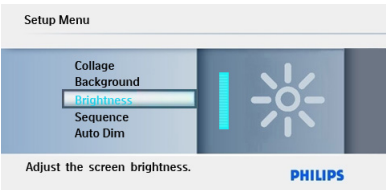

 - 2 • Press **Down** to access **Brightness** and press **Right, Play/Ok**
- Press **Up** and **Down** to select the brightness of the screen from **1 ~ 5**
- Press **Play/OK** to confirm.

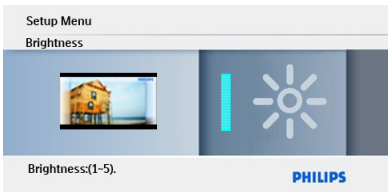


Press the **Mode or Menu** button to leave this menu and play the slideshow.


6.7 Language

Use this section to choose the menu language of the PhotoFrame.

 
- 1 • Press the **Mode** button to access the **Main Menu**.
- Press **Up/Down** to Setup and press the **Play/OK** button.

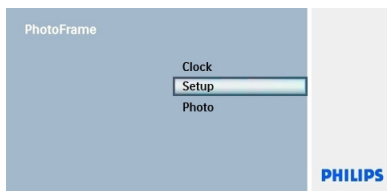

 - 2 Press **Down** to go to **language**.

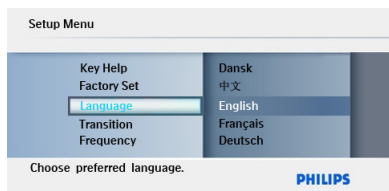

 - 3 • Press **Right** to enter the **Language** menu.
- Press **Up** and **Down** to select your preferred language (select between **English**, **French**, **German**, **Italian**, **Simplified Chinese**, **Spanish**, **Dutch**, and **Danish**).
- Press the **Play/OK** button to confirm your selection. The new setting will be effective immediately.

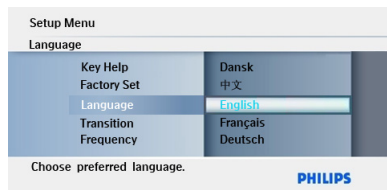

Press the **Mode** button to leave this menu and play the slideshow.

6.8 AutoDim Timer Function

Depending on your lifestyle and schedule, you may want to have the PhotoFrame to automatically turn ON and OFF for you.

 


Note:


Local time must be set correctly before setting up this feature (see time and date section in the setup menu).

Setting the Start and End times


- 1 • Press the **Mode** button to access the **Main Menu**.
- Press **Up** to **Setup** and press the **Play/OK** button.

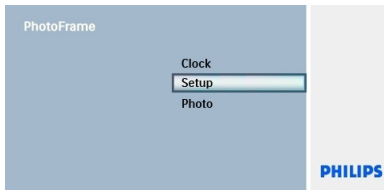


- 2 • Press **Down** to **Auto Dim**.

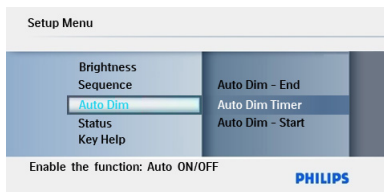 

 - 3 • Press **Right** to select **AutoDim Timer**.
- Press **Up** or **Down** to select either **Auto Dim Start** or **Auto Dim End**.
- Press **Right** or Press **Play/OK**.

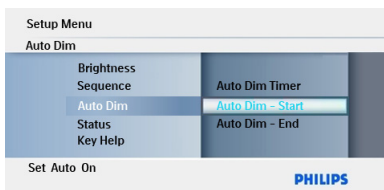


 - 4 • Press **Up** and **Down** to adjust the **hours**.
- Press **Right** to move to **minutes**.
- Press **Up** and **Down** to adjust the **minutes**.
- Press **Play/OK** to apply the settings and return to the previous screen.

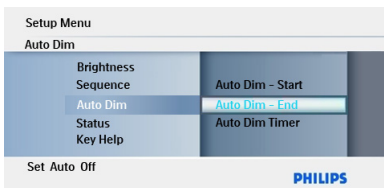


Turning the Automatic start and finish On and Off

 - 1 • Press the **Mode** button to access the **Main Menu**.
- Press **Up** to **Setup** and press the **Play/OK** button.
- 2 • Press **Down** to **Auto Dim**

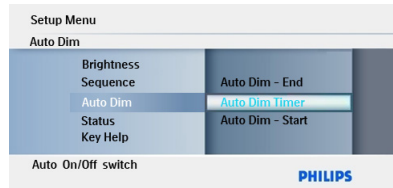

 - 3 • Press **Right** to select **AutoDim Timer**.
- Press **Play/OK** to confirm.
- Navigate **Up** or **Down** to select either **On** or **Off**.
- Press **Play/OK** to apply the settings.

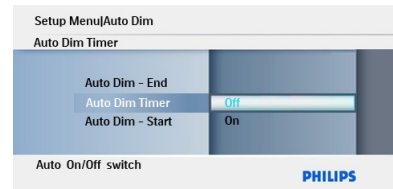

Press the **Mode** button to leave this menu and play the slideshow.

Press the **Play/OK** to Toggle to Slideshow, Browse or Calendar mode.



Note 1:

Digital PhotoFrame will automatically turn off its display exactly at the **Auto-Dim-Start** time; if the time has already passed it will go into **Auto-Dim-End** status at the next set time.




Note 2:

If you want to turn ON the PhotoFrame during an auto OFF period, just press any key, the PhotoFrame will wake up until the next auto OFF period.


6.9 Check the Status of your PhotoFrame

You may check the status of your PhotoFrame how many more photos can be stored, which media are currently connected, and the PhotoFrame software version.

 - 1 • Press the **Mode** button to access the Main Menu.
- Press **Down** to highlight Setup and press **Play/OK**.

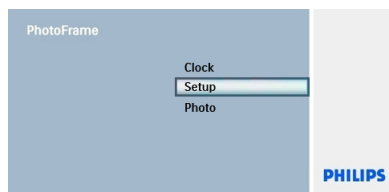

 - 2 • Press **Down** to go to Status.
- The status of the PhotoFrame is shown in the right window.
- If you have a memory card in the PhotoFrame it will give you the status of the card (card type and free memory left).

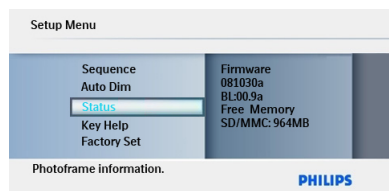


Firmware: (PhotoFrame software version)


6.10 Key Help

When the PhotoFrame first starts a description of the control buttons is displayed for 10 seconds or until the press of any of the buttons. If you would like to turn this function off follow the instructions below.

 - 1 • Press the **Mode** button to access the Main Menu.
- Press **Down** to highlight Setup and press **Play/OK**.

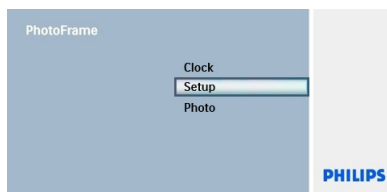

 - 2 • Press **Down** to go to Key Help.
- Press **Right** to go to On or Off.
- Press **Down** and press **Play/OK** to confirm the selection.

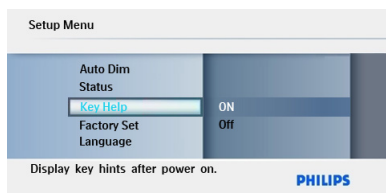

Press the **Mode** button to leave this menu and play the slideshow.

7. Technical data

Model SPF1007

Picture Display

- Effective viewing area: 154 x 86.2 mm
- Resolution: 480x3(RGB) x 234 pixels
- Viewing angle: 120RL, 100UD (CR>/=10)
- Lifetime, to 50% brightness: 20,000 hr
- Brightness: 150
- Aspect ratio: 16:9
- Panel resolution: 480X234
- Pixel density: 0.107(W) x 0.37(H)mm

Storage Media

- Memory Card Types: SD/SDHC/MMC/XD/MSPPro
- USB Pen Drive

Dimensions

- Set dimensions with stand (W x H x D): 209 x 150 x 103 mm
- Weight: 0.324 kg
- Temperature range (operation): 0 °C to 40 °C
- Temperature range (storage): -20 °C to 70 °C

Power

- Power consumption: 5W

Model SPF1007

- Photo format supported: JPEG photo (in DCF structure), Up to 16 Megapixels.
Supported progressive JPEG format picture
Maximum size 800x600.
- Placement supported: Landscape, Portrait,
- Buttons and controls: 7 control key buttons.
1 **Play/Ok** key to play in Slideshow mode, in Browse mode or in Calender mode.
1 key each to go **Up, Down, Right, or Left**.
1 **Mode** key to toggle to Slideshow mode, Thumbnail mode, or Main menu.
1 **Menu** key to toggle photo menu, Slideshow mode (Browse) or toggle to Calendar mode, Clock Menu.

- Playback mode: Full screen browse, Slideshow, Thumbnail browse
- Photo effects: Frames, Zoom and Crop, Rotate.
- Slideshow setting: Collage, Random, Sequential, Transition effects
- Screen background color: Black, White, Gray, RadiantColor and AutoFit.
- Clock function: Set time and date, Clock Auto dim on / off.
- Setup function: Brightness adjustment, Language, Status, AutoDim, Set time and date, Clock /Key help, display enable/disable, Factory setting and Photo source
- System status: Firmware & Bootloader version, Photo source, free memory size.
- OSD Languages: English, French, German, Italian, Simplified Chinese, Spanish, Dutch, Danish
- Regulatory Approvals: CE

8. Frequently asked questions

Is the LCD screen touch-enabled?

The LCD screen is not touch-enabled. Use the buttons on the back to control Digital PhotoFrame.

Can I switch between different slideshows photos by using different memory cards?

Yes. When a memory card is connected to the Digital PhotoFrame, it'll slideshow photos stored on that specific card.

Can I use Digital PhotoFrame to delete photos on memory card?

Yes, it supports operations to delete photos on external devices such as a memory cards.

Can I print photos from Digital PhotoFrame?

No, it does not support direct photo printing.

How does the Digital PhotoFrame show high-resolution 4:3 digital photos on its 16:9 screen?

To ensure high picture integrity, Digital PhotoFrame shrinks the photos at original aspect ratio and trims excessive portions before displaying these photos.

Can I use Digital PhotoFrame during its Auto-off periods?

Yes. Press any control button to bring the system back to ON status.

Why doesn't my Digital PhotoFrame show some of my photos?

Digital cameras take photos and store them in JPEG, GIF, TIFF and BITMAP format according to camera industry standards. Digital PhotoFrame is designed to show photos following the same industry standards. Some images, such as web images, scanned images, or photos in RAW format from professional cameras, are not stored according to camera industry standards and therefore cannot be correctly displayed on Digital PhotoFrame. Use PC applications to convert such images into standard JPEG format for Digital PhotoFrame.

Why doesn't my Digital PhotoFrame go into Auto-off status after I set it?

First, make sure you set Current Time, Auto-off at, and Auto-on at correctly. Digital PhotoFrame will automatically turn off its display exactly at the Auto-off time. If the time has already passed for the day, it will start entering Auto-off status at the specified time from the next day.

Do Philips PhotoFrame support progressive JPEG?

PhotoFrame is supports progressive JPEG formatted picture, maximum size 800x600.

9. Service and Warranty

Recycling Information for Customers

Philips establishes technically and economically viable objectives to optimize the environmental performance of the organization's product, service and activities.

From the planning, design and production stages, Philips emphasizes the important of making products that can easily be recycled. At Philips, end-of-life management primarily entails participation in national take-back initiatives and recycling programs whenever possible, preferably in cooperation with competitors.

There is currently a system of recycling up and running in the European countries, such as The Netherlands, Belgium, Norway, Sweden and Denmark.

Banned Substance Declaration

This product comply with RoHs and Philips BSD (AR17-G04-5010-010) requirements

CE Declaration of Conformity

Philips Consumer Lifestyle declare under our responsibility that the product is in conformity with the following standards

- EN60950:2000 (Safety requirement of Information Technology Equipment)
- EN55022:1998 (Radio Disturbance requirement of Information Technology Equipment)
- EN55024:1998 (Immunity requirement of Information Technology Equipment)
- EN61000-3-2:2000 (Limits for Harmonic Current Emission)
- EN61000-3-3:1995 (Limitation of Voltage Fluctuation and Flicker)
following provisions of directives applicable
- 73/23/EEC (Low Voltage Directive)
- 89/336/EEC (EMC Directive)
- 93/68/EEC (Amendment of EMC and Low Voltage Directive)
and is produced by a manufacturing organization on ISO9000 level.

North Europe Information (Nordic Countries)

VARNING:

FÖRSÄKRA DIG OM ATT HUVUDBRYTARE OCH UTTAG ÄR LÄTÅTKOMLIGA, NÄR DU STÄLLER DIN UTRUSTNING PÅ PLATS.

Placering/Ventilation

ADVARSEL:

SØRG VED PLACERINGSFOR, AT NETLEDNINGENS STIK OG STIKKONTAKT ER NEMT TILGÆNGELIGE.

Paikka/Ilmankierto

VAROITUS:

SIJOITA LAITE SITEN, ETTÄ VERKKOJOHTO VOIDAAN TARVITTAESSA HELPOSTI IRROTAA PISTORASIASTA.

Plassering/Ventilasjon

ADVARSEL:

NÅR DETTE UTSTYRET PLASSERES, MÅ DU PASSE PÅ AT KONTAKTENE FOR STØMTILFØRSEL ER LETTE Å NÅ.

End-of-Life Disposal

- Your new product contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.
- Please find out about the local regulations on how to dispose of your old monitor from your local Philips dealer.

Waste Electronics and Electrical Equipment (WEEE)

This product is labelled with this symbol in accordance with European Directive 2002/96/EC to indicate that it must not be disposed of with your other household waste. Please check your local city office or waste disposal service for the return and recycling of this product.



End of life directives - Recycling

Your new DPF contains several materials that can be recycled for new uses.

Votre nouveau téléviseur contient plusieurs matériaux qui peuvent être recyclés pour de nouvelles utilisations.

Comme tous les produits ACL, cette appareil contenant une petite quantité de mercure, SVP se débarrasser en accord avec les lois fédérales et gouvernementales.



Dear Customer,

Thank you for your confidence in Philips. You have selected one the best-built products available today. In the unlikely case that your product fails to work or in case you need product assistance in general, please do not address this to the Exxon petrol station. Our Philips helpdesk is ready to offer you full professional support.

For Italy: 840 320 086 (€0.08/min)

For German: 01803 386 852 (€0.09/min)

For The Netherlands: 0900 – 8407 (€0.10 ct/min)

For Belgium: 078 250 145

You can also contact your nearest Philips authorized service centers for technical support.

Caro Consumatore,

Grazie per aver scelto Philips. Lei ha acquistato uno dei migliori prodotti attualmente disponibili sul mercato. Nell'eventualità il suo prodotto non funzionasse correttamente o nel caso lei necessiti di alcuni chiarimenti sul funzionamento, la invitiamo a non recarsi presso la stazione di servizio ESSO ma a contattare il nostro Servizio Consumatori al numero:

840 320 086 (costo della chiamata da telefono fisso 0,08 centesimi di euro al minuto)

dove il nostro personale specializzato potrà darle tutto il supporto necessario.

E' anche possibile rivolgersi direttamente presso uno dei nostri Centri di Assistenza Autorizzati, i cui indirizzi sono presenti sul nostro sito internet all'indirizzo: www.philips.it (sezione contatti e assistenza).

Sehr geehrter Philips-Kunde,

Vielen Dank für das Vertrauen in unsere Produkte.

Sie haben mit Ihrer Wahl eines der besten Produkte in dieser Range erworben.

Sollte das Gerät wider erwarten einen Fehler aufweisen, oder haben Sie generell Fragen zum Produkt, kontaktieren Sie bitte unsere Kundenhotline:

In Deutschland 01803 386 852 (€0.09/min)

Bitte wenden Sie sich in diesen Fällen nicht an die Esso-Station bei der Sie das Gerät erworben haben.

Cher Client,

Nous vous remercions pour votre confiance en Philips.

Vous avez choisi pour un des meilleurs produits dans sa catégorie.

Si malheureusement vous devriez rencontrer un problème, ou si vous souhaitez un renseignement concernant cet appareil, nous vous prions de ne pas vous adresser à la station ESSO.

Vous pouvez, dans ce cas, vous adresser à notre ligne d'Assistance Téléphonique.

En Belgique : 078 250 145

Geachte consument,

Hartelijk dank voor uw vertrouwen in Philips.

U bent in het bezit gekomen van een van de beste producten die nu in deze categorie verkrijgbaar zijn.

Mocht zich desondanks een defect voordoen, of heeft u vragen over het apparaat, dan kunt u zich wenden tot onze Consumentenlijn:

In België : 078 250 145

In Nederland: 0900 – 8407 (10 ct/min)

Wij verzoeken u vriendelijk om in deze gevallen niet terug te gaan naar het Esso-station waar u het apparaat heeft aangeschaft.

