




1 Choosing Power Supply


- Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
- OR-
- Open the **battery door** and insert 6 x D batteries (not included).

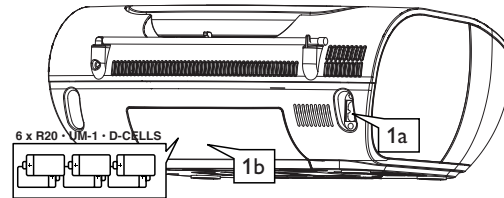

R-20, UM-1 or D-cells
(not included)

2 Listening to the Radio

- Press **SOURCE** repeatedly to select the tuner source.
- Press **PROG** for more than two seconds to program all available stations in order of waveband.
- Press **PRESET/ALBUM +/-** until the desired preset station is displayed.

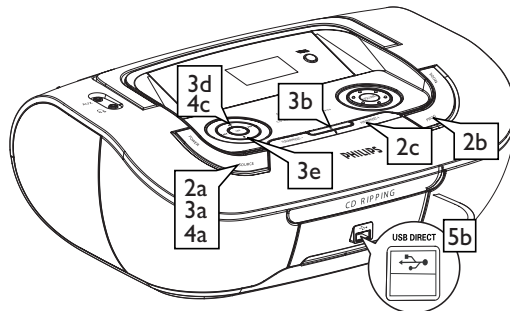

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3-CD and WMA.

- Press **SOURCE** repeatedly to select the **CD**.
- Open the disc door.
- Insert a disc with the printed side facing up and close the door.
- Press **▶II** to start playback.
- To stop disc playback, press **■**.

4 Playing a USB device

- Press **SOURCE** repeatedly to select the **USB**.
- Plug a compatible USB mass storage device to AZ3830's USB port marked .
- Press **▶II** on your AZ3830 to start play.

5 CD ripping

- Follow **steps a-d** from "3 Playing a disc".
- Plug a USB mass storage device.
- To record one**
- Select the track you want to record.
- Press once or repeatedly **USB REC** until "RIPPING ONE" appears, flashing.
- To record all**
- Press repeatedly **USB REC** until "RIPPING ALL" appears, flashing.
- Disc playback will start automatically.



Display

Shows the status of the set

- Press to stop disc/USB playback, or erase a disc program

DBB

Turns the bass enhancement on/off

▶II

Press to start or pause disc/USB playback



3.5mm stereo headphone socket

AUX jack

Connects an external source (3.5 mm socket)

Telescopic antenna

Improves FM reception



- Briefly press to skip to the beginning of the current/previous/ later disc track; During disc playback, press and hold to find a particular passage backward/forward.
- Tunes to a radio station

POWER

powers on/off the system

USB REC

Copy one file or all files of a disc to an external portable USB storage device/MP3 player

VOLUME

Turn to adjust volume level

MODE

Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)

PROG

- Use to program disc tracks and review a disc program.
- auto searches and stores radio stations

Open/close the disc tray

PRESET/ALBUM +/-

- For **MP3-CD/USB/WMA**: Press to select albums
- Select a preset radio station

SOURCE

Selects CD/MP3-CD /WMA, USB mode, Tuner or AUX

USB Port

Connects an external USB mass storage device

Removing the insulation plastic tab