

Quick start guide




Step A *Connect*

Step B *Setup*



Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

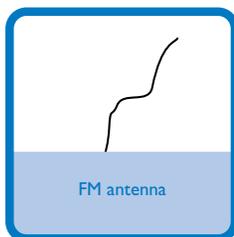

 Pull out the plastic protective sheet before use.

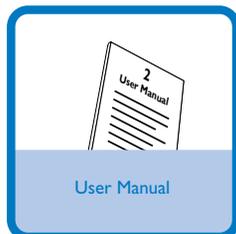

Step A **Connect**

1


Connect the speaker cables.

2

Connect the FM antenna.

3

Connect the power cord of the system.

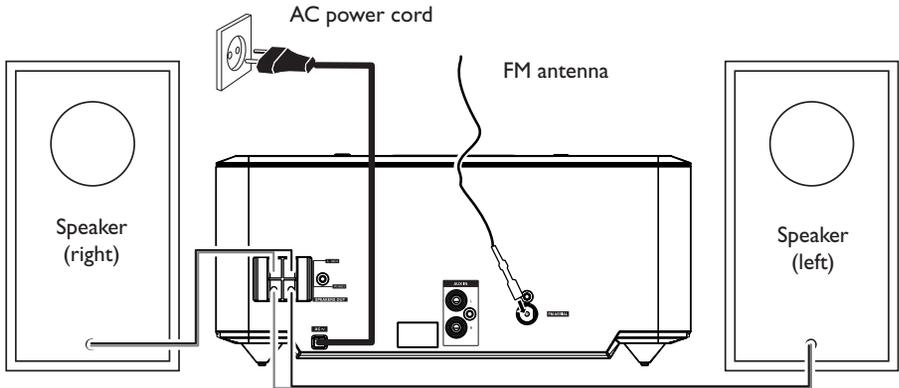

Tip

See the User Manual for how to connect other equipment to this system.

Step B **Setup**

Setting the clock

IMPORTANT!

– To set clock in the Eco Power mode, press and hold ECO POWER/STANDBY-ON  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK** on the remote.

2


When the hour digits flash, turn **VOLUME-/+** on the system or press **VOL+/-** on the remote to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then turn **VOLUME-/+** on the system or press **VOL+/-** on the remote to set the minutes.

4

Press **CLOCK** again to confirm the time setting.

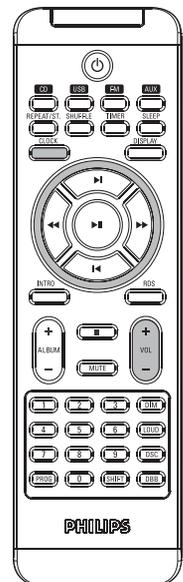

Playing a disc

1 Press **SOURCE** on the system to select DISC or press **CD** on the remote.

2 Press **▲** to open the CD compartment.

3 Insert a disc with the printed side facing up. Press **▲** again to close the compartment.

4 Playback will start automatically. If not press **▶ II**.

5 To stop playback, press **■**.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

1 Insert the USB device's USB plug into the socket  on the set.

2 Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.

3 Play the USB's audio files as you do with the albums/tracks on a CD.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

