

Philips  
CD Soundmachine

Black

AZ102B



## Enjoy music wherever you go

You take pleasure in the simple things in life and delight in convenience. The compact and portable Philips CD soundmachine lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

### Enjoy your music from different sources

- Compatible with CD-Recordable and CD-ReWritable
- FM/MW tuner for radio enjoyment

### Easy to use

- CD Shuffle/Repeat for personalized music enjoyment
- Line-in connection for your portable music playback

### Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS

CD Soundmachine  
Black

# Specifications

## Audio playback

- Playback media: CD, CD-R, CD-RW
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program

## Tuner/Reception/Transmission

- Antenna: FM antenna
- Tuner bands: FM, MW

## Sound

- Output power (RMS): 2 x 1W
- Sound system: stereo
- Speaker diameter: 3"
- Sound enhancement: Dynamic Bass Boost
- Volume control: rotary (analogue)

## Connectivity

- 3.5mm stereo line in



## Power

- Power type: Batteries and AC input
- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 6

## Accessories

- Included accessories: AC Power Cord, User Manual, Warranty Leaflet

 
## Dimensions

- Main unit depth: 245 mm
- Main unit height: 123 mm
- Main unit width: 262 mm
- Packaging depth: 264 mm
- Packaging height: 155 mm
- Packaging width: 284 mm
- Gross weight: 2.1 kg
- Weight: 1.7 kg

AZ102B/79

# Highlights

## FM/MW tuner

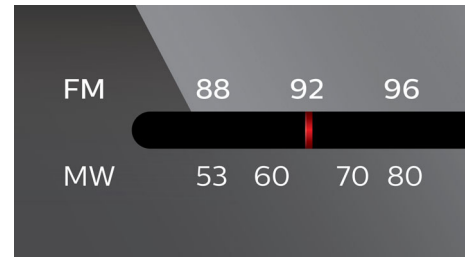


FM/MW (AM) stereo tuner

## Line-in connection

 MP3 line-in connectivity allows direct playback of MP3 content via your audio system. By simply connecting your portable MP3 player to the audio system via its built-in line-in jack, you can enjoy superb sound quality while playing your favorite music from your portable MP3 player.

## CD Shuffle/Repeat

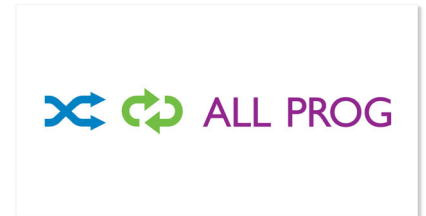

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



Issue date 2015-01-22

Version: 1.0.4

12 NC: 8670 000 76429  
EAN: 87 12581 60344 1

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)