Always there to help you

Register your product and get support at www.philips.com/support



BT5500



User manual



Contents

| 1 | Important | 2 |
|---|---|--------|
| 2 | Your Bluetooth speaker | 3 3 |
| | Introduction | 3 |
| | What's in the box | 3 |
| | Overview of the speaker | 4 |
| 3 | Get started | 5 5 |
| | Power supply | |
| | Turn on | 6 |
| 4 | Use Bluetooth devices | 7 |
| | Connect a device | 7 |
| | Play from Bluetooth device | 8 |
| | Control your phone call | 8 |
| | Disconnect the Bluetooth-enabled device | |
| | Enter Bluetooth pairing mode | 8 |
| | Connect another Bluetooth-enabled | 0 |
| | device | 8 |
| 5 | Other features | 9 |
| | Listen to an external device | 9 |
| | Charge your mobile devices | 9 |
| | Adjust volume | 9 |
| | Reset the speaker | 9 |
| 6 | Product information | 10 |
| | Specifications | 10 |
| 7 | Troubleshooting | 11 |
| | _ | 11 |
| | About Bluetooth device | 11 |
| 8 | Notice | 12 |
| | | 12 |
| | | 12 |
| | Trademark notice | 12 |

1 Important



Warning

- · Never remove the casing of this speaker.
- · Never lubricate any part of this speaker.
- · Never place this speaker on other electrical equipment.
- Keep this speaker away from direct sunlight, naked flames or heat.
- Make sure that you always have easy access to the power cord, plug, or adaptor to disconnect the speaker from the power.
- Make sure that there is enough free space around the speaker for ventilation.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the speaker:
 - Install the batteries correctly, + and as marked on the speaker.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove the batteries when the speaker is not used for a long time.
 - The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Use only power supplies listed in the user manual.
- The speaker shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the speaker (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.



Note

The type plate is located on the bottom of the product.

2 Your Bluetooth speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this speaker, you can

- enjoy audio from your Bluetooth-enabled devices or other external audio devices; and
- charge mobile devices through the micro USB socket.

What's in the box

Check and identify the contents of your package:

- Main unit
- AC/DC adaptor
- Short user manual
- Safety and notice leaflet










Overview of the speaker

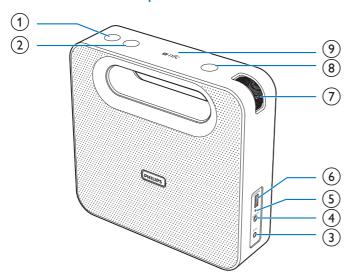

- (1) t
 - Turn the speaker on or off.
- 2 PAIRING
 - Enter Bluetooth pairing mode.
 - Disconnect Bluetooth connection.
- 3 DC IN
 - Connect power.
- 4 AUDIO IN
 - Connect an external audio device.
- S Reset
 - Restore factory default settings.
- 6 CHARGING
 - Charge mobile devices (in AC mode).
- 7 Volume knob
 - Adjust volume.
- (8) (
 - Answer or reject an incoming call.
 - End the current phone call.
 - Transfer the call to your mobile device.

- 9 NFC
 - Connect a device with NFC feature through Bluetooth.

3 Get started

Always follow the instructions in this chapter in sequence.

Power supply

Either AC power or alkaline battery (LR6 AA) can be used as power supply of this product.

Option 1: Battery power



Caution

- Risk of explosion! Keep batteries away from heat, sunshine, or fire. Never discard batteries in fire.
- Batteries contain chemical substances, so they should be disposed of properly.




Note

· Batteries are not supplied with the accessories.

To install the batteries:

1 Unlock the battery compartment as illustrated.

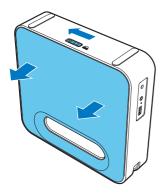

2 Insert 4 AA batteries with correct polarity (+/-) as indicated.



3 Close the battery compartment.

Option 2:AC power




Caution

- Risk of product damage! Make sure that the power voltage corresponds to the voltage printed on the back or underside of the speaker.
- Risk of electric shock! When you unplug the AC adapter, always pull the plug from the socket. Never pull the cord.

Connect the power adaptor to:

- the DC IN socket on the speaker.
- the wall outlet.

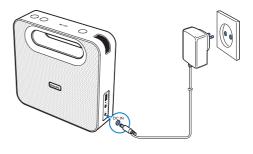

Turn on

Press O.

- → The speaker switches to Bluetooth mode.
- → The LED indicator flashes blue.



Note

• If battery is low, the LED indicator flashes red.

Switch to standby mode

The speaker switches to standby mode in the following situation:

- Press & again;
- The connection with Bluetooth device or other device is invalid for 15 minutes; or
- Music playback is stopped for 15 minutes.

4 Use Bluetooth devices

With this speaker, you can listen to audio from Bluetooth-enabled devices and control the incoming call through Bluetooth.

Connect a device



Note

- Make sure that your Bluetooth device is compatible with this speaker.
- Before pairing a device with this speaker, read its user manual for Bluetooth compatibility.
- The speaker can memorize a maximum of 4 paired devices.
- Make sure that Bluetooth function is enabled on your device, and your device is set as visible to all other Bluetooth devices.
- Any obstacle between this speaker and a Bluetooth device can reduce the operational range.
- Keep away from any other electronic device that may cause interference.

Option 1: Connect a device through NFC

Near Field Communication (NFC) is a technology that enables short-range wireless communication between various NFC compatible devices, such as mobile phones and IC tags.

If your Bluetooth device supports NFC, you can connect it with this speaker easily.

- 1 Enable NFC on your Bluetooth device (refer to its user manual).
- 2 Press \circlearrowleft on this speaker.
 - → The LED indicator flashes blue.
- 3 Tap the NFC tag on the top of the speaker with the NFC area of your Bluetooth device.



- **4** Follow the on-screen instructions to complete the pairing and connection.
 - → After successful pairing and connection, the speaker beeps twice, and the LED indicator turns solid blue.

Option 2: Connect a device manually



Note

- The operational range between this speaker and a Bluetooth device is approximately 10 meters (30 feet).
- **1** Press ഗ.
 - → The LED indicator flashes blue.
- 2 On your Bluetooth device, enable Bluetooth and search for Bluetooth devices that can be paired (see the user manual of the device).
- When [Philips BT5500] is displayed on your device, select it to start pairing and connection. If necessary, input "0000" as the pairing password.
 - → After successful pairing and connection, the speaker beeps twice, and the LED indicator turns solid blue.
 - If you fail to find [Philips BT5500] on your device for pairing, press and hold PAIRING until you hear beep sound, and then try again.

| LED indicator | Description |
|---------------|---------------------------|
| Flashing blue | Connecting or waiting for |
| | connection |
| Solid blue | Connected |

Play from Bluetooth device



Note

 If there is an incoming call on the connected mobile phone, music play pauses.

After successful Bluetooth connection, play audio on the Bluetooth device.

→ Audio streams from your Bluetooth device to the speaker.

Control your phone call

After Bluetooth connection, you can control an incoming call with this speaker.

| Button | Function | |
|--|---|--|
| <u></u> | Press to answer an incoming call. | |
| Press and hold to reject an incorcall. | | |
| | During a call, press to end the current call. | |
| | During a call, press and hold to transfer the call to your mobile device. | |

Disconnect the Bluetoothenabled device

- Press and hold PAIRING for two seconds;
- Disable Bluetooth on your device; or
- Move the device beyond the communication range.
 - → The LED indicator flashes.

Enter Bluetooth pairing mode

Press and hold **PAIRING** for two seconds.

Connect another Bluetoothenabled device

Disable Bluetooth on the current device, and then connect another device.

5 Other features

= Note

• The USB socket is for charging only.


Listen to an external device

With this speaker, you can also listen to an external audio device such as an MP3 player.



Note

- Make sure that music playback through Bluetooth is paused.
- 1 Connect an audio input cable (not supplied) with a 3.5 mm connector on both ends to
 - the AUDIO IN socket on this speaker, and
 - the headphone socket on the external device.

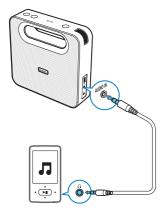

Play audio on the external device (refer to its user manual).

Charge your mobile devices

You can charge your mobile devices through the **CHARGING** socket



In AC power supply mode, connect to your mobile device with a USB cable (not supplied).

→ Once the device is recognized, the charging starts.

Adjust volume

Rotate the volume knob to increase or decrease the volume.

Reset the speaker

If the system works abnormally, reset the speaker to factory default settings.



Press the reset button with the tip of a pen or toothpick.

→ All settings are reset to factory default.

6 Product information



Note

• Product information is subject to change without prior

| Standby Power | < 0.5 W |
|------------------------------|-------------------|
| Consumption | |
| Dimensions - Main | 210 × 201 × 55 mm |
| Unit $(W \times H \times D)$ | |
| Weight - Main Unit | 1,4 kg |

Specifications

| Amplifier | |
|-----------------------|----------|
| Rated Output Power | 10W RMS |
| Signal to Noise Ratio | > 62 dBA |
| AUX Input | 600 mV |

| Bluetooth | |
|--------------------|-------------------|
| Bluetooth Version | V4.0 |
| Supported Profiles | HFP, A2DP, AVRCP |
| Range | 10 m (Free space) |

| General information | | |
|------------------------------|---|--|
| Power Supply | | |
| - AC Power (power adapter) | Brand name: PHILIPS; | |
| | Model:TPA103B- 18120-EU; | |
| | Input: AC100-240 V~, 50/60 Hz, 1.1A MAX; | |
| | Output: DC 12 V == 1.5 A; | |
| - Battery | 4 x 1.5 V LR6 AA Alkaline battery | |
| Charging Voltage and Current | 5 V == 1 A | |
| Operation Power Consumption | AC 18 W | |

7 Troubleshooting



Warning

· Never remove the casing of this device

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

General

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- Insert the batteries with their polarities (+/– signs) aligned as indicated.
- Replace the battery.

No sound or poor sound

- Adjust volume on the product.
- Adjust volume on the connected device.

No response from the speaker

- Disconnect and reconnect the power plug, then turn on the speaker again.
- Press the reset button with the tip of a pen or toothpick to restore factory settings.
- Make sure that AC power is connected properly.
- Make sure that there is power at the AC outlet.

The LED indicator flashes red for 5 times, and the speaker has no response when pressing any key.

 The speaker is in DEMO mode. Press and hold Φ for 15 seconds to exit this mode.

About Bluetooth device

The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.

Cannot connect with the device.

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- This product is already connected with another Bluetooth-enabled device.
 Disconnect that device and then try again.

The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.
- For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.

Notice

Any changes or modifications made to this device that are not expressly approved by Gibson Innovations may void the user's authority to operate the equipment.

Compliance

C€1177

Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.philips.com/ support.

Care of the environment

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU. Inform yourself about the local separate collection system for electrical and electronic products. Follow local rules and never dispose of the product with normal household waste. Correct disposal of old products helps prevent negative consequences for the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Trademark notice

Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Gibson Innovations Limited is under license. Other trademarks and trade names are those of their respective owners.



The 'N' Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.



This is CLASS II apparatus with double insulation, and no protective earth provided.



2015 © Gibson Innovations Limited. All rights reserved.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

