


Quick Start Guide

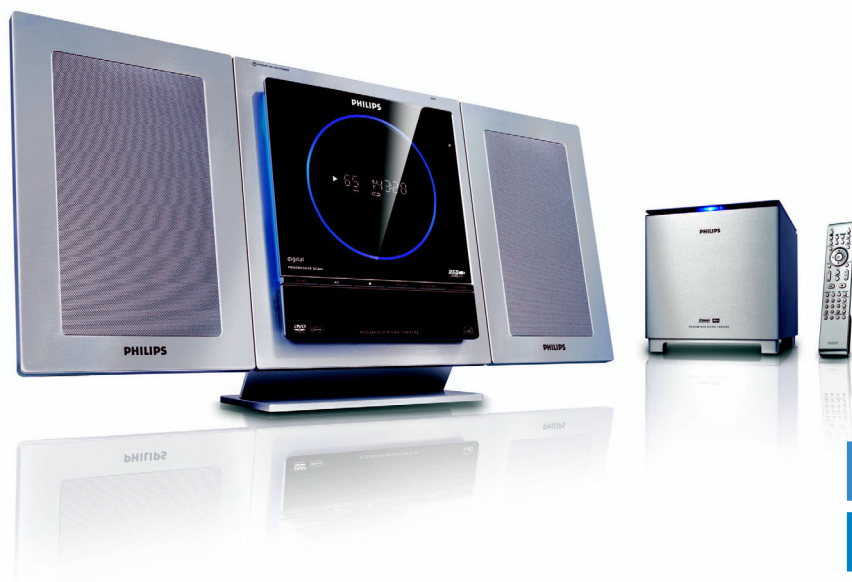


Step A **Connect**

Step B **Setup**

Step C **Enjoy**

What's in the Box?


You should find these items upon opening the box.

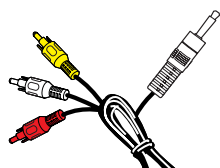



A/V cord (R/W/Y)



15-pin D-Sub cable (with one end fixed on the main set)

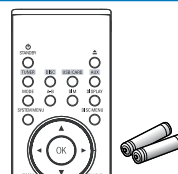

Remote control with two AAA batteries

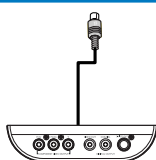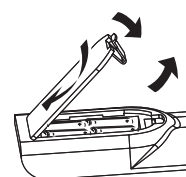

External video box




FM wire antenna




Quick start guide



AC power cord

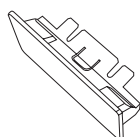

Stand

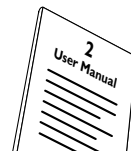

User manual

PHILIPS

Step A Connect

Tips

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.
- Never connect the AC power cord before connection of the 15-pin Sub cable to avoid causing any damage to the set.

1

Connect the speaker (subwoofer) cables.

2


Connect the FM antenna.

3

Connect the A/V cord to a TV.

4

Connect the power cords of the system and TV.

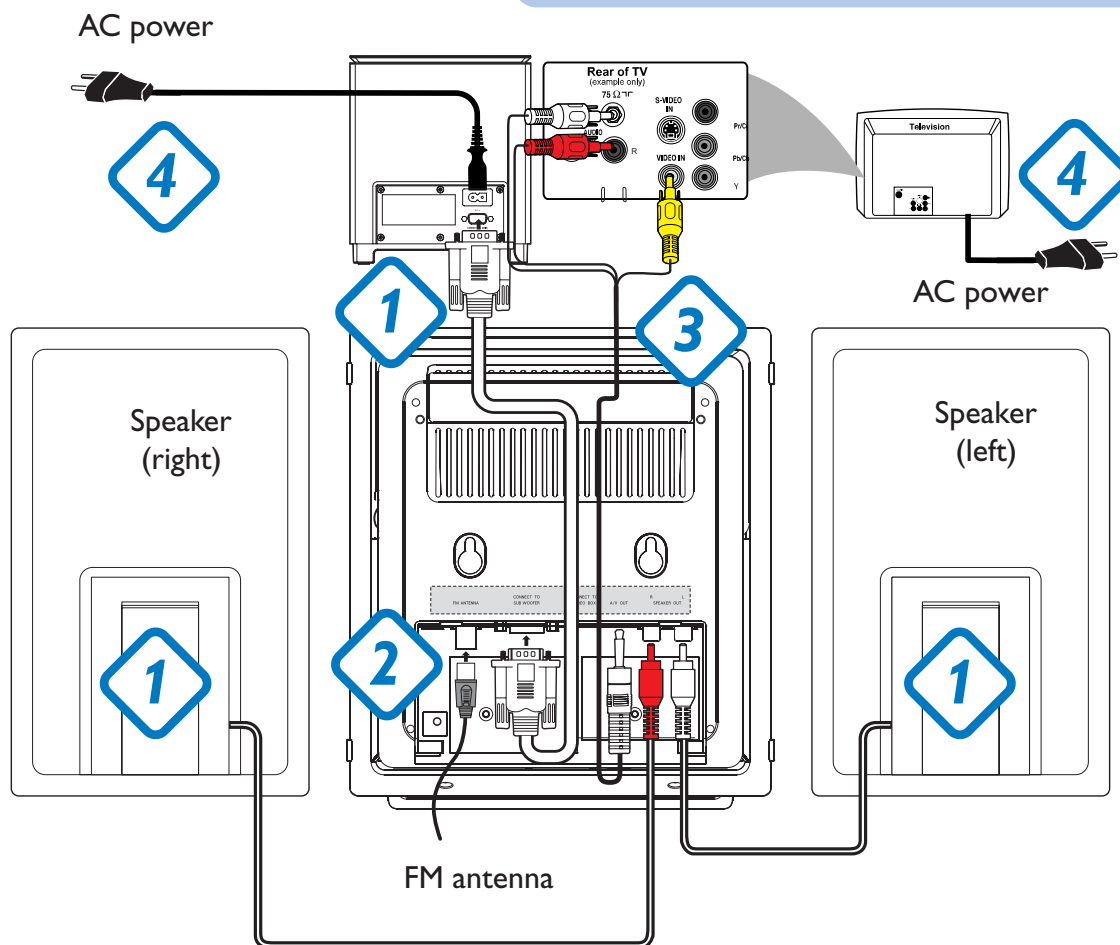

Step B Setup


Setting up the TV

1

Press **SOURCE** (**DISC** on the remote) to select disc source.

2

Turn on the TV and set it to the correct Video In channel.

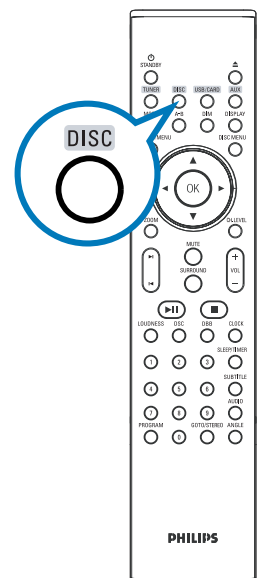

Step B Setup

Setting the clock

1

In standby mode, press and hold **CLOCK** on the remote.

2


When the hour digits flash, press **VOLUME-/+** (**VOL+/-** on the remote) to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then press **VOLUME-/+** (**VOL+/-** on the remote) to set the minutes.

4

Press **CLOCK** again to confirm the time setting.

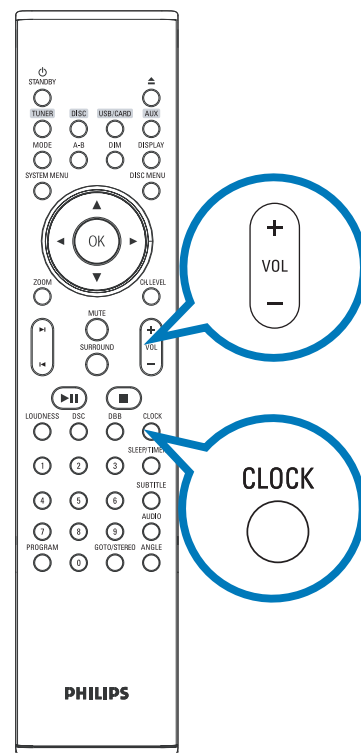

Setting DVD menu options

IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press **SYSTEM MENU** on the remote to exit the system menu and then **DISC** to exit progressive scan.


SYSTEM SETUP	
TV SYSTEM	
SCREEN SAVER	
CLOSED CAPTIONS	
TV TYPE	
PASSWORD	
RATING	
DEFAULT	
DVX(R) VOD	

VIDEO SETUP	
COMPONENT	
TV MODE	
BRIGHTNESS	
CONTRAST	
HUE	
SATURATION	

AUDIO SETUP	
DIGITAL OUT	
DOWNMIX	
3D PROCESSING	
LPCM	
NIGHT MODE	

LANGUAGE SETUP	
OSD LANGUAGE	
AUDIO LANG	
SUBTITLE LANG	
MENU LANG	

Tip
See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

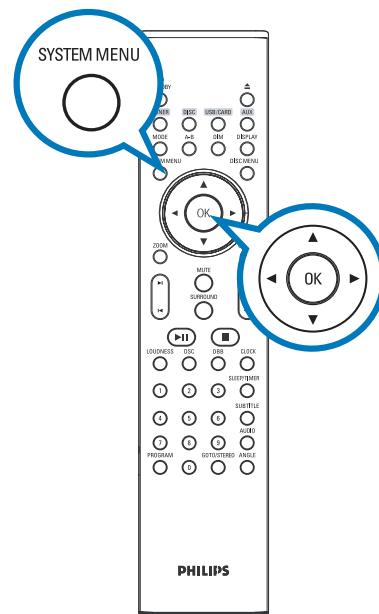


Step C Enjoy

Playing a disc

- 1 Insert a disc into the slot loader.
 - Make sure the label side is facing you.
 - Make sure you have removed any other disc from the slot loader.


- 2 Playback will start automatically. If not press ►||.

- 3 To stop playback, press ■.

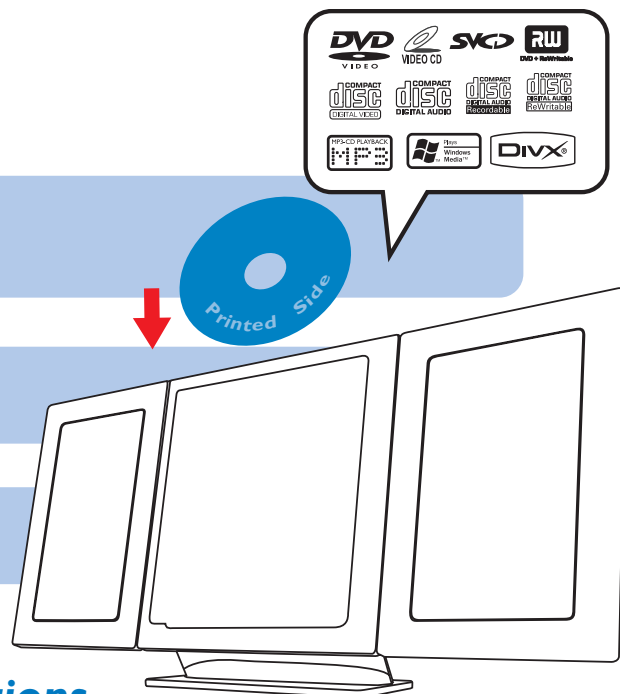


Programming and tuning to radio stations

- 1 Press **SOURCE** (**TUNER** on the remote) to select tuner source.
- 2 Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.
- 3 Press **PRESET** ◀/▶ until the desired preset station is displayed.

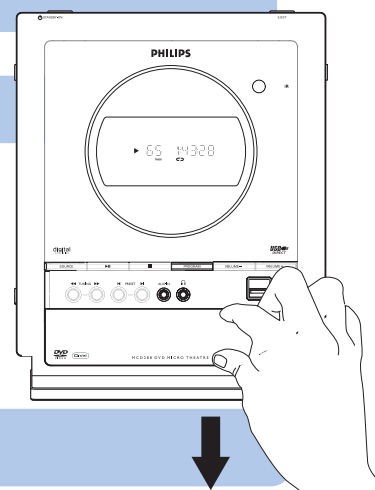

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more to select **USB** (or **USB/CARD** on the remote control).
- 3 Play the USB's audio files as you do with the albums/tracks on a CD,

IMPORTANT!
Slide down to expose some buttons and jacks on the front panel!

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

