Always there to help you

Register your product and get support at www.philips.com/support



BT2600 BT2650B



User manual



Contents

1	Safety	2
2	Your Portable Speaker	3
	Introduction	3 3 3 4
	What's in the box	3
	Overview of the speaker	4
3	Get started	5
	Charge the built-in battery	5 5 5
	Turn on the speaker	5
4	Use Bluetooth devices	6
	Connect a device	6
	Play audio via Bluetooth	7
5	Listen to an external device	8
6	Adjust volume	9
7	Product information	10
	General information	10
	Bluetooth	10
	Amplifier	10
8	Troubleshooting	11
	General	11
	About Bluetooth device	11
9	Notice	12
	Compliance	12
	Care of the environment	12
	Trademark notice	13
	Copyright	13

1 Safety


- Do not use this apparatus near water.
- Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- The product shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the product (e.g. liquid filled objects, lighted candles).
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Batteries contain chemical substances, so they should be disposed of properly.

!

Caution

- Removal of the built-in battery invalidates the warranty and may destroy the product.
- These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Always bring your product to a professional to remove the built-in battery.

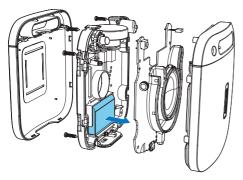

=

Note

 Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.

A

Warning

- · Never remove the casing of this product.
- Never lubricate any part of this product.
- · Never place this product on other electrical equipment.
- Keep this product away from direct sunlight, naked flames or heat.

2 Your Portable Speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this speaker, you can


- listen to audio from an external device via Bluetooth connection.
- listen to audio from an external device through an audio input cable, and
- make phone calls.

What's in the box

Check and identify the contents of your package:

- Main unit
- USB cable
- Short user manual
- Safety sheet

Overview of the speaker

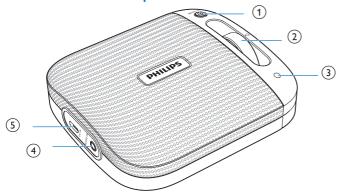

1) 6 /MULTIPAIR

- In Bluetooth mode, press and hold to enter pairing mode.
- Press to answer an incoming call.
- Press to end the current call.
- Press and hold to reject an incoming call.

(2) _(b)

- Turn on or turn off the product.
- Adjust volume.
- (3) Bluetooth and power indicator
- 4 AUDIO IN
 - · Connect external audio devices.
- (5) DC IN
 - Charge the speaker via USB cable.

3 Get started

Always follow the instructions in this chapter in sequence.

Charge the built-in battery

The speaker is powered by a built-in rechargeable battery.



Note

- · Before use, fully charge the built-in battery.
- · The micro USB socket is for charging only.



Connect the USB cable between

- the micro USB socket on the speaker, and
- a USB socket on your computer.

Battery indicator


The LED indicator indicates the battery status.

Indicator	Battery
Solid red	Under charging
Off	Fully charged
Flashing red	Low power

Turn on the speaker

Rotate the $\ensuremath{\mathfrak{O}}$ knob to turn on or turn off the speaker.

- Bluetooth mode(with Bluetooth indicator flashing blue): Listen to an external Bluetooth device through Bluetooth connection.
- **OFF**:Turn off this product.

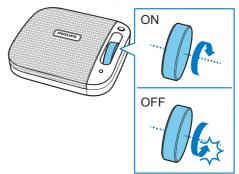

4 Use Bluetooth devices

With this speaker, you can listen to audio from a player and make a call through Bluetooth.



Note

- WOOX Innovations does not guarantee the compatibility with all Bluetooth devices.
- Before pairing a device with this product, read its user manual for Bluetooth compatibility. Make sure that the connected Bluetooth device supports the Advanced Audio Distribution Profile (A2DP) and the Audio Video Remote Control Profile (AVRCP).
- The product can memorize a maximum of 4 paired devices.
- Make sure that Bluetooth function is enabled on your device, and your device is set as visible to all other Bluetooth devices.
- The operational range between this product and a Bluetooth device is approximately 10 meters (30 feet).
- Any obstacle between this product and a Bluetooth device can reduce the operational range.
- Keep away from any other electronic device that may cause interference.

Connect a device

- 2 On your device, search for Bluetooth devices.
- In the device list, select Philips BT2600.
 - If a message prompts for the permission for Bluetooth connection with Philips BT2600, confirm it.
 - If a password is required, enter 0000 and then confirm.
 - → The speaker beeps twice and the Bluetooth indicator turns to solid blue when the Bluetooth connection is successful.

 If you fail to search for Philips BT2600, press and hold 6 /MULTIPAIR to enter pairing mode.

Bluetooth indicator

The LED indicator on the top indicates the status of Bluetooth connection.

Indicator	Bluetooth connection
Flashing blue quickly	Pairing
Flashing blue slowly	Connecting
Solid blue	Connected

Connect two Bluetooth devices simultaneously

You can pair and connect a maximum of two Bluetooth-enabled devices to this product actively at the same time.

- If the speaker is already connected to one device, press and hold 6 /MULTIPAIR to enter pairing mode.
 - → The Bluetooth indicator flashes blue quickly and the speaker beeps once.
 - → The speaker enters pairing mode, and gets ready to pair with a new Bluetooth device.
 - → The previous device is still connected to the speaker.
- If the speaker is connected to two devices at the same time and only one device is playing music, press and hold 6 /MULTIPAIR to enter pairing mode.
 - → The idle device is disconnected.
 - → The Bluetooth indicator flashes blue quickly and the speaker beeps once.
- If the speaker is connected to two devices at the same time and none of them are playing music, press and hold @ /MULTIPAIR to enter pairing mode.
 - → The first connected device is disconnected.

→ The Bluetooth indicator flashes blue quickly and the speaker beeps once.



Note

- If you want to pair a third device, pause the music playback one of the connected device first, then press and hold MULTIPAIR until you hear a single beep to enter pairing mode.
- If there is no Bluetooth connection after 15 minutes, the speaker goes to standby mode automatically for power saving.
- Rotate the O knob to turn on the speaker if the speaker goes to standby mode.

Reconnect a device

- For a paired Bluetooth device on which the automatic reconnection is enabled, this product reconnects with it once it is detected.
- For a paired Bluetooth device that does not support the automatic reconnection, reconnect it with this product manually.

Play audio via Bluetooth



Note

 If there is an incoming call on the connected mobile phone, audio play pauses.

After successful Bluetooth connection, play audio on the Bluetooth device.

→ Audio streams from your Bluetooth device to the speaker

Control your phone call

After Bluetooth connection, you can control an incoming call with this speaker.

	g can with this speaker.
Button	Functions
(0	Press to answer an incoming call.
	During a call, press to end the current call.
	Press and hold to reject an incoming call.
	During a call, press and hold to transfer the phone call to your mobile
	When there is another incoming call during a call, you can • press to end the current call and

answer the another call.

· press twice to reject the another

• press and hold for two seconds to

hang on the current call and answer



Note

You can talk through the microphone of the speaker.

the another call.

 Music play pauses when there is an incoming call, and resumes when your phone call ends.

5 Listen to an external device

You can also listen to an external audio device, for example, MP3 player, through this product.



Note

 
 Make sure that music playback through Bluetooth is stopped.



- 1 Rotate the 4 knob to turn on the speaker.
- 2 Connect an audio input cable with 3.5mm plug on both ends between
 - the AUDIO IN socket on this product, and
 - the headphone socket on the external device.
- Play audio on the external device (refer to its user manual).

6 Adjust volume

Rotate the volume knob to increase or decrease the volume.



7 Product information



• Product information is subject to change without prior

General information		
Power Supply (through USB socket)	5 V === 1 A	
Built-in Battery	Lithium battery (750 mAh, 3.7 V)	
Dimensions - Main Unit $(W \times H \times D)$	107 × 32 × 97 mm	
Weight - Main Unit	0.2 kg	

Bluetooth	
Bluetooth specification	V3.0
Supported profiles	HFP, HSP, A2DP
Range	10 m (Free space)

Amplifier	
Rated Output Power	3.5 W RMS
Signal to Noise Ratio	> 72 dBA
AUDIO IN	650 mV RMS, 22 kOhm

8 Troubleshooting



Warning

· Never remove the casing of this product.

To keep the warranty valid, never try to repair the product yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact the Consumer Care, make sure that the product is nearby and the model number and serial number are available.

General

No power

• Recharge your speaker.

No sound

- Adjust volume on this product.
- Adjust volume on the connected device.
- Make sure that your Bluetooth device is within the effective operational range.

No response from the speaker

Restart the speaker.

About Bluetooth device

The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.

Cannot connect with the device.

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- This product is already connected with another Bluetooth-enabled device.
 Disconnect that device and then try again.

The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.
- For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.

9 Notice

Any changes or modifications made to this device that are not expressly approved by Gibson Innovations may void the user's authority to operate the equipment.

Compliance

C€0890

This product complies with the radio interference requirements of the European Community.

Declaration of conformity

Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.philips.com/support.

Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains a built-in rechargeable battery covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. We strongly advise you to take your product to an official collection point or a Philips service centre to have a professional remove the rechargeable battery.

Inform yourself about the local separate collection system for electrical and electronic products and rechargeable batteries. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Trademark notice

Bluetooth°

The Bluetooth * word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Gibson is under license. Other trademarks and trade names are those of their respective owners.

Copyright

2015 © Gibson Innovations Limited. All rights reserved.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this products.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.



 $2015\ @$ Gibson Innovations Limited. All rights reserved.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

