

Always there to help you

Register your product and get support at
www.philips.com/welcome

SPA4270BT



User manual

PHILIPS

Contents

1	Important	2
	Safety	2
	Notice	4
<hr/>		
2	Your multimedia speaker	5
	Get started	5
<hr/>		
3	Play	6
	Play through Bluetooth	6
	Play through the audio cable	6
	Control Play	7
<hr/>		
4	Product information	8
<hr/>		
5	Troubleshooting	9

1 Important

Safety



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

 
Warning

- To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.
- To completely disconnect the power input, the mains plug of the product shall be disconnected from the mains.
- The mains plug of the product should not be obstructed OR should be easily accessed during intended use.
- No naked flame sources, such as lighted candles, shall be placed on the products.

Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.

- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



AC Polarized Plug

- ⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus,

the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- ⑭ Apparatus shall not be exposed to dripping or splashing.
- ⑮ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑯ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this unit.
- Never lubricate any part of this unit.
- Place this unit on a flat, hard and stable surface.
- Never place this unit on other electrical equipment.
- Keep this unit away from water, moisture and liquid-filled objects.
- Keep this unit away from direct sunlight, naked flames or heat.

Notice for the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.

- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.

Notice for Canada

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES(B)/NMB-3(B)

Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Class II equipment symbol:



CLASS II apparatus with double insulation, and no protective earth provided.

Note

- The type plate is located on the back panel of the right speaker.

2 Your multimedia speaker

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

Installation

- 1 Insert the RCA cable from the left speaker to the **SPEAKER OUT** socket on the right speaker.
- 2 Connect the AC plug to AC power socket.

3 Play

Play through Bluetooth

The multimedia speaker uses Bluetooth wireless technology to stream music from your portable device to the system.

Note

- Your Bluetooth device should be with Bluetooth software of version 2.1 or above.
- Before you connect a Bluetooth device to this multimedia speaker, familiarize yourself with the Bluetooth capabilities of the device.
- Keep this multimedia speaker away from other electronic devices that may cause interference.
- Make sure that the multimedia speaker is installed properly before using.

- 1 On the side panel of the right speaker, rotate the **VOL** knob clockwise.
 - ↳ Bluetooth will be activated automatically.
 - ↳ The LED indicator on the multimedia speaker blinks.
 - To switch off the speaker, rotate the **VOL** knob counter-clockwise, until you hear one click.
- 2 On your Bluetooth device, activate Bluetooth and search for **Philips SPA4270BT**.
 - For the first-time connection, select **Philips SPA4270BT** to start pairing.
 - ↳ For some devices, you may need to input "0000" as pairing password.
 - ↳ If connection is successful, you will hear double beep confirmation.
 - ↳ The LED indicator lights in blue.

- 3 Play audio with the media player of your device.
 - ↳ The audio comes out through the multimedia speaker:
 - ↳ Next time you switch on **Philips SPA4270BT**, the speaker connects to the last paired device automatically.
 - ↳ To connect **Philips SPA4270BT** to another Bluetooth device, switch off Bluetooth on current Bluetooth device.

Tip

- The effective operation range between the multimedia speaker and the paired device is approximately 10 meters (30 feet).
- Any obstacle between the speaker and the device can reduce the operational range.

Play through the audio cable

Note

- Make sure that the multimedia speaker is installed properly before using.

You can also play music from an external audio device, such as a computer, mobile phone, MP3 player, etc.

- 1 Connect the 3.5mm audio in cable (fixed to the **AUX-IN** socket on the right speaker) to the headphone socket on the external device.
 - ↳ **SPA4270BT** exits Bluetooth pairing mode when the audio cable is connected to an external audio device.
- 2 On the side panel of the right speaker, rotate the **VOL** knob clockwise.
 - ↳ The LED indicator on the multimedia speaker turns on stably.
- 3 Play music from the device.
 - After use, rotate the **VOL** knob counter-clockwise to switch off the multimedia speaker and unplug.

Control Play

To increase or decrease volume,

- When the multimedia speaker is turned on, rotate the **VOL** knob on the side panel of the right speaker to adjust the volume.

To adjust bass or treble level,

- Rotate the **BASS** knob on the back panel of the right speaker to adjust the bass.
- Rotate the **TREBLE** knob on the back panel of the right speaker to adjust the treble.

4 Product information

AC power

Input	120V~, 60Hz 150mA
Operation power consumption	15W
Standby power consumption	<1W
Dimensions (W x H x D)	143 x220 x 150 mm
Bluetooth version	V3.0

System Requirements:

PC	Mac
Windows® 98SE, Windows® ME, Windows® 2000, Windows® XP, or Windows® Vista™, Windows 7	Mac OS9/ OS® X, or later

5 Troubleshooting

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the product, check the following points before requesting service. If the problem remains unsolved, register your product and get support at www.philips.com/support.

- Make sure that the speakers are correctly installed.
- Make sure the LED lights up.

P&F USA Inc.
PO Box 2248
Alpharetta, GA 30023-2248
Phone 1 866 309 0845

Meet Philips at the Internet
<http://www.philips.com/welcome>



2014 © WOOX Innovations Limited.

All rights reserved.

This product was brought to the market by WOOX Innovations Limited or one of its affiliates, further referred to in this document as WOOX Innovations, and is the manufacturer of the product. P&F is the warrantor in relation to the product with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.

SPA4270BT_37_UM_V2.0

