

Welcome

Quick start guide



1

Connect

2

Install

3

 
Enjoy

PHILIPS

What's in the box



CD140/CD145
Handset



CD140
Base station
OR



CD145
Base station



Power supply
unit for
base station



Line cord



2 x AAA
Rechargeable
batteries



Quick start guide



CD140 or CD145
User manual



Guarantee

The line adaptor may not be attached to the line cord. You may find the line adaptor in the box. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.



In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

⚠ WARNING Always use the cables and batteries that are supplied with your phone.

1 Connect

Connect the base station


1. Insert the plug of the power cord into the socket under the base station
2. Insert the plug of the line cord into the socket under the base station
3. Connect the other end of the line cord together with the line adaptor if necessary, to the telephone line socket and the other end of the power cable to the electricity socket

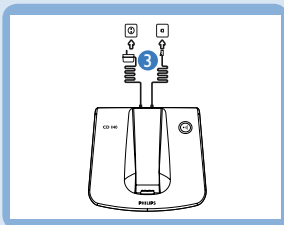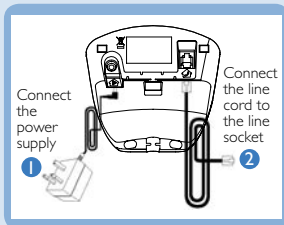

2 Install


Insert rechargeable batteries and charge


 

Insert batteries

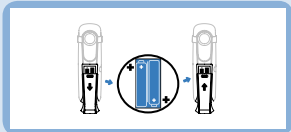

Charge handset for 24 hours




 Configure your phone


1. Press  and the available country code blinks.
2. Press  repeatedly to scroll to your desired country code. (See Country setting table)
3. Press  and your phone is configured according to your selected country code.

3 Enjoy


Make a call

Press  and dial the number

OR

Dial the number and press 




Answer a call

When the phone rings, press .

End a call

Press 

Set time

1. Press 
2. Press 
3. Enter the time (HH-MM) in 24-hour format
4. Press  to save the settings



 
Country setting table

 
Code	Country	* Default outgoing message language	* Outgoing message languages available
01	Germany	German	1 – German 2 – Turkish
02	Austria	German	
03	Turkey	Turkish	
04	UK	English	1 – English
05	Ireland	English	
06	France	French	1 – French 2 – Italian 3 – Portuguese 4 – Greek 5 – Spanish
07	Italy	Italian	
08	Portugal	Portuguese	
09	Greece	Greek	
10	Spain	Spanish	
11-1	Switzerland	German	1 – French 2 – German 3 – Italian 4 – English
11-2	Switzerland	French	
11-3	Switzerland	Italian	
12	France	French	
13	Netherlands	Dutch	1 – Dutch 2 – French 3 – German 4 – English
14-1	Belgium	Dutch	
14-2	Belgium	French	

 
Code	Country	* Default outgoing message language	* Outgoing message languages available
15	Sweden	Swedish	1 – Sweden
16	Norway	Norwegian	2 – Norwegian
17	Finland	Finnish	3 – Finnish
18	Denmark	Danish	4 – Danish
21	Romania	Romanian	1 – Romanian
22	Poland	Polish	2 – Polish
23	Czech	Czech	3 – Czech
24	Hungary	Hungarian	4 – Hungarian
25	Slovakia	Czech	5 – English
26	Slovenia	English	
27	Croatia	German	
28	Bulgaria	English	
29	Serbia	English	
30	Singapore	English	1 – English
31	Indonesia	English	2 – Bahasa
32	Malaysia	English	
35	Australia	English	
36	New Zealand	English	
39	Brazil	Brazilian	1 – Brazilian
40	Mexico	Spanish	2 – Spanish


* This is applicable to CD145 only. For more information about changing the outgoing message languages, see section 5.6.5 of the CD145 user manual.


Listen to new messages recorded on answering machine (applicable to CD145 only)


Press  on the base station to turn on the answering machine, the LED is turned on



Press  again to turn off the answering machine, the LED is turned off


Press  on the base station, playback of the oldest new message will begin

Press  to skip the current message and play the next message

Press  to go back to previous message if it is pressed within one second of current message playback




 


Press  to replay current message if it is pressed after one second of current message playback

Press  to increase or  to decrease speaker volume during message playback






Press  to delete the current message

See CD145 user manual for details about answering machine function






Set the earpiece volume

1. Press 
2. Press  and the current earpiece volume level settings is displayed
3. Press  (**low**),  (**medium**) or  (**high**) to select your desired earpiece volume level
4. Press  to save the settings

Set the ring melody

1. Press 
2. Press  and the current ring melody is played
3. Press one of the digit keys  through  to select your desired ring melody
4. Press  to save the settings

Store a number in the phonebook

1. Press 
2. Press  and memory number 0 is shown
3. Press  repeatedly to select another memory number from 0 through 19
4. Enter the phone number. If you enter the number wrongly, press  to erase a digit
5. Press  to save the number

Troubleshooting

For more information, see the user manual that came with your CD140 or CD145.

Problem

- No dialing tone
- Poor audio quality
- The  icon is blinking
- The handset LCD displays nothing
- Caller Line Identification (CLI) service does not work

Solution

- Check the connections
- Charge the batteries for at least 24 hours
- Use the line cable provided
- Move closer to the base station
- Move the base station at least one metre away from any electrical appliances
- Register the handset to the base station
- Move closer to the base station
- Try again by disconnecting and connecting the base station power supply and follow the procedure to register a handset
- Make sure the two supplied rechargeable batteries have been inserted into the battery compartment
- Make sure the supplied batteries are charged up
- Check your subscription with your network operator

Need help?

User Manual

See the User manual that came with your CD140 or CD145.

Online help

www.philips.com/support