

Portable MP3-CD Player

EXP3373

Meet Philips at the Internet
<http://www.philips.com>

User manual
Manuel d'utilisation
Manual del usuario
Gebruikershandleiding





EXP3373

**CLASS 1
LASER PRODUCT**

PHILIPS




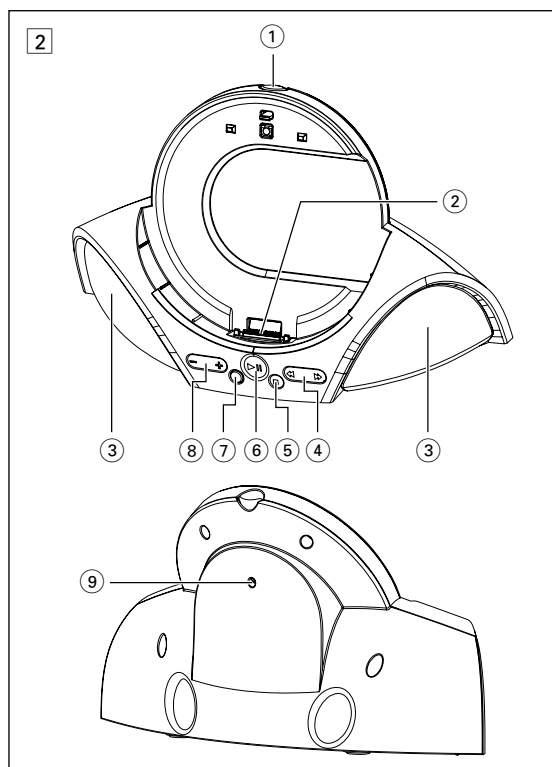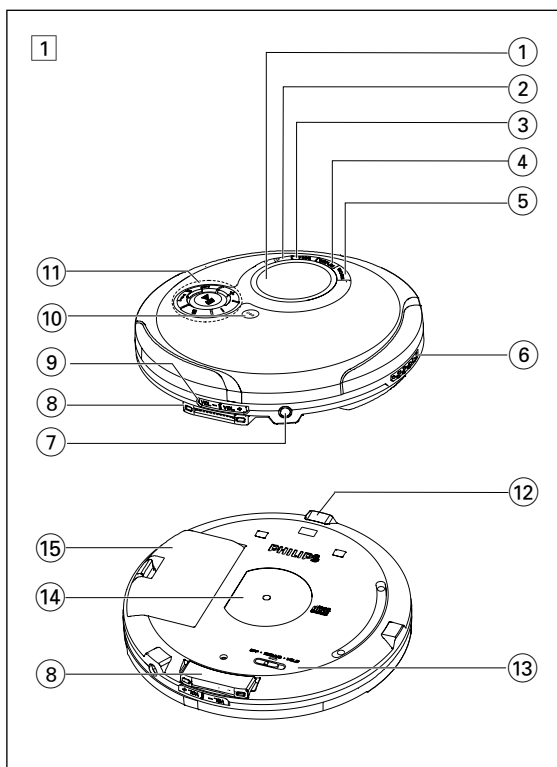



QUICK START

MISE EN SERVICE RAPIDE

1 OPEN

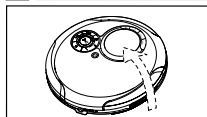


2

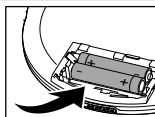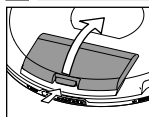

3 CD




4

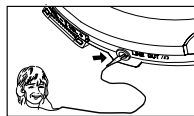




5 OFF-RESUME+HOLD



6 PLAY

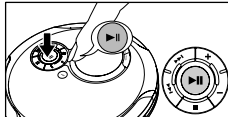

7 VOLUME + -

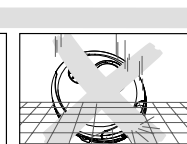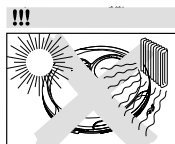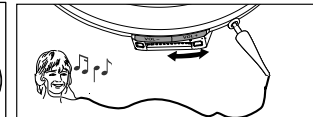

English

CONTROLS

Supplied Accessories:

- 1 x headphones HE225/HE270
- 1 x EXPANIUM CD-ROM (free musicmatch jukebox software)
- 1 x AA battery door
- 2 x Rechargeable ECO-PLUS NiMH batteries AY3363
- 1 x AY3870 SOUND STATION and 1 x AY3195 *(please refer to the SOUND STATION user manual)*

CONTROLS (see figure 1)

- ①display
- ② **ESP** selects between the battery powersave mode and Electronic Skip Protection (**ESP**). ESP prevents playback interruptions caused by shocks.
- ③ **PROG** programs tracks and reviews the program.
- ④ **DISPLAY**MP3/WMA- CD only: selects the track/album information.
- ⑤ **MODE** selects playback options (e.g. **SHUFFLE**, **REPEAT**).
- ⑥ **OPEN ►**opens the CD lid.
- ⑦ **LINE OUT/**3.5mm headphone jack;
jack to connect the player to another audio input of an additional appliance;
- ⑧ **SOUND STATION docking jack**connects to SOUND STATION docking pins *(please refer to the SOUND STATION user manual)*

This set complies with the radio interference requirements of the European Union.

BATTERIES (NOT INCLUDED)

You can use 2 battery sizes with this set:

- alkaline batteries type **AAA** (LR03, UM4) or **AA** (LR6, UM3).


Helpful Hints:

- Use AA batteries to enjoy longer playback time.
- Old and new or different types of batteries should not be combined.
- Remove batteries if they are empty or if the player is not going to be used for a long time.

Batteries contain chemical substances, so they should be disposed of properly.


Inserting AAA (LR03, UM4) or AY 3363 batteries

- 1 Open the battery compartment.
- 2 Insert **AAA** batteries as shown onto the back of the AAA battery door.
- 3 Fit the **AAA** battery-loaded door onto the battery compartment.

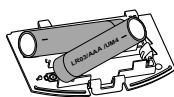

Inserting AA (LR6, UM3) batteries

- 1 Open the battery compartment.
- 2 Insert **AA** batteries as shown into the battery compartment.
- 3 Close the battery compartment with the AA marked door.

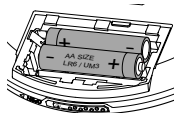

Battery indication

The battery level is shown in the display screen as follows:

- Battery full
- Battery two-thirds full
- Battery one-third full
- Battery dead or empty. When the batteries are dead, flashes, **Pls replace batteries** is displayed and you will hear beep sounds.

CONTROLS

- ⑨ **VOL -/+**adjusts the volume.
- ⑩ **DBB**switches the bass enhancement on/off. When pressed for more than 2 seconds, the button switches audible feedback (beep) on/off.
- ⑪ **►||**switches the player on, starts playback and pauses playback.
-/+MP3/WMA- CD only: selects the next/previous album or skips forward/backward tracks.
◀▶skips and searches tracks backward/forward.
■stops playback/clears programmed tracks/ switches off the set.
- ⑫ **4.5V DC**jack for external power supply.
- ⑬ **OFF**switches RESUME and HOLD off.
RESUMEsaves the last position played.
HOLDlocks all buttons (on the set only)
- ⑭typeplate
- ⑮AA battery door

BATTERIES (not included) / ECO-PLUS NiMH

Average playing time of batteries under normal conditions

Battery type	Power Save	
	Audio CD	MP3-CD/WMA-CD
Alkaline AA	10 hours	20 hours
Alkaline AAA	5 hours	10 hours
Rechargeable	4 hours	6 hours


ECO-PLUS NiMH battery

ECO-PLUS NiMH batteries information (for versions supplied with the rechargeable ECO-PLUS NiMH batteries AY 3363)

Recharging works only on players supplied with the rechargeable ECO-PLUS NiMH batteries AY 3363.

Recharging the ECO-PLUS NiMH battery on board

- 1 Insert the rechargeable ECO-PLUS NiMH battery AY3363 into the CD player.
 - 2 Connect the **AY3195** power adapter to the **DC 8V** jack of the **SOUND STATION** and to the wall outlet.
 - 3 Check that the player is switched off.
 - 4 Hold the player with the display facing forwards, and carefully slot the player onto the **SOUND STATION** *(please refer to MOUNTING THE PLAYER chapter)*.
→ is pulsing and **CHARGING** is displayed.
- Recharging stops after a maximum of 7 hours, or when you start playback.
- 5 When the battery is fully recharged, **Batt. full** appears in the display.

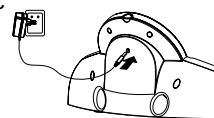

Helpful Hints:

- During recharging, batteries may get warm.

ECO-PLUS NiMH/ POWER ADAPTER

- When the batteries get too warm, recharging will be interrupted for approximately 30 minutes.
- For proper recharging on board, make sure contacts are clean.
- Only use AY 3363 ECO-PLUS NiMH batteries.


Handling instructions

- Recharging charged/half-charged batteries will shorten their service life. We therefore recommend that you run out of the rechargeable ECO-PLUS NiMH batteries before recharging them.
- To avoid short-circuiting, keep the batteries from any metallic object.
- If the battery runs out soon after recharging, either its contacts are dirty or its service life has come to an end.

AY3162 Power adapter (not included)

Only use AY3162 adapter (4.5V/450mA DC, positive pole to the center pin). Any other product may damage the player.

- 1 Make sure local voltage corresponds to the power adapter's voltage.
- 2 Connect the power adapter to the 4.5V DC socket of the player and to the wall socket.

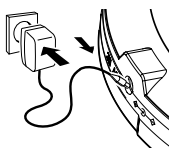

Helpful Hints:

- Always disconnect the adapter when you are not using it.


ENVIRONMENTAL INFORMATION

- All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into two mono materials: cardboard (box) and polyethylene (bags, protective foam sheet).
- Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, dead batteries and old equipment.

SAFETY & MAINTENANCE

CD player, SOUND STATION and CD handling

- Do not touch the lens (A) of the CD player.
- Do not expose the unit, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).
- You can clean the CD player with soft, slightly dampened, lint-free cloth. Do not use any cleaning agent as it may have a corrosive effect.
- To clean the CD, wipe it in a straight line from the center toward the edge using soft, lint-free cloth. The cleaning agent may damage the disc! Never write on a CD or attach a sticker to it.
- The lens may cloud over when the unit is moved suddenly from cold to warm surroundings. In that case, playing a CD is not possible. Leave the CD player in a warm environment until the moisture has evaporated.
- Active mobile phones in the vicinity of the CD player may cause malfunctions.
- Avoid dropping the unit as this may cause damage.

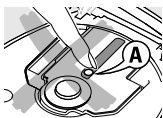

- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles)

ABOUT MP3 / WMA

The music compression technology MP3 (MPEG1 Audio Layer 3) and WMA (Windows Media Audio) significantly reduce the digital data of an audio CD while maintaining CD quality sound.

- **Getting MP3/WMA files:** you can either download legal music files from the internet to your computer hard disc, or create such files by converting audio CD files in your computer through appropriate encoder software. (128kbps bit rate or higher is recommended for MP3 files and 96 kbps bit rate for WMA files.)
- **Creating a MP3/WMA CD:** burn the music files from your computer hard disc on a CDR or CDRW using your CD burner. You can use the by-packed EXPANIUM CD-ROM (free **MusicMatch Jukebox** software) to create your own MP3 CD. For more information, please visit www.musicmatch.com.



Helpful Hints:

 
- Make sure that the file names of the MP3 files end with **.mp3** and WMA files end with **.wma**
- Total number of music files and albums: around 350 (with a typical file name length of 20 characters)
- The length of file names affects the number of tracks for playback. With shorter file names, more files can be burned on a disc.

Windows Media Audio® is a registered trademark of Microsoft Corporation.
Musicmatch Inc.® is a registered trademark of Microsoft Corporation


All trademarks are owned by their respective owners.


HEADPHONE / IN-CAR USE

HEADPHONE HE225/HE270

- Connect the supplied headphones to the LINE OUT /  socket of the player.

Helpful Hints:

- LINE OUT/ can also be used to connect this set with your HiFi system. To adjust the sound and volume, use the controls on the connected audio equipment and the CD player.

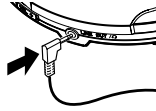

IMPORTANT!

Hearing safety: Do not play your headphones at a high volume. Hearing experts advise that continuous use at a high volume can permanently damage your hearing.


Traffic safety: Do not use headphones while driving a vehicle. It may create hazard and it is illegal in many countries.

IN-CAR USE (connections not included)

Put the set on a horizontal, vibration-free and stable surface. Make sure it is in a safe place, where the set is neither a danger nor an obstacle to the driver and passengers.



PLAYING A CD

This CD player can play all kinds of **Audio Discs** (including CD-Recordables and CD-Rewritables) and **MP3/WMA CDs**. Do not try to play a CD-ROM, CDi, VCD, DVD or computer CDs.


- 1 Push the **OPEN**  slider to open the player.
- 2 Insert an audio CD or a MP3/WMA CD, printed side up, by pressing the CD onto the hub.
- 3 Close the player by pressing the lid down.
- 4 Press **▶||** to switch the player on and start playback.

→ For an audio CD: the current track number, **CDA-Track** and elapsed playing time are displayed.

For a MP/WMA CD: the filename scrolls, current album/track number and elapsed playing time are displayed.

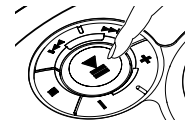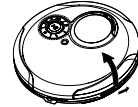


Helpful Hints:

- Track type is indicated by the cursor  at WMA, MP3 and CD respectively.

To pause playback


- Press **▶||**.
→ The elapsed playing time flashes.
- Press **▶||** again to continue playback.

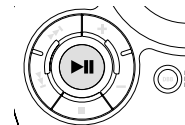

PLAYING A CD, VOLUME AND SOUND

To stop playback

- Press **■**.
→ For an audio CD, the total number of tracks and the total playing time are displayed. For a MP/WMA-CD, the total numbers of tracks and albums are displayed respectively.
- Press **■** again to switch off the player.
- To remove the CD, hold it by its edge and press the hub gently while lifting the CD.

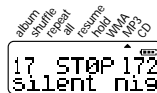

Helpful Hints:

- If there is no activity, the set will automatically switch off after 90 seconds.

Volume adjustment

- Adjust the volume by using **VOL -/+** on the CD player or the slider on your headphone.

Bass adjustment

There are three DBB (Dynamic Bass Boost) options:


- Off: no bass enhancement
- DBB 1** : moderate bass enhancement
- DBB 2** : strong bass enhancement
- Press **DBB** once or more to select your option.
→ **DBB 02** appears if DBB activated.



TRACK AND ALBUM INFORMATION (for MP3/WMA CDs)

During playback, toggle **DISPLAY** to view information about your tracks/albums.

- Press **DISPLAY** once or more to see the following:
 - Album** : the album's folder name,
 - Artist** : the artist's name (if ID3 tag available)
 - Title** : the track title (if ID3 tag available), track type and elapsed playing time.
 - File name** : the track's file name.
- The selected information is shown, along with the current album/track number and elapsed time.

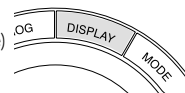

Helpful Hints:

- For audio CDs, (Audio-Track) will be shown when you press **DISPLAY**.
- The ID3 tag is part of a MP3 file. It contains various track information, such as the track's title or the artist's name. Try to get complete ID3 tag information with your encoder software when burning a MP3/WMA-CD.

SELECTING A TRACK AND SEARCHING


Selecting and searching on all discs

Selecting a track during playback

- Briefly press **◀** or **▶** once or several times to skip to the beginning of the current, previous or subsequent track.
→ Playback starts with the selected track.

Searching for a passage during playback

- Press and hold **◀** or **▶** to find a particular passage in a backward or forward direction.
→ Searching starts while playback continues at low volume. After 2 seconds the search speeds up.
→ Release the button when you reach the desired passage.
→ Playback continues from this position.

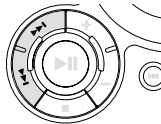

Selecting albums and tracks on MP3/WMA CDs

Selecting an album during playback

- Briefly press **-** or **+** once or several times to skip to the first track of the current, previous or subsequent album.
→ The first track of the selected album plays.

Selecting a track during playback

- Keep **-** or **+** pressed to skip quickly to previous or subsequent MP tracks.
→ Skipping starts and speeds up after 5 seconds.
- Release the button at desired track.
→ Playback continues with the selected track.


Helpful Hints:

- When a program is playing, use of the **-** or **+** keys are void.

PROGRAMMING TRACKS

You can store up to 50 tracks to play in a program. When playing a MP3/WMA-CD, you can select the 50 tracks from different albums. A single track may be stored more than once in the program.

- Stop playback.
→ The total numbers of albums/tracks are displayed (for MP3/WMA CDs only). The total number of tracks and the total playing time are displayed (for an audio CD).
- Select a track by pressing **◀** / **▶** or **-** / **+** (**-** or **+** for MP3/WMA CDs only).
- Press **PROG** to store the track.
→ **Added to Program** appears briefly. **PROG** appears. The track number programmed, as well as **P** plus the total number of stored tracks, are displayed.
- Select and store all desired tracks in this way.
- Press **▶** to start playback of your selected tracks.
→ **prog** is displayed and playback starts.

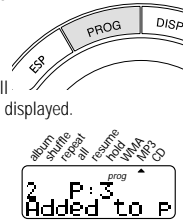

To review the program

- Press **■** to stop the playback.
- Press and hold **PROG** for more than 2 seconds.
→ The display lists all the stored tracks in sequence, and **Program review**.


Helpful Hints:

- select track** appears if you press **PROG** and there is no track selected.
- Program full** appears if you try to store more than 50 tracks.

PROGRAMMING TRACKS, RESUME

To clear the program

- Press **■**:
– Once, if in the stop position
– Twice, during playback.
→ **Program cleared** is displayed and **PROG** disappears.

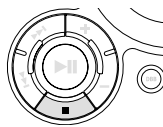

Helpful Hints:


- The program will also be cleared if the power supply is interrupted, or if the player lid is opened, or if the set switches off automatically.

Resume

You can store the last position played. When restarting, playback will continue from where you have stopped (RESUME). Use the OFF-RESUME-HOLD slider for these functions.

RESUME - continuing from where you have stopped

- Switch the slider to **RESUME** during playback to activate **RESUME**.
→ **▲** appears at **resume**.
 - Press **STOP ■** whenever you want to stop playback.
 - Press **▶** whenever you want to resume playback.
→ playback continues from where you have stopped.
- To deactivate **RESUME**, switch the slider to **OFF**.
→ **▲** disappears from **resume**.

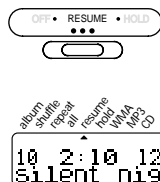


SELECTING DIFFERENT PLAYING POSSIBILITIES – MODE

Your selected play mode is indicated by one or more **▲** cursors.

- Press **MODE** once or more during playback to activate one of the following.

- shuffle**: All tracks of the disc play in random order once.
 - shuffle repeat all**: All tracks of the disc play in random order repeatedly.
 - repeat**: The current track plays repeatedly.
 - repeat all**: All tracks of the disc play repeatedly.
 - album shuffle** (for MP3/WMA CDs only): All tracks of the current album play in random order once.
 - album shuffle repeat all** (for MP3/WMA CDs only): All tracks of the current album play in random order repeatedly.
 - album repeat all** (for MP3/WMA CDs only): All tracks of the current album play repeatedly.
- Playback starts in the selected mode after 2 seconds.

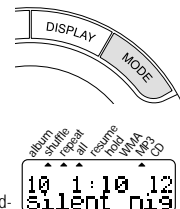


- To return to normal playback, press **MODE** repeatedly until the mode cursors disappear.

ESP, POWER SAVE MODE

With a conventional portable CD player, you might have experienced that music stopped (e.g. when you were jogging). The **Electronic Skip Protection** prevents playback interruption caused by light vibrations and shocks. Continuous playback is ensured. However, ESP does not prevent playback interruptions during vigorous running. **It also does not protect the unit against any damage caused by dropping!**

The power save mode helps to extend battery service life for longer playback.

- Press **ESP** once or twice during playback.
→ **ESP** appears when shock protection is activated
- To deactivate the shock protection and enter the power save mode, press **ESP**.
→ **ESP** disappears and **Power saving** appears.

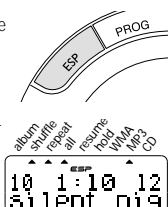

200 SEC MAGIC ELECTRONIC SKIP PROTECTION !

Average playing times when ESP skip protection activated :

Seconds	track type
200	WMA (64kbps)
100	MP3 (128kbps)
45	Audio CD

HOLD, BEEP

HOLD- locking all buttons

This player offers a lock function to prevent buttons from being accidentally pressed and activated. You can choose to lock all buttons on your set! Simply adjust the respective **HOLD** slider to **HOLD** on or off position as desired. For example:

- Switch the **OFF•RESUME•HOLD** slider to **HOLD** to activate HOLD on the set.
→ **▲** appears at **hold**. All buttons are locked and **Hold** is shown when you press any button on the set. If the set is switched off, Hold appears only when **▶II** is pressed.
- To deactivate HOLD, switch the slider to **OFF**
→ All the buttons are unlocked.




Helpful Hints:

- If you deactivate HOLD by switching the slider on the set to RESUME, you will be activating the RESUME function.

Beep

A beep confirms that you have pressed a button or that the batteries are empty.

- Press **DBB** for more than 2 seconds to toggle between either beep on or off.
→ **Beep** appears if beep activated.
→ **No Beep** if beep deactivated.

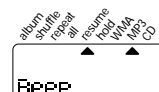

Helpful Hints:

- Beep is on as the default setting.

TROUBLESHOOTING

WARNING: Under no circumstances should you try to repair the set yourself as this will invalidate the warranty. If a fault occurs, first check the points listed before taking the unit for repair. If you are unable to solve a problem by following these hints, consult your dealer or service center.

The CD player has no power, or playback does not start

- Check that your batteries are not empty, that they are inserted correctly, that the contact pins are clean.
- Your adapter connection may be loose. Connect it securely.
- For in-car use, check that the car ignition is on. Also check the player's batteries.

The indication Pls insert CD or No audio file is displayed

- Check that the CD is clean and correctly inserted (label-side upward).
- If your lens have steamed up, wait a few minutes until the lens clear up.
- CD-RW (CD-R) was not recorded properly. Use FINALIZE on your CD-recorder.

The indication Hold is on and/or there is no reaction to controls

- If HOLD is activated, then deactivate it.
- Electrostatic discharge. Disconnect power or remove batteries for a few seconds.

Music files do not play

- Check that the file names of MP3/WMA files end with .mp3 or .wma.

TROUBLESHOOTING

Some directories missing on MP3/WMA CDs

- Check that the total number of files and albums on your MP3/WMA CDs does not exceed 350.
- Only albums with MP3/WMA files are shown.

The CD skips tracks

- The CD is damaged or dirty. Replace or clean the CD.
- Resume, shuffle or program is active. Switch off whichever is on.

Music skips or popping sounds when you play a MP3/WMA track

- Play the music file in your computer. If the problem remains, encode the audio track again and make a new CD.

No sound or bad sound quality

- Playback on pause. Press **▶II**.
- Loose, wrong or dirty connections. Check and clean connections.
- Volume might not be appropriately adjusted. Adjust the volume.
- Strong magnetic fields. Check the player's position and connections. Also keep away from active mobile phones.

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

English

AY 3870 SOUND STATION

The AY3870 SOUND STATION allows you the option of enjoying CD playback through the sophisticated SOUND STATION built-in stereo speakers and AC power supply. Your CD player can operate without batteries when docked onto the SOUND STATION.

Supplied Accessories:

1 x AC-adapter AY3195


CONTROLS (see figure 1)

- ① **EJECT**releases CD player from SOUND STATION.
- ② **Docking pins**.....connects to the SOUND STATION docking jack on your EXPANIUM player.
- ③ **Built-in speakers**
- ④ **SEARCH** << / >> ...skips and searches forward/backward tracks.
- ⑤ **■**.....stops playback/ clears programmed tracks/ switches off CD player.
- ⑥ **▶||**switches the player on, starts playback and interrupts playback.
- ⑦ **Power indicator**lights up when SOUND STATION is connected to AC power supply.
- ⑧ **VOLUME -/+**adjusts the volume.
- ⑨ **DC 8 V**jack for external power supply.

SOUND STATION POWER SUPPLY

Use only the supplied AY3195 adapter (8V/1.2A direct current, positive pole to the center pin). Any other product may damage the SOUND STATION and player.

- 1 Make sure the local voltage corresponds to the power adapter's voltage.
- 2 Connect the power adapter to the **DC 8V** jack of the SOUND STATION and to the wall outlet.
→The **power indicator** lights up.
- 3 To power off your SOUND STATION, disconnect the adapter.
→The **power indicator** goes out.

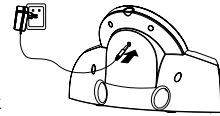


Helpful hints:

- The AY3195 adapter is for use with the SOUND STATION only.
- Always disconnect the adapter when you are not using it.
- When you dock your player, you can also use the SOUND STATION power supply to recharge AY3363 batteries on board the player. Check that the player is switched off as **it is not possible to charge batteries when the player is in use**. For more details, please refer to Recharging ECO-PLUS batteries on board in the player user manual.

The type plate is located on the bottom of the set.

MOUNTING THE PLAYER / PLAYING CD

- 1 Check that the player is switched off.
- 2 Hold the player with the display facing forwards as shown, and carefully slot the player onto the SOUND STATION. Make sure you align the CD player's docking jack to the docking pins.
→ When the player is in place, you will hear a click. If not, press the player gently to secure and click into place, or insert again.

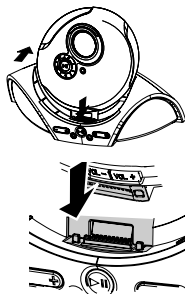

PLAYING CD

The controls on the SOUND STATION have the same functions as those on your CD player.

- You can operate the CD player by using the controls on the SOUND STATION or on the player.



Helpful hints:

- Some of the player's controls are exclusive. Please refer to the CD player, if you cannot find the desired controls on the SOUND STATION.

REMOVING THE PLAYER / TROUBLESHOOTING

Removing the player from the SOUND STATION

- 1 Check that the player is switched off.
- 2 Press the **EJECT** to release the player.
- 3 Remove your player from the SOUND STATION.
- 4 To power off your SOUND STATION, disconnect the adapter.



Helpful hints:

- To prevent damage to your set, always press **EJECT** to release the player BEFORE removing your player.

TROUBLESHOOTING

No sound/ power indication on SOUND STATION.

- Power connection loose. Use only the supplied AY3195 adapter to power the SOUND STATION when docking your CD player and check the AC adapter is correctly connected.
- CD player not securely docked. Press the player gently to secure and click into place, or insert again.
- Docking pins / jack dirty. Gently wipe with a soft, dry lint-free cloth.
- Volume not adjusted. Adjust volume.