

Micro jukebox

EN Quick start guide

FR Guide de démarrage rapide

ES Guía de inicio rápido

HDD1630
HDD1635
HDD1830
HDD1835



GoGear™

PHILIPS

Need help?

Look up our Support Centre website

www.philips.com/support

or

Call our Customer Care helpline in your country

Besoin d'aide ?

Visitez la page Web de notre centre
d'assistance à l'adresse

www.philips.com/support

ou

Appelez le centre client de votre pays

¿Necesita ayuda?

Consulte nuestro sitio Web de Soporte técnico,

www.philips.com/support

o

Llame a nuestra Línea de atención al cliente de su país

Support?

Besuchen Sie unser Support Center auf

 
www.philips.com/support

oder

wenden Sie sich einfach an den telefonischen Kundendienst
Ihres jeweiligen Landes

Country	Helpdesk	Tariff / min	Keep ready
Europe			
Austria	0820 901115	€0.20	Das Kaufdatum, Modellnummer und Serial nummer
Belgium	070 253 010	€0.17	La date d'achat la référence et le numéro de série du produit
Denmark	3525 8761	Lokal tariff	Indkøbsdato, type-, model- og serienummer
Finland	09 2290 1908	Paikallinen hinta	Ostopäivä ja tarkka mallinnumero ja sarjanumero
France	08 9165 0006	€0.23	La date d'achat la référence et le numéro de série du produit
Germany	0180 5 007 532	€0.12	Das Kaufdatum, Modellnummer und Serial nummer
Greek	0 0800 3122 1223	1 αστική μονάδα	Την ημερομηνία αγοράς και τον ακριβή κωδικό μοντέλου και τον αριθμό σειράς του προϊόντος σας
Ireland	01 601 1161	Local tariff	Date of Purchase, Model number and Serial number
Italy	199 404 042	€0.25	La data di acquisto, numero di modello e numero di serie
Luxemburg	26 84 30 00	Tarification locale	La date d'achat, la référence et le numéro de série du produit
Netherlands	0900 0400 063	€0.20	De datum van aankoop, modelnummer en serienummer
Norway	2270 8250	Lokal tariff	Datoen da du kjøpte produktet & modellnummer & serienummeret
Portugal	2 1359 1440	Preço local	A data de compra, número do modelo e número de série
Spain	902 888 785	€0.15	Fecha de compra y número del modelo y número de serie
Sweden	08 632 0016	Lokal kostnad	Inköpsdatum, modellnummer och serienummer
Switzerland	02 2310 2116	Ortstarif	Das Kaufdatum, Modellnummer und Serial nummer
UK	0906 1010 017	£0.15	Date of Purchase, Model number and Serial number
North America			
Canada	1-800-661-6162 (Francophone) 1-888-744-5477 (English / Spanish)	Free	Date of Purchase, Model number and Serial number
USA	1-888-744-5477	Free	Date of Purchase, Model number and Serial number
South America			
Argentina	11 4544 2047	Tarifa local	Fecha de compra y número del modelo y número de serie
Brazil	0800 701 02 03 (Except Sao Paulo) 2121 0203 (Sao Paulo)	Grátis Preço local	A data de compra, número do modelo e número de série
Chile	600 744 5477	Tarifa local	Fecha de compra y número del modelo y número de serie
Mexico	01 800 504 6200	Gratis	Fecha de compra y número del modelo y número de serie
Asia			
China	4008 800 008	本地費率	购买日期、型号及序号
Hong Kong	2619 9663	本地費率	購買日期、型號及序號
Korea	02 709 1200	관세	구매일자, 모델 번호, 시리얼 번호

What's in the box

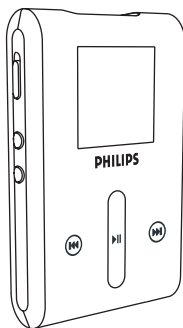

Digital Audio Player



Headphones
(provided with
3 different sizes
of rubber caps)



Combined charger /
USB cable



Protective pouch



For US:
Easy Start CD 1 and 2 with
Windows Media Player, Philips
Device Manager, Philips Device
Plug-in, User manuals, Tutorials
and Frequently Asked Questions



Quick start guide

What else you'll need



Power outlet

 
 


Computer

Computer with:

Windows® XP (SP1 or above)
Pentium Class 300 MHz processor or higher
128 MB RAM
500 MB hard disk space
USB port
Internet connection
Microsoft Internet Explorer 6.0 or later

1 Connect

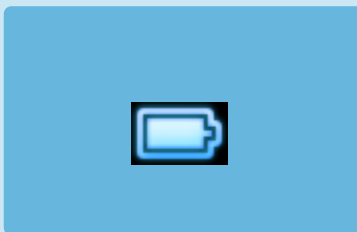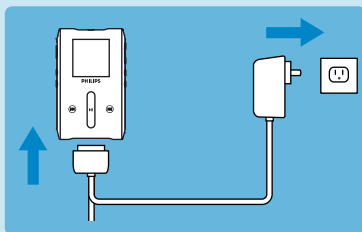

1. Connect the supplied multi-voltage adaptor/charger to your player by plugging it into the DC-In connector at the bottom of the player and then plug the other end into a standard AC outlet.
3. The battery will be fully charged in 4 hours when charging it for the first time, and 70% charged in 1 hour for quick charge.
4. The player is fully charged when the charging animation stops and the above icon is displayed.

 
2 Install

1. Insert the CD supplied with your product into the CD ROM drive of your PC.
2. If the installation program does not start automatically, browse the CD contents via **Windows Explorer** and run the program by double clicking on the file ending with **.exe**. (**Important!** For US: There are 2 CDs and both are required for installation)
3. Follow the onscreen instructions to complete the installation of **Windows Media Player** (including necessary plug-ins) and **Philips Device Manager**.
4. You may need to restart your PC after software installation.


Transfer

Make sure that you have installed the Philips Device Plug-in from the bypacked CD. Without installation of Philips Device Plug-in, your pictures will not be transferred to your player.


1. Connect the player to your computer.
2. Start **Windows Media Player**.
3. If you see this screen, choose **Manual**.
(You can also do an automatic synchronisation. Refer to the user manual on the CD for instructions)

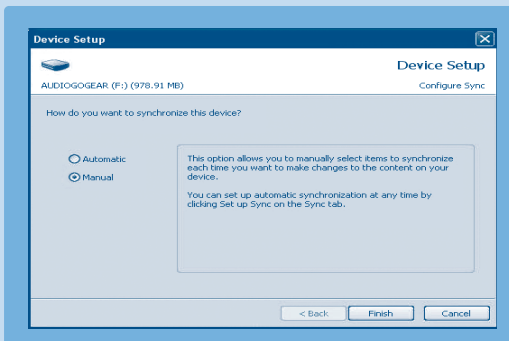

 
4. Select **Sync** tab. In the pull down menu on the right pane, select **Philips** or **Philips GoGear** as the destination. If they are not in the list, click **F5** to refresh and try again.

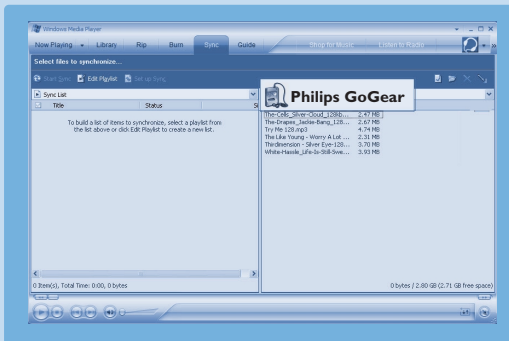

 5. Select **Library** tab to access media library. Click to highlight a song/ picture you want to copy. Right click on the item and select **Add to > Sync List**.

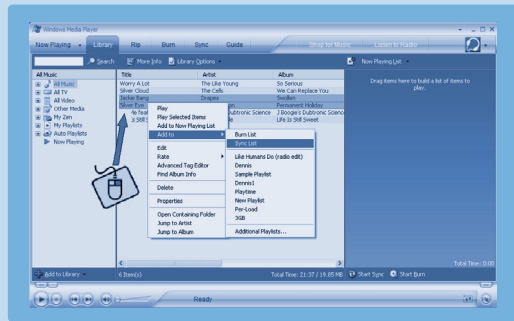

 6. Or drag and drop the song / picture into the **Sync List** on the right pane. Click the **Start Sync** button to start synchronisation. The progress will be displayed.

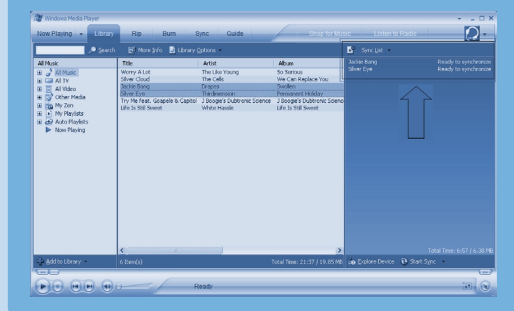


7. When the transfer is finished, you can disconnect your player from the computer.

For more information and tips on transferring music and pictures with **Windows Media Player**, please refer to the user manual on the supplied CD.

3 Enjoy

Power on and play

 
1. To power on, press **POWER** button for 3 seconds until the player resumes to its last state or the PHILIPS screen appears.
2. Use the **VERTICAL TOUCH STRIP** to scroll through the main menu
3. Select **Music, Pictures, Radio, Recordings** or **Settings** by pressing **▶▶**.
4. Use the **VERTICAL TOUCH STRIP** and **◀◀** and **▶▶** buttons to navigate.
5. Once you have found a song or recording you'd like to play, press **▶▶**.

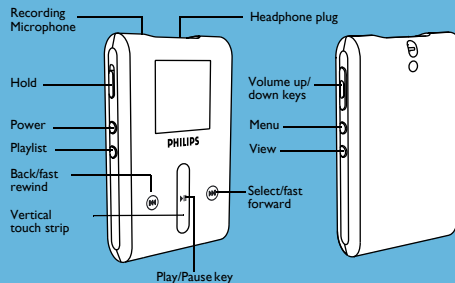

Using the vertical touch strip


Your player has touch sensitive controls that respond to the touch of your fingers. The **VERTICAL TOUCH STRIP** (see picture) is used to scroll through lists. It responds to the following finger movements:

 Tap

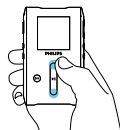


Move up or down step by step

 Hold




Scroll through a list at increasing speed (SuperScroll)

 Stroke



Scroll through list

 Swipe

List will scroll quickly like a wheel
(Fly wheel) and then slow down gradually

Tap in the middle



To stop list from spinning

	To	Do this
General	Power ON / OFF	Push and hold down ON/OFF HOLD slider to ON/OFF position for 3 seconds
	Scroll through list	Use the VERTICAL TOUCH STRIP
	Select	Press ►
	Go back	Press ◀
	Access options menu	Press MENU
Music	Go back to the library to browse	Press ◀
	Play/Pause music	Press ►
	Go to next track	Press ►►
	Go to previous track	Press ◀◀
	Add track to Playlist on the go	Select or play a track, press MENU and select Add to Playlist on the go
	Delete track	Delete track from your player through Windows Media Player. Connect your player to the computer. Select the songs that you would like to delete from your player in the items on device pane. Press Delete key on your computer keyboard.
Pictures	Start a slide show	Press MENU , select Start slide show and press ►
	Stop a slide show	Press ◀
Radio	Auto tuning	Press MENU , select Auto tune and press ►
	Manual tuning	Tap on the bottom or top of VERTICAL TOUCH STRIP to tune step by step
	Search for the previous/ next available station	Press and hold the top/ bottom end of VERTICAL TOUCH STRIP
	Go to the previous/ next preset station	Press ◀◀ or ►►

Trouble shooting

How do I reset my player?

In the unlikely event that your player hangs, do not panic. Simply press and hold **POWER** and **VOLUME +** buttons at the same time. Hold until the player shuts down.

How do I repair my device?

In case of a device error, connect your player to the computer and use **Philips Device Manager** to restore your player.

1. Launch **Philips Device Manager** from **Start > Programs > Philips Device Manager**.
2. Select your device.
3. Select **Repair** tab.
4. Click **Repair**.
5. After the repair process is completed, click **OK** and disconnect your player.
6. Player displays **Updating firmware**.
7. The player is ready for use again after restart.

Need help?

User Manual

Refer to the User Manual on the CD.

Online help

www.usasupport.philips.com

Philips Helpdesk

Country	Helpdesk	Tariff/min	Keep ready
USA	1-888-744-5477	Free	Date of Purchase, Model number and Serial number

Register your product

We strongly recommend that you register your product in order to gain access to free upgrades. To register your product, please log on to www.philips.com/register so that we can inform you as soon as new updates become available.