
PHILIPS


Quick Start Guide



What's in the Box?

You should find these items upon opening the box.

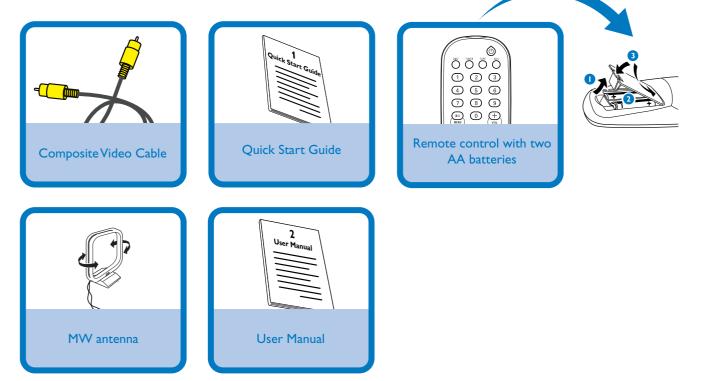

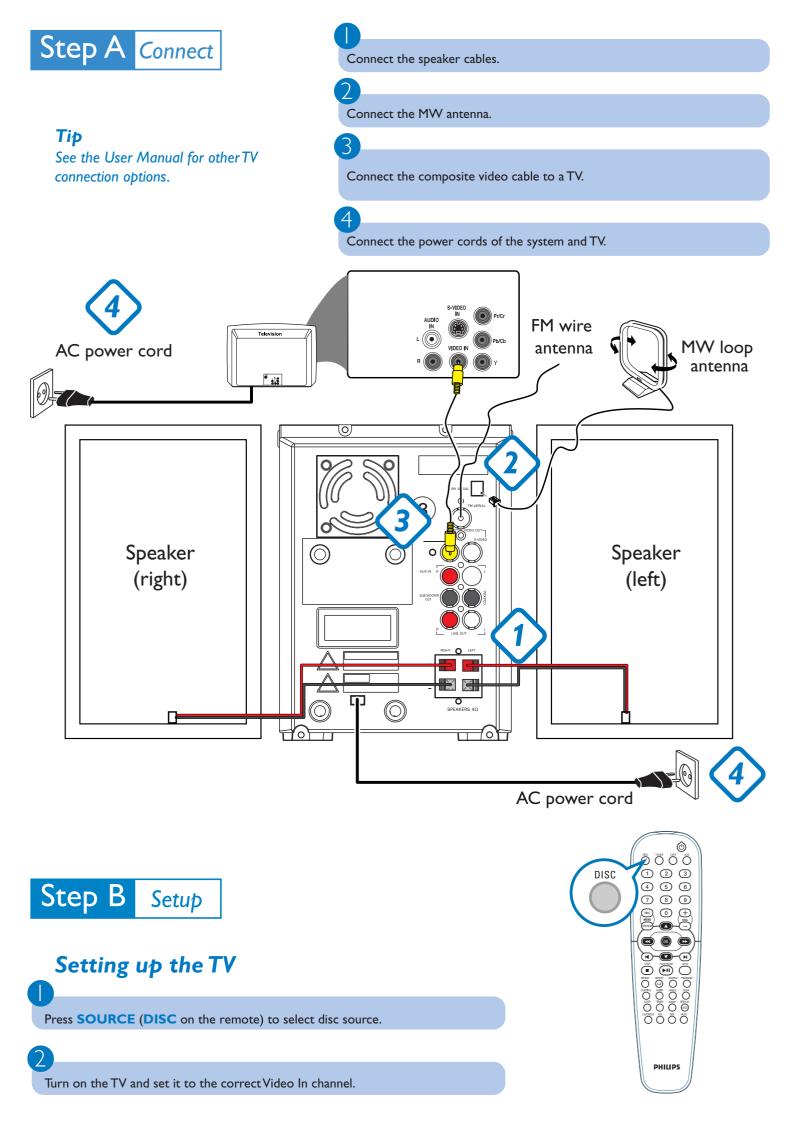



3

4


Setting the clock

In standby mode, press and hold **CLOCK** on the system.

When the hour digits flash, turn the **VOLUME** control on the front panel or press **VOLUME** +/- on the remote to set the hours.

Press **CLOCK** again and the minute digits flash. Then turn the **VOLUME** control on the front panel or press **VOLUME +/-** on the remote to set the minutes.

Press **CLOCK** again to confirm the time setting.

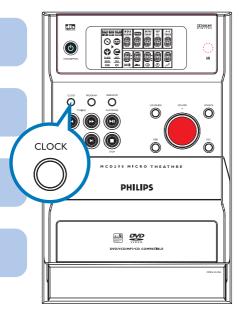

Setting system menu options

SYSTEM SETUP	LANGUAGE SETUP	
TV SYSTEM SCREEN SAVER TV TYPE PASSWORD RATING DEFAULT	OSD LANGUAGE ENGLISH AUDIO LANG CHINESE FRENCH SUBTITLE LANG SPANISH MENU LANG	MENU (5) SYSTEM (2) (2) (3) (4) (5) (7) (8) (8) (1) (9) (1) (10) (1) <t< td=""></t<>
	AUDIO SETUP	
COMPONENT TV MODE BRIGHTNESS CONTRAST HUE SATURATION	DIGITAL OUT DOWNMIX 30 PROCESSING LPCM NIGHT MODE	

Тір

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.



Playing a disc

Press **OPEN**•**CLOSE**▲ to open the disc tray and load in a disc, then press the same button again to close the disc tray.

disc

ISC

A,

0

O

TRA

→ Make sure the label side of the disc is facing up.

Playback will start automatically. If not press **PLAY/PAUSE** ► **II**.

To stop playback, press **STOP** .

3

3

Programming and tuning to radio stations

Press **SOURCE** (**TUNER** on the remote) to select tuner source.

Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.

Press **PRESET** | | | until the desired preset station is displayed.

Тір

Detailed playback features and additional functions are described in the accompany owner's manual.





2005 © Koninklijie Philips Electronics N.V. All rights reserved.