

Register your product and get support at
www.philips.com/welcome

CD560
CD565



Quick Start Guide

 
- 1 Connect
- 2 Install
- 3 Enjoy

PHILIPS

What's in the box



Handset*

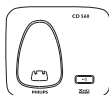

Base station with bracket
for CD560

OR




CD565



Line cord*



 Power adapter**

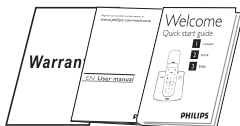

Guarantee, user manual and
quick start guide

Note

- * In multi-handset packs, there are additional handsets, chargers and power adapters.
- ** In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

 
Caution

- Use only the supplied batteries and power adapter.



Connect


Connect the base station

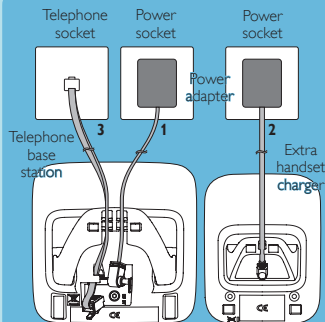

- 1 Connect each end of the power adapter to:
 - the DC input jack at the bottom of the base station;
 - the power socket on the wall.
- 2 Connect each end of the power adapter to (for multi-handset packs):
 - the DC input jack at the bottom of the extra handset charger;
 - the power socket on the wall.
- 3 Connect each end of the line cord to:
 - the telephone socket at the bottom of the base station;
 - the telephone socket on the wall.

2

 Install Install the handset

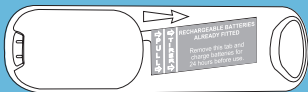


- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 Place the handset on the base station to power up.

Note: Charge the batteries for 16 hours before first use.

For more information on the battery icon status, see the User Manual.

 Check the battery level

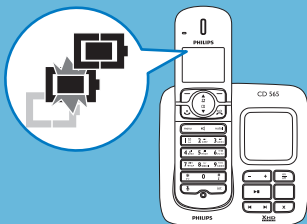

When the handset is off the base station/charger, the icon indicates the battery level:

- Full (steady on)
- Medium (flashing)
- Low (empty)

When you see the empty battery icon and hear an alert tone from the handset, the battery level is low and needs recharging.



- When the handset is on the base station/charger, the battery icon keeps flashing until charging completes.
- When the charging completes, the battery icon keeps steady on.

Configure your phone (if necessary)



- 1 When you see the welcome message, press **[OK]**, select your country, press **[SELECT]** to confirm.
↳ The country setting is saved.
- 2 Set the date and time.
↳ The phone is now ready to use.

3 Enjoy

Make a call

- 1 Press  and dial the phone number; or
- 2 Dial the phone number and press  to dial out the call.



Answer a call

When the phone rings, press  or  to answer the call.

End a call

Press 

Adjust the earpiece volume

Press  or  to adjust the volume during a call.
↳ The adjusted volume level is shown on the screen.


Set the handset's ringtone

- 1 Press menu.
- 2 Select **[PERSONAL SET]** > **[HANDSET TONES]** > **[RING TONES]**, then press **[SELECT]** to confirm.
- 3 Select a ringtone, then press **[SELECT]** to confirm.
↳ The setting is saved.



Add a record

- 1 Press menu.
- 2 Select **[PHONEBOOK]** > **[NEW ENTRY]**, then press **[SELECT]** to confirm.
- 3 Enter the name then press **[OK]** to confirm.
- 4 Enter the number, then press **[SAVE]** to confirm.






View the phonebook

- 1 Press .
- 2 Select a contact and view the available information.

Call from the phonebook

- 1 Press  to access the phonebook.
- 2 Select a contact in the phonebook list.
- 3 Press  to make the call.

Listen to messages recorded on the answering machine (for CD565 only)


- Switch on/off the answering machine: Press $\frac{\text{on}}{\text{off}}$.
- Start/Stop listening to the recorded messages: Press .
- Adjust the volume: Press $+$ / $-$.
- Skip backward:
When you listen to the messages, press  to listen to the message from the beginning.
During the first second of the current message, press  to listen to the previous message.
- Skip forward: Press  to skip to the next message.
- Delete the current message: Press .

Note

- For more information, see the Telephone answering machine section in the user manual.

ECO mode

The **ECO** mode reduces the transmission power of the handset and base station.

- 1 Press **menu**.
- 2 Select **[ADVANCED SET] > [ECO]**, then press **[SELECT]** to confirm.
- 3 Select the new setting, then press **[OK]** to confirm.
 - ↳ The setting is saved.
 - ↳ **ECO** is displayed instead of  in standby mode

Note

- When the **ECO** mode is activated, the connection range between the handset and the base station can be reduced.

Troubleshooting

No dialing tone

- Check your phone connections.
The handset is out of range. Move it closer to the base station.

The signal icon flashes.

- The handset is out of range. Move it closer to the base station.
If the handset displays **[UNREGISTERED]**, register the handset.

The caller ID does not display.

- The service is not activated. Check with your service provider.
The caller's information is withheld or unavailable.
For more information, see the User Manual.

Welcome to Philips

Register your product at www.philips.com/welcome

Need help?

User Manual

Refer to the User Manual that came with your new phone.

Online help

www.philips.com/support

© 2010 Koninklijke Philips Electronics N.V. All rights reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.



Be responsible
Respect copyrights



CE 0168



CD560-565_EN_QSG_V2.2
wk10443