

Register your product and get support at

www.philips.com/support

D6350



Short user manual

PHILIPS



Important safety instructions

Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.
- Refer to safety information before using the product.
- This product complies with European R&TTE directive 1999/5/EC.
- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid hearing damage.

When using the phone as a baby monitor

- Children should be supervised to ensure that they do not play with the appliance.

- Make sure the baby unit and the cord are always out of reach of the baby (at least 1 metre/3 feet away).
- Keep the parent unit at least 1.5 metres/5 feet away from the baby unit to prevent acoustic feedback.
- Never place the baby unit inside the baby's bed or playpen.
- Never cover the parent unit and the baby unit with anything (e.g. a towel or blanket). Always make sure the cooling vents of the baby unit are free.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If you place the parent unit next to a transmitter or other DECT appliance (e.g. a DECT telephone or wireless router for the internet), the connection with the baby unit may be lost. Move the baby monitor further away from the other wireless appliances until the connection is restored.
- This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.

1 Overview

In call

- Phonebook / redial list
- Change the sound profile.
- Adjust the volume.
- Recall (network dependent).
- End calls.
- # a/A Enter a pause (press and hold).
- Turn the speaker on/off.
- Mute/unmute the microphone.

Standby

- Access the main menu.
- Access the redial list.
- Phonebook
- Call log
- Make and receive calls.
- Switch the handset on or off (press and hold).
- *INT Make intercom call (press and hold).
- Lock/unlock the keypad (press and hold).
- Make and receive calls through the speaker.

In menu


- Confirm / Select / Enter the option menu.
- Cancel / back
- Up / down
- Exit menu.

In text input

- Delete text.
- Enter a space.
- # a/A Switch upper/lower case (press and hold).
- Left / right

Main menu icons

- Alarm
- Phonebook
- Services
- Sounds
- Phone setup
- Baby monitor
- Privacy mode
- Answering machine (D635 only)
- Incoming calls (D630 only)

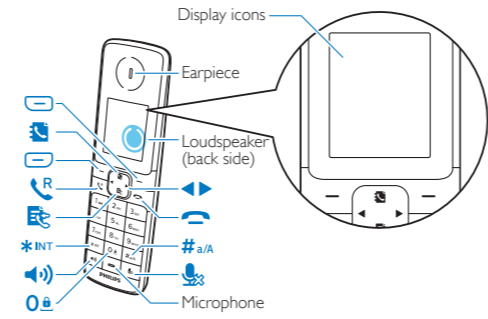


Display icons

- It shows the connection status between the handset and base station. The more bars are shown, the better the signal strength is.
- It remains steadily on when browsing incoming calls in the call log.
- It remains steadily on when browsing outgoing calls in the redial list.
- It flashes when there is a new missed call. It remains steadily on when browsing unread missed calls in call log, or when browsing the read missed calls in call log.
- It remains steadily on when browsing blocked calls in call log.
- It flashes when there is an incoming mobile number.

- It flashes when there is an incoming home number.
- It flashes when there is an incoming office number.
- The speaker is on.
- The ringer is off. The silent mode is set and within active period (the phone does not ring).
- The silent mode is set, but is outside of active period.
- The alarm is activated.
- Voice messages indicator: flashes for new messages, is steady for reviewed messages. * This is network dependent.
- The Eco mode is activated.
- The ECO+ mode is activated.


2

Connect

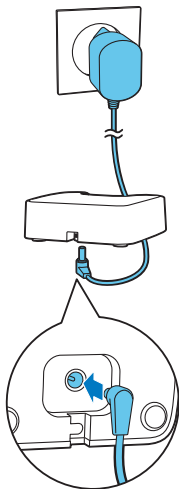



3 Get started

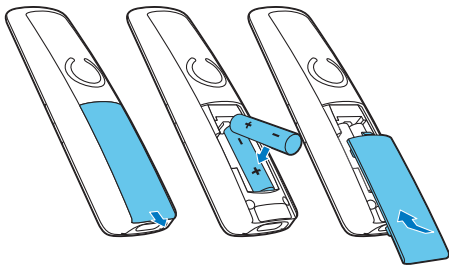
Insert batteries



Configure your phone

- 1 When using your phone for the first time, you see a welcome message (country dependent).
- 2 Register your handset if prompted (see the section on "Register additional handsets").
- 3 Set the date and time.
 - If the time is in 12-hour format, press  /  to select **[am]** or **[pm]** (country dependent).


Charge your phone

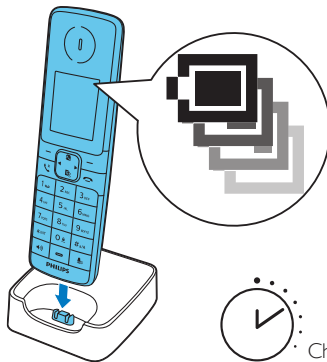

 > 70%

 40% - 70%

 10% - 40%

 Flashing: low battery

 Scrolling: charging in progress



Charge 8 hours

4 Register additional handsets





You can register additional handsets to the base station.

Auto registration

Place the unregistered handset on the base station.

- ↳ The handset detects the base station and registers automatically.
- ↳ Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.

Manual registration

- 1 Press **[Menu]**.
- 2 Press  /  to select  > **[Register]**.
- 3 Press and hold  on the base station for 10 seconds.
- 4 Enter the system PIN/passcode (0000).
- 5 Press **[OK]** to confirm the PIN/passcode.
 - ↳ Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.



Note

- If the PIN/passcode is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.
- The preset PIN/passcode is 0000. No change can be made on it.



Technical data

Battery

Philips: 2 x AAA NiMH 1.2 V Rechargeable 650 mAh batteries

Use only the supplied batteries.

Adapter (Base and charger:)

	Tenpao: S003GB0600050
Input:	100-240 V~, 50/60 Hz 150 mA
Output:	6 Vdc 500 mA

Talk time: 18 hours

Standby time: 250 hours



Note



- You can install a DSL (digital subscriber line) filter to prevent noise and caller ID problems caused by the DSL interference.
- You can find the Declaration of Conformity on www.p4c.philips.com.

? Frequently asked questions






No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[Register your Handset]**, register your handset. (See the section on “Register additional handsets”).

If I fail to pair (register) the additional handsets to the base station, what do I do?

- Your base memory is full. Access  >  > **[Unregister]** to unregister the unused handsets and try again.
- If registration fails, unplug the power adapter from the base station and plug it back. Wait for 15 seconds, and then repeat the registration procedure.

I have chosen a wrong language which I cannot read, what do I do?

- 1 Press  to go back to the standby screen.
- 2 Press  to access the main menu screen.
- 3 Press  /  to select , then you see one of the following texts appear on the screen:

[Language]
[Langue]
[Sprache]
[Lingua]

- 4 Select them to access the language options.
- 5 Select your own language.

My handset is in searching or unavailable status, what do I do?

- Make sure that the base station has power supply.
- Register the handset to the base station.
- Move the handset closer to the base station.

I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

No display

- Make sure the batteries are charged.
- Make sure there are power and phone connections.

The handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones with the same specifications.

Bad audio (crackles, echo, etc.)


- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

The handset does not ring.

Make sure the handset ringtone is turned on.

The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

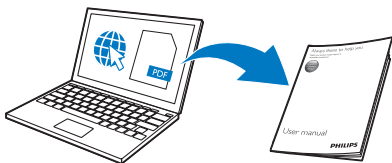

www.philips.com/support

To access the user instructions online, use the reference model number written on the product label at the bottom of the charger.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.

2015 © Gibson Innovations Limited.

All rights reserved.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

CE 0168



UMS_D6350
12_EN_V3.0
WK15403