

DVD VIDEO PLAYER

DVP3020

# User manual

***Thank you for choosing Philips.***

***Need help fast?***

*Read your User's Manual first for quick tips that make using your Philips product more enjoyable.*

*If you have read your instructions and still need assistance, you may access our online help at **[www.philips.com/support](http://www.philips.com/support)***




# PHILIPS

## General Information

### Environmental Information

All unnecessary packaging has been omitted. The packaging has been made easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your DVD player consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

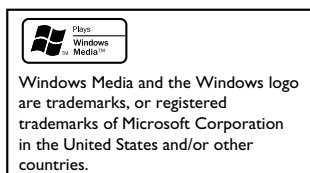

“DTS”, and “DTS Digital Surround” are registered trademarks of Digital Theater Systems, Inc.

### Laser safety

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

**NOTE:**  
**PICTURES SHOWN MAYBE DIFFERENT BETWEEN COUNTRIES.**

**CAUTION**  
**(WARNING LOCATION: ON THE BACKPLATE OF THE SET)**

**NEVER MAKE OR CHANGE CONNECTIONS WITH THE POWER SWITCHED ON.**

**Important Note:**  
***Due to the numerous versions of new CD-Audio copy protection or enhanced CD-Audio protection recently available on certain discs, Philips is unable to guarantee that this DVD Player is fully compatible with such new discs. Should you have difficulty playing any such CD-Audio discs, kindly refer them to your CD-Audio disc retailer.***

# Index


English ..... 6

中文(简体)..... 42

English

中文(简体)

*This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*

  
Manufactured under license from Dolby Laboratories, "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Due to the inconsistency of disc formats provided by various disc manufacturers, your DVD system may require a playability enhancement or upgrade. As DVD technology advances, these enhancements will become common and will be easy to complete.  
**Go to [www.philips.com/support](http://www.philips.com/support) for software upgrade.**

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on apparatus.

*Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.*

**For Customer Use:**

Read carefully the information located at the rear of your DVD VIDEO player and enter below the Serial No. Retain this information for future reference.

Model No. DVP 3020  
Serial No. \_\_\_\_\_

| <b>LASER</b>    |                                 |
|-----------------|---------------------------------|
| Type            | Semiconductor laser<br>GaAlAs   |
| Wave length     | 650 nm (DVD)<br>780 nm (VCD/CD) |
| Output Power    | 7 mW (DVD)<br>10 mW (VCD/CD)    |
| Beam divergence | 60 degree                       |

## Language Code

|                             |      |                             |      |                       |      |
|-----------------------------|------|-----------------------------|------|-----------------------|------|
| Abkhazian                   | 6566 | Inupiaq                     | 7375 | Pushto                | 8083 |
| Afar                        | 6565 | Irish                       | 7165 | Russian               | 8285 |
| Afrikaans                   | 6570 | Íslenska                    | 7383 | Quechua               | 8185 |
| Amharic                     | 6577 | Italiano                    | 7384 | Raeto-Romance         | 8277 |
| Arabic                      | 6582 | Ivrit                       | 7269 | Romanian              | 8279 |
| Armenian                    | 7289 | Japanese                    | 7465 | Rundi                 | 8278 |
| Assamese                    | 6583 | Javanese                    | 7486 | Samoan                | 8377 |
| Avestan                     | 6569 | Kalaallisut                 | 7576 | Sango                 | 8371 |
| Aymara                      | 6589 | Kannada                     | 7578 | Sanskrit              | 8365 |
| Azerhijani                  | 6590 | Kashmiri                    | 7583 | Sardinian             | 8367 |
| Bahasa Melayu               | 7783 | Kazakh                      | 7575 | Serbian               | 8382 |
| Bashkir                     | 6665 | Kernewek                    | 7587 | Shona                 | 8378 |
| Belarusian                  | 6669 | Khmer                       | 7577 | Shqip                 | 8381 |
| Bengali                     | 6678 | Kinyarwanda                 | 8287 | Sindhi                | 8368 |
| Bihari                      | 6672 | Kirghiz                     | 7589 | Sinhalese             | 8373 |
| Bislama                     | 6673 | Komi                        | 7586 | Slovensky             | 8373 |
| Bokmål, Norwegian           | 7866 | Korean                      | 7579 | Slovenian             | 8376 |
| Bosanski                    | 6683 | Kuanyama; Kwanyama          | 7574 | Somali                | 8379 |
| Brezhoneg                   | 6682 | Kurdish                     | 7585 | Sotho; Southern       | 8384 |
| Bulgarian                   | 6671 | Lao                         | 7679 | South Ndebele         | 7882 |
| Burmese                     | 7789 | Latina                      | 7665 | Sundanese             | 8385 |
| Castellano, Español         | 6983 | Latvian                     | 7686 | Suomi                 | 7073 |
| Catalán                     | 6765 | Letzeburgesch;              | 7666 | Swahili               | 8387 |
| Chamorro                    | 6772 | Limburch; Limburger         | 7673 | Swati                 | 8383 |
| Chechen                     | 6769 | Lingala                     | 7678 | Svenska               | 8386 |
| Chewa; Chichewa; Nyanja     | 7889 | Lithuanian                  | 7684 | Tagalog               | 8476 |
| 中文                          | 9072 | Luxembourgish;              | 7666 | Tahitian              | 8489 |
| Chuang; Zhuang              | 9065 | Macedonian                  | 7775 | Tajik                 | 8471 |
| Church Slav; Slavonic       | 6785 | Malagasy                    | 7771 | Tamil                 | 8465 |
| Chuvash                     | 6786 | Magyar                      | 7285 | Tatar                 | 8484 |
| Corsican                    | 6779 | Malayalam                   | 7776 | Telugu                | 8469 |
| Česky                       | 6783 | Maltese                     | 7784 | Thai                  | 8472 |
| Dansk                       | 6865 | Manx                        | 7186 | Tibetan               | 6679 |
| Deutsch                     | 6869 | Maori                       | 7773 | Tigrinya              | 8473 |
| Dzongkha                    | 6890 | Marathi                     | 7782 | Tonga (Tonga Islands) | 8479 |
| English                     | 6978 | Marshallese                 | 7772 | Tsonga                | 8483 |
| Esperanto                   | 6979 | Moldavian                   | 7779 | Tswana                | 8478 |
| Estonian                    | 6984 | Mongolian                   | 7778 | Türkçe                | 8482 |
| Euskara                     | 6985 | Nauru                       | 7865 | Türkmen               | 8475 |
| Ελληνικά                    | 6976 | Navaho; Navajo              | 7886 | Twi                   | 8487 |
| Faroese                     | 7079 | Ndebele, North              | 7868 | Uighur                | 8571 |
| Français                    | 7082 | Ndebele, South              | 7882 | Ukrainian             | 8575 |
| Frysk                       | 7089 | Ndonga                      | 7871 | Urdu                  | 8582 |
| Fijian                      | 7074 | Nederlands                  | 7876 | Uzbek                 | 8590 |
| Gaelic; Scottish Gaelic     | 7168 | Nepali                      | 7869 | Vietnamese            | 8673 |
| Gallegan                    | 7176 | Norsk                       | 7879 | Volapuk               | 8679 |
| Georgian                    | 7565 | Northern Sami               | 8369 | Walloon               | 8765 |
| Gikuyu; Kikuyu              | 7573 | North Ndebele               | 7868 | Welsh                 | 6789 |
| Guarani                     | 7178 | Norwegian Nynorsk;          | 7878 | Wolof                 | 8779 |
| Gujarati                    | 7185 | Occitan; Provençal          | 7967 | Xhosa                 | 8872 |
| Hausa                       | 7265 | Old Bulgarian; Old Slavonic | 6785 | Yiddish               | 8973 |
| Herero                      | 7290 | Oriya                       | 7982 | Yoruba                | 8979 |
| Hindi                       | 7273 | Oromo                       | 7977 | Zulu                  | 9085 |
| Hiri Motu                   | 7279 | Ossetian; Ossetic           | 7983 |                       |      |
| Hrvatski                    | 6779 | Pali                        | 8073 |                       |      |
| Ido                         | 7379 | Panjabi                     | 8065 |                       |      |
| Interlingua (International) | 7365 | Persian                     | 7065 |                       |      |
| Interlingue                 | 7365 | Polski                      | 8076 |                       |      |
| Inuktitut                   | 7385 | Português                   | 8084 |                       |      |

## Contents

|  |       |
|--|-------|
| <b>Language</b> .....  | 5     |
| <b>Introduction</b>  |       |
| Supplied accessories .....   | 8     |
| Cleaning discs .....   | 8     |
| Setup .....  | 8     |
| <b>Connections</b>   |       |
| Connecting TV .....  | 9-10  |
| Using Composite Video jacks (CVBS) .....                                 | 9     |
| Using Component Video jacks (Pr Pb Y) ...                                | 9     |
| Using an accessory RF modulator .....                                    | 10    |
| Connecting the power cord .....  | 10    |
| Optional : Optional: Connecting to a Multi-channel Receiver .....        | 11    |
| Receiver has a Dolby Digital or DTS decoder .....                        | 11    |
| Optional : Connecting to a Stereo System ..                              | 11    |
| Stereo system has Dolby Pro Logic or Right / Left Audio In jack .....    | 11    |
| Optional: Connecting Digital AV Receiver ...                             | 12    |
| Receiver has a PCM, Dolby Digital, or MPEG2 decoder .....                | 12    |
| <b>Functional Overview</b>   |       |
| Front and Rear Panels .....  | 13    |
| Remote Control .....   | 14    |
| <b>Getting Started</b>   |       |
| Step 1: Inserting batteries into the Remote Control .....                | 15    |
| Using the Remote Control to operate the Player .....                     | 15    |
| Step 2: Setting up the TV .....  | 15-17 |
| Setting up Progressive Scan feature (for Progressive Scan TV only) ..... | 16    |
| Selecting the colour system that corresponds to your TV .....            | 17    |
| Step 3: Setting language preference .....                                | 18    |
| Setting the OSD Language .....   | 18    |
| Setting the Audio, Subtitle and Disc menu language .....                 | 18    |
| <b>Disc Operations</b>   |       |
| Playable Discs .....   | 19    |
| Region Codes .....   | 19    |
| Playing discs .....  | 20    |
| Basic playback controls .....  | 20    |
| Selecting various repeat/shuffle functions                               | 21    |
| Repeat play mode .....   | 21    |
| Repeating a section within a chapter/track ..                            | 21    |
| Operations for video playback .....                                      | 22    |
| Using the Disc Menu .....  | 22    |
| Zooming in .....   | 22    |
| Resuming playback from the last stopped point .....                      | 22    |
| Slow motion .....  | 22    |
| Forward / Reverse Searching .....  | 22    |
| OSD (On-Screen Display) (DVD/VCD/ SVCD) .....                            | 23-24 |
| Using the OSD menu .....   | 23    |
| Title/Chapter/Track selection .....                                      | 23    |
| Time Search .....  | 23    |
| Audio/Subtitle .....   | 24    |
| Angle .....  | 24    |
| Preview Function .....   | 24    |
| Special DVD features .....   | 24    |
| Playing a Title .....  | 24    |
| Changing the Audio Language .....  | 24    |
| Subtitles .....  | 24    |
| Special VCD & SVCD Features .....  | 25    |
| Playback Control (PBC) .....   | 25    |
| Playing MP3/JPEG/Kodak Picture CD ..                                     | 25-26 |
| General Operation .....  | 25    |
| Playback selection .....   | 26    |
| Zoom picture (JPEG) .....  | 26    |
| Playback with multi-angles (JPEG) .....                                  | 26    |
| Preview Function (JPEG) .....  | 26    |

# Contents

English

## DVD Setup Menu Options

|  |       |
|--|-------|
| General Setup menu .....                       | 27-28 |
| Locking/Unlocking the disc for viewing ...     | 27    |
| Dimming player's display panel .....           | 27    |
| Programming disc tracks .....                  | 27-28 |
| OSD Language .....                             | 28    |
| Sleep .....                                    | 28    |
| Audio Setup Menu .....                         | 29-31 |
| Analogue output .....                          | 29    |
| Digital Audio Setup .....                      | 29-30 |
| Speaker Setup .....                            | 30    |
| Sound Mode .....                               | 30    |
| Night Mode - turning on/off .....              | 31    |
| Video Setup Menu .....                         | 31-33 |
| TV Type .....                                  | 31    |
| Setting the TV Display .....                   | 32    |
| Progressive - turning on/off .....             | 32    |
| Picture Setting .....                          | 33    |
| Preference Page .....                          | 34-36 |
| Audio, Subtitle, Disc Menu .....               | 34    |
| Restricting playback by Parental Control ..... | 34-35 |
| PBC .....                                      | 35    |
| MP3/JPEG Menu - turning on/off .....           | 35    |
| Changing the Password .....                    | 36    |
| Restoring to original settings .....           | 36    |

## Sound and Volume Controls ..... 37

|                                      |    |
|--------------------------------------|----|
| Setting the speakers' channels ..... | 37 |
|--------------------------------------|----|

## Troubleshooting ..... 38-39

## Specifications ..... 40

## Glossary ..... 41

 
## Introduction

### Supplied accessories


Composite video cable (yellow)



Audio cable (white, red)



Remote Control and two AAA batteries

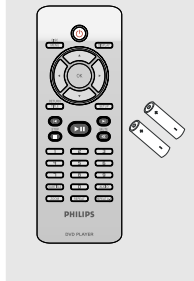

### Cleaning discs

To clean a disc, use a micro fibre cleaning cloth and wipe the disc from the center to the edge in a straight line.

#### CAUTION!

Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static sprays intended for discs.

Since the optical unit (laser) of the DVD system operates at a higher power than regular DVD or CD players, cleaning CDs intended for DVD or CD players may damage the optical unit (laser). Therefore, refrain from using a cleaning CD.


### Setup

#### Finding a suitable location

- Place the set on a flat, hard and stable surface. Do not place the set on a carpet.
- Do not position the set on top of other equipment that might heat it up (e.g., receiver or amplifier).
- Do not put anything under the set (e.g., CDs, magazines).
- Install this system near the AC outlet and where the AC power plug can be reached easily.

#### Space for ventilation

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10 cm (4.0") clearance from the rear and the top of the set and 5 cm (2.0") from the left and right to prevent overheating.

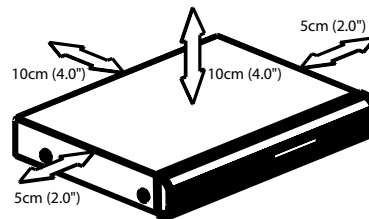

#### Avoid high temperatures, moisture, water and dust



- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g., liquid filled objects, lighted candles).



# Connections

English

## Connecting TV

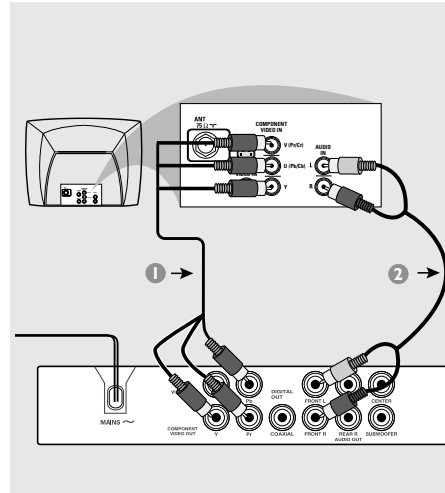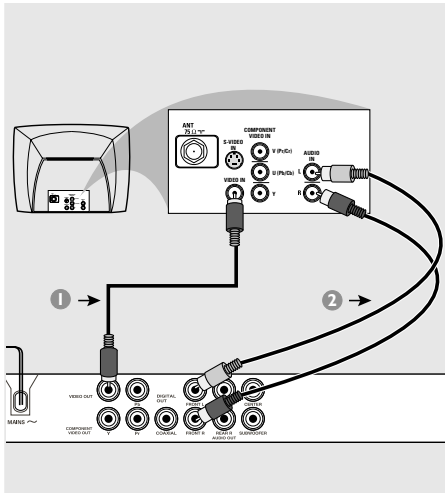

### IMPORTANT!

- You only need to make one video connection from the following options, depending on the capabilities of your TV system.
- Connect the DVD system directly to the TV.

#### Using Composite Video jacks (CVBS)

- 1 Use the composite video cable (yellow) to connect the DVD Player's CVBS (VIDEO) jack to the video input jack (or labeled as A/V In, Video In, Composite or Baseband) on the TV (*cable supplied*).
- 2 To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect [FRONT (L/R)] jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (*cable supplied*).

### IMPORTANT!



- The progressive scan video quality is only possible when using Y Pb Pr and a progressive scan TV is required.

#### Using Component Video jacks (Y Pb Pr)

- 1 Use the component video cables (red/blue/green) to connect the DVD system's Y Pb Pr jacks to the corresponding Component video input jacks (or labeled as Y Pb Pr) on the TV (*cable not supplied*).
- 2 To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect [FRONT (L/R)] jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (*cable supplied*).
- 3 Proceed to page 16 for detailed Progressive Scan set up.

## Connections

### Connecting the power cord

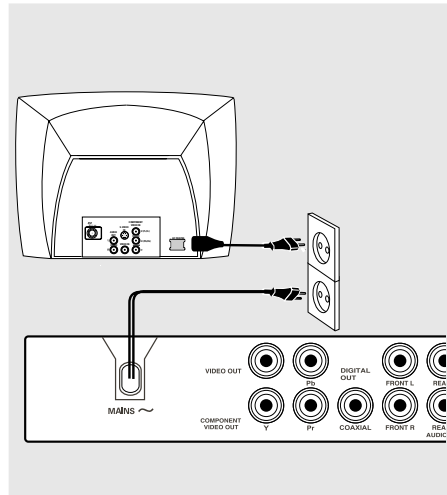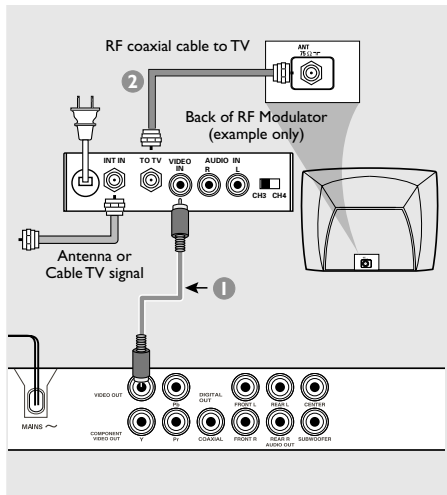

#### IMPORTANT!

– If your TV only has a single Antenna In jack (or labeled as 75 ohm or RF In,) you will need an RF modulator in order to view the DVD playback on the TV. See your electronics retailer or contact Philips for details on RF modulator availability and operations.


#### Using an accessory RF modulator

- 1 Use the composite video cable (yellow) to connect the DVD player's CVBS (VIDEO OUT) jack to the video input jack on the RF modulator.
- 2 Use the RF coaxial cable (not supplied) to connect the RF modulator to your TV's RF jack.

After everything is connected properly, plug in the AC power cord to the power outlet.

Never make or change any connections with the power switched on.


When no disc is loaded, press **STANDBY ON** on the DVD Player front panel, "NO DISC" may appear on the display panel.

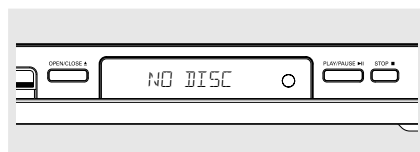

## Connections

English

### Optional: Connecting to a Multi-channel Receiver

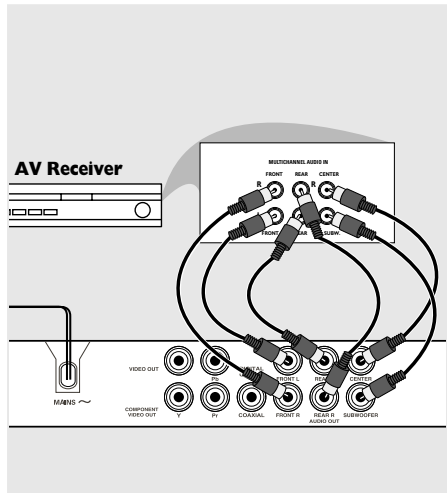


#### Receiver has a Dolby Digital or DTS decoder

- 1 Select one of the video connections (CVBS VIDEO IN or COMPONENT VIDEO IN) depending on the options available on your TV.
- 2 Connect the Audio Out Left and Right jack for Front and Rear speakers to the corresponding input sockets on your Receiver (*cable not supplied*).
- 3 Connect the Audio Out for Center speaker and Subwoofer to the corresponding inputs on your Receiver (*cable not supplied*).
- 4 Set the DVD Player's Analog Output to 'Multichannel' to enable playback of DVDs recorded in Multi-channel. (see page 29 "Setting the analogue output").

#### Helpful Hint:

- If the subwoofer is equipped with its own amplifier, the Subwoofer connection should be connected directly to the subwoofer.

### Optional: Connecting to a Stereo System

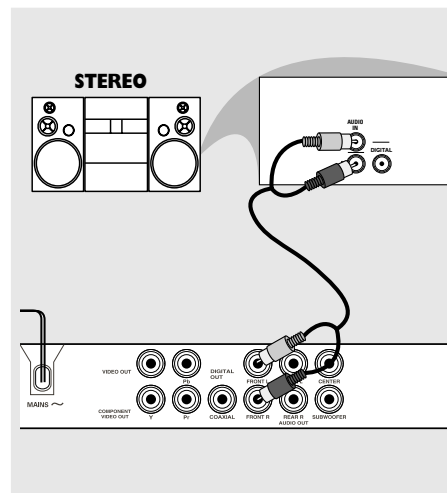


#### Stereo system has Dolby Pro Logic or Right / Left Audio In jack

- 1 Select one of the video connections (CVBS VIDEO IN or COMPONENT VIDEO IN) depending on the options available on your TV.
- 2 Use the audio cables (white/red) to connect [FRONT (L/R)] jacks of the DVD Player to the corresponding AUDIO IN jacks on the stereo system (*cable supplied*).

## Connections

### Optional: Connecting Digital AV Receiver

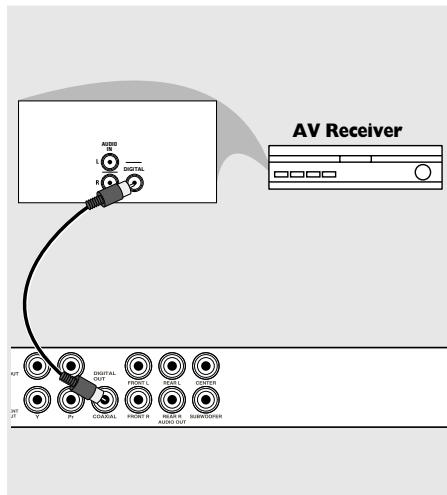

#### Receiver has a PCM, Dolby Digital, or MPEG2 decoder

- 1 Select one of the video connections (CVBSVIDEO IN or COMPONENT VIDEO IN) depending on the options available on your TV.
- 2 Connect the COAXIAL jack of the DVD player to the corresponding Digital Audio In jack on your Receiver (*cable not supplied*).
- 3 Set the DVD player's Digital Output to PCM-ONLY or ALL depending on the capabilities of your Receiver (see *page 29* "Digital Output").



#### Helpful Hint:

- If the audio format of the Digital Output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.

# Functional Overview

English


## Front and Rear Panels

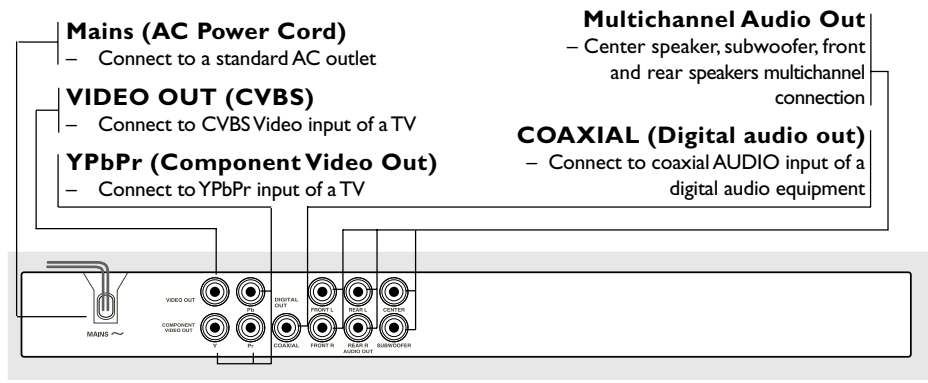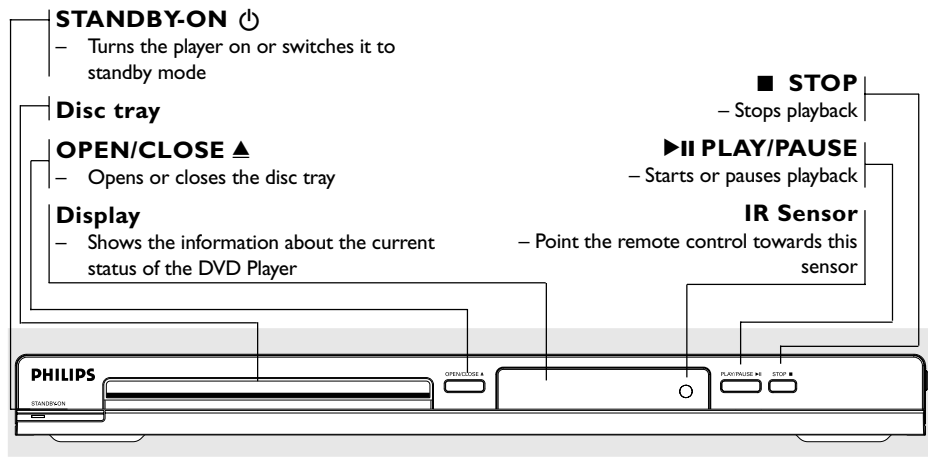

**Caution: Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.**

## Functional Overview

### Remote Control

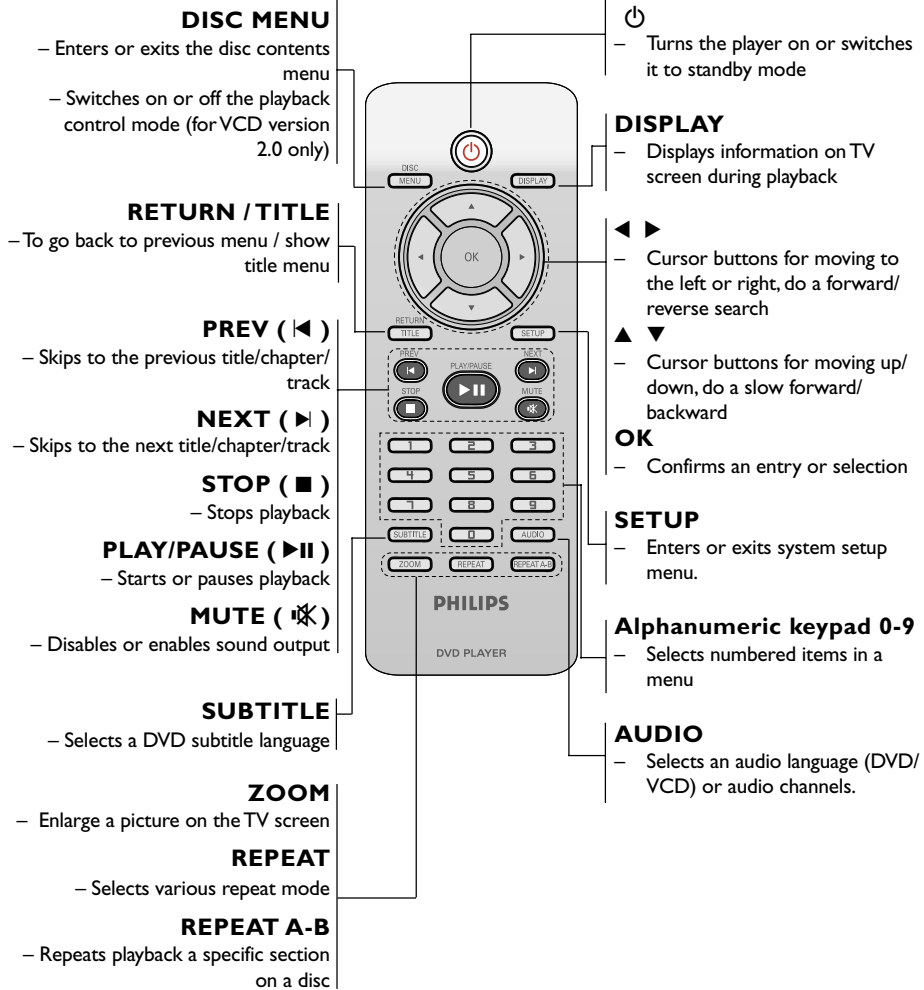


**Helpful Hint:**  
Press “STOP” for about 2 seconds to OPEN or CLOSE disc tray.

## Getting Started

English


### Step 1: Inserting batteries into the Remote Control

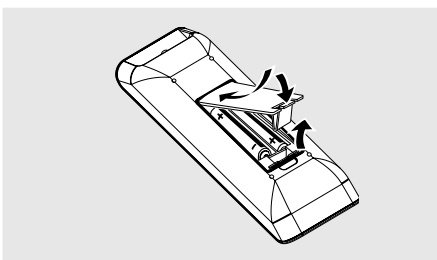

- 1 Open the battery compartment.
- 2 Insert two batteries type R03 or AAA, following the indications (+ -) inside the compartment.
- 3 Close the cover.

### Using the Remote Control to operate the Player

- 1 Aim the Remote Control directly at the remote sensor (IR) on the front panel.
- 2 Do not put any objects between the Remote Control and the DVD player while operating the DVD player.

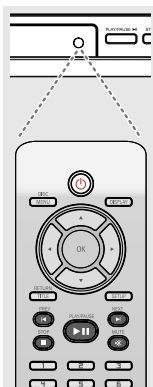

### CAUTION!

- Remove batteries if they are exhausted or if the Remote Control is not being used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed properly.

### Step 2: Setting up the TV

#### IMPORTANT!

Make sure you have completed all the necessary connections. (See pages 9-10 "Connecting TV").

- 1 Turn on the TV and set to the correct video-in channel. You should see the DVD background screen on the TV.
  - 2 Usually these channels are between the lowest and highest channels and may be called FRONT, A/V IN, or VIDEO. See your TV manual for more details.
    - Or, you may go to channel 1 on your TV, then press the Channel down button repeatedly until you see the Video In channel.
    - Or, the TV Remote Control may have a button or switch that chooses different video modes.
    - Or, set the TV to channel 3 or 4 if you are using an RF modulator.
  - 3 If you are using external equipment, (e.g. audio system or receiver), turn it on and select the appropriate input source for the DVD player output. Refer to the equipment owner's manual for detail.

## Getting Started

### Setting up Progressive Scan feature (for Progressive Scan TV only)


The progressive scan display twice as many frames per second as interlaced scanning (ordinary normal TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and quality.

#### IMPORTANT!


**Before enabling the progressive scan feature, you must ensure:**

- 1) Your TV can accept progressive signals, a progressive scan TV is required.
- 2) You have connected the DVD player to your TV using Y Pb Pr (see page 9.)

- 1 Turn on your TV.
- 2 Turn off your TV progressive scan mode or turn on interlaced mode (refer to your TV user manual.)
- 3 Press **POWER** (⏻) on the remote control to turn on the DVD player.
- 4 Select the correct Video Input channel. (See page 15).  
→ The DVD background screen appears on the TV.
- 5 Press **SETUP**.
- 6 Press **▶** to select {VIDEO SETUP PAGE}.

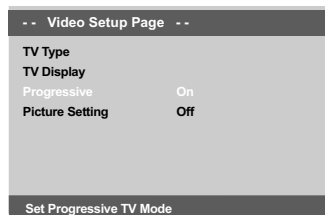


- 7 Select {PROGRESSIVE} to {ON}, then **OK** to confirm.  
→ The instruction menu appears on the TV.

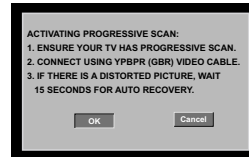

- 8 Press **◀** to highlight **OK** in the menu and press **OK** to confirm.

**There will be a distorted picture on your TV at this state until you turn on the progressive scan mode on your TV.**

- 9 Turn on your TV progressive scan mode (refer to your TV user manual.)  
→ The below menu appears on the TV.

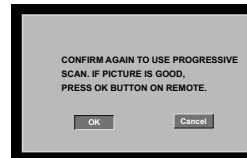

- 10 Press **◀** to highlight **OK** in the menu and press **OK** to confirm.  
→ The set up is complete now and you can start enjoy the high quality picture.

#### To deactivate Progressive manually:

- Wait for 15 seconds for auto recovery.  
OR
- 1 Press **OPEN CLOSE ▲** on the DVD player to open the disc tray.
- 2 Press **numeric keypad '1'** on the remote control for few seconds.  
→ The DVD background screen appears on the TV.

#### Helpful Hint:

– There are some progressive scan TV and High-Definition TV sets that are not fully compatible with this DVD system, resulting in the unnatural picture when playing back a DVD VIDEO disc in the progressive scan mode. In such a case, turn off the progressive scan feature on both the DVD player and your TV set.


**TIPS:** The underlined option is the factory default setting.  
Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.



## Getting Started

### Selecting the colour system that corresponds to your TV

This DVD player is compatible with both NTSC and PAL. In order for a DVD disc to play on this player, the colour system of the Disc, the TV and the DVD player should match.

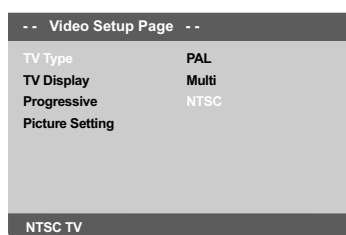

- 1 Press **SETUP**.
- 2 Press **▶** to select {VIDEO SETUP PAGE}.
- 3 Press **▲ ▼** to highlight {TV TYPE}, then press **▶**.
- 4 Press **▲ ▼** to highlight one of the options below:

**PAL** – Select this if the connected TV is PAL system. It will change the video signal of a NTSC disc and output in PAL format.


**NTSC** – Select this if the connected TV is NTSC system. It will change the video signal of a PAL disc and output in NTSC format.

**Multi** – Select this if the connected TV is compatible with both NTSC and PAL (multi-system). The output format will be in accordance with the video signal of the disc.

- 5 Select an item and press **OK**.  
→ Follow the instructions shown on the TV to confirm the selection (if any).

#### Helpful Hints:

- **Before changing the current TV Standard setting, ensure that your TV supports the 'selected TV Type' system.**
- **If there is no proper picture on your TV, wait for 15 seconds for auto recovery.**

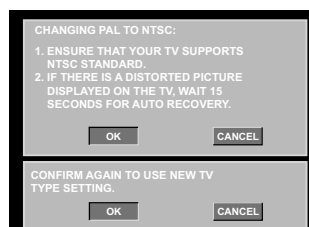

#### To reset to default TV colour system manually:

- Wait for 15 seconds for auto recovery.  
OR
- 1 Press **OPEN CLOSE ▲** on the DVD player to open the disc tray.
- 2 Press **numeric keypad '3'** on the remote control for few seconds.  
→ The DVD background screen appears on the TV.

**TIPS:** The underlined option is the factory default setting.  
Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.


## Getting Started

### Step 3: Setting language preference

The language options are different depending on your country or region. It may not correspond to the illustrations shown on the user manual.

#### Setting the OSD Language


The On-screen language for the system menu will remain as you set it, regardless of various disc languages.

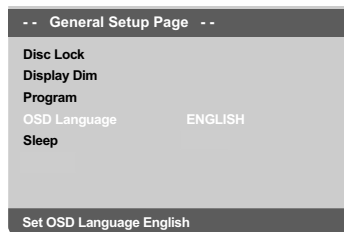

- 1 Press **SETUP**.
- 2 Press **▶** to select {GENERAL SETUP PAGE}.
- 3 Press **▲▼** to highlight {OSD LANGUAGE}, then press **▶**.
- 4 Press **▲▼** to select a language and press **OK**.

### Setting the Audio, Subtitle and Disc menu language

You can choose your own preferred language or soundtrack from audio, subtitles and disc menu languages. If the language selected is not available on the disc, the disc's default language will be used instead.

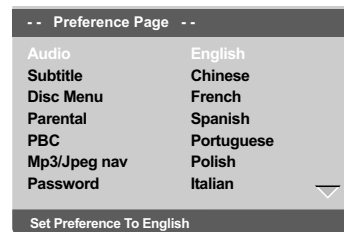

- 1 Press **STOP** twice then, press **SETUP**.
  - 2 Press **▶** to select {PREFERENCE PAGE}.
  - 3 Press **▲▼** to highlight one of the options below at a time, then press **▶**.
    - 'Audio' (disc's soundtrack)
    - 'Subtitle' (disc's subtitles)
    - 'Disc Menu' (disc's menu)
  - 4 Press **▲▼** to select a language and press **OK**.
- If the language you want is not in the list, then select {OTHERS}, then use the numeric keypad (0-9) on the remote to enter the 4-digit language code 'XXXX' (see page 5 "Language Code") and press **OK**.**
- 5 Repeat steps 3~4 for other language settings.

**TIPS:** The underlined option is the factory default setting. Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.

## Disc Operations

### IMPORTANT!

- If the inhibit icon (⊘) appears on the TV screen when a button is pressed, it means the function is not available on the current disc or at the current time.
- Depending on the DVD or VIDEO CD, some operations may be different or restricted.
- Do not push on the disc tray or put any objects other than disc on the disc tray. Doing so may cause the disc player malfunction.

### Playable Discs

#### Your DVD Player will play:

- Digital Video Discs (DVDs)
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- Digital Video Discs + Recordable[Rewritable] (DVD+R[W])
- Compact Discs (CDs)
- MP3/WMA discs, picture (Kodak, JPEG) files on CD-R(W).
  - JPEG/ISO 9660 format
  - Maximum 30 characters display.
  - Supported sampling frequencies : 32 kHz, 44.1 kHz, 48 kHz (MPEG-1) 16 kHz, 22.05 kHz, 24 kHz (MPEG-2)
  - Supported Bit-rates : 32~256 kbps (MPEG-1), 8~160 kbps (MPEG-2) variable bitrates



### Region Codes

This DVD player is designed to support the Region Management System. Check the regional code number on the disc package. If the number does not match the player's region number (see table below), the player may be unable to playback the disc.

#### Helpful Hints:

- It may not be possible to play CD-R/RW or DVD-R/RW in all cases due to the type of disc or condition of the recording.
- If you are having trouble playing a certain disc, remove the disc and try a different one. Improperly formatted disc will not play on this DVD Player.

| Region  | Discs that can be played (Example)  |
|---|---|
| U.S.A. and Canada regions                       |   |
| U.K and Europe regions                          |   |
| Asia Pacific, Taiwan, Korea                     |   |
| Australia, New Zealand, Latin America           |   |
| Russia and India regions                        |   |
| China, Calcos Islands, Walls and Futuna Islands |   |

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Playing discs

- 1 Connect the power cords of the DVD player and TV (and any optional stereo or AV receiver) to a power outlet.
- 2 Turn on the TV power and set to the correct Video In channel. (See page 15 "Setting up the TV").
- 3 Press **STANDBY-ON** to turn on the DVD player.
  - The DVD background screen appears on the TV.
- 4 Press **OPEN/CLOSE ▲** on the front of the DVD player.
  - You can also hold down the **STOP ■** button on the remote control to open and close the disc tray.
- 5 Place a disc into the disc tray with the label facing up, then press **OPEN/CLOSE ▲**.
  - For double-sided discs, load the side you want to play facing up.
- 6 Playback may start automatically. If not press **PLAY/PAUSE ►II**.
  - If a disc menu appears on the TV, see page 21 "Using the Disc Menu".
  - If the disc is locked by parental control, you must enter your six-digit password. (See page 33).
- For more playback features, see pages 20–25.

### Basic playback controls

Unless otherwise stated, all operations described are based on Remote Control use.

#### Pausing playback

- 1 During playback, press **PLAY/PAUSE ►II** to pause playback and display a still picture.
  - Sound will be muted.
- 2 To resume normal playback, press **PLAY/PAUSE ►II** again.

#### Selecting track/chapter

- Press **PREV ◀ / NEXT ▶** to go to the previous or next track/chapter.
- In STOP mode, press **DISPLAY** to display the disc information text line for title/chapter/track (example - 00/08).
- Use **alphanumeric keypad (0-9)** to enter valid title/chapter/track number, then press **OK**.
  - The playback skips to the selected title/chapter/track.

#### Stopping playback

- Press **STOP ■**.

#### Helpful hints:

- Screen saver will start automatically if the disc playback is stopped/paused for 5 minutes.
- The player will automatically switch to Power Standby mode if you do not press any buttons for 15 minutes after the disc has stopped playing.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Selecting various repeat/shuffle functions

#### Repeat play mode

The repeat play options vary depending on the disc type.

- 1 While playing a disc, press **REPEAT** continuously to choose a repeat options.

#### For DVD

- Chapter (currently playing chapter)
- Title (currently playing title)
- All (entire disc)
- Shuffle (random playback)
- Off (cancel)

#### For Video CD, Audio CD

- Track (currently playing track)
- All (entire disc)
- Shuffle (random playback)
- Off (cancel)

#### For MP3

- Repeat One (currently playing file)
- Repeat Folder (all files in selected folder)
- Folder (playing all files in one folder once)
- Shuffle (all files in current folder at random playback)
- Single (currently playing file once)

#### For JPEG, DivX

In STOP mode,

- Repeat One (currently playing file)
- Repeat Folder (all files in selected folder)
- Folder (playing all files in one folder once)
- Shuffle (all files in current folder at random playback)
- Single (currently playing file once)

In PLAY mode,

- Repeat One (currently playing file)
- Repeat All (playing all files in one disc)
- Repeat Off (cancel)
- Shuffle (all files in current folder at random playback)
- Single (currently playing file once)

- 2 To cancel repeat playback, press **STOP ■**.

*Helpful Hint:*

- For VCD, repeat playback is not possible if the PBC mode is switched on.

#### Repeating a section within a chapter/track

- 1 While playing a disc, press **REPEAT A-B** at your chosen starting point.
- 2 Press **REPEAT A-B** again at your chosen end point.
  - The section A and B can be set only within the same chapter/track.
  - The section will now repeat continuously.
- 3 To exit the sequence, press **REPEAT A-B**.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Operations for video playback (DVD/VCD/SVCD)

#### Using the Disc Menu

Depending on the disc, a menu may appear on the TV screen once you load in the disc.

#### To select a playback feature or item

- Use ◀▶ ▲ ▼ keys or **numeric keypad (0-9)** on the remote, then press **OK** to start playback.

#### To access or remove the menu

- Press **DISC MENU** on the remote.

#### Zooming in

This function allows you to enlarge the picture on the TV screen and to pan through the enlarged picture.

- 1 During playback, press **ZOOM** repeatedly to display the picture with different scales.
  - Use ◀▶ ▲ ▼ keys to pan through the enlarged picture.
  - Playback will continue.
- 2 Press **ZOOM** repeatedly to return to the original size.

#### Resuming playback from the last stopped point

Resume playback of the last 5 discs is possible, even if the disc was ejected or the power switched off.

- Load one of the last 5 discs.
  - "LOADING" appears.
- During loading mode, press **PLAY/PAUSE ▶II** and the disc will be played back from the last point.

#### To cancel resume mode

- In stop mode, press **STOP ■** again.

*Helpful Hint:*

– This function is not possible on CD/MP3 disc.

#### Slow Motion

- 1 Press ▲ ▼ during playback to select the required speed: 1/2, 1/4, 1/8 or 1/16 (forward {DVD/SVCD/VCD} or backward {DVD}).
  - Sound will be muted.
- 2 To return to normal speed, press **PLAY/PAUSE ▶II**.

#### Forward / Reverse Searching

- 1 Press ◀▶ during playback to select the required speed: 2X, 4X, 8X, 16X or 32X (backward or forward).
  - Sound will be muted (DVD/VCD) or intermittent (CD).
- 2 To return to normal speed, press **PLAY/PAUSE ▶II**.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.


## Disc Operations

### OSD (On-Screen Display) (DVD/VCD/SVCD)

#### Using the OSD menu

OSD menu shows the disc playback information (for example, title or chapter number, elapsed playing time, audio/subtitle language), a number of operations can be done without interrupting disc playback.

- During playback, press **DISPLAY**.  
→ A list of available disc information appears on the TV screen.

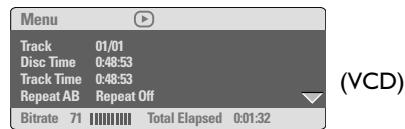

#### Title/Chapter/Track selection

- 1 Press ▲ ▼ to highlight {Title} / {Chapter} or {Track}, then press ► to access.
- 2 Use the **numeric keypad (0-9)** to enter a valid number (e.g. 04/05).  
→ The playback skips to the selected title/chapter/track.

#### Time Search

- 1 Press ▲ ▼ to highlight {Time Disp.} (Time Display), then press ► to access.  
→ The following display types appears on the TV, depending on the Disc in the player.

#### For DVD discs:

TT Elapsed - elapsed playing time of current Title;  
 TT Remain - remaining playing time of current Title;  
 CH Elapsed - elapsed playing time of current Chapter;  
 CH Remain - remaining playing time of current Chapter;

#### For VCD/SVCD discs:

Total Elapsed - elapsed playing time of current Disc;  
 Total Remain - remaining playing time of current Disc;  
 Single Elapsed - elapsed playing time of current Track;  
 Single Remain - remaining playing time of current Track;

- 2 Press ▲ ▼ to highlight {TT Time} / {CH Time} / {Disc Time} or {Track Time}, then press ► to access.
- 3 Use the **numeric keypad (0-9)** to input the valid time (e.g. 0:34:27).  
→ The playback skips to the chosen time.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Audio/Subtitle

- 1 Press **▲▼** to highlight {Audio} or {Subtitle}, then press **▶** to access.  
→ Audio or Subtitle menu appears on the TV.
- 2 Press **▲▼** to select one language, then press **OK** to confirm.  
→ Current audio or subtitle language will be changed to the selected language.

 
### Angle

- 1 Press **▲▼** to highlight {Angle}, then press **▶** to access.
- 2 Use the **numeric keypad (0-9)** to key in a valid number.
- 3 Press **OK** to confirm.  
→ Playback will go to the selected angle.


### Preview Function

The preview function allows you to reduce the picture of 6 tracks enough to display in a full screen.

- 1 Press **▲▼** to highlight {Preview} , then press **▶** to access.  
→ The preview menu appears on the TV screen.




(DVD example)

 

(Video CD example)

- 2 Press **▲▼** to select the **PREVIEW** type, then press **OK**.  
→ The picture of each segment will appear on the screen.

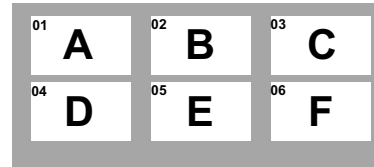

(example for 6 thumbnail pictures display)

- 3 Press **▲▼◀▶** to select a track or input your selected track number using the numeric keypad (0-9), then press **OK**.  
→ Playback will start automatically on the selected track.

## Special DVD Features

### Playing a Title

- 1 Press **DISC MENU**.  
→ The disc menu appears on the TV screen.
- 2 Use **▲▼◀▶** keys or **alphanumeric keypad (0-9)** to select a play option.
- 3 Press **OK** key to confirm.

### Changing the Audio Language

#### For DVD

- Press **AUDIO** repeatedly to select different audio languages.

#### Changing the Audio Channel

#### For VCD

- Press **AUDIO** to select the available audio channels provided by the disc (MONO LEFT, MONO RIGHT, MIX-MONO, STEREO).

### Subtitles

- Press **SUBTITLE** repeatedly to select different subtitle languages.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.



## Disc Operations

### Special VCD & SVCD Features

#### Playback Control (PBC)

**For VCD with Playback Control (PBC) feature (version 2.0 only)**

- Press **DISC MENU** to toggle between 'PBC ON' and 'PBC OFF'.  
→ If you select 'PBC ON', the disc menu (if available) will appear on the TV.  
→ Use the **PREV** ◀ / **NEXT** ▶ or the numeric keypad (0-9) to select a play option.
- During playback, pressing **RETURN/TITLE** will return to the menu screen (if PBC is on).

**If you want to skip the index menu and playback directly from the beginning,**

- Press **DISC MENU** key on the remote control to switch to PBC off.


### Playing MP3/WMA/JPEG/Kodak Picture CD

#### IMPORTANT!

You have to turn on your TV and set to the correct Video In channel. (See page 15 "Setting up the TV").

#### General Operation

- 1 Load a disc.  
→ The disc reading time may exceed 30 seconds due to the complexity of the directory/file configuration.  
→ The data disc menu appears on the TV screen.

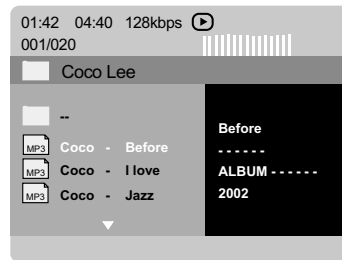

- 2 Press **▲ ▼** to select the folder and press **OK** to open the folder.
- 3 Press **▲ ▼** to select a track/file.
- 4 Press **PREV** ◀ / **NEXT** ▶ to go to previous/next page.
- 5 Press **OK** to confirm.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Playback selection

During playback, you can;

- Press **PREV** ◀ / **NEXT** ▶ to select the previous/next track/file in the current folder.
- Press ◀ ▶▲ ▼ on the remote to rotate/flip the picture files.
- Press **PLAY/PAUSE** ▶II repeatedly to pause/resume playback.

### Zoom picture (JPEG)

- During playback, press **ZOOM** repeatedly to display the picture with different scales.
- Use ▲ ▼◀▶ to view the zoomed picture.

### Playback with multi-angles (JPEG)

- During playback, press ▲ ▼◀▶ to rotate the picture on the TV screen.
  - ▲: flip the picture vertically by 180°
  - ▼: flip the picture horizontally by 180°
  - ◀: rotate the picture anti-clockwise by 90°
  - ▶: rotate the picture clockwise by 90°.


#### Helpful Hints:

- It may not be possible to play certain MP3/WMA/JPEG disc due to the configuration and characteristics of the disc or condition of the recording.
- It is normal to experience an occasional “skip” while listening to your MP3/WMA disc.
- For multi-session discs with different formats, only the first session will be available.

### Preview Function (JPEG)

This function shows the content of the current folder or the whole disc.

- 1 Press **DISPLAY** during playback.  
→ 12 thumbnail pictures will appear on the TV screen.

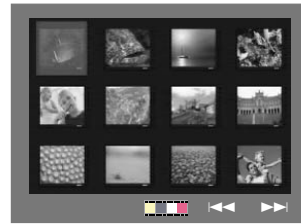

- 2 Press **PREV** ◀ / **NEXT** ▶ to display the other pictures on the previous/next page.
- 3 Press ◀ ▶▲ ▼ on highlight one of the picture and press **OK** to start playback.
- 4 Press **DISC MENU** to return to Picture CD menu.


**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## DVD Setup Menu Options

This DVD player setup is carried out via the TV, enabling you to customise the DVD player to suit your particular requirements.

### General Setup menu

- 1 In disc mode, press **SETUP**.
- 2 Press **◀▶** to select 'General Setup' icon.
- 3 Press **OK** to confirm.

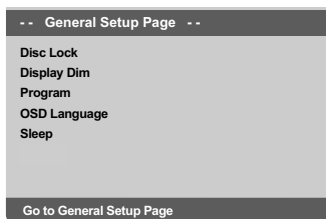

### Locking/Unlocking the disc for viewing

Not all discs are rated or coded by the disc maker. You can prevent a specific disc from playing by locking the disc. Up to 40 discs can be locked.

- 1 In 'GENERAL SETUP PAGE', press **▲▼** to highlight {DISC LOCK}, then press **▶**.

#### LOCK

Select this to block the playback of the current disc. Subsequent access to a locked disc requires six-digit password. The default password is '136 900' (see page 36 "Changing the password").

#### UNLOCK

Select this to unlock the disc and allow future playback.

- 2 Press **▲▼** to select a setting, then press **OK** to confirm your selection.

### Dimming player's display panel


You can select different levels of brightness for the display screen.

- 1 In 'GENERAL SETUP PAGE', press **▲▼** to highlight {DISPLAY DIM}, then press **▶**.  
**100%** – Select this for full brightness.  
**70%** – Select this for medium brightness.  
**40%** – Select this for dimming the display.
- 2 Press **▲▼** to select a setting, then press **OK** to confirm your selection.

### Programming disc tracks (not for Picture CD/MP3/WMA)

You can play the contents of the disc in the order you want by programming the tracks to be played. Up to 20 tracks can be stored.

- 1 In 'GENERAL SETUP PAGE', press **▲▼** to highlight {PROGRAM}, then press **▶** to select {INPUT MENU}.
- 2 Press **OK** to confirm.

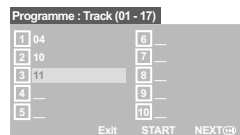

### To input your favourite tracks/chapter

- 3 Use the **numeric keypad (0-9)** to enter a valid track/chapter number.
- 4 Use **◀▶▲▼** keys to move the cursor to the next position.  
 → If there are more than ten track/chapters, press **NEXT ▶** to open the next page and proceed with programming or,  
 → Use **◀▶▲▼** keys to highlight {NEXT} on the programme menu, then press **OK**.
- 5 Repeat steps 3~4 to input another track/chapter number.

**TIPS:** The underlined option is the factory default setting.  
 Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### If you want to remove a track

- 6 Use ◀▶ ▲ ▼ keys to move the cursor to the track you want to remove.
- 7 Press **OK** to remove this track from the programme menu.

### To start programme playback

- 8 Use ◀▶ ▲ ▼ keys to highlight {START} on the programme menu, then press **OK**.  
→ Playback will start with the selected tracks under the programmed sequence.

### To exit programme playback

- 9 Use ◀▶ ▲ ▼ keys to highlight {EXIT} on the programme menu, then press **OK**.

### OSD Language

This menu contains various language options for display language on the screen. For details, see page 18.

### Sleep

Sleep function allows you to turn off the DVD Player automatically after a preset time.

- 1 In 'GENERAL SETUP PAGE', press ▲ ▼ to highlight {SLEEP}, then press ▶.

#### 15 Mins

Turn off the DVD Player after 15 minutes.

#### 30 Mins

Turn off the DVD Player after 30 minutes.

#### 45 Mins

Turn off the DVD Player after 45 minutes.

#### 60 Mins

Turn off the DVD Player after 60 minutes.

#### OFF

Turn off the sleep function.


- 2 Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Audio Setup Menu

- 1 In disc mode, press **SETUP**.
- 2 Press ◀▶ to select 'Audio Setup' icon.
- 3 Press **OK** to confirm.

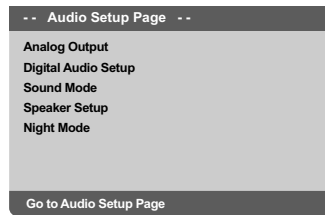

### Analog Output

This options allows you to set the stereo analog output of your DVD player.

- 1 In 'AUDIO SETUP PAGE', press ▲▼ to highlight {ANALOG OUTPUT}, then press ▶.

#### **Stereo**

Select this option when output delivers sound from only the two front speakers.

#### **LT/RT**

Select this option if your DVD player is connected to a Dolby Pro Logic decoder.

#### **V SURR**

Allows the DVD player to use virtual surround sound effects.

#### **Multi Channel**

Select this to enable Multi-channel output.

- 2 Press ▲▼ to select a setting, then press **OK** to confirm your selection.

### Digital Audio Setup

The options included in Digital Audio Setup are: 'Digital Output' and 'LPCM Output'.

- 1 In 'AUDIO SETUP PAGE', press ▲▼ to highlight {DIGITAL AUDIO SETUP}, then press ▶.
- 2 Press the ▲▼ keys to highlight an option.
- 3 Enter its submenu by pressing ▶.
- 4 Press ▲▼ to select a setting, then press **OK** to confirm your selection.

#### **Digital Output**

Set the Digital output according to your optional audio equipment connection.

→ **Off**: Turn off the digital output.

→ **All**: If you have connected your DIGITAL AUDIO OUT to a multi-channel decoder/receiver.

→ **PCM Only**: Only if your receiver is not capable of decoding multi-channel audio.

*Helpful hint:*

– If **DIGITAL OUTPUT** is set to 'All', all audio settings except **MUTE** are invalid.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### LPCM Output

If you connect the DVD Player to a PCM compatible receiver via the digital terminals, such as coaxial or optical etc, you may need to adjust 'LPCM Output'. Discs are recorded at a certain sampling rate. The higher the sampling rate, the better the sound quality.

→ **48K**: Playback a disc recorded at the sampling rate of 48kHz.

→ **96K**: Playback a disc recorded at the sampling rate of 96kHz. This rate can only be achieved in Stereo-Classic (Flat) mode.

### Speaker Setup

This menu contains setup options for your audio output which makes the speaker setup system reproduce high quality surround sound. For details, see page 37.

### Sound Mode

The options included in Sound Mode Setup are: '3D', 'Movie Mode' and 'Music Mode'.

- ① In 'AUDIO SETUP PAGE', press ▲ ▼ to highlight {SOUND MODE}, then press ►.
- ② Press the ▲ ▼ keys to highlight an option.
- ③ Enter its submenu by pressing ►.
- ④ Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.

#### 3D

This function provides a virtual surround sound experience using just two speakers.

→ **Off, Living Room, Hall, Arena and Church**

#### Movie Mode

Select a Sound Mode that matches the type of music you are playing. These preset Sound Modes adjust the frequency bands of the video to enhance your favourite movie sound track.

→ **Off, Sci-Fic, Action, Drama and Concert**

#### Music Mode

Select a Sound Mode that matches the type of music you are playing. These preset Sound Modes adjust the frequency bands of the audio to enhance your favourite music.

→ **Off, Digital, Rock, Classic and Jazz**

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Night Mode - turning on/off

In this mode, the high volume outputs are softened. It is useful for watching your favourite action movie without disturbing others at night.

- 1 In 'AUDIO SETUP PAGE', press ▲▼ to highlight {NIGHT MODE}, then press ►.

#### ON

Select this to level out the volume. This feature is only available for movies with Dolby Digital mode.


#### OFF

Select this when you want to enjoy the surround sound with its full dynamic range.

- 2 Press ▲▼ to select a setting, then press **OK** to confirm your selection.

### Video Setup Menu

- 1 In disc mode, press **SETUP**.
- 2 Press ◀▶ to select 'Video Setup' icon.
- 3 Press **OK** to confirm.

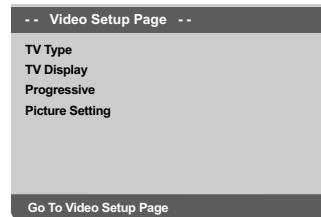

### TV Type

This menu contains the options for selecting the colour system that matches the connected TV. For details, see page 17.

English

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Setting the TV Display

Set the aspect ratio of the DVD Player according to the TV you have connected. The format you select must be available on the disc. If it is not, the setting for TV display will not affect the picture during playback.

- 1 In 'VIDEO SETUP PAGE', press ▲▼ to highlight {TV DISPLAY}, then press ►.
- 2 Press ▲▼ to highlight one of the options below:

#### **4:3 PAN SCAN –**

Select this if you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.



#### **4:3 LETTER BOX –**

Select this if you have a normal TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.



**16:9** – Select this if you have a wide-screen TV.



- 3 Select an item and press **OK**.

### Progressive - turning on/off

In the progressive scan mode, you can enjoy the high quality picture with less flickers. It only works when you have connected the DVD player's Y Pb Pr jacks to your TV that supports the progressive video input. Otherwise, a distorted picture will appear on the TV. For proper progressive scan set up, see page 16.

- 1 In 'VIDEO SETUP PAGE', press ▲▼ to highlight {PROGRESSIVE}, then press ►.

#### **OFF**

To disable Progressive Scan function.

#### **ON**

To enable Progressive Scan function.

- 2 Press ▲▼ to select a setting, then press **OK** to confirm your selection.
  - Follow the instructions shown on the TV to confirm the selection (if any).
  - If a distorted picture appears on the TV screen, wait for 15 seconds for auto recovery.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.



## DVD Setup Menu Options

### Picture Setting

This DVD Player provides three predefined sets of picture colour settings and one personal setting which you can define yourself.

- In 'VIDEO SETUP PAGE', press ▲▼ to highlight {PICTURE SETTING}, then press ►.

#### STANDARD

Select this for standard picture setting.

#### VIVID

Select this to make the TV picture brighter.


#### COOL

Select this to make the TV picture softer.

#### PERSONAL

Select this to personalise your picture colour by adjusting the brightness, contrast, tint and colour (saturation).

- Press ▲▼ to select a setting, then press **OK** to confirm your selection.
- If you select {PERSONAL}, then proceed to steps 4~7.  
→ The 'personal picture setup' menu appears.

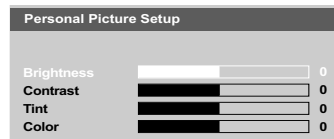

- Press ▲▼ to highlight one of the following options.

#### **BRIGHTNESS**

Increase the value to brighten the picture or vice versa. Choose zero (0) for average setting.

#### **CONTRAST**

Increase the value to sharpen the picture or vice versa. Choose zero (0) to balance the contrast.

#### **TINT**

Increase the value to darken the picture or vice versa. Choose zero (0) for average setting.

#### **COLOR**

Increase the value to enhance the colour in your picture or vice versa. Choose zero (0) to balance the colour.


- Press ◀▶ to adjust the setting that best suit your personal preference.
- Repeat steps 4~5 for adjusting other colour features.
- Press **OK** to confirm.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Preference Page

- 1 Press **■** twice to stop playback (if any), then press **SETUP**.
- 2 Press **◀▶** to select the 'Preference Page' icon.
- 3 Press **OK** to confirm.

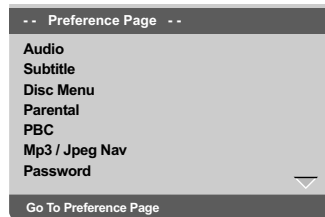


### Audio, Subtitle, Disc Menu

These menus contain various language options for audio, subtitle and disc menu which may be recorded on the DVD. For details, see page 18.

### Restricting playback by Parental Control

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

- 1 In 'PREFERENCE PAGE', press **▲▼** to highlight {PARENTAL}, then press **▶**.

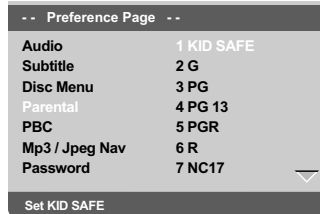

**TIPS:** The underlined option is the factory default setting.  
Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Restricting playback by Parental Control

- Press ▲ ▼ to highlight a rating level for the disc inserted and press **OK**.  
→ To disable Parental controls and have all Discs play, select {8 ADULT}.
- Use the **numeric keypad (0-9)** to enter the six-digit password (see page 36 "Changing the password").  
→ DVDs that are rated above the level you selected will not play unless you enter your six-digit password.

#### Helpful Hints:

- VCD, SVCD, CD have no level indication, so parental control function has no effect on these types of disc. This applies to most illegal DVD discs.
- Some DVDs are not encoded with a rating though the movie rating may be printed on the Disc cover. The rating level feature does not work for such Discs.

### PBC

You can set the PBC to ON or OFF. This feature is available only on Video CD 2.0 with playback control (PBC) feature. For details, see page 25.

### MP3/JPEG Menu - turning on/off

MP3/JPEG Navigator can be set only if the disc is recorded with menu. It allows you to select different display menus for easy navigation.

- In 'PREFERENCE PAGE', press ▲ ▼ to highlight {MP3/JPEG NAV}, then press ►.

#### **WITHOUT MENU**

Select this to display all the files contained in the MP3/Picture CD.

#### **WITH MENU**

Select this to display only the folder menu of the MP3/Picture CD.

- Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.

English


**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Changing the Password

The same password is used for both Parental Control and Disc Lock. Enter your six-digit password when prompted on the screen. The default password is 136900.

- 1 In 'PREFERENCE PAGE', press ▲▼ to highlight {PASSWORD}, then press ► to select {CHANGE}.
- 2 Press **OK** and the menu appears.

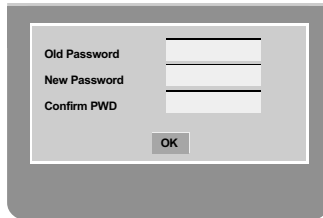

- 3 Use the **numeric keypad (0-9)** to enter your old six-digit password.
  - When doing this for the first time, key in '136900'.
  - If you forget your old six-digit password, key in '136900'.
- 4 Enter the new six-digit password.
- 5 Enter the new six-digit password a second time to confirm.
  - The new six-digit password will now take effect.
- 6 Press **OK** to confirm.

### Restoring to original settings

Setting the DEFAULT function will reset all options and your personal settings to the factory defaults, except your password for Parental Control and Disc Lock.

- 1 In 'PREFERENCE PAGE', press ▲▼ to highlight {DEFAULT}, then press ► to select {RESET}.
- 2 Press **OK** to confirm.
  - All settings will now reset to factory defaults.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## Sound and Volume Controls


### Setting the speakers' channels

You can adjust the delay times (centre and surround only) and volume level for individual speakers. These adjustments let you optimise the sound according to your surroundings and setup.

#### IMPORTANT!

*The speaker settings only available on Multi-channel audio outputs.*

- 1 Press **SETUP**.
- 2 Press **▶** repeatedly to select {AUDIO SETUP PAGE}.
- 3 Press **▲▼** to highlight {SPEAKER SETUP}, then press **▶**.

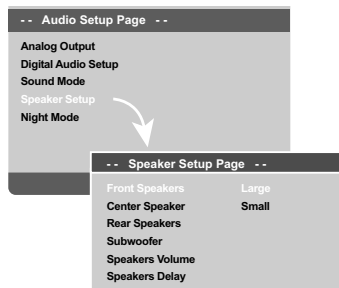

- 4 Enter its submenu by pressing **▶**.
- 5 Press **▲▼** to highlight one of the options below at a time, then press **▶**.

{FRONT SPEAKERS, CENTER SPEAKER, REAR SPEAKERS}


OFF – when no speaker is connected.  
 LARGE – when connected speakers can produce low frequency signals below 120Hz.

SMALL – when connected speakers cannot produce low frequency signals below 120Hz.


{SUBWOOFER}

ON – when a subwoofer is connected.  
 OFF – when no subwoofer is connected.

{SPEAKER VOLUME} – Volume level setting for individual speakers (-6dB ~ +6dB).

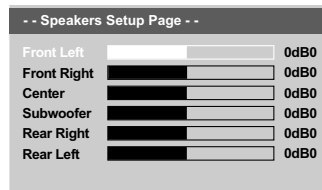

{SPEAKER DELAY} – Delay times setting in relation to the listening position/distance for centre and surround speakers (1m ~ 10m).

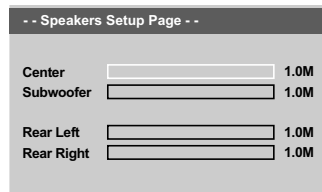

- 6 Press **◀▶** to adjust the setting that best suit your surround sound needs.
- 7 Press **OK** to confirm.

#### Helpful Hints:

- Use the longer delay time settings when the rear speakers are closer to the listener than the front speakers.
- The test tone will be automatically generated to help you judge the sound level of each speaker.

**TIPS:** The underlined option is the factory default setting.  
 Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.

## Troubleshooting

### WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

| Problem   | Solution  |
|---|---|
| <b>No power</b>   | <ul style="list-style-type: none"> <li>– Check if the AC power cord is properly connected.</li> <li>– Press the STANDBY ON on the front of the DVD system to turn on the power.</li> </ul>  |
| <b>No picture</b>   | <ul style="list-style-type: none"> <li>– Refer to your TV's manual for correct Video In channel selection. Change the TV channel until you see the DVD screen.</li> <li>– Check if the TV is switched on.</li> <li>– If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see page 16 for proper progressive scan set up or deactivate the progressive scan feature as below:               <ol style="list-style-type: none"> <li>1) Turn off your TV progressive scan mode or turn on to interlaced mode.</li> <li>2) Press OPEN/CLOSE to open the disc tray.</li> <li>3) Press numeric keypad '1' on the remote control for few seconds.</li> </ol> </li> </ul> |
| <b>Distorted picture</b>  | <ul style="list-style-type: none"> <li>– Sometimes a small amount of picture distortion may appear depending on the disc being played back. This is not a malfunction.</li> </ul>   |
| <b>Completely distorted picture or black/white picture with DVD</b> | <ul style="list-style-type: none"> <li>– Connect DVD Player directly to the TV.</li> <li>– Make sure the disc is compatible with the DVD/ Player.</li> <li>– Ensure that the DVD Player's TV Type is set to match that of the Disc and your TV.</li> </ul>  |
| <b>No sound or distorted sound</b>                                  | <ul style="list-style-type: none"> <li>– Adjust the volume.</li> <li>– Check that the speakers are connected correctly.</li> </ul>  |
| <b>No audio at digital output</b>                                   | <ul style="list-style-type: none"> <li>– Check the digital connections.</li> <li>– Check if your receiver can decode MPEG-2 and if not, please make sure the digital output is set to PCM.</li> <li>– Check if the audio format of the selected audio language matches your receiver capabilities.</li> </ul>   |

Visit us at [www.philips.com/support](http://www.philips.com/support) for service support

## Troubleshooting

| Problem  | Solution  |
|--|---|
| <b>Disc can't be played</b>  | <ul style="list-style-type: none"><li>– The DVD+R/CD-R must be finalised.</li><li>– Ensure the disc label is facing up.</li><li>– Check if the disc is defective by trying another disc.</li><li>– Region code incorrect.</li></ul>   |
| <b>Picture freezes momentarily during playback</b>                         | <ul style="list-style-type: none"><li>– Check the disc for fingerprints/scratches and clean with a soft cloth wiping from centre to edge.</li></ul>   |
| <b>No return to start-up screen when disc is removed</b>                   | <ul style="list-style-type: none"><li>– Reset the unit by switching the player off, then on again.</li></ul>  |
| <b>The player does not respond to the Remote Control</b>                   | <ul style="list-style-type: none"><li>– Aim the Remote Control directly at the sensor on the front of the player.</li><li>– Reduce the distance to the player.</li><li>– Replace the batteries in the Remote Control.</li><li>– Re-insert the batteries with their polarities (+/- signs) as indicated.</li></ul> |
| <b>Buttons do not work</b>   | <ul style="list-style-type: none"><li>– To completely reset the player; unplug the AC cord from the AC outlet for 5-10 seconds.</li></ul>   |
| <b>Player does not respond to some operating commands during playback.</b> | <ul style="list-style-type: none"><li>– Operations may not be permitted by the disc. Refer to the instructions of the disc jacket.</li></ul>  |
| <b>DVD Player cannot read CDs/DVDs</b>                                     | <ul style="list-style-type: none"><li>– Use a commonly available cleaning CD/DVD to clean the lens before sending the DVD Player for repair.</li></ul>  |
| <b>Menu items cannot be selected</b>                                       | <ul style="list-style-type: none"><li>– Press STOP twice before selecting System Menu.</li><li>– Depending on the disc availability, some menu items cannot be selected.</li></ul>  |
| <b>Unable to select Progressive Scan on/off</b>                            | <ul style="list-style-type: none"><li>– Check that the output of the video signal is switch to 'YUV'.</li></ul>   |

English

Visit us at [www.philips.com/support](http://www.philips.com/support) for service support

## Specifications

### TV STANDARD (PAL/50Hz) (NTSC/60Hz)

|                 |               |            |
|-----------------|---------------|------------|
| Number of lines | 625           | 525        |
| Playback        | Multistandard | (PAL/NTSC) |

### VIDEO PERFORMANCE

|              |                  |  |
|--------------|------------------|--|
| Video DAC    | 12 bit, 108MHz   |  |
| YPbPr        | 0.7 Vpp — 75 ohm |  |
| Video Output | 1Vpp — 75 ohm    |  |

### VIDEO FORMAT

|                     |                                       |  |
|---------------------|---------------------------------------|--|
| Digital Compression | MPEG 2 for DVD,SVCD<br>MPEG 1 for VCD |  |
|---------------------|---------------------------------------|--|

|                     |             |             |
|---------------------|-------------|-------------|
| <b>DVD</b>          | <b>50Hz</b> | <b>60Hz</b> |
| Horiz. resolution   | 720 pixels  | 720 pixels  |
| Vertical resolution | 576 lines   | 480 lines   |

|                     |             |             |
|---------------------|-------------|-------------|
| <b>VCD</b>          | <b>50Hz</b> | <b>60Hz</b> |
| Horiz. resolution   | 352 pixels  | 352 pixels  |
| Vertical resolution | 288 lines   | 240 lines   |

### AUDIO FORMAT

|         |                    |  |
|---------|--------------------|--|
| Digital | MPEG/ AC-3/<br>PCM | compressed Digital<br>16, 20, 24 bits<br>fs, 44.1, 48, 96 kHz            |
|         | MP3(ISO 9660)      | 96, 112, 128, 256<br>kbps & variable<br>bit rate fs, 32, 44.1,<br>48 kHz |

Analog Sound Stereo  
Dolby Surround compatible downmix from Dolby Digital  
multi-channel sound  
3D sound for virtual 5.1 channel sound on 2 speakers

### AUDIO PERFORMANCE

|                         |                 |            |
|-------------------------|-----------------|------------|
| DA Converter            | 24 bit, 192 kHz |            |
| DVD                     | fs 96 kHz       | 4Hz- 44kHz |
|                         | fs 48 kHz       | 4Hz- 22kHz |
| SVCD                    | fs 48 kHz       | 4Hz- 22kHz |
|                         | fs 44.1kHz      | 4Hz- 20kHz |
| CD/VCD                  | fs 44.1kHz      | 4Hz- 20kHz |
| Signal-Noise (1kHz)     | > 90 dB         |            |
| Dynamic range(1kHz)     | > 80 dB         |            |
| Crosstalk (1kHz)        | > 90 dB         |            |
| Distortion/noise (1kHz) | > 80 dB         |            |
| MPEG MP3                | MPEG Audio L3   |            |

### CONNECTIONS

|                   |  |
|-------------------|--|
| YPbPr Output      | Cinch 3x   |
| Video Output      | Cinch (yellow)   |
| Audio Output(L+R) | Cinch (white/red)  |
| Digital Output    | 1 coaxial<br>IEC60958 for CDDA / LPCM<br>IEC61937 for MPEG 1/2,<br>Dolby Digital |

### 6 channel analogue output

|                 |                   |
|-----------------|-------------------|
| Audio Front L/R | Cinch (white/red) |
| Audio Rear L/R  | Cinch (white/red) |
| Audio Centre    | Cinch (blue)      |
| Audio Subwoofer | Cinch (black)     |

### CABINET

|                        |                      |
|------------------------|----------------------|
| Dimensions (w x h x d) | 360 x 37 x 235 mm    |
| Weight                 | Approximately 2.0 kg |

### POWER CONSUMPTION

|                                   |                      |
|-----------------------------------|----------------------|
| Power Supply Rating               | 110-240V;<br>50/60Hz |
| Power consumption                 | < 10 W               |
| Power consumption in Standby mode | < 0.8 W              |

*Specifications subject to change without prior notice*



## Glossary

**Analog:** Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

**Aspect ratio:** The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs is 4:3, and that of wide-screens is 16:9.

**AUDIO OUT Jacks:** Jacks on the back of the DVD System that send audio to another system (TV, Stereo, etc.).

**Bit Rate:** The amount of data used to hold a given length of music; measured in kilobits per seconds, or kbps. Or, the speed at which you record. Generally, the higher the bit rate, or the higher the recording speed, the better the sound quality. However, higher bit rates use more space on a Disc.

**Chapter:** Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

**Component Video Out Jacks:** Jacks on the back of the DVD System that send high-quality video to a TV that has Component Video In jacks (R/G/B, Y/Pb/Pr, etc.).

**Disc menu:** A screen display prepared for allowing selection of images, sounds, subtitles, multi-angles, etc recorded on a DVD.

**Digital:** Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT COAXIAL or OPTICAL jacks. These jacks send audio through multiple channels, instead of just two channels as analog does.

**Dolby Digital:** A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right, center and subwoofer).

**DTS:** Digital Theatre Systems. This is a surround sound system, but it is different from Dolby Digital. The formats were developed by different companies.

**JPEG:** A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

**MP3:** A file format with a sound data compression system. "MP3" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. By using MP3 format, one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can.

**Multichannel:** DVD is specified to have each sound track constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

**Parental Control:** A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

**PCM (Pulse Code Modulation):** A system for converting analog sound signal to digital signal for later processing, with no data compression used in conversion.

**Playback control (PBC):** Refers to the signal recorded on video CDs or SVCDs for controlling reproduction. By using menu screens recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

**Progressive Scan:** It displays all the horizontal lines of a picture at one time, as a signal frame. This system can convert the interlaced video from DVD into progressive format for connection to a progressive display. It dramatically increases the vertical resolution.

**Region code:** A system for allowing discs to be played back only in the region designated beforehand. This unit will only play discs that have compatible region codes. You can find the region code of your unit by looking on the product label. Some discs are compatible with more than one region (or ALL regions).

**Surround:** A system for creating realistic three-dimensional sound fields full of realism by arranging multiple speakers around the listener.

**Title:** The longest section of a picture or music feature on DVD, music, etc., in video software, or the entire album in audio software. Each title is assigned a title number enabling you to locate the title you want.

**VIDEO OUT jack:** Jack on the back of the DVD System that sends video to a TV.