Quick start guide





Step A Connect

Step B


Setup

Step C

Enjoy

What's in the Box?

You should find these items upon opening the box.

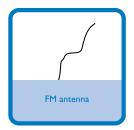














Step A Connect

Connect the speaker cables.

Connect the power cord of the system.

Connect the FM antenna.

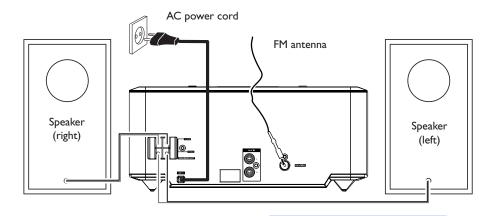

Tip

See the User Manual for how to connect other equipment to this system.

Step B Setup

Setting the clock

IMPORTANT!

 
- To set clock in the Eco Power mode, press and hold ECO POWER/STANDBY-ON ∅ on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

In standby mode, press and hold **CLOCK** on the remote.

When the hour digits flash, turn **VOLUME-/+** on the system or press **VOL+/-** on the remote to set the hours.

Press CLOCK again and the minute digits flash. Then turn VOLUME-/+ on the system or press VOL+/- on the remote to set the minutes.

Press **CLOCK** again to confirm the time setting.





Playing a disc

Press **SOURCE** on the system to select DISC or press **CD** on the remote.

Press extstyle extstyle

3

Insert a disc with the printed side facing up. Press riangle again to close the compartment.

4

Playback will start automatically. If not press > 11.

5

To stop playback, press .

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- Insert the USB device's USB plug into the socket 💝 on the set.
- Press SOURCE once or more (or USB on the remote control) to select USB.
- Play the USB's audio files as you do with the albums/tracks on a CD.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



