




TV

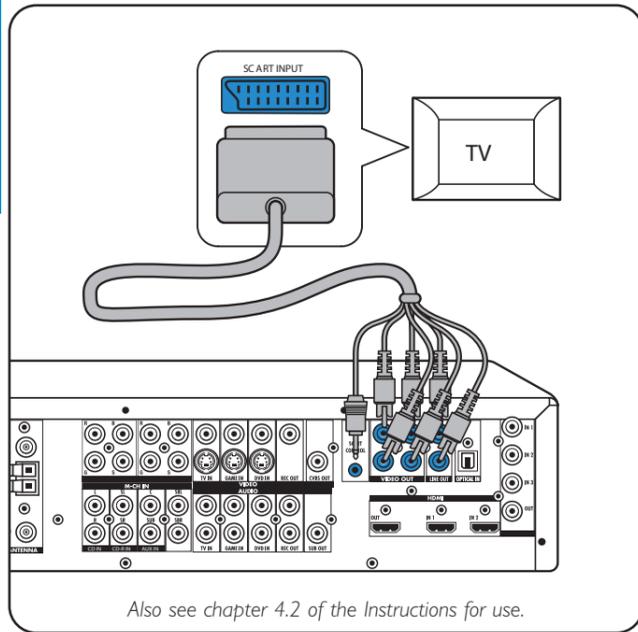


Analogue multichannel equipment

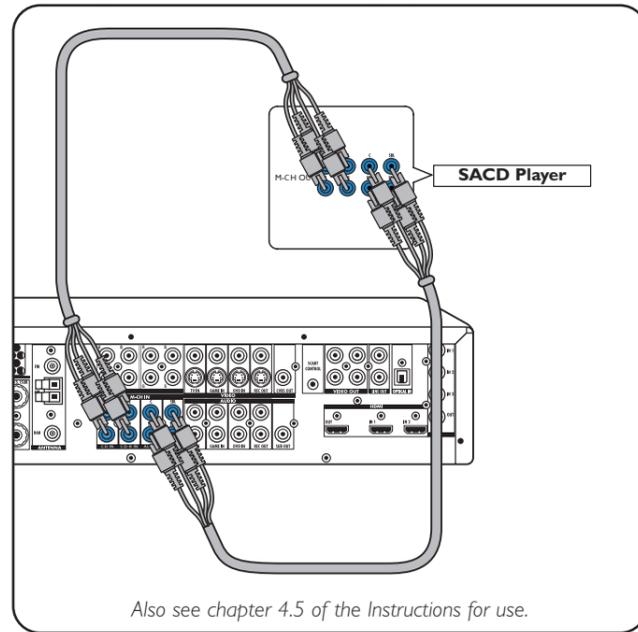


Analogue stereo audio equipment

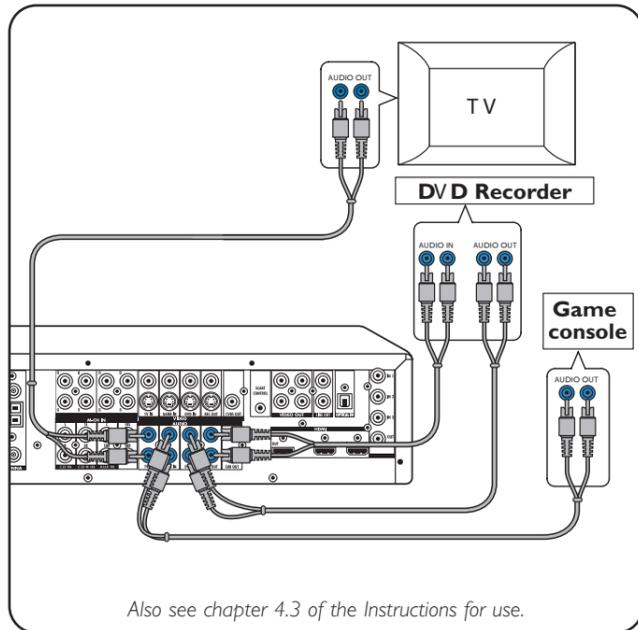


Digital HDMI equipment

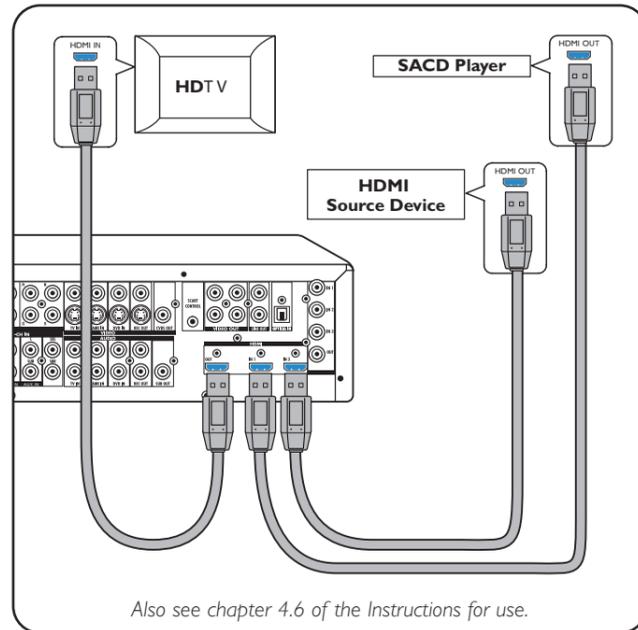

Digital audio equipment

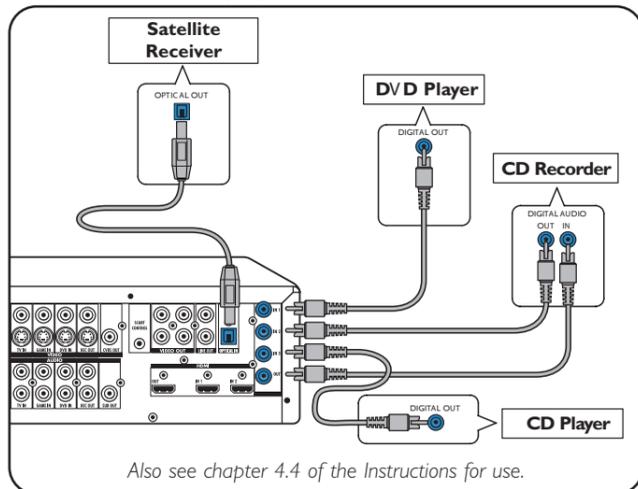


Antennas

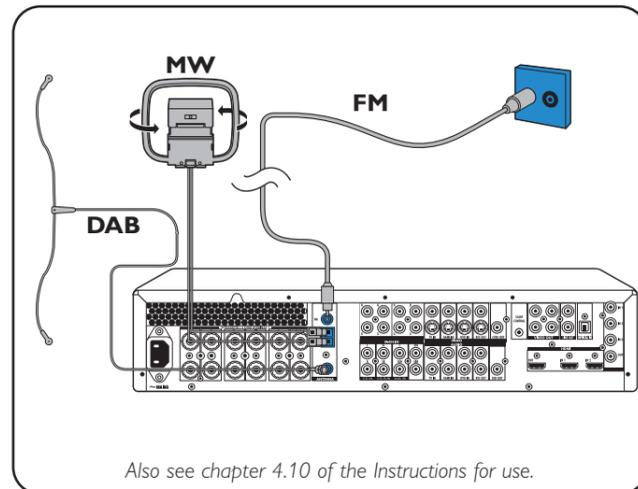


Video equipment
- Scart RGBS


The DIGITAL IN 1 and OPTICAL IN digital input sockets are preassigned as audio inputs for VIDEO 1 IN and VIDEO 2 IN. In case the connected equipment does not provide digital output, you should reassign other (analogue) audio input sockets for audio connection to this specific device. For this see 'Reassigning input sockets' under 'Preparation and setup'.

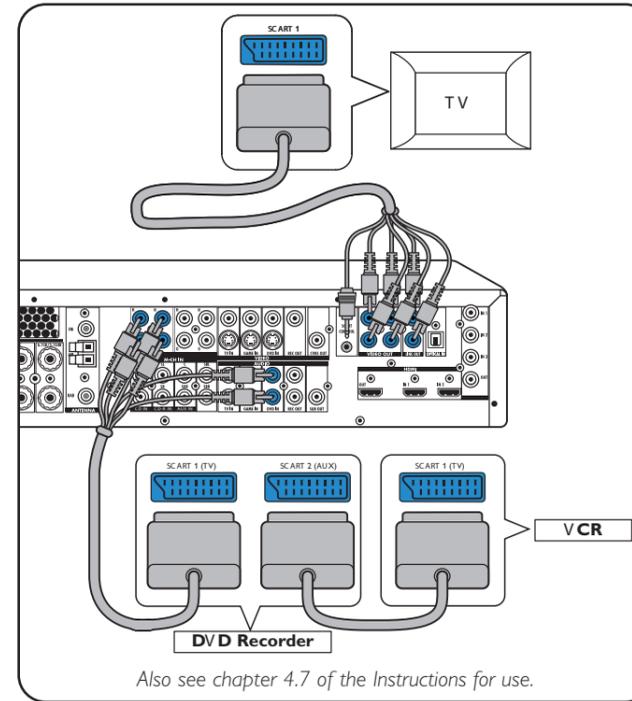

Video equipment
- Progressive Scan (Ycb/Cr,YPb/Pr)

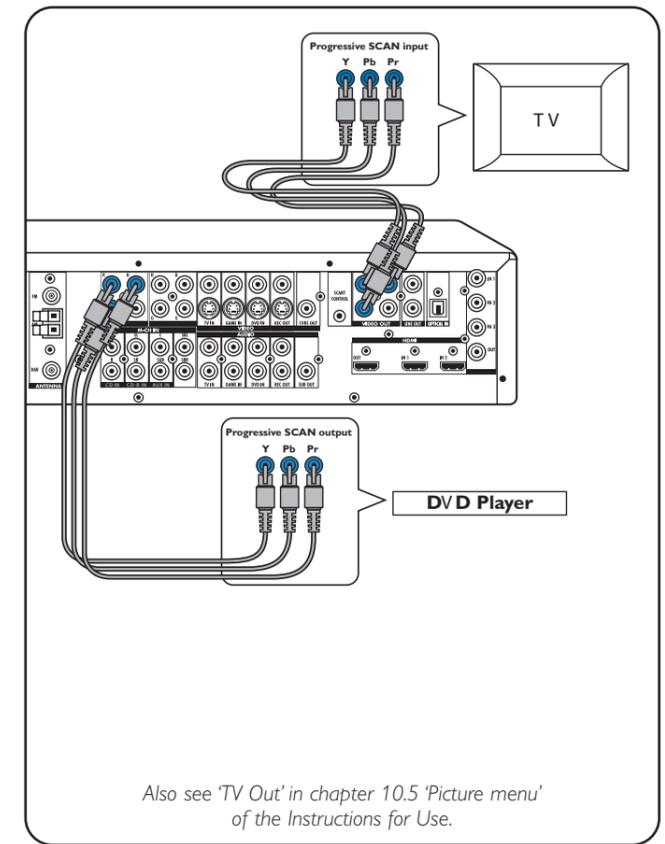


Speakers: 6.1 setup

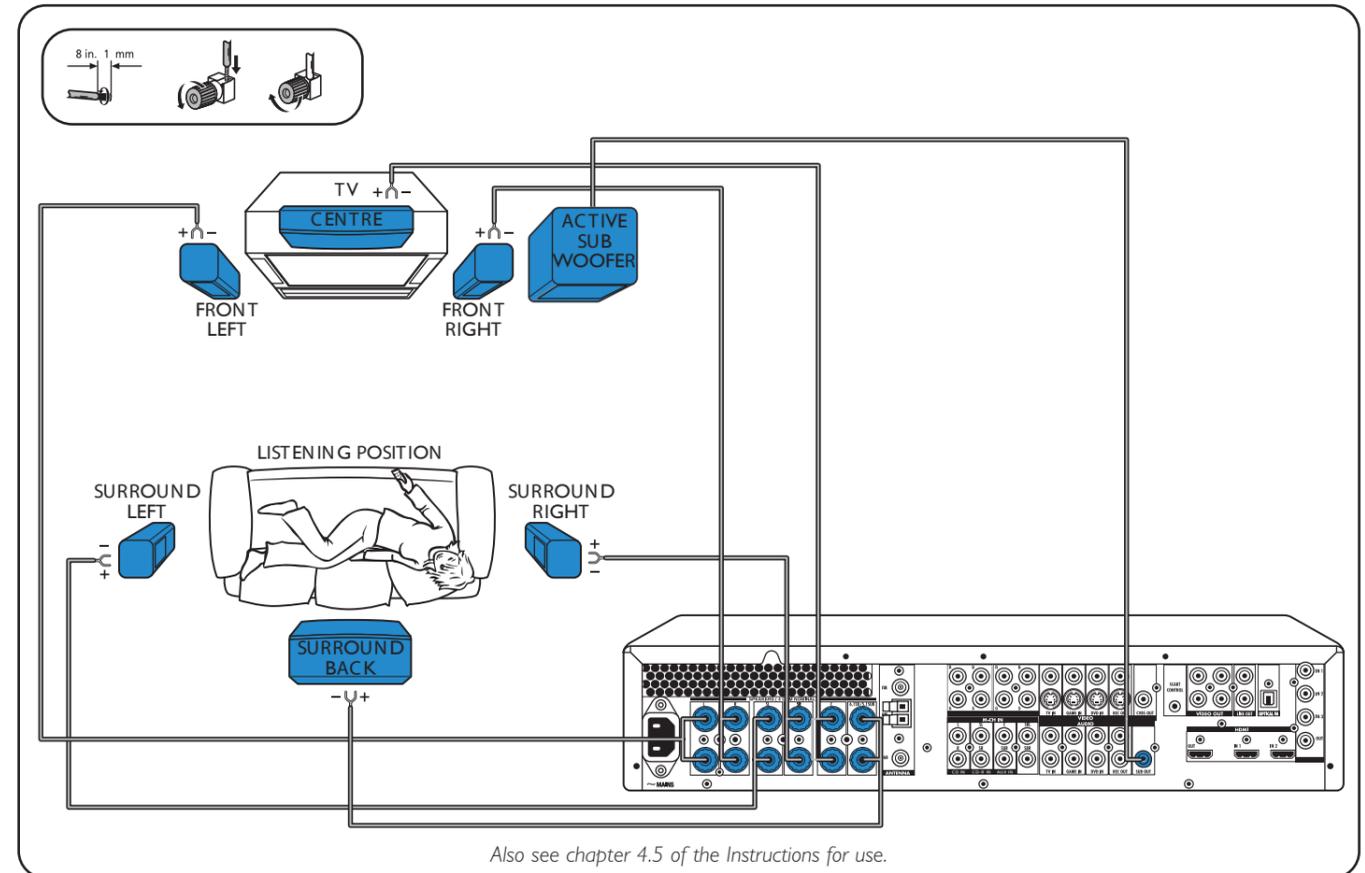


English

English


Preparation

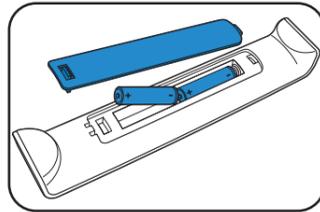


- Insert batteries in remote control.

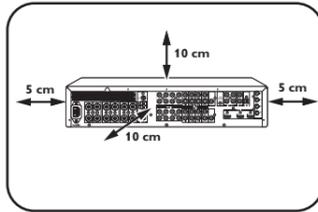

- Place set.

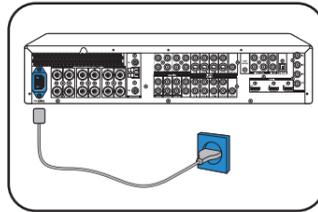


- Connect to the mains.

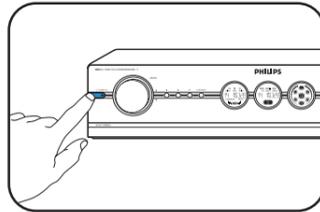


- Switch on set.

Menu navigation

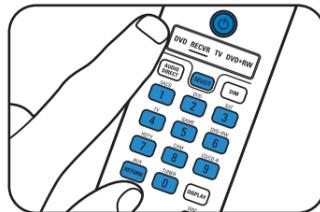

- 1 Switch on receiver and TV. Select A/V input on TV.
- 2 Use SELECT to select RECVR.
- 3 Use source selection buttons to select A/V source.

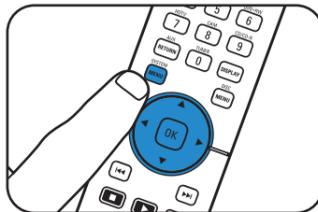

- 4 Press SYSTEM MENU to open system menu.



- 5 Use ▲ and ▼ to select submenus.
- 6 Confirm with OK.



- 7 Use ►, ◀, ▼ and ▲ to select sub menu items and settings.
- 8 Confirm with OK.
- 9 Press SYSTEM MENU to close the system menu.

OSD language selection



- 1 Use ▼ to select 'Config'. Confirm with OK.



- 2 Use ▼ to select 'Language'. Confirm with OK.
- 3 Use ► to select language. Confirm with OK.

Speaker size and distance



- 1 Use ▼ to select 'Speakers'. Confirm with OK.



- 2 Use ►, ◀, ▼ and ▲ to set speaker size and distance for all speakers. Confirm with OK.

Speaker volume



- 1 Use ▼ to select 'Balance'. Confirm with OK.



- 2 Use ►, ◀, ▼ and ▲ to set speaker volume for all speakers. Confirm with OK.

Reassigning input sockets*



- 1 Use ▼ to select 'AV input'. Confirm with OK.




- 2 Use ▼ and ▲ to AV source (e.g. CD Audio). Confirm with OK.
- 3 Use ◀ and ► to select input socket for this source (e.g. GAME IN). Confirm with OK.


* Only necessary if you wish to connect a device for which no socket(s) is/ are preassigned.

Note: For more detailed information on preparation and setup of your DFR9000 see chapters 4 'Installation', 5 'System menu and 6 'Setting up the receiver' of the Instructions for Use.

Playback

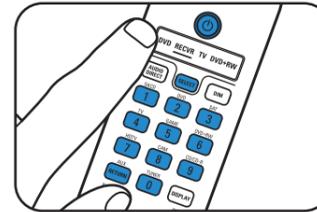


- 1 Use SELECT to select RECVR.
- 2 Switch on receiver and source.
- 3 Use source selection buttons to select source.
- 4 Start playback on source.

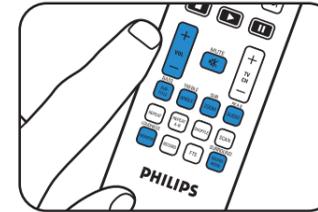

- Use the sound control buttons to adjust the sound.
- Use SURROUND to select surround modes.

Tuning to radio stations (FM, FM-M, MW)

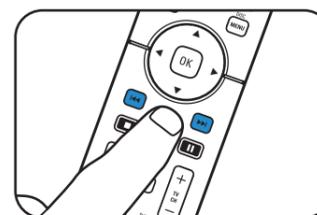

- 1 Use SELECT to select RECVR.
- 2 Use TUNER to select tuner.
- 3 Keep ◀ or ► pressed for about 1 second, then release.
- 4 Press ◀ or ► again to interrupt searching.

Storing preset radio stations




- 1 Press SYSTEM MENU to open the system menu.
- 2 Use ▼ to select 'Tuner'. Enter with ►.



- 3 Use ▼ to select 'Autoprogram'. Enter with ►.
 - 4 Use ▲ and ▼ to select the station number from which onwards radio stations will be stored. Confirm with OK.
- > Storing preset radio stations may take several minutes.

Tuning to preset radio stations

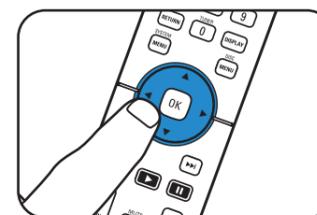

- Use ►, ◀, ▼ or ▲ to select preset radio stations.

Storing DAB radio stations



- 1 Press SELECT to select RECVR.
- 2 Use TUNER to select DAB.




- 3 Press SYSTEM MENU to open the system menu. Enter with ►.
- 4 Use ▼ to select 'Tuner'. Enter with ►.



- 5 Use ▼ to select 'Dab scan'.
 - 6 Press OK (7) to select 'New'.
- > Storing DAB radio stations may take several minutes.

Tuning to DAB radio stations

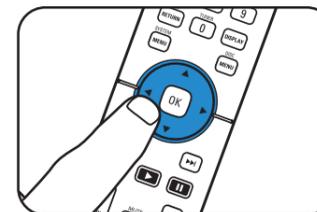

- Press ◀ or ► to select preset DAB radio stations.

Note: For more detailed information on operating your DFR9000 see chapters 7 'Operating the amplifier' and 8 'Operating the tuner' of the Instructions for Use.

