# Always there to help you

Register your product and get support at www.philips.com/support



AZB798T



# User manual



## **Contents**

1	Important Hearing safety	2 2
2	Your CD Soundmachine Introduction What's in the box Overview of the main unit Overview of the remote control	3 3 3 4 5
3	Get started Prepare the remote control Connect power Turn on Turn off	7 7 7 8 8
4	Play Play CD Play from USB devices Play from Bluetooth-enabled devices Play tape Play from an external device	9 9 9 9 10 11
5	Play options Control play Program tracks Adjust sound	12 12 12 12
6	Listen to FM radio Tune to FM radio stations Store radio stations automatically Store radio stations manually Select a preset radio station	13 13 13 13 13
7	Listen to DAB radio stations Listen to DAB radio stations For the first time use Program radio stations Display DAB information Use DAB menus	14 14 14 14 14 14

8	Use system menus	16
	Reset the product	16
	Check the current software version	16
9	Other features	17
	Set the sleep timer	17
	Adjust the display brightness	17
	Listen through the headphone	17
10	Product information	18
	Specifications	18
	Supported MP3 disc formats	19
	USB playability information	19
	Maintenance	19
11	Troubleshooting	21
12	Notice	22
	Compliance	22
	Care of the environment	22
	Trademark notice	22

# 1 Important



#### Warning

- · Never remove the casing of this apparatus.
- · Never lubricate any part of this apparatus.
- · Never look into the laser beam inside this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.
- The device shall not exposed to dripping or splashing.
- Do no place any source of danger on the device (e.g. liquid filled objects. lit candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Make sure that there is enough free space around the product for ventilation.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and as marked on the unit.
  - Batteries (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
  - Remove batteries when the unit is not used for a long time.
- Only use attachments/accessories specified by the manufacturer.



#### Warning

- · Never remove the casing of this apparatus.
- Never place this apparatus on other electrical equipment.
- · Never look into the laser beam inside this apparatus.

## Hearing safety



#### Caution

 To avoid hearing damage, limit the time you use the headphones at high volume and set the volume to a safe level. The louder the volume, the shorter is the safe listening time.

# Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Excessive sound pressure from earphones and headphones can cause hearing loss.



#### Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous laser exposure or other unsafe operation.

# 2 Your CD Soundmachine

## Introduction

With this CD Soundmachine, you can:

- listen to FM radio;
- enjoy audio from tapes, USB device, Bluetooth devices, and other external audio devices:
- program the play sequence of tracks.


The unit offers you Dynamic Bass Boost (DBB) and Digital Sound Control (DSC) to enrich sound.

## What's in the box

Check and identify the contents of the package:

- Main unit
- AC power cord
- Remote control (with battery)
- Short user manual
- Safety sheet

## Overview of the main unit

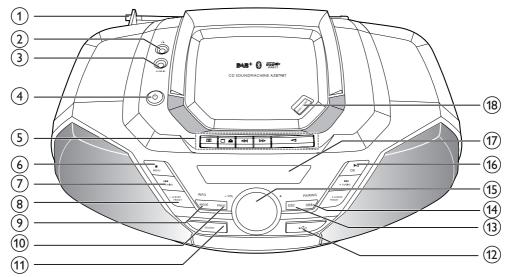

- (1) FM antenna
  - Improve FM reception.
- (2) n
  - · Headphone socket.
- 3 AUDIO-IN
  - Connect an external audio device.
- **4** ¢
  - Turn the unit on or off.
- 5 Tape controls
  - ं∢

Start tape play.

**44/ >>** 

Fast rewind or fast forward the tape. Stop tape play or open the tape door.

• II

Pause tape play.

- 6 ■/MENU
  - Stop play.
  - Erase a program.
  - Enter DAB+/FM menu.
- (7) I◀◀ / ▶▶I TUNING +/-
  - Skip to the previous or next track.

- Tune to FM radio stations.
- Search within a track
- (8) ALBUM/PRESET -/+
  - Select a preset radio station.
  - Skip to the previous or next album.
- (9) MODE/INFO
  - Select a play mode: repeat or shuffle.
  - Display the play information.
- 10 PROG
  - Program tracks.
- 11) SOURCE
  - Select a source
- (12) •⊲
  - USB socket
- (13) DSC
  - · Select a preset sound setting.
- (14) DBB/PAIRING
  - · Turn dynamic bass boost on or off.
  - In Bluetooth mode, press and hold to enter pairing mode.
- (15) VOL +/-
  - Adjust volume.

#### (16) ► II /OK

- Press to start or pause the play.
- · Confirm the selection.


### (17) Display panel

Display current status.

#### (18) OPEN•CLOSE

Open the disc compartment.

# Overview of the remote control

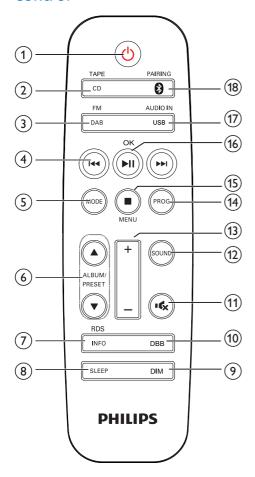

#### (1) <sub>(j)</sub>

• Turn the unit on or off.

#### (2) CD/TAPE

- Select the DISC source.
- Select the tape source.

#### (3) FM/DAB

- Select the FM source.
- Select the DAB source.

#### (4) |**44**/**>>**|

- Skip to the previous/next track.
- Search within a track/disc/USB.
- Tune to a radio station.
- Adjust time.

#### (5) MODE

• Select the play mode.

#### (6) ALBUM/PRESET ▲ / ▼

- Select a preset radio station.
  - Skip to the previous/next album.

#### (7) INFO/RDS

- During playback, display the play information.
- For selected FM radio stations, display RDS information(if available).

#### (8) SLEEP

· Set sleep timer.

#### (9) DIM

Adjust the display brightness.

#### (10) DBB

 Turn dynamic bass enhancement on/ off.

#### (11) 😘

Mute or restore volume.

#### (12) SOUND

 Enrich sound effect with Digital Sound Control (DSC).

#### (13) +/-

Adjust volume.

#### (14) PROG

- Program tracks.
- Program FM/DAB+ radio stations.

## (15) **■**/MENU

- Stop play or erase a program.
- Access FM/DAB+ menu.

## (16) ► II /OK

- Start, pause, or resume play.
- Confirm the selection.

### (17) USB/AUDIO IN

• Press repeatedly to select the USB or AUDIO IN source.

### (18) **0** /PAIRING

- Press to select the BT (Bluetooth) source.
- Press and hold for 2 seconds to enter pairing mode

## 3 Get started



#### Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous laser exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your apparatus. The model number and serial number are on the bottom of your apparatus. Write the numbers here:

Model No.	
Serial No	

## Prepare the remote control



#### Caution

 Risk of product damage! When the remote control is not used for long periods, remove the batteries.

#### To insert the remote control battery:

- 1 Open the battery compartment.
- 2 Insert the supplied AAA battery with correct polarity (+/-) as indicated.
- **3** Close the battery compartment.



## Connect power

The unit can be powered by either AC power or batteries.

## Option 1:AC power



#### Warning

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you disconnect the AC power, always pull the plug from the socket. Never pull the cord.


#### Connect the AC power cord to:

- the AC~ MAINS socket on the unit.
- · the wall socket.



#### Гір

· To save energy, turn the unit off after use.

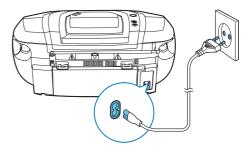

### Option 2: Battery power




#### Caution

 Batteries contain chemical substances, so they should be disposed of properly.



#### Note

- · Batteries are not supplied with the accessories.
- Open the battery compartment.
- 2 Insert 6 batteries (type: R-20 or D CELL) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

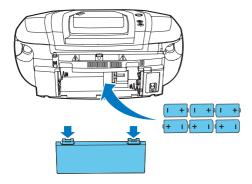

## Turn on

#### Press O.

→ The unit switches to the last selected source.



#### Гір

• To select a source, press **SOURCE** repeatedly or the source selection buttons on the remote control.

## Turn off

## Press & again.

→ The backlight on the display panel turns off.

## Play CD

- Press CD to select the disc source.
- Press **OPEN•CLOSE** to open the disc tray.
- Insert a disc with the printed side facing up, then close the disc tray.
  - → Play starts automatically.



## Play from USB devices



Note


- Make sure that the USB device contains playable audio content.
- Press **USB** to select USB source.
- Insert the USB device into the •← socket.
  - → Play starts automatically. If not, press

**▶II** 



Note

The maximum current for USB is 0.5A.

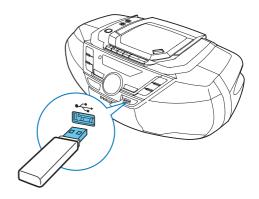

## Play from Bluetooth-enabled devices


With this product, you can listen to audio from Bluetooth-enabled devices.



Note

- · WOOX Innovations does not guarantee the compatibility with all Bluetooth devices.
- · Before pairing a device with this product, read its user manual for Bluetooth compatibility. Make sure that the connected Bluetooth device supports the Advanced Audio Distribution Profile (A2DP) and the Audio Video Remote Control Profile (AVRCP).
- The product can connect a maximum of 8 Bluetooth devices simultaneously.
- · Make sure that Bluetooth function is enabled on your device, and your device is set as visible to all other Bluetooth devices.
- · The operational range between this product and a Bluetooth device is approximately 10 meters (33 feet).
- · Any obstacle between this product and a Bluetooth device can reduce the operational range.
- · Keep away from any other electronic device that may cause interference.
- Press BT to select Bluetooth source.
  - → [BLUETOOTH](Bluetooth) is displayed.
  - → The CD sound machine enters pairing mode, and [PAIRING] (Pairing) is displayed on the screen.

- On your Bluetooth device, enable Bluetooth and search for Bluetooth devices (refer to the user manual of the device).
- 3 Select [Philips AZB798T] on your device for pairing. If necessary, enter default password "0000".
  - → After successful pairing and connection, the product beeps twice, and [CONNECTED] (connected) is displayed on the screen.

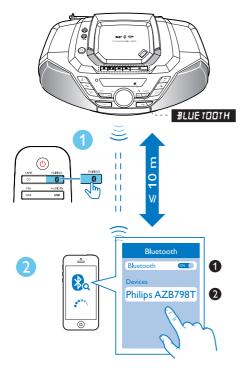

- 4 After successful Bluetooth connection, play audio on the Bluetooth device.
  - → Audio streams from your Bluetooth device to the product.
  - To skip to previous/next track, press
     ▶1 / ▶1.
  - To pause or resume the playback, press
     ▶■



#### Vote

 If you cannot find [Philips AZB798] on your device, pressDBB/PAIRING on the main unit or ③ //PAIRING on remote control for 2 seconds to enter pairing mode.[PAIRING] (Pairing) is display on the screen.

# Disconnect the Bluetooth-enabled device

- Press and hold PAIRING for 2 seconds;
- Disable Bluetooth on your device; or
- Move the device beyond the communication range.

# Connect another Bluetooth-enabled device

Disable Bluetooth on the current device, and then connect another device.

## Clear Bluetooth pairing history

Press and hold for 7 seconds to clear the Bluetooth pairing history.

## Play tape



#### Note

- The CD sound machine will turns off automatically after an elapsed time of inactivity at tape mode.
- 1 Press CD/TAPE repeatedly to select TAPE source.
- Press / ≜ on the CD sound machine to open the tape door.
- **3** Load the tape with the open side upward and the full spool to the right.
- 4 Press ◀ on the CD sound machine to start play.
  - To pause/resume play, press on main unit .

- To rewind or fast-forward, press ◀◀/
   ▶ on CD sound machine .
- To stop play, press ≜.
- → The CD sound machine turns off automatically.




- In playback mode, cassette will be stopped automatically when playback reaches the end.
- There is no display on the LCD screen in tape mode.

## Play from an external device

You can also listen to an external audio device such as an MP3 player through this product.

- 1 Press TUNER/AUDIO IN repeatedly to select [AUDIO-IN] source.
- 2 Connect an audio cable (3.5mm, not supplied) to:
  - the AUDIO-IN socket on the unit.
  - the headphone socket on an external device.
- 3 Play the external device (see the device's user manual).

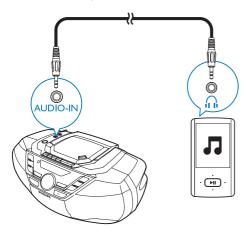

# 5 Play options

## Control play

In CD or USB mode, you can control play through the following operations.

<b>44/</b>	Press and hold to fast-forward or fast-reverse the track during
	playback, then release to resume play.
<b>A</b> / <b>V</b>	Skip to the previous or next MP3 album.
<b> </b>	Skip to the previous or next track.
►II	Start or pause play.
	Stop play.
MODE	[ � ]: Play the current track repeatedly.
	[ �ALL ]: Play all tracks repeatedly.
	[ 🎞 ]: Play tracks randomly.



• Only [ ] and [ ] can be selected when you play the programmed tracks.

## Program tracks

In CD or USB mode, you can program a maximum of 20 tracks.

- 1 Press to stop playback.
- 2 Press **PROG** to activate the program mode.
  - → [PROG] (program) begin to blink.
- For MP3 tracks, press ALBUM/PRESET +/to select an album.
- 4 Press I ✓ / ► I to select a track number, then press PROG to confirm.
- 5 Repeat steps 3-4 to program more tracks.

- 6 Press ►II to play the programmed tracks.
  - → During play, [PROG] (program) is displayed.
    - To erase the program, press twice.
    - To review the program, when playback is stopped, press and hold PROG for 2 seconds.

## Adjust sound

During play, you can adjust volume and select the sound effects.

Key	Function
VOL +/-	Increase or decrease volume.
ı¢x	Mute or resume sound.
DBB	Turn dynamic bass enhancement on or off.
SOUND	Select a preset sound effect:  POWERFUL (powerful);  BALANCE(balance);  WARM(warm); BRIGHT(bright), and CLEAR(clear),

# 6 Listen to FM radio

## Tune to FM radio stations



Note

- For optimal reception, fully extend and adjust the position of the FM antenna.
- 1 Press **FM/DAB** repeatedly to select FM radio source.
- Press and hold ◀ / ▶ for 2 seconds.
  - **→ [SEARCH]** (search) is displayed.
  - → The product tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations. To tune to a radio station with weak signal: Press ◄ / ▶ repeatedly until you find better reception.

# Store radio stations automatically



Note

You can program a maximum of 20 FM radio stations.

In tuner mode, press and hold **PROG** for 2 seconds.

- → [AUTO STORE] (auto store) is displayed.
- → The unit stores all the available FM radio stations.
- → The first stored radio station is broadcast automatically.

## Store radio stations manually



Note

- You can program a maximum of 20 FM radio stations.
- 1 Tune to an FM radio station.
- 2 Press **PROG** to activate the storing mode.
- 3 Press ▲ ▼ to allocate a number (1 to 20) to this radio station, then press PROG to confirm
  - → The preset number and the frequency of the preset station are displayed.
- **4** Repeat the above steps to store other stations.



Note

 To remove a pre-stored FM radio station, store another station in its place.

## Select a preset radio station

In FM tuner mode, press  $\blacktriangle \nabla$  to select a preset number

# 7 Listen to DAB radio stations

5 Repeat steps 1-4 to program more radio stations.



Vote

 If you store a radio station with the sequence number of another one, the earlier one is overwritten.

## Listen to DAB radio stations



Note

- For optimal reception, fully extend the antenna and adjust its position.
- You can program a maximum of 20 DAB radio stations.
- Check with local retailer or go to www.WorldDAB.org for applicable DAB radio frequencies in your area.

## For the first time use

- 1 Press FM/DAB to select the DAB source.
  - → [Full scan] menu is displayed.
- 2 Press **OK** to activate the automatic search.
  - → This product automatically stores radio stations with sufficient signal strength.
  - → After the search is complete, the first stored radio station is broadcast automatically.
- 3 Press ▲ / ▼ to select a station, and then start listening.

## Program radio stations

- **1** Tune to a DAB radio station.
- 2 Press **PROG** to activate the programming.
- 3 Press ▲ ▼ to select a preset sequence number.
- 4 Press PROG to confirm.
  - → The radio station is stored with the selected sequence number.

## Display DAB information

On the display of DAB broadcasting, the first line shows station name, and the second line shows the service information for the current station.

Press INFO/RDS (INFO/MODE) repeatedly to cycle through the following information (if available).

- Dynamic label segment (DLS)
- Signal strength
- Program type (PTY)
- Ensemble name
- Frequency
- Signal error rate
- Bitrate codec
- Time
- Date

## Use DAB menus

- 1 In DAB mode, press MENU to access the DAB menus.
- 2 Press I◄ / ►► to toggle through the menus.
  - **[FULL SCAN]**:Scan for the DAB stations.
  - [MANUAL]: Tune to a station manually.
  - [PRUNE]: Remove invalid stations
  - [SYSTEM]: Access system setting menu.
- 3 Press OK to enter the menu.

#### Re-scan for stations

Full scan is used to perform a wide range search for DAB radio stations.

- Press OK to activate the automatic search.
  - → This product automatically stores radio stations with sufficient signal strength.

## Tune to a station manually

With this feature, you can tune to a specific channel/frequency manually. In addition to antenna orientation for better radio reception, the optimal reception can also be obtained with this feature.

- 1 Press OK to access the station list.
- Press ◄ / ▶ I to select a station.
- **3** Press **OK** to confirm the option.

#### Remove invalid stations

This option lists active stations and removes any stations that are in the list but have no service in your area.

- 1 Press OK to access the [PRUNE] menu.
- Press I◄◄ / ▶►I to select an option.
  - [N]: Return to the previous menu.
  - [Y]: Remove invalid stations from the station list.
- **3** Press **OK** to confirm the selection.

## System menus

- 1 Press OK to access system menu.
- Press I◀◀ / ▶▶I to to select a sub-menus.
- For details, refer to the section 'Use system menus'.

## 8 Use system menus

With the system menus, you can:

- [RESET]: Reset the product to factory default status.
- [UPGRADE]: Upgrade the software.
- [SW VER]: Check the version of current software of this product.

## Reset the product

- Press **OK** to display the options.
- 2 Press I◀◀ / ▶▶I to select an option.
  - [N]: Return to the previous menu.
  - [Y]: Reset the product to factory default status
- **3** Press **OK** to confirm the option.

## Check the current software version

Press **OK** to display the version of current software.

## 9 Other features

## Set the sleep timer

This unit can switch to standby automatically after a preset period.

When the unit is turned on, press **SLEEP** repeatedly to select the sleep timer period (in minutes).

→ When the sleep timer is activated, z² appears.

#### To deactivate sleep timer:

- Press SLEEP repeatedly until [SLEEP OFF] (sleep off) is displayed.
  - When sleep timer is deactivated, z² disappears.

## Adjust the display brightness

Press **DIM** repeatedly to select different brightness levels.

## Listen through the headphone

Plug a headphone into the  $\Omega$  socket on the unit.

# 10 Product information



## Note

 Product information is subject to change without prior notice.

## **Specifications**

A				
Αm		l i tr	$\sim$	r
	v	ш	ᆫ	

Max Output Power	Total 12 W
Frequency Response	63 -20 KHz, +/-3dB
Signal to Noise Ratio	>72 dBA
Total Harmonic	<1 %
Distortion	
Audio-in Input	650 mV RMS
	22kohm

## Disc

Laser Type	Semiconductor
Disc Diameter	12cm/8cm
Support Disc	CD-DA, CD-R, CD-
	RW, MP3-CD
Audio DAC	24Bits / 44.1kHz
Total Harmonic	<1%
Distortion	
Frequency Response	63 -20 KHz, +/-3dB
S/N Ratio	>72 dBA

### Tuner

Tuning Range	FM: 87.5 - 108MHz
	DAB: 174.928 -
	239.200 MHz
Tuning grid	50 kHz
Preset stations	20

Sensitivity:	
-Mono, 26dB S/N Ratio	<22 dBf
-Stereo, 46dB S/N Ratio	<43 dBf
Search Selectivity	<28dBf
Total Harmonic	<2%
Distortion	
Signal to Noise Ratio	>55 dB

## Tape deck

Frequency response	125 - 8000 Hz	
- Normal tape (type I)	(8 dB)	
Signal-to-noise ratio		
- Normal tape (type I)	35 dBA	
Wow and flutter	≤ 0.4% DIN	

## Bluetooth

Bluetooth Version	V5.0 + EDR
Range	10 m (Free space)
Frequency band/	2.400GHz - 2.483GHz
Output power	ISM Band / ≤ 4dBm
	(Class 2)

## General

Power supply	
- AC Power	220-240V~, 50/60 Hz;
- Battery	DC 9 V, 6 x 1.5 V/
	R-20 /D CELL
Operation Power	15 W
Consumption	
Standby Power	< 0.5 W
Consumption	
Dimensions	
- Main Unit	$435 \times 170 \times 271 \text{ mm}$
$(W \times H \times D)$	
Weight (Main Unit)	2,96 kg

## Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 512 (depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32~256 (kbps), variable bit rates

## **USB** playability information

#### Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this apparatus)

#### Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

#### Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and is not be shown in the display.
- Unsupported file formats are skipped.
   For example, Word documents (.doc) or
   MP3 files with extension .dlf are ignored and not played.
- WMA, AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

## **Maintenance**

#### Clean the cabinet

 Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

#### Clean discs

 When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.



 
 Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

#### Clean the disc lens

 After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Philips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

#### Clean the heads and the tape paths

- To ensure good recording and play quality, clean the heads A, the capstan(s) B, and pressure roller(s) C after every 50 hours of tape operation.
- Use a cotton swab slightly moistened with cleaning fluid or alcohol.



• You can also clean the heads by playing a cleaning tape once.

## Demagnetise the heads

Use a demagnetising tape available at your dealer.

## 11 Troubleshooting



#### Warning

· Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

#### No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the battery.

#### No sound or poor sound

Adjust the volume.

#### No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the system again.
- As a power-saving feature, the unit switches off automatically 15 minutes after track play reaches the end and no control is operated.

#### Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/– signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

#### USB device not supported

 The USB device is incompatible with the apparatus. Try another one.

#### No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

#### Poor radio reception

- Increase the distance between the unit and yourTV orVCR,
- Fully extend the FM antenna.

## Music playback is unavailable on this unit even after successful Bluetooth connection.

 The device cannot be used to play music through this unit wirelessly.

## The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.

#### Bluetooth cannot be connected with this unit.

- The device does not support the profiles required for this unit.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device to find out how to enable the function.
- This unit is not in pairing mode.
- This unit is already connected with another Bluetooth-enabled device. Disconnect that device and then try again.

# The paired mobile device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.
- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of this unit.
- For some devices, the Bluetooth connection may be deactivated automatically as a power-saving feature.
   This does not indicate any malfunction of this unit.

## 12 Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

## Compliance

## Declaration of conformity

Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. You can find the Declaration of Conformity on www.philips.com/support.

## Care of the environment

## Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health

#### Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)
Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

## Trademark notice



The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limitedis under license.

Other trademarks and trade names are those of their respective owners.

This apparatus includes these labels:



Class II equipment symbol



This symbol indicates that the apparatus has a double insulation system.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, Inc.



Note

 The type plate is located on the bottom of the apparatus.



2021 © MMD Hong Kong Holding Limited. All rights reserved. Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.