 
Philips Portable DVD Player PET714

# juick start guide

## 1 Charge your battery

This portable DVD player is designed with a built-in Ni-MH battery to supply power to the player when you are on travel.

1 Slide the **POWER** switch to the **OFF** position (charging of the DVD player only possible in the power-off mode).





- 2 Connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) to start charging.

  → The CHG indicator turns red.

  → When the battery is fully charged, the
- indicator turns off.
- 3 Disconnect the power adaptor cord (or the car adaptor) when the CHG indicator turns off.

You can also connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car agarette lighter outlet) directly wherever

# Enjoy (Disc operation)



- Open the lid of the player.
   Slide the **POWER** switch to **ON** to switch on the DVD player.

  → The **POWER** indicator turns on.
- 4 Remove the protective card (if any) and load a disc with the label side facing up. 3 Press **OPEN** to open the disc door.
- 5 Close the disc door. Playback will start automatically. If not, press ►II.
- 6 To stop playback, press ■.

 
Once the battery is fully discharged, immediately recharge
it (regardless of whether you plan to use the battery or not)
in order to maximize the battery life. When the power is low,
the battery icon will be shown on the upper-left corner of
the TFT for warning.




### 1 Connect the AV OUT socket on the set to the video and audio sockets on a TV as shown Connecting additional equipment (TV for example)

Enjoy (AV OUT)

- directly.
- 2 Switch on the TV and set to the correct video-in channel.
- → You can consult the owner's manual of your TV. (If your TV does not have Audio and Video inputs, you will need to purchase a RF modulator. Please consult your dealer.)



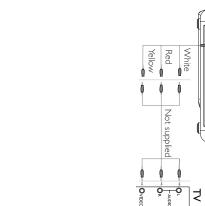

Printed in China

WK742

### ■ OPEN HERE