



請在以下網站鏈接中了解詳情

www.philips.com

本手冊內容與實物可能存在差異，請以實物為準，如產品有任何更新恕不另行通知。

©2023 AquaShield
All rights reserved

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.
This product has been manufactured by and is sold under the responsibility of Hongkong AquaShield Health Technology Company Limited and Hongkong AquaShield Health Technology Company Limited is the warrantor in relation to this product.

水護盾是飛利浦淨飲水解決方案、熱水解決方案、衛浴解決方案、水杯及個人按摩器唯一品牌官方授權運營主體。

Rev A SEP 23



PHILIPS

足部按摩器

足浴按摩器

PPM6501



User Manual
使用說明書

Contents

1 Readme

Symbol Description

People Restricted or Prohibited from Use

Precautions for Use

Precautions for Maintenance

2 Product Features

3 Components

4 How to Use

5 Maintenance

Cleaning

Storage

6 Troubleshooting

7 Technical Parameters

8 Service Guideline for Warranty

Warranty and Service

Warranty Card

9 Packing List

1 Readme

Please read this manual carefully before using the product and keep it properly. The manual is available at www.philips.com

Symbol Description

To avoid personal injury or property damage, be sure to observe the contents below.

- The following symbols are used to illustrate what you should observe.

 Indicates prohibition


 Indicates the actions that need to be subject to instructions

People Restricted or Prohibited from Use

 The product should be used with caution by the following group

- People who have a pacemaker or other related medical electrical products implanted in their bodies.
- People with malignant tumors.
- People with heart disease.
- People who are pregnant or postpartum women.
- People with highly limited nerve endings due to diabetes.
- People with skin trauma.
- People whose body temperature is above 38 °C.
- People who have current back pain or past pain in head, waist and feet.

- People who are easy to suffer from numbness in their hands and feet
- People who have difficulty with respirators
- People suffering from hypertension
- People with acute symptoms such as visceral diseases (gastritis, hepatitis, gastroenteritis)
- People who have lost skin temperature sensation
- People who have experienced low-temperature burns
- People who have vascular disorders
- People who use restorers
- People with abnormal body sensations

 The product is not allowed to be used by the following groups/ under the following circumstances

- This product is not suitable for patients with heart disease, severe thrombosis and cerebral stasis, or can only be used after consulting a doctor.
- Children, disabled individuals, mentally disabled individuals, elderly individuals with slow reactions, and those who are not sensitive to heat or cold should use this product with the help of others.
- People who are sensitive to heat should not use this product because its heated surfaces are prone to temperature rise.
- People with inflammation, trauma, skin burns in the feet should not use this product.
- Stop using the product immediately in case of abnormal reactions such as back pain, dizziness, vomiting, palpitation during use.
- This product is set for 30-minute timing at a time. Do not use it for more than 30 minutes each time. After each use, stop the device for 30 minutes to ensure the extension of its service life.
- Do not use it for purposes other than foot massage.

- Do not use the product under the following circumstances:
 - When you are severely tired
 - Within 30 minutes before and after meals
 - When you are drunk
-

Precautions for Use

- ❗ The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.
- ❗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ❗ Children should be supervised to ensure that they do not play with the appliance.
- ❗ If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- ❗ Ensure that the power cord and plug are dry and away from heat sources during use.
- ❗ This product should be placed horizontally during use, and should also be placed horizontally for safekeeping after use.
- ❗ If liquid leaks from the device, it cannot be used again.
- ❗ If reusing the product that has not been used for a long time, it is necessary to confirm in advance whether the switches and functions are normal.
- ⊘ It is strictly prohibited to forcefully pull the power cord or use the power cord to hang this product, in order to avoid damage to the power cord.

- ⊘ It is strictly prohibited to use this product without water. After use, please cut off the power and unplug the power cord before pouring water.
 - ⊘ It is strictly prohibited to use the product in case of damage.
 - ⊘ It is strictly prohibited to stand or place heavy objects inside the product.
 - ⊘ Do not pour hot water above 46°C directly into the machine to avoid burns on feet or product deformation due to high temperature.
 - ⊘ The product cannot be added with corrosive or granular or flocculent liquids.
 - ⊘ It is strictly prohibited to press or step on the upper cover or edge of basin when it is filled with water.
 - ⊘ Non-professional personnel are strictly prohibited from disassembling the product.
-

 
 
Precautions for Maintenance

- ❗ Keep the filter clean to avoid clogging and damaging the foot spa massager.
- ❗ Be sure to unplug the power cord during maintenance.
- ⊘ During maintenance, do not use volatile oil, thinner, alcohol, strong alkaline detergent, bleach, etc. for cleaning.
- ❗ The product with simple shockproof facilities is suitable for aviation, railway, highway, and ship transportation. During transportation, it is necessary to avoid rain and snow splashing, inversion, and collision.
- ❗ Keep this product out of reach of children.
- ❗ Make the device cool down before storing.
- ❗ Regularly inspect the device for signs of wear or damage. If there are such signs or if the appliance has been misused, it should be returned to the supplier before reuse.

2 Product Features

This product is designed to soak the feet in warm water, and effectively relax the feet by combining with bubble impact and massage wheel pressing feet, which is suitable for different people for foot massage.

3 Components

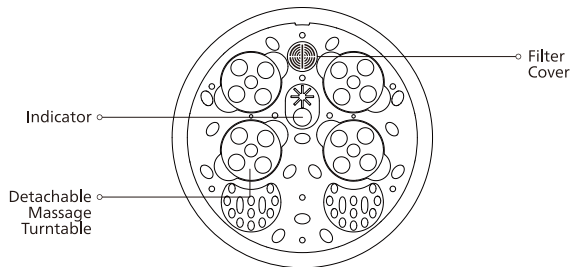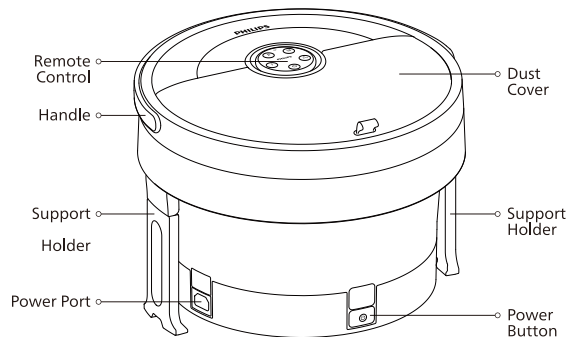

4 How to Use

 
Operation

1. Installation

(1) If the support holders have been installed on the massager: unfold the support holders and place it on the ground, and remove the dust cover.

While lifting the handle, press the massage turntable down until the massager unfolds normally.

(2) If the support holders are not installed on the massager: remove the dust cover and place the massager flat on the ground. While pressing one side of the massage turntable, lift the upper edge of the massager on the same side and lift it up to expand the massager to a certain angle; repeat the above on the other side to fully expand the massager. Then install the support holders according to the prompts on the massager.

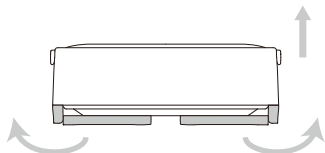

2. Add water and power on







Place the massager on a flat surface, add an appropriate amount of water (it is recommended to add warm water at about 35°C to reduce waiting time), and connect to a 220V~/50Hz household power supply. After power on, the buzzer makes three beeps, the indicator light in the massager flashes slowly, and massager enters the standby state.

! It is recommended that you do not add water exceeding 46°C to prevent scalding your feet. For your safety, when the water temperature exceeds 50°C, the device stops heating, accompanied by 10 warning sounds, and the indicator light flashes red 10 times and then it enters shutdown state. After the water temperature drops below 48°C, the device enters standby mode.

3. Power Button

 
- (1) In standby state, hold the power button for 2 seconds to start the massager in Level I (40°C); press the power button again to switch to Level II (43°C); and then press the power button again to switch to Level III (46°C). Press the button to cycle through the three levels in sequence. When the water temperature reaches the specified temperature, the massage function will automatically turn on, and end after 30 minutes.
- (2) In any modes, hold the power button for 2 seconds, the buzzer will sound for 1.5 seconds, and then end the current mode and enter the standby state.

4. Remote Control

- (1) After power on, aim the remote control into the massager and press  button. The buzzer sounds once, the indicator light in the massager displays in green, and the massager turns on Level I;
- (2) In any modes, aim the remote control into the massager and press  button. The buzzer sounds once, the indicator light in the massager displays in green, and the massager turns on Level I;
- (3) In any modes, aim the remote control into the massager and press  button. The buzzer sounds twice, the indicator light in the massager displays in blue, and the massager switches to Level II;
- (4) In any modes, aim the remote control into the massager and press  button. The buzzer sounds twice, the indicator light in the massager displays in red, and the massager switches to Level III;
- (5) In any modes, aim the remote control into the massager and press  button to turn on / off the massage function;
- (6) In any modes, aim the remote control into the massager and press  button. The buzzer sounds for 1.5 seconds, and then end the current mode and enter the standby state.

5. Storage

- (1) Pour out the water in the massager and let it dry;
- (2) Place the massager upside down on the ground with a soft carpet;
- (3) Press down on both sides of the massager bottom cover at the same time to fold it;
- (4) Pull gently the support holders inward to fold it close to the bottom cover;
- (5) Put the massager upwards with the dust cover, put the remote control in place, and the storage is complete.

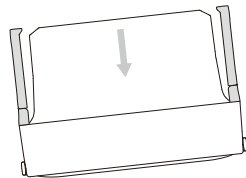

(Place upside down)

5 Maintenance

Cleaning

1. Confirm that the massager is unplugged before cleaning.
2. Pour out the water in the massager.
3. Wipe the surface of the massager with a soft cloth.
4. Do not wipe the power socket with a wet towel.
5. Do not use corrosive liquids to clean the massager.

Storage

1. Empty the water inside the massager, and then drain it in a safe, ventilated, dry and cool place.
2. Fold the massager with the dust cover, and store the power cord properly.
3. Place the massager in the packaging box, and store it in a safe, ventilated, dry and cool place.

7 Troubleshooting

This chapter lists the most common problems to the product. If the problems you encounter are not included in the following tables, please call our service hotline or contact the authorized service center in your region.

Fault Description	Fault	Solution
No power	The leakage protection plug is not plugged in or turned on	Insert the leakage protection plug properly and press the reset button.
Massage function failure	The water temperature has not reached the default temperature, so the massage function has not been activated	Use the remote control to turn on the massage function.
	The motor load is too large or the motor working time is too long, and the massager turns on automatic protection.	Turn off the massager and unplug the leakage protection plug, wait half an hour before restart.
Buzzer beeps continuously 5 times, and the indicator flashes red 5 times	Temperature sensor failure	Contact after-sales service
Buzzer beeps continuously 10 times, the indicator flashes red 10 times and then goes out	Overtemperature protection	Turn off or add cold water to cool down the massager.
No sound or light display at all times	Possible overcurrent protection	Contact after-sales service

If the product has been left unused for a long time, be sure to confirm that its functions are normal before using it again

Check for the following faults		
Regular check	<ul style="list-style-type: none">· Whether the power cord or plug is hot· Whether the power cord is deeply scarred or deformed, or has a burnt smell· Whether there is abnormal sound or vibration during work· Whether the product can work properly after switch on· Whether there are other abnormalities or faults	In the event of the above faults, stop using the device immediately and cut off the power supply to prevent accidents. Please send it to our maintenance center.

Note: If the fault cannot be eliminated or the product still cannot be operated satisfactorily, contact the after-sales service personnel, and do not disassemble or attempt to repair it by yourself.

8 Technical Parameters

Product Name	Philips Foot Spa Massager
Product Model	PPM6501
Rated Voltage	220-240V~
Rated Frequency	50-60Hz
Rated Power	800W
Rated Capacity	8L
Net Weight	4.2kg
Folded Size	380×380×125mm
Unfolded Size	380×380×280mm
Date of Manufacture	See product certificate

9 Service Guideline for Warranty

Warranty and Service

The product is a household appliance with exquisite design and high-quality component. Within two years from the date of purchase, you will receive free warranty service for any damage caused by the manufacturing process or components under normal operation confirmed by our maintenance service.

The warranty service does not include consumable components, transportation fee and door-to-door service. Please show the proof of purchase to the service personnel during maintenance.

You cannot receive free warranty service under the following conditions:

1. Damage by improper operation, such as improper components connection, improper installation, deprived of manual use, mis-operation.
2. Negligence and damage because of transportation or other accident.
3. Maintenance and modification without approval.
4. Other damage caused by force majeure (such as natural disaster, abnormal voltage, etc.).
5. Damage caused by general use outside home (e.g. industrial and commercial use).
6. Aging, wearing and tearing caused by normal operation of the product without affecting normal operation of the product.

This statement serves as a publicity for free maintenance within the specified time limit and conditions, and does not limit the legal rights of consumers.

Please contact our local maintenance service center for any information or difficulties or you can consult through the hotline.

HongKong

Hotline: 852-3188-4987

Service Email: philips.massage.hk@centuryfield.com

Taiwan

Hotline: 0800-661-600

Service Email: Philips.massager@xander.com.tw

Warranty Card

Product Model		Customer Name	
Seller		Contact Number	
Date of Purchase		Serial Number	
Service Center		Customer Address	
Maintenance Content		Date	Service Personnel

10 Packing List

Massager	1x	User Manual	1x
Quick Start Guide	1x	Power Cord	1x
Product Certificate	1x		

目錄

-
- | | |
|---------|------------|
| 1 用戶必讀 | 8 產品保修服務指南 |
| 符號描述 | 保修及服務 |
| 適用人群 | 保修卡 |
| 使用注意事項 | |
| 保養的注意事項 | |
-
- | | |
|--------|--|
| 2 產品功能 | |
|--------|--|
-
- | | |
|--------|--|
| 3 部件名稱 | |
|--------|--|
-
- | | |
|--------|--|
| 4 使用方法 | |
|--------|--|
-
- | | |
|--------|--|
| 5 保養維護 | |
| 清潔方式 | |
| 儲存方式 | |
-
- | | |
|--------|--|
| 6 故障診斷 | |
|--------|--|
-
- | | |
|----------|--|
| 7 主要技術參數 | |
|----------|--|
-
- | | |
|--|--------|
| | 9 裝箱清單 |
|--|--------|
-


1 用戶必讀


產品使用前請仔細閱讀並妥善保管本說明書。本說明書可在www.philips.com獲取。

符號描述

為避免造成人身危害或財產損失，請務必遵守以下內容。

· 用以下圖示來分別說明希望遵守的內容。

 表示禁止

 表示需要根據指示去做

適用人群

 以下人群應謹慎使用





- 體內有植入起搏器或其他醫用電器產品的人群
- 惡性腫瘤患者
- 心臟病患者
- 孕婦或者產婦
- 糖尿病引起的高度神經末梢有障礙的人群
- 皮膚受過創傷的人群
- 體溫38°C以上的人群
- 腰疼或者過去頭、腰，腳有過疼痛的人群
- 手腳容易麻木的人群
- 對呼吸器有障礙的人群
- 高血壓症人群
- 內臟疾病(胃炎，肝炎，腸胃炎)等急性症狀的人群

- 對皮膚溫度感喪失人群
- 有過低溫燒傷人群
- 血管障礙相關的人群
- 使用復原器的人群
- 身體感覺異常的人群

 以下人群/情況禁止使用

- 心臟病患者、嚴重血栓腦淤血患者不適合使用本產品，或在向醫生諮詢後方可使用。
- 小孩、殘疾人士、弱智人士、反應遲鈍的老人以及冷熱不敏感者，應在他人幫助下使用本產品。
- 加熱的表面容易溫度上升，對熱很敏感的人群請不要使用。
- 足部有炎症、外傷、皮膚燙傷等暫勿使用本產品。
- 使用過程中，感覺腰疼，頭暈，嘔吐，悸動等身體異常反應的時候，請立即停止。
- 本產品單次定時30分鐘，每次使用請不要超過30分鐘，使用後請讓機器休息30分鐘以確保機器壽命的延長。
- 不要用在足部按摩以外用途上。
- 下列的情況不宜使用
 - 劇烈疲勞的時候
 - 飯前、飯後30分鐘之內
 - 醉酒之後

使用注意事項

-  器具具有發熱表面。對熱不敏感的人使用時必須注意。
-  本電器不適用於身體、感官或智力能力下降或缺乏經驗和知識的人員(包括兒童)使用，除非由負責他們安全的人員對他們的使用進行監督或指導。
-  應監督兒童，確保他們不玩電器。
-  如果電源軟線損壞，必須用專用軟線或從其製造商或維修部買到的專用組件來更換。

- ❗ 使用時要確保電源線及插頭乾燥，並遠離熱源。
- ❗ 使用本機器應水準放置，使用結束後也應水準放置保管機器。
- ❗ 如果液體從器具中洩露，則不能再繼續使用該器具。
- ❗ 長期沒有使用，再次使用的時候，務必事先確認開關等是否正常。
- ⊘ 嚴禁用力拉扯電源線或使用電源線拖掛本產品，以免造成電源軟線損傷。
- ⊘ 嚴禁無水狀態下使用本產品，使用結束後，請切斷電源並拔掉電源線後再倒水。
- ⊘ 嚴禁在產品有損壞的情況下使用。
- ⊘ 嚴禁在機器內站立或將重物放置於機器中。
- ⊘ 請勿將46°C以上熱水直接倒入機器中，以免引起腳部燙傷或產品高溫變形。
- ⊘ 產品中不可加入含腐蝕性或帶有顆粒、絮狀的液體。
- ⊘ 嚴禁在有水情況下按壓、踩踏盆體上蓋或上蓋邊緣。
- ⊘ 嚴禁非專業人員拆解機器。

 
保養的注意事項

 
- ❗ 保持過濾網的清潔，以免堵塞損壞足浴按摩器。
- ❗ 保養的時候，務必把電源線拔掉。
- ⊘ 保養的時候，請不要使用揮發油、稀釋劑、酒精、強鹼性洗潔劑、漂白劑等清洗。
- ❗ 產品設有簡易的防震設施，適合航空鐵路、公路及輪船運輸。運輸過程中應避免雨雪淋澆、倒置和碰撞。
- ❗ 請將本產品放在兒童接觸不到的地方。
- ❗ 存放器具時，先讓器具冷卻下來。
- ❗ 經常檢查器具上是否有磨損或損壞的跡象，如果有這種跡象，或如果此器具已經被誤用，則應在再次使用前將器具返回到供應商處。

2 產品功能

本產品通過溫水浸泡足部，配合水流衝擊、按摩輪按摩足底，有效放鬆足部，適合不同人群用於足部按摩。

3 部件名稱

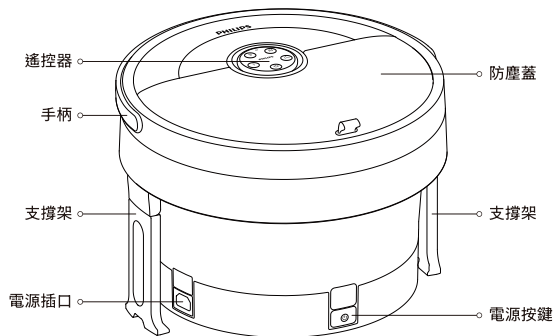

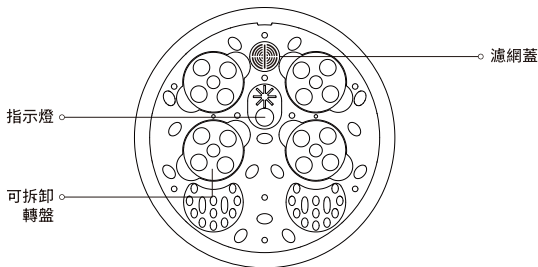


4 使用方法

使用操作

1. 安裝步驟

 - (1) 支撐架已裝在機器上：只需展開支撐架放於地面，取下防塵蓋，一邊提起手柄，一邊向下按壓按摩轉盤，直到正常展開。
- (2) 支撐架沒有裝在機器上：取下防塵蓋，按摩器平放於地面，一邊按住按摩轉盤一側，一邊提住按摩器同側上沿往上提，讓按摩器展開一定角度；換一側重複上述動作，把按摩器完全展開；然後根據機器上的標示裝上支撐架即可。

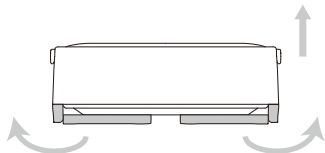

2. 加水通電







將機器平放，加適量水（建議加35°C左右溫水，以減少您等待時間），通220V~/50Hz家用電源，接通電源後，蜂鳴器發出三聲聲響，按摩器內指示燈緩慢閃爍，進入待機狀態。

- ❗ 建議您不要加入超過46°C的水，以防燙傷腳部。為了您的安全，當水溫超過50°C時，設備停止加熱，伴隨10聲警示聲，同時指示燈紅色閃爍10次，然後進入關機狀態；水溫降低至48°C以下後，設備進入待機狀態。

3. 電源按鍵

 
- (1) 在待機狀態下長按按摩器上的電源按鍵2秒，機器啟動模式1（40°C）；再次短按電源按鍵，切換到模式2（43°C）；再次短按電源按鍵，切換到模式3（46°C），依次迴圈。當水溫達到指定溫度後，按摩功能自動開啟，30分鐘後自動結束。
- (2) 在任何工作狀態下，長按按摩器上的電源按鍵2秒，蜂鳴器長響1.5秒，結束當前模式進入待機狀態。

4. 遙控器

- (1) 在機器通電狀態下，用遙控器對準按摩器內按  鍵，蜂鳴器響一聲，按摩器內指示燈亮綠燈，機器開啟模式1；
- (2) 在任何工作狀態下，用遙控器對準按摩器內按  鍵，蜂鳴器響一聲，按摩器內指示燈亮綠燈，機器開啟模式1；
- (3) 在任何工作狀態下，用遙控器對準按摩器內按  鍵，蜂鳴器響兩聲，按摩器內指示燈亮藍燈，機器開啟模式2；
- (4) 在任何工作狀態下，用遙控器對準按摩器內按  鍵，蜂鳴器響三聲，按摩器內指示燈亮紅燈，機器開啟模式3；
- (5) 在任何工作狀態下，用遙控器對準按摩器內按  鍵，可開啟或關閉按摩功能；
- (6) 在任何工作狀態下，用遙控器對準桶內按  鍵，蜂鳴器長響1.5秒，結束當前模式進入待機狀態。

5. 收納步驟

- (1) 將按摩器內水倒盡晾乾；
- (2) 把按摩器倒置於放有軟墊的地面上；
- (3) 雙手向下按壓按摩器底殼兩側，使其折疊；
- (4) 用手向內扳動支撐架，使其折疊靠近於底殼；
- (5) 正放按摩器，蓋上防塵蓋，遙控器放置到位，收納完成。

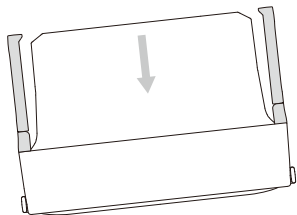

(倒置)

5 保養維護

清潔方式

1. 清潔前請確認插頭拔出。
2. 將按摩器內的水倒盡。
3. 用軟布擦乾按摩器表面。
4. 請勿用沾水毛巾擦抹電源線插口。
5. 請勿用腐蝕性液體清潔機器。

儲存方式

1. 將按摩器體內的水倒盡，放置在安全、通風、乾燥、陰涼處瀝幹。
2. 將按摩器折疊，蓋上防塵蓋，電源線收納好。
3. 放入箱內，再放置在安全、通風、乾燥、陰涼處。

6 故障診斷

本章列出了關於本產品最常見的問題 如果您無法在其中找到您所遇問題的答案，請聯繫服務熱線或您所在地區的授權服務中心。

故障描述	故障	故障排除
不通電	漏電保護插頭未插好或開啟	按正確的方法插好漏電保護插頭並按下復位按鍵
按摩功能不工作	水溫沒達到設定溫度或沒開啟按摩功能	使用遙控器開啟按摩功能
	電機負載過大或電機工作時間過長，按摩器啟動自動保護	關機並拔掉漏電保護插頭，等待半小時再開啟
蜂鳴器連續響5聲，紅色指示燈閃爍5次	溫度感測器故障	聯繫售後客服處理
蜂鳴器連續響10聲，紅色指示燈閃爍10次後熄滅	超溫保護	關機或加冷水降溫
一直無任何聲響及燈光顯示	可能是過流保護	聯繫售後客服處理

長時間未使用後，務必先確認功能正常，才能再次使用。

有無以下故障		
定期 檢查	<ul style="list-style-type: none">· 電源線或者插頭髮熱· 電源線有深深的傷痕或者變形、有焦味· 工作中有異常的聲音或者振動· 開啟關閉後，不正常工作· 有其他異常或者故障	若出現上述故障，為了防止引發事故，請立刻停止使用，並切斷電源，請送往本公司維修點。

注意：如果無法排除故障或產品仍無法理想操作，與售後服務人員聯繫，切勿自行拆卸或嘗試維修。

7 主要技術參數

產品名稱	飛利浦足浴按摩器
產品型號	PPM6501
額定電壓	220-240V~
額定頻率	50-60Hz
額定功率	800W
額定容量	8L
產品淨重	4.2kg
折疊尺寸	380×380×125mm
展開尺寸	380×380×280mm
生產日期	見產品合格證

8 產品保修服務指南

保修及服務

此產品是一件設計精良，用高品質元件製造之家用電器，在正常使用及保養下應能發揮其優越性能。在購買日期後起計兩年內，凡經本公司特約維修站人員確認為正常使用情況下，因製作工藝或原配件造成之損壞，您都將獲得免費保修服務。此免費服務不包括需時常更換的消耗品，運輸費及維修人員上門服務費，維修時請提供有效購買憑證。

以下情況將不能獲得免費服務

1. 使用不當引起的人為損壞，例如接入不適當配件、不適當之安裝、不依說明書使用、錯誤使用或疏忽而造成損壞等。
2. 因運輸及其他意外而造成之損壞。
3. 非經本公司認可之維修和改裝。
4. 其他因不可抗力（如自然災禍，電壓異常等）造成的損壞。
5. 一般家庭以外使用（如工業、商業用等）而造成的損壞。
6. 正常使用引起的產品老化，磨損等，但不影響產品使用。

該說明作為在規定期限及條件之內進行免費維修的宣傳，並不限製消費者的法定權力。

若您需諮詢相關資訊，或遇困難事項時，請聯絡本公司當地維修服務中心，或向服務熱線諮詢。

香港：

服務熱線：852-3188-4987

服務郵箱：philips.message.hk@centuryfield.com

臺灣：

服務熱線：0800-661-600

服務郵箱：Philips.massager@xander.com.tw

保修卡

產品型號		用戶姓名	
銷售單位		聯繫電話	
購買日期		出廠編號	
維修內容		用戶地址	
特別技術服務站	時間	保修人員	

9 裝箱清單

主機	1 ×	說明書	1 ×
快速入門指南	1 ×	電源線	1 ×
合格證	1 ×		

