

PHILIPS

Air Purifier

AC0917



English 6
繁體中文 23

Safety

Read this user manual carefully before you use the appliance, and save it for future reference.

Danger

- Do not clean the appliance with water, any other liquid, or a (flammable) detergent, nor let them enter the appliance, to avoid electric shock and/or a fire hazard.
- Do not spray any flammable materials such as insecticides or fragrance around the appliance.

Warning

- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect the appliance.
- If the power cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, power cord, or the appliance itself is damaged.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.
- Make sure that foreign objects do not fall into the appliance through the air outlet.

Caution

- This appliance is not a substitute for proper ventilation, regular vacuum cleaning, or use of an extractor hood or fan while cooking.
- Always place and use the appliance on a dry, stable, level, and horizontal surface.
- Leave at least 20cm free space around the appliance and leave at least 30cm free space above the appliance.
- Do not sit or stand on the appliance. Do not place anything on top of the appliance.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Only use the original Philips filters specially intended for this appliance. Do not use any other filters.
- Combustion of the filter may cause irreversible human hazard and/or jeopardize other lives. Do not use the filter as fuel or for similar purpose.
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.

 
- Do not insert your fingers or objects into the air outlet or the air inlet to prevent physical injury or malfunctioning of the appliance.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Always unplug the appliance when you want to move, clean appliance, replace the filter or carry out other maintenance.
- The appliance is only intended for household use under normal operating conditions.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet, or kitchen, or in a room with major temperature changes.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used as a safety device in case of accidents with combustion processes and hazardous chemicals.

Your air purifier

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

Product Overview

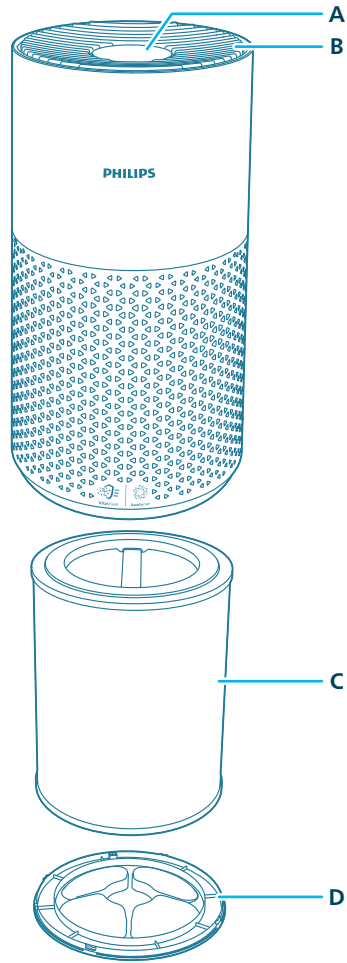


A Control panel

B Air outlet

C Filter (FY0179)

D Base

 Controls Overview

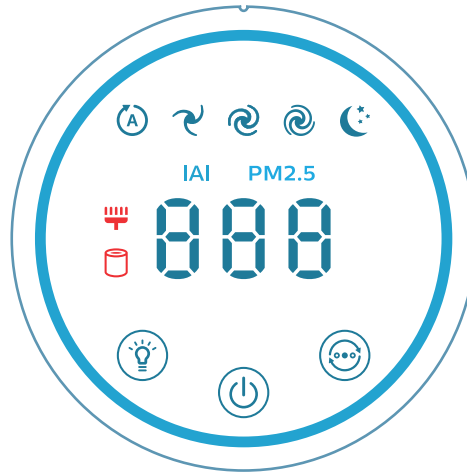








Control buttons:

	Power on/off button		Light on/off button Display switch button (long press 3 seconds)
-----------------------------------------------------------------------------------	---------------------	-----------------------------------------------------------------------------------	---------------------------------------------------------------------

 Mode switch button

Display panel:

	Auto mode		Speed 1
	Speed 2		Turbo mode
	Sleep mode	IAI	Indoor Allergen Index display
PM2.5	PM2.5 display		Filter cleaning alert
	Filter replacement alert		

Getting started

Installing the filter

Remove all packaging of the filter before use.

Note: Make sure the air purifier is unplugged from the electrical outlet before installing the filter.

10 English



1 Rotate the base anti-clockwise to remove it from the appliance.



 
2 Pull the filter out from the appliance.




3 Remove all packaging materials of the air purification filter.



4 Put the filter back into the appliance.

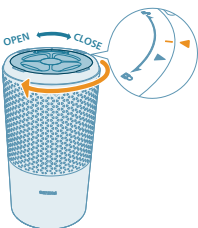

5 To secure the base, align the dash mark (|) on the base with the arrow on the outer edge of the appliance. Rotate the base clockwise to  until it locks into place.

Using the air purifier

Understanding the air quality light

The air quality light automatically goes on when the air purifier is switched on, and lights up all colors in sequence. After approximately 30 seconds, the particle sensor selects the color that corresponds to the surrounding air quality of airborne particles.

The color of the air quality light is determined by the highest index between PM2.5 and IAI readings.

PM2.5

AeraSense sensing technology accurately detects and quickly responds to even the slightest particle change in the air. It provides you with reassurance with real-time PM2.5 feedback.

Most of the indoor air pollutants fall under PM2.5 – which refers to airborne particle pollutants smaller than 2.5 micrometers. Common indoor sources of fine particles are tobacco smoke, cooking, burning candles. Some airborne bacteria and the smallest mold spores, pet allergen and dust mite allergen particles also fall under PM2.5.

PM2.5 level	Air quality color
≤35	Blue
36-75	Blue-purple
76-115	Purple-red
>115	Red

IAI

The professional-grade AeraSense sensor detects the level of indoor air allergen and with numerical feedback from 1 to 12 the potential risk level of indoor air allergens can be displayed. 1 indicates best air quality. Common allergens include airborne bacteria, tiny mold spores, pet allergens, and dust mite allergen particles.

IAI level	Air quality color
1-3	Blue
4-6	Blue-purple
7-9	Purple-red
10-12	Red

 
Turning on and off

Note:


For optimum purification performance, close doors and windows.


Keep curtains away from the air inlet or air outlet.


1 Put the plug of the air purifier in the power socket.

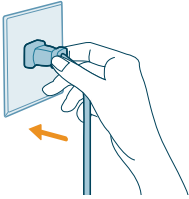


2 Touch  to switch on the air purifier.

 - The air purifier beeps.
- The  displays on the screen during warming up. Then the air purifier shows the PM2.5/IAI level after measuring the air quality.
- The air purifier operates in the Auto mode with PM2.5 displayed on the screen.

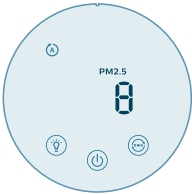


3 Touch and hold  again for 3 seconds to switch off the air purifier.

 
Note: If the air purifier stays connected to the electrical outlet after turning OFF, the air purifier will operate under the previous settings when turned ON again.

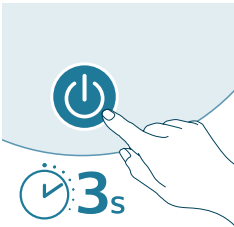


Changing the mode setting


You can choose Auto mode, Speed 1, Speed 2, Turbo mode or Sleep mode by touching the mode switch button.

  Auto mode ():The air purifier automatically adjusts the fan speed in accordance with the ambient air quality.

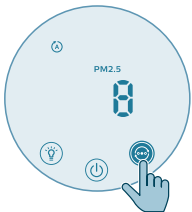

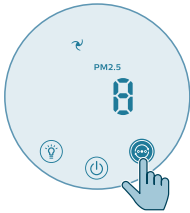

 Manual speed (⚡, ⏻): In manual mode, the air purifier operates on speed 1 or speed 2.

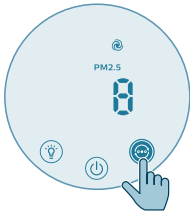

Turbo mode (⚡): The air purifier operates on the highest speed.

 


 
Sleep mode (☾): The air purifier operates quietly at a low speed. After 3 seconds, the screen lights off.

Switching the display indicator


Note: The appliance displays PM2.5 level by default.

- Touch and hold ⚡ button for 3 seconds to switch display indicator between PM2.5 and IAQ.

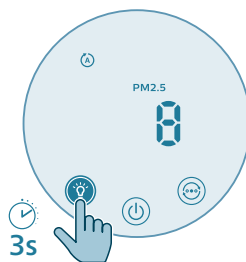


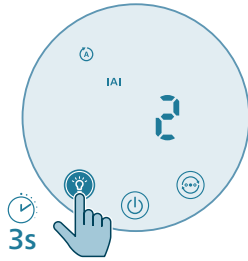


Using the light on/off function

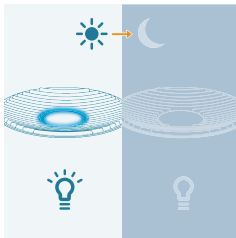 

 With the light sensor, the control panel can automatically turn on, turn off or dim according to the ambient light.

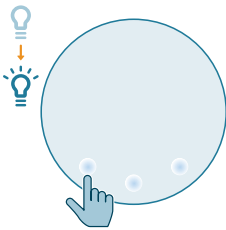

 The control panel will be off or dim when the ambient light is dark. You can touch any button to wake up all lights. Then, if no further operation, all lights will be off or dim again to match with the ambient light.

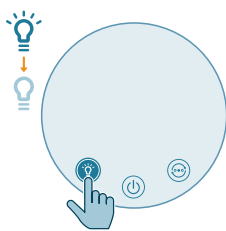

You can touch the light bulb icon manually to turn off all lights and the control panel. Touch any button to wake up all lights.

Cleaning and maintenance

Note:


Always unplug the appliance before you clean it.

Never immerse the appliance in water or any other liquid.

Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the appliance.

Never use any liquids (including water) to clean the filter.

Cleaning schedule


Frequency	Cleaning method
When necessary	Wipe the plastic part of the appliance with a soft, dry cloth
	Clean the air outlet cover
 displays on the screen	Clean the surface of the filter


Cleaning the body of the air purifier

Regularly clean the inside and outside of the air purifier to prevent dust from collecting.


- 1 Use a soft, dry cloth to clean both the interior and exterior of the air purifier.
- 2 The air outlet can also be cleaned with a dry, soft cloth.

 Cleaning the surface of the filter

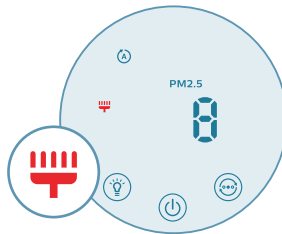

When the filter cleaning alert  displays on the screen, clean the surface of the filter with a vacuum cleaner.

 - 1 Switch off the air purifier and unplug from the power socket.

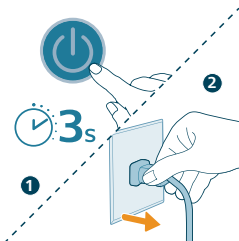


16 English



2 Rotate the base anti-clockwise to remove it from the appliance.



 
3 Pull the filter out from the appliance.

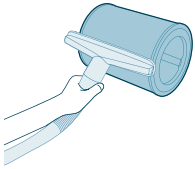


4 Clean the surface of the filter with a vacuum cleaner.




 
5 Put the filter back into the appliance.

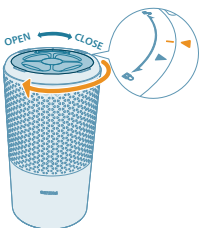



6 To secure the base, align the dash (|) on the base with the arrow on the outer edge of the appliance. Rotate the base clockwise to  until it locks into place.

 
- 7 Put the plug of the air purifier in the power socket.

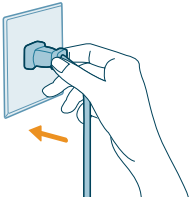

 
- 8 Touch the  button to switch on the appliance.

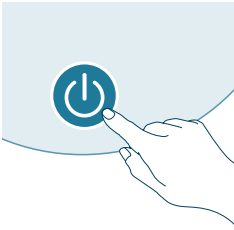

 - 9 Touch and hold the  and  button for 3 seconds to reset the filter cleaning time.

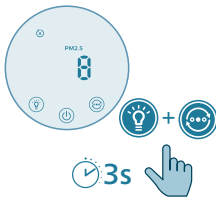

 
- 10 Wash your hands thoroughly after cleaning the filter.

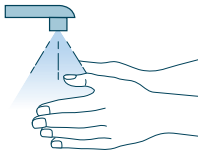

Replacing the filter

Understanding the healthy air protect lock

This air purifier is equipped with a filter replacement indicator to make sure that the air purification filter is in optimal condition when the air purifier is operating. When the filter need to be replaced, the filter replacement alert  lights up red.

 
If the filter is not replaced in time, the air purifier will stop operating and automatically lock to protect the air quality in the room. Replace the filter as soon as possible.

Replacing the filter

Note:


The filter is not washable or reusable.

Always turn off the air purifier and unplug from the electrical outlet before replacing the filter.

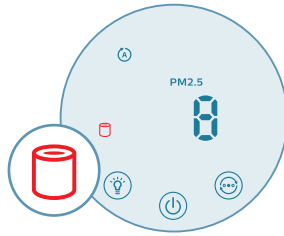

When the filter replacement alert  displays on the screen, replace the filter (FY0179).

 1 Switch off the air purifier and unplug from the power socket.

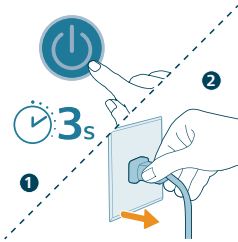

2 Rotate the base anti-clockwise to remove it from the appliance.



3 Pull the filter out from the appliance. Discard the used filter.




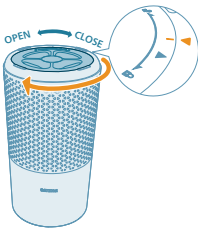 
- 4 Remove all packaging materials of the new filter.



 
- 5 Put the new filter back into the appliance.




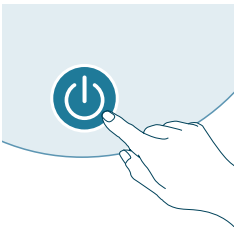 
- 6 To secure the base, align the dash mark (|) on the base with the arrow on the outer edge of the appliance. Rotate the base clockwise to  until it locks into place.




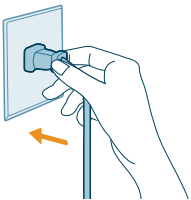

- 7 Put the plug of the air purifier in the power socket.




 - 8 Touch the  button to switch on the appliance.

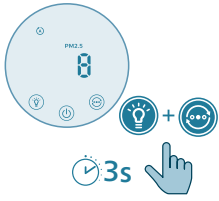



 
9 Touch and hold the  and  button for 3 seconds to reset the filter lifetime counter.

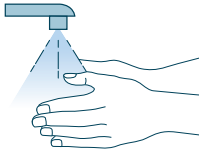



10 Wash your hands thoroughly after replacing the filter.


Note: Do not smell the filter as it has collected pollutants from the air.

Filter reset

  
You can replace the filter even before filter replacement alert () displays on the screen. After replacing a filter, you need to reset the filter lifetime counter manually.

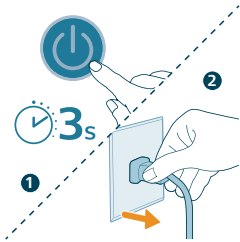

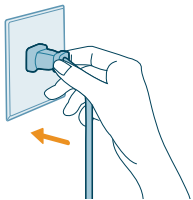

 1 Touch and hold the  button for 3 seconds to turn off the appliance. Unplug the appliance.

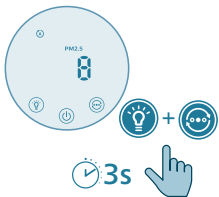

2 Make sure the appliance is completely unplugged, and then put the power plug in the power socket.



3 Within 15 seconds after power on, touch and hold the  and  button for 3 seconds to reset the filter lifetime counter.

Storage

- 1 Turn off the air purifier and unplug from the power socket.
- 2 Clean the air purifier and the surface of the filter (see Chapter "**Cleaning and Maintenance**").
- 3 Let all parts air dry thoroughly before storing.
- 4 Wrap the filter in air tight plastic bags.
- 5 Store the air purifier, filter in a cool, dry location.
- 6 Always thoroughly wash hands after handling a filter.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution
The appliance does not work properly.	Check if the base is properly installed. If not, for safety reason, the appliance will stop operating.
	The filter replacement alert is on but you have not replaced the corresponding filter. As a result, the appliance is now locked. In this case, replace the filter and reset the filter lifetime counter.
The airflow that comes out of the air outlet is significantly weaker than before.	The surface of the filter is dirty. Clean the surface of the filter (see Chapter 'Cleaning and maintenance').
The air quality does not improve, even though the appliance has been operating for a long time.	Check if the packing material is removed from the filter.
	Make sure that the filter (FY0179) is properly installed.
	Room size is large or the outdoor air quality is poor.
	For optimum purification performance, please close the doors and windows when operating the air purifier.
	There are indoor pollution resources. For instances, smoking, cooking, incense.
The appliance produces a strange smell.	Filter reaches the end of life. Replace the filter with a new one.
	The first few times you use the appliance, it may produce a plastic smell. This is normal. However, if the appliance produces a burnt smell even if removing the filter, contact your Philips dealer or an authorized Philips service center. The filter may produce smell after being used for a while because of the absorption of indoor gases. It's recommended that you reactivate the filter by putting it in direct sunlight for repeated use. If odor still exists, replace the filter.
The appliance is extra loud.	It's normal if the appliance runs at the Turbo mode.



The appliance will run in high speed when the air quality is poor, which will causes higher noises. When using the appliance in a bedroom at night, choose the Sleep speed.

If anything drops into air outlet, it may also cause abnormal loud sounds.

Immediate turn off appliance, turn appliance upside down, to get foreign objectives out of appliance.

If there is abnormal sound, contact the Consumer Care Center in your country.

The appliance still indicates that I need to replace a filter, but I already did.

Perhaps you did not reset the filter lifetime counter. Switch on the appliance. Then touch and hold the  and  for 3 seconds.

Error code "E1" displays on the screen.

The motor has malfunctions. Contact the Consumer Care Center in your country.

Notices

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit www.philips.com/support.

If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country.

安全

使用本產品前，請先仔細閱讀此重要資訊手冊，並妥善保管以供日後參考。

危險事項

- 請勿用水、任何液體或（易燃）清潔劑清潔此產品，或讓它們進入此產品，以免導致觸電和/或火災。
- 請勿在本產品周圍噴射殺蟲劑或芳香劑等易燃物品。

警告

- 在連接本產品前，請檢查產品註明的指示電壓與當地電源電壓是否對應。
- 如果電源線損壞，為避免危險，必須由 Philips、Philips 授權的服務中心或類似的合資格人士來更換。
- 若插頭、電源線或產品本身已損壞，請勿使用。
- 本產品並不適合身體、感覺或心智能力低下人士（包括兒童），或缺乏知識及經驗人士使用，除非該人士已受其他負責其安全之人士就使用本產品的監督或指導。
- 請勿讓孩童將本產品當成玩具。兒童不應於沒有監督情況下對產品進行清潔及維護。
- 請勿阻塞通風口和排氣口，如在排氣口上或通風口前放置物品。
- 確保異物不會通過排氣口掉入產品內部。

注意

 
- 本產品並不是適當通風設備、正規吸塵器或煮食時使用的抽油煙機或風扇的代替品。
- 在乾燥、穩定、平滑和水平表面上使用產品。
- 在本產品的周圍至少留出 20 厘米的空間，本產品上方至少留出 30 厘米空間。
- 請勿坐或站立在產品上。請勿在產品上放置任何物品。
- 請勿在冷氣機正下方放置產品，以避免冷凝滴水到產品上。
- 只可使用為此產品而設的原裝 Philips 濾網。請勿使用其他濾網。
- 燃燒濾網可能造成對健康無可挽回的危害及/或危及他人生命。請勿使用濾網作為燃料或用於類似用途。
- 避免以硬物碰撞產品（尤其是產品的通風口和排氣口）。
- 請勿將您的手指或其他物件放入通風口或排氣口，以免造成身體傷害或產品故障。
- 若您使用室內煙型驅蚊劑，或該地方有油跡、香火或化學煙霧，請勿使用本產品。
- 請勿在煤氣用具、暖氣設備或壁爐旁邊使用本產品。
- 當移動及清潔產品、更換濾網或進行其他維修保養時，請務必拔出本產品的插頭。
- 本產品只適合一般操作環境下的家居使用。
- 請勿在洗手間或廚房等濕潤或高溫環境，或溫度變化較大的房間使用本產品。
- 本產品不會去除一氧化碳 (CO) 或氫 (Rn)。本產品不能在含有燃燒過程和危險化學品的意外中充當安全裝置。

您的空氣清新機

感謝您購買 Philips 產品，歡迎來到 Philips 世界！

要享受 Philips 為您提供的全面支援，請在 www.philips.com/support 網站註冊您的產品。

產品概要

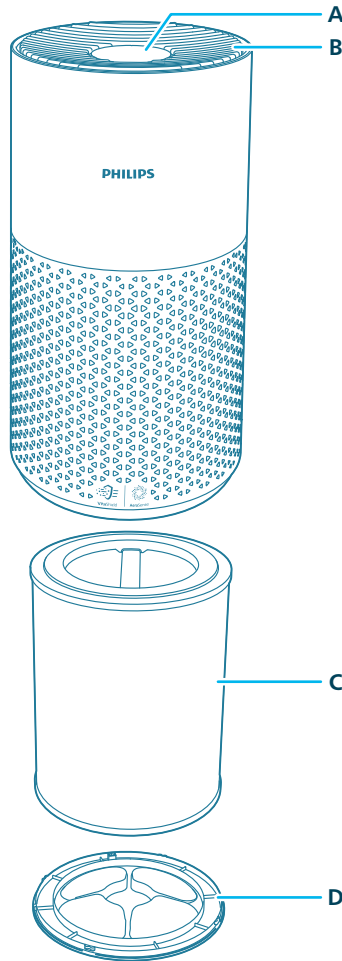


A 控制面板

C 濾網 (FY0179)

B 排氣口

D 機座

 控制概覽

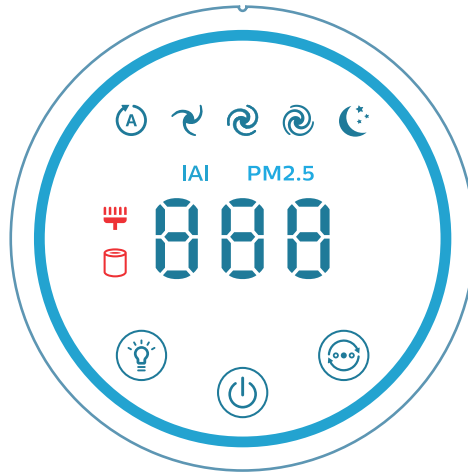

控制按鈕：



電源開/關按鈕



開燈/關燈按鈕
顯示切換按鈕（長按 3 秒）



模式切換按鈕

顯示面板：



自動模式



速度 1



速度 2



特強模式



睡眠模式



室內致敏原指數顯示

PM2.5

PM2.5 顯示



濾網清潔提示



濾網更換提示

使用入門

安裝濾網

使用前，請移除濾網的所有包裝。

備註：安裝濾網前，請確保空氣清新機已經從電源插座拔除。

26 繁體中文



- 1 以逆時針方向旋轉機座，將其從產品中取出。



 
- 2 由本產品拉出濾網。




- 3 移除空氣淨化濾網的所有包裝物料。



- 4 將濾網裝回本產品。

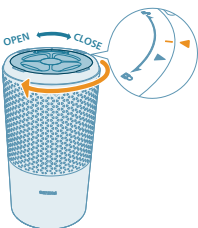

- 5 若要固定機座，請將機座上的符號 (|) 與產品外緣上的箭嘴對齊。順時針旋轉機座至  直到鎖定到位。

使用空氣清新機

了解空氣質素燈

開啟空氣清新機時，空氣質素燈將自動亮起，並順序顯示所有顏色。約 30 秒後，微粒感應器會根據周圍空中粒子的空氣質素，顯示相應的顏色。

空氣質素燈的顏色由 PM2.5 及 IAI 讀數的最高指數決定。

PM2.5

AeraSense 感應技術能夠準確偵測並快速回應，即使對空氣中最微小的粒子變化亦不例外。實時顯示 PM2.5 數值，讓您安心。

大多數室內空氣污染物屬於 PM2.5，即是指小於 2.5 微米的空中粒子污染物。常見的室內微細粒子來自煙草煙霧、烹飪、燃燒蠟燭。一些空中傳播的細菌和最小的霉菌孢子、寵物致敏原和塵蟎致敏原粒子亦屬於 PM2.5。

PM2.5 水平	空氣質素顏色
≤35	藍色
36-75	藍色-紫色
76-115	紫色-紅色
>115	紅色

IAI

專業級 AeraSense 感應器可偵測室內空氣致敏原的水平，透過 1 至 12 的數值顯示室內空氣致敏原的潛在危險等級。1 代表最佳的空氣質素。常見的致敏原包括空氣傳播的細菌、微小的霉菌孢子、寵物致敏原和塵蟎致敏原粒子。

IAI 水平	空氣質素顏色
1-3	藍色
4-6	藍色-紫色
7-9	紫色-紅色
10-12	紅色

 
開關

備註：


請關閉門窗，以獲得最佳的空氣淨化效果。


讓窗簾遠離進氣口或排氣口。

- 1 將空氣清新機的插頭插入電源插座。

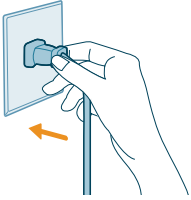


- 2 按下  以開啟空氣清新機。

 - 空氣清新機發出嗶聲。
- 準備運作時， 會顯示在螢幕上。在測量空氣質素後，空氣清新機會顯示 PM2.5/IAI 水平。
- 空氣清新機會以自動模式運作，並在螢幕上顯示 PM2.5。

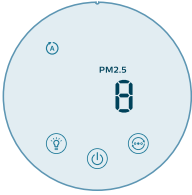

- 3 輕按住  3 秒以關閉空氣清新機。

 
備註：如空氣清新機在「關閉」後繼續連接至電源插座，空氣清新機在再次「啟動」時，將按之前的設定操作。

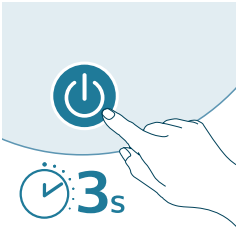


更改模式設定

您可輕按模式切換按鈕，選擇自動模式、速度 1、速度 2 或特強模式。

 
自動模式 (Ⓐ)：空氣清新機會根據空氣質素環境自動調節風扇速度。

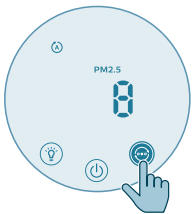

 
手動速度 (🌀, 🌀)：在手動模式中，空氣清新機會以速度 1 或速度 2 運作。

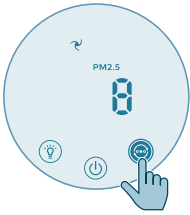

特強模式 (🌀)：空氣清新機以最高速度運作。

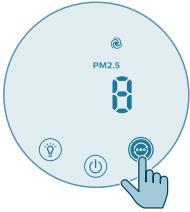 


睡眠模式 (🌙)：空氣清新機以低速度安靜地運作。3 秒後，螢幕的燈光會熄滅。

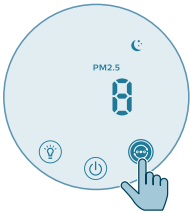 


切換顯示指示燈


備註：本產品預設顯示 PM2.5 水平。

  - 按住 🌙 按鈕 3 秒，切換 PM2.5 和 IAI 顯示指示燈。

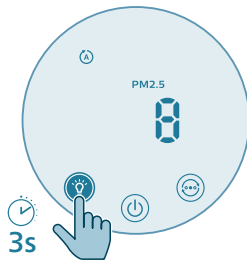


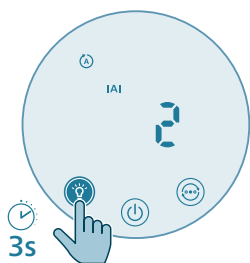


使用開燈/關燈功能

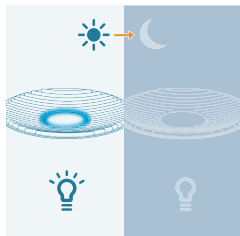 


裝置的光線感應器會讓控制面板根據環境光線自動開啟、關閉或變暗。

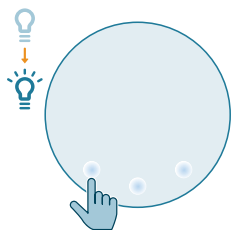 

 在環境光線昏暗時，控制面板便會關閉或變暗。您可以輕按任何按鈕來喚醒所有燈光。如果沒有進一步操作，所有燈光便會關閉或變暗以配合環境光線。

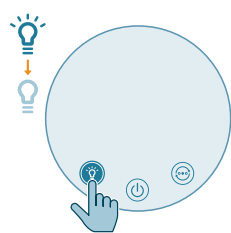

您可以輕按  按鈕，以手動關閉所有燈光和控制面板。輕按任何按鈕來喚醒所有燈光。

清潔與保養

備註：

在清洗前請拔除本產品的插頭。

請勿將本產品浸入水或任何液體中。

請勿使用磨蝕性、侵略性或易燃清潔劑（如漂白劑或酒精）清洗本產品的任何一部分。

請勿使用任何液體（包括水）來清潔濾網。

清潔時間表


頻率	清潔方法
必要時	用柔軟的乾布抹淨本產品的塑膠部分
	清潔排氣口護蓋
 顯示在螢幕上	清潔濾網表面


清潔空氣清新機機身

請定時清潔本空氣清新機的內部和外部，以避免積聚塵埃。


- 1 使用柔軟的乾布清潔空氣清新機的內部和外部。
- 2 也可以用柔軟的乾布清潔排氣口。

 清潔濾網表面

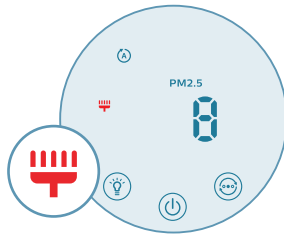

當清潔濾網提示  顯示在螢幕上時，請使用吸塵機清潔濾網表面。

 - 1 關閉空氣清新機，並將其從電源插座拔出。

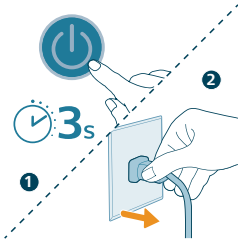


32 繁體中文



2 以逆時針方向旋轉機座，將其從產品中取出。



 
3 由本產品拉出濾網。

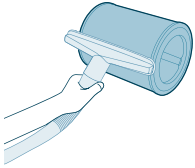


4 使用吸塵機清潔濾網表面。




 
5 將濾網裝回本產品。

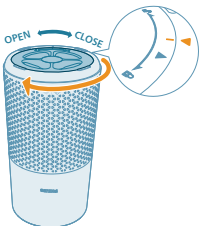



6 若要固定機座，請將機座上的符號 (|) 與產品外緣上的箭嘴對齊。順時針旋轉機座至  直到鎖定到位。

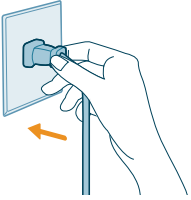 
- 7 將空氣清新機的插頭插入電源插座。




- 8 輕按  按鈕開啟本產品。



 - 9 按住  及  按鈕 3 秒，重設濾網清潔時間。

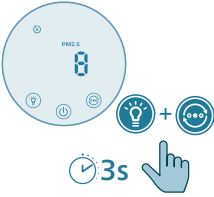


- 10 清潔濾網後，必須徹底洗淨雙手。

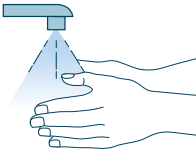 

更換濾網

 了解清新空氣保護鎖

空氣清新機設有濾網替換指示燈，以確保空氣清新機濾網在空氣清新機運作時處於良好狀態。需要更換濾網時，濾網更換提示  燈會亮起紅色。

 
如果沒有及時更換濾網，空氣清新機將停止運作並自動鎖定，以保障房間的空氣質素。請盡快更換濾網。

更換濾網

備註：


請勿清洗或重用濾網。

更換濾網前，必須關閉空氣清新機，並將插頭從電源插座拔出。

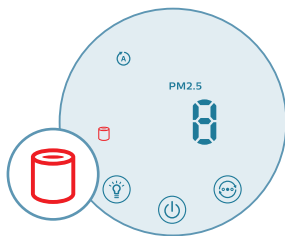

當更換濾網提示  顯示在螢幕上時，請更換濾網 (FY0179)。

 1 關閉空氣清新機，並將其從電源插座拔出。

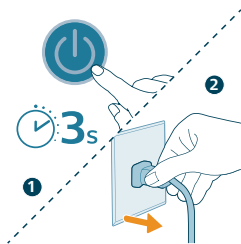

2 以逆時針方向旋轉機座，將其從產品中取出。



3 由本產品拉出濾網。棄置用過的濾網。




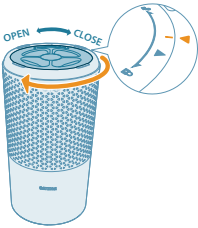 
- 4 拆去新的濾網上的所有包裝物料。




- 5 將新濾網裝回本產品。



 
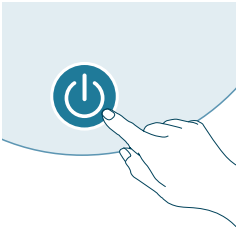 
- 6 若要固定機座，請將機座上的符號 (|) 與產品外緣上的箭嘴對齊。順時針旋轉機座至  直到鎖定到位。




- 7 將空氣清新機的插頭插入電源插座。

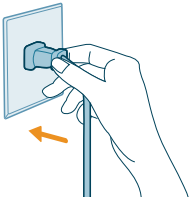

- 8 輕按  按鈕開啟本產品。




  9 按住  及  按鈕 3 秒，以重設濾網壽命計算器。

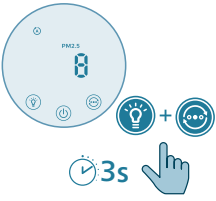


 
10 更換濾網後，必須徹底洗淨雙手。


備註：因濾網滿佈空氣中的污染物，請勿嗅聞濾網。

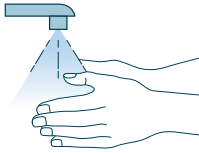


濾網重設

您可以在濾網更換提示 () 顯示在螢幕上之前更換濾網。更換濾網後，您需要手動重設濾網壽命計算器。

 
1 輕按住  按鈕 3 秒以關閉本產品。拔除產品電源。

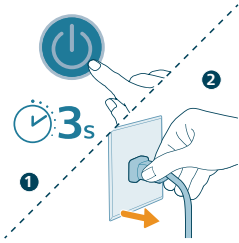

2 確保已完全拔出產品的電源插頭，然後將電源插頭插入電源插座。

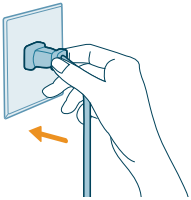 

 3 開啟電源後 15 秒內，您可按住  及  按鈕 3 秒，重設濾網壽命計算器。

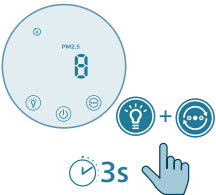

存放



- 1 關閉空氣清新機，並將插頭從牆身插座拔出。
- 2 清潔空氣清新機和濾網表面（請參閱「清潔與保養」章節）。
- 3 讓所有部件乾透方可存放。
- 4 將濾網放入密封膠袋中。
- 5 將空氣清新機、濾網存放於陰涼乾爽的地方。
- 6 處理濾網後，必須徹底洗淨雙手。

疑難排解

本單元概述您使用本產品時可能遇到的最常見問題。如果您無法利用以下資訊解決您遇到的問題，請聯絡您所在國家/地區的客戶服務中心。

問題	可能的解決方法
本產品無法正確操作。	請檢查機座是否正確安裝。否則，基於安全理由，產品會停止操作。
	濾網更換警示已亮起但您沒有更換相應濾網。因此本產品已被鎖定。在這情況，請更換該濾網並重設濾網壽命計算器。
排氣口排出的風量比以前明顯減弱。	濾網的表面骯髒。請清潔濾網表面（請查看「清潔與保養」章節）。
本產品經過長時間運作，空氣質素仍沒有改善。	請檢查是否已移除濾網的所有包裝物料。
	確保正確安裝濾網 (FY0179)。
	房間面積大或室外空氣質素差。
	為獲得最佳淨化性能，請在操作空氣清新機時關閉門窗。
	有室內污染源頭。例如，吸煙、烹飪、焚香。
	濾網的使用壽命結束。更換全新的濾網。
本產品發出一陣怪味。	在您最初數次使用本產品時，它可能會發出一點塑膠氣味。此為正常。可是，如果本產品在更換濾網後發出燒焦的氣味，請聯絡您的 Philips 經銷商或認可的 Philips 服務中心。開始使用後的濾網因吸收了室內氣體，可能會產生少許異味。建議將濾網置於陽光下照射，以重新啟動濾網供重複使用。如果仍有異味，請更換濾網。
本產品聲浪太大。	如果本產品運行特強模式，屬正常現象。
	當空氣質素差時，產品將以高速運行，因而產生更大的噪聲。如晚上在睡房使用產品，選擇睡眠速度。
	如果有任何東西掉入排氣口，亦有可能產生異常響亮的聲音。立即關閉產品，並倒轉產品，以便從產品中取出外來物體。
	如果仍然有不正常的聲響，請聯絡您所在國家/地區的客戶服務中心。

即使我已替換濾網，本產品仍表示需要替換。

可能您沒有重設濾網的壽命計算器。開啟本產品然後，按住  及  3 秒。

螢幕顯示「E1」的錯誤代碼。

摩打出現故障。請聯絡您所在國家/地區的客戶服務中心。

聲明

電磁場 (EMF)

本產品符合電磁場暴露的相關適用標準和法規。

回收

產品使用壽命結束時，請勿與一般家庭廢棄物一併丟棄。請將該產品送至政府指定的回收點進行回收。此舉能為環保盡一份心力。

請遵循您所在國家/地區對電氣與電子產品分類收集的規定。正確處理廢棄產品有助於避免對環境和人類健康帶來負面影響。

保養及支援

Versuni 為本產品提供售後 2 年保養。此保養不適用於因不正確使用或維護不良而造成的損壞。我們的保養不影響您作為消費者在法律下的權利。欲瞭解更多資訊或需要保養服務，請瀏覽我們的網站 www.philips.com/support。

訂購零件或配件

如果您必須更換零件或想購買其他零件，請聯絡您的飛利浦經銷商，或造訪 www.philips.com/support。

如果您在取得零件方面遇到問題，請聯絡所在國家/地區的飛利浦客戶服務中心。

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2023 © Versuni Holding B.V.

