

## **Direct code entry**

1. Turn on the device (TV, DVR, etc.) you wish to operate.
2. Press and hold the SETUP button until the red light indicator remains lit, then release the SETUP button.
3. Press and release the desired mode button (TV, DVR, etc.).  
The red light indicator flashes, then remains lit.
4. Enter one of the 4 digit code from the code table above
5. With the device turned on, press several buttons to test if the device responds.  
If the device responds properly, you have successfully found a valid code for your device.
6. Repeat steps 1 to 4 for other devices you wish to set up the remote control for.

## **Notes**

- After a valid code entry, the red light indicator turns off.
- For an invalid code, the red light indicator flashes first, then turns off. In this case you have to enter Setup mode again and enter a new code.
- If some buttons do not operate your equipment, try one of the other codes for your brand.