



請在以下網站鏈接中了解詳情

www.philips.com

本手冊內容與實物可能存在差異，請以實物為準，如產品有任何更新恕不另行通知。

©2023 AquaShield
All rights reserved

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Hongkong AquaShield Health Technology Company Limited and Hongkong AquaShield Health Technology Company Limited is the warrantor in relation to this product.

水護盾是飛利浦淨飲水解決方案、熱水解決方案、衛浴解決方案、水杯及個人按摩器唯一品牌官方授權運營主體。

Rev A SEP 23
Made in China



PHILIPS

按摩槍

迷你按摩槍

PPM7303



User Manual
使用說明書

Contents

1 Readme

Symbol Description

People Restricted or Prohibited from Use

Precautions for Use

Precautions for Maintenance

2 Product Features

3 Components

4 How to Use

Preparations Before Use

Installation

Operation

Charging

5 Indicator Description

6 Maintenance

Disposal

7 Troubleshooting

8 Technical Parameters

9 Service Guide for Product Warranty

Warranty and Service

Warranty Card

10 Packing List


1 Readme

Please carefully read the operation manual before use and keep it properly. The manual is available at www.philips.com

Symbol Description

To avoid personal injury or property damage, be sure to observe the contents below.

- The following symbols are used to illustrate what you should observe.

 Indicates prohibition

 Indicates the actions that need to be subject to instructions

People Restricted or Prohibited from Use

 Important Information

The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

This appliance contains batteries that are only replaceable by skilled persons. Must be only supplied at safety extra low voltage corresponding to the marking on the appliance.

This product cannot be used under any of the following circumstances without the prior consent of your doctor.

- The occurrence of pregnancy, diabetic complications (e.g. neuropathy or retinal damage), pacemaker wearing, recent surgery, epilepsy or migraine, disc herniation, anterior vertebra, vertebrae detachment, or ankyloses of vertebra, recent arthroplasty surgery or IUD, Kirschner wire or steel plate and other health-related issues. These contraindications do not mean that you are not allowed to use the Product. It is recommended to consult your doctor before use.
- The underway research is about the impact of the vibration training on specific medical diseases. This stands a good chance to reduce various contraindications mentioned above. The practice proves that under many circumstances, the incorporation of vibration training into a therapeutic regimen is also a form of therapy, but it must be done at the suggestion or in the company of a doctor, expert or physical therapist.

! The product is not allowed to be used by the following groups/under the following circumstances

- It is forbidden for minors to use the product. If injured, it is not allowed to use it. Please consult your doctor before using it in case of muscle injury.
- Do not use the device on non-dry and non-clean skin surface. You can use this product with clothes on. Gently press and move it on the skin for about 60 seconds per area.
- Do not use the device on the part above the neck and with less muscle coverage. It is forbidden to use it on the bones. Under the circumstance of not causing pain or discomfort, only use the device on the soft tissues of the body.
- Do not use the device on the occurrence of bruising, pain or discomfort.
- It is forbidden for people who are unable to express their will or who cannot operate the machine themselves to use this Product.
- Children are not allowed to use the product. Keep children away from it when using it.

- Please stop immediately when you feel lower back pain, dizziness, vomiting, palpitation and other abnormal body reactions during use.
- This product is set for 10-minute timing at a time. Do not use it for no more than 20 minutes each time. After each use, stop the device for 30 minutes to ensure the extension of its service life.
- Do not use the product under the following circumstances:
 - When you are severely tired
 - Within one hour before and after meals
 - When you are drunk

Precautions for Use

- !** Do not wear excessive clothes during use.
- !** Keep away from liquid or heat source.
- !** Do not use the product during charging.
- !** After charging, disconnect the power supply in time.
- !** Stop the device immediately if it cannot work properly or you feel abnormal.
- !** Follow the instructions when using the product.
- !** Before each use, carefully check whether the product can be used normally according to the operation instructions in this manual.
- ⊘** Do not load and ballast the power cord or cause damage to it.
- ⊘** Do not disassemble, modify or repair the product by yourself.


Precautions for Maintenance

- ❗ Be sure to disconnect the power supply before maintenance.
- ⊘ Do not use volatile oil, thinner, alcohol, strong alkaline detergent, bleach or other cleaning agents for maintenance.
- ❗ The product is equipped with a simple shockproof facility, and is suitable for air, railway, road and ship transportation. Keep away from rain and snow splashing, inversion and collision during the transportation.
- ❗ Check the device for any sign of wear or damage on a regular basis. If there is such sign, or if the device has been misused, contact the supplier for maintenance before reuse.

2 Product Features

This product is available for relaxing the tense muscles and releasing the post-exercise soreness and fatigue by massaging the soft tissues of the body with high frequency. A variety of massage heads can be combined to massage muscles all over the body. Equipped with a portable storage bag, it is easy to carry out.

3 Components

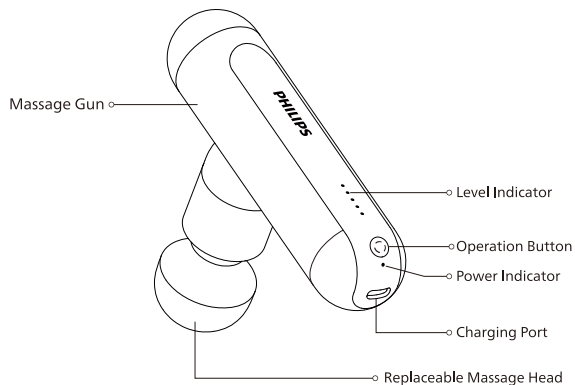



Metal Hot Compress Head

Apply stainless steel surface with hot compress to relieve muscle tension and enhance the massage impact.



Closed-cell Rubber Ball Head

Made of sports equipment material, it is soft touch, elastic, skin friendly and easy to clean.



Pointed Head

Suitable for impacting deep tissues and relieve muscle soreness quickly.



Finger-simulated Head

Installed on the pointed tip head. Suitable for gentle massage with its 6 silicone nodes.



U-shaped Head

Suitable for concentrated massage of specific sore areas.



Wedge Head

Suitable for muscle edge tissues massage and making better muscle shape.


4 How to Use

Preparations Before Use


1. Check if the device and its accessories are complete.
2. Remove the pendants and decorations during use, so as to avoid affecting the massage part.
3. Install the massage head in place.

Installation

According to the message demand, insert the appropriate massage head into the front round hole of main unit, and then press it firmly to the end, as shown in the figure below, indicating that it is installed in place.

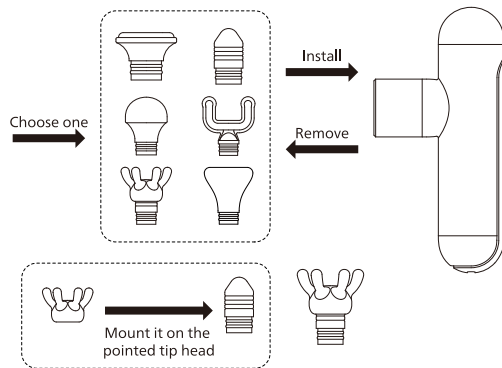

Installation effect is shown in the figure below:

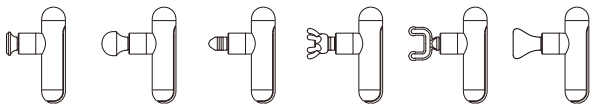

Operation

1. Start the device. Press and hold the operation button for 1 second to start the device, then the device will enter default level by default. Press the button once to increase one level, with the maximum of 5 levels. When it goes to Level 5, press the button to enter default level again, and repeat in this way.
2. Press and hold the operation button to switch off the device at any level.
3. The device will automatically switch off after 10 continuous use for 10 minutes. Restart the device for use again.
4. The massage head is suspended after being blocked. This is to protect the device against abnormal operation. Press the button to restart the device.

Power Capacity Indicator

①Power-on State:

Red light: current power

0-10%

Yellow light: current power

11-50%

Green light: current power

51-100%

②Charging State:

Red flashing light: current

power 0-10%


Yellow flashing light:

current power 11-50%

Green flashing light:

current power 51-99%

Green remains on: fully charged

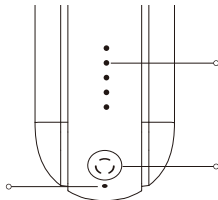

Level Indicator

1 light indicates Level 1,

2 lights indicate Level 2,

And so forth

Operation Button


Press and hold to start/ be

on standby

Press to switch the levels

Charging

1. Before the first use, charge the device for 4 hours until it is fully charged.
2. When charging, use the TYPE-C charging cable provided in the accessories, and connect the end of USB to the 5V2A output port of the charger;
3. The LED light on the device flashes regularly to display the battery remaining capacity, and indicating that it is being charged;
4. The battery can be charged at any time and at any power level. Do not start and use the device when charging;
5. The battery needs to be charged when it is exhausted to less than 5% (the power indicator flashes red).
6. The fully-charged device can be operated for about average 2-3 hours, depending on the working level and strength.

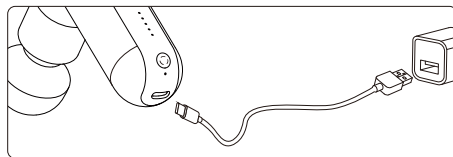

5 Indicator Description

| Level Indicator | Status | Description |
|-----------------|-----------|---------------|
| 5 lights on | Flash | Default level |
| 1 light on | Remain on | Level 1 |
| 2 lights on | Remain on | Level 2 |
| 3 lights on | Remain on | Level 3 |
| 4 lights on | Remain on | Level 4 |
| 5 lights on | Remain on | Level 5 |

| Power Capacity Indicator | Status | Description |
|--------------------------|----------------------|----------------------------|
| Red light | Flashing | Current power at <5% |
| Red light | Remain on / Flashing | Current power at 0% - 10% |
| Yellow light | Remain on / Flashing | Current power at 11% - 50% |
| Green light | Remain on / Flashing | Current power at 51% - 99% |
| Green light | Remain on | Current power at 100% |

6 Maintenance

1. Clean the surface of the device with a slightly wet towel and then dry it with a soft cloth.
2. Put the device in the appropriate portable bag for storing or traveling.

3. Store the device in a dry and well-ventilated place without corrosive gas.
4. Clean and pack the device if it is not used for a long time. It is recommended to charge it every 1 month.
5. This product is suitable for transportation by car, train, ship and airplane. During transportation, the product shall be fixed to against violent vibration, collision, tumbling and falling, and shall be placed upward and be handled with care and rain proof.
6. In order to protect the environment, do not discard it at random. Please discard each part according to their disposal methods.

! During maintenance, the power cord must be unplugged, but do not unplug it with wet hands.

Disposal

The lithium-ion battery used in this product is a valuable resource that can be recycled. Take out the lithium-ion battery when it is used up and discarded, and then hand it over to a professional institution that can recycle the rechargeable batteries for disposal.

Battery removal:

Pry open the bottom of main unit, and then remove the battery from the device (The battery cannot be replaced by users arbitrarily):

- The battery must be taken out from the product before the device is discarded;
- The product must be powered off when the battery is removed;
- The battery shall be disposed of in a safe manner.

7 Troubleshooting

This chapter lists the most common problems to the product. If the problems you encounter are not included in the following tables, please call our service hotline or contact the authorized service center in your region.

| Fault Description | Troubleshooting |
|--|--|
| Massage head slips out or falls off | Check whether the massage head is installed in place |
| Start-up failure | Check whether the power capacity is sufficient (charge for more than 8 hours if not used for a long time) |
| Charging failure | 1. Check whether the voltage and current of the charger are in line with the product requirements 2. Check whether the charging connector and the power supply are plugged in place |
| Sudden stop after continuous operation for 10 minutes | This is the function setting of protection against long time operation. The device is switched from operation mode to standby mode, which is normal. Press the button to restart the device. |
| Massage head is blocked and stops running | This is the function setting of protection against abnormal operation. The device is switched from operation to standby mode, which is normal. Press the button to restart the device. |
| Reasonable use of the product can effectively prolong its service life. It is recommended that: 1. Do not toss or drop the device during use. 2. Do not use the device continuously for more than 30 minutes. Keep it away from the humid environment when using or storing it. 3. If it is left unused for a long time, please charge it once every 1 month. | |

If the product has been left unused for a long time, be sure to confirm that its functions are normal before using it again

| | Check for the following faults | |
|---------------|---|--|
| Regular check | <ul style="list-style-type: none">Whether the power cord or plug is hotWhether the power cord is deeply scarred or deformed, or has a burnt smellWhether there is abnormal sound or vibration during workWhether the product can work properly after switch onWhether there are other abnormalities or faults | In the event of the above faults, stop using the device immediately and cut off the power supply to prevent accidents. Please send it to our maintenance center. |

8 Technical Parameters

| | |
|----------------------------|------------------------------|
| Product Name | Philips Mini Massage Gun |
| Product Model | PPM7303 |
| Operating Voltage | 7.4V --- |
| Operating Power | 10W |
| Charging Voltage | 5V --- |
| Charging Current | 2A |
| Battery Capacity | 1300mAh |
| Interface Type | USB Type-C |
| Charging Time | 4 hours |
| Product Net Weight | 303g |
| Product Size | 75×38×153mm |
| Intensity Level Adjustment | 5 Levels |
| Power Supply | Rechargeable Lithium Battery |
| Production Date | See Product Certificate |

9 Service Guideline for Warranty

Warranty and Service

The product is a household appliance with exquisite design and high-quality component. Within two years from the date of purchase, you will receive free warranty service for any damage caused by the manufacturing process or components under normal operation confirmed by our maintenance service.

The warranty service does not include consumable components, transportation fee and door-to-door service. Please show the proof of purchase to the service personnel during maintenance.

You cannot receive free warranty service under the following conditions:

1. Damage by improper operation, such as improper components connection, improper installation, deprived of manual use, mis-operation.
2. Negligence and damage because of transportation or other accident.
3. Maintenance and modification without approval.
4. Other damage caused by force majeure (such as natural disaster, abnormal voltage, etc.).
5. Damage caused by general use outside home (e.g. industrial and commercial use).
6. Aging, wearing and tearing caused by normal operation of the product without affecting normal operation of the product.

This statement serves as a publicity for free maintenance within the specified time limit and conditions, and does not limit the legal rights of consumers.

Please contact our local maintenance service center for any information or difficulties or you can consult through the hotline.

HongKong

Hotline: 852-3188-4987

Service Email: philips.massage.hk@centuryfield.com

Taiwan

Hotline: 0800-661-600

Service Email: Philips.massager@xander.com.tw

Warranty Card

| | | | |
|---------------------|--|------------------|-------------------|
| Product Model | | Customer Name | |
| Seller | | Contact Number | |
| Date of Purchase | | Serial Number | |
| Service Center | | Customer Address | |
| Maintenance Content | | Date | Service Personnel |
| | | | |
| | | | |
| | | | |
| | | | |

10 Packing List

| | | | |
|-------------|----|--------------------|----|
| Massage Gun | 1x | Massage Head | 6x |
| Storage Bag | 1x | USB Charging Cable | 1x |
| User Manual | 1x | Certificate | 1x |

目錄

1 用戶必讀

符號描述

禁忌人群

使用注意事項

保養的注意事項

2 產品功能

3 部件名稱

4 使用方法

使用前的準備事項

安裝方法

使用操作

充電方式

5 指示燈說明

6 保養維護

廢棄方式

7 故障診斷

8 主要技術參數

9 產品保修服務指南

保修及服務

保修卡

10 裝箱清單


1 用戶必讀


產品使用前請仔細閱讀並妥善保管本說明書。本說明書可在www.philips.com獲取。

符號描述

為避免造成人身危害或財產損失，請務必遵守以下內容。

· 用以下圖示來分別說明希望遵守的內容。

 表示禁止

 表示需要根據指示去做

禁忌人群

重要信息

器具具有發熱表面，對熱不敏感的人使用時必須注意。

本電器不適用於身體、感官或智力能力下降或缺乏經驗和知識的人員(包括兒童)使用，除非由負責他們安全的人員對他們的使用進行監督或指導。

應監督兒童，確保他們不玩電器。

如果電源軟線損壞，必須用專用軟線或從其製造商或維修部買到的專用組件來更換。

本電器含有的電池，應由技術人員更換電池。

電器只能在器具上標示的安全特低電壓內供電。

未獲得醫生事先同意，不能在以下任何一種情況下使用本產品。

- 懷孕、糖尿病併發症(比如神經病變或視網膜損傷)、佩帶起搏器、近期做過手術、癱瘓或偏頭痛、椎間盤突出、脊椎前移、椎骨脫離、或脊椎關節僵硬、近期做過關節置換手術或IUD、金屬針或鋼板任何與您身體健康相關的問題。這些禁忌症並不意味著您無法使用本產品，我們建議您在使用前諮詢醫生。
- 目前正在進行的研究是關於振動訓練對特定醫學疾病的影響。這很有可能減少上述各項禁忌症。實踐經驗表明，在許多情況下，將振動訓練結合到治療方案也是一種治療方式。這必須在醫生、專家或理療師的建議下，或其陪同下進行。

❗ 以下人群/情況禁止使用

- 禁止未成年人使用，如果已受傷，禁止使用本產品。在肌肉損傷時使用本設備前，請諮詢您的醫生。
- 禁止在非乾燥、非潔淨皮膚表面上使用，可以隔著衣服使用，輕輕在皮膚上按壓、移動，每個部位大約60秒。
- 禁止在頸部以上和肌肉覆蓋較少的部位使用，禁止在骨頭上使用，在不產生疼痛或不適的情況下，只在身體的軟組織上使用本產品。
- 禁止在產生淤青，出現疼痛或不適的跡象時使用。
- 禁止無法表達自己意志的人，或者自己無法操作機器的人使用。
- 禁止兒童使用，在使用的時候也不要讓兒童靠近。
- 使用過程中，感覺腰疼，頭暈，嘔吐，悸動等身體異常反應的時候，請立即停止。
- 本產品單次定時10分鐘，每次使用請不要超過20分鐘，使用後請讓機器休息30分鐘以確保機器壽命的延長。
- 下列的情況禁止使用：
 - 劇烈疲勞的時候
 - 飯前、飯後一小時之內
 - 醉酒之後

使用注意事項

- ❗ 不要穿太厚的衣服使用。
- ❗ 遠離液體或熱源。
- ❗ 充電中產品無法使用。
- ❗ 在充電完成後，請及時斷開電源。
- ❗ 產品無法正常運行，或者感覺異常的時候請立即停止使用。
- ❗ 請按照使用說明資料使用本產品。
- ❗ 每次使用前按照本書操作方法仔細檢查產品是否能正常使用。
- ⊘ 不要對電源線進行負荷壓載，或者異致電源線受損。
- ⊘ 絕對不要分解，改造或者自己修理產品。

 
保養的注意事項

- ❗ 保養的時候，務必先斷開電源。
- ⊘ 保養時，請不要使用揮發油，稀釋劑，酒精，強鹼性洗潔劑，漂白劑等清潔。
- ❗ 產品設有簡易的防震設施，適合航空鐵路、公路及輪船運輸。運輸過程中應避免雨雪淋澆、倒置和碰撞。
- ❗ 經常檢查器具上是否有磨損或損壞的跡象，如果有這種跡象，或如果此器具已經被誤用，則應在再次使用前聯繫供應商進行檢修。

2 產品功能

本產品通過高頻率衝擊放鬆身體的軟組織，可以幫助放鬆緊張肌肉，釋放運動後酸痛和疲憊。搭配不同的按摩頭使用，可用於身體各處肌肉按摩，配置便攜收納包，便於外出攜帶。

3 部件名稱

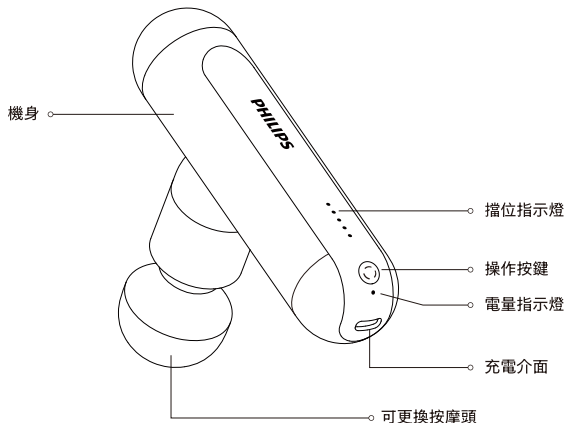

金屬發熱平頭

不銹鋼表面，有利於增強衝擊感，同時可加熱按摩部位，舒緩深層肌肉緊張



閉孔橡膠球頭 Pro

選用運動設備專用材質，親膚易潔，適合日常按摩放鬆



尖頭

用於衝擊深層組織，快速緩解肌肉酸痛



仿手指按摩頭

安裝於尖頭上，選用運動設備專用材質，親膚易潔，適合日常按摩放鬆



U型頭

適用於集中按摩特定的酸痛點



楔形頭

可用於大肌肉群的塑型按摩

4 使用方法

 
使用前的準備事項

1. 請檢查機器及配件完整。
2. 使用時請去除掛件和裝飾物，以避免影響按摩部位。
3. 請將按摩頭安裝到位。


安裝方法

根據按摩需求，選擇按摩頭插入按摩槍前方圓孔內，用力按壓到底。

如下圖所示，表示安裝到位。

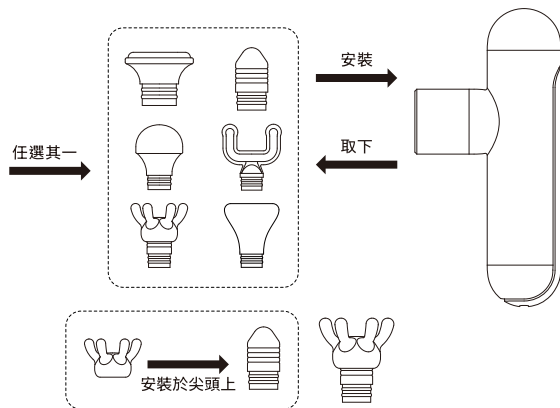


安裝效果如圖：

 


使用操作

 1. 開機，長按操作按鍵1秒開機，開機默認進入預設擋位，每按一次按鍵則擋位遞增1擋，直到5擋。5擋時按按鍵再次進入預設擋位，依次迴圈。
2. 任意擋位下，長按開機。
3. 連續使用10分鐘後自動關機，如需再次使用，請重新啟動機器。
4. 按摩頭堵轉後停止出力，為運行異常保護功能設定，短按按鍵可重新啟動。

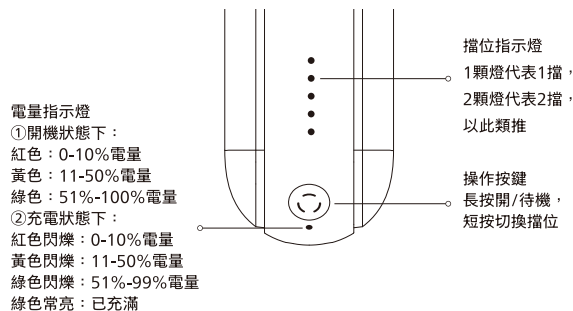

充電方式

 - 1.初次使用之前，充電4個小時，將電充滿；
- 2.充電時，請使用附件提供的TYPE-C充電線，USB一端連接充電器5V2A輸出介面；
- 3.設備上的LED燈有規律地閃爍，顯示電池電量，表示正在充電；
- 4.電池可以在任何時間，在任何電量情況下進行充電，充電時不可以開機使用本產品；
- 5.電池電量耗盡到小於5%(電量指示燈呈紅色閃爍)需充電。
- 6.產品充滿電平均運行時間約2-3小時，強度和力度不同有一定差異。

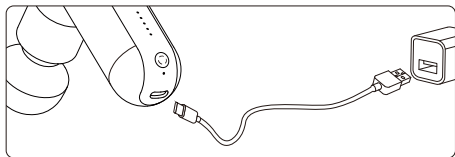

5 指示燈說明

| 擋位指示燈 | 狀態 | 描述 |
|-------|----|------|
| 5顆燈亮 | 閃爍 | 預設擋位 |
| 1顆燈亮 | 常亮 | 一擋 |
| 2顆燈亮 | 常亮 | 二擋 |
| 3顆燈亮 | 常亮 | 三擋 |
| 4顆燈亮 | 常亮 | 四擋 |
| 5顆燈亮 | 常亮 | 五擋 |

| 電量指示燈 | 狀態 | 描述 |
|-------|-------|--------------|
| 紅色燈光 | 閃爍 | 當前電量 < 5% |
| 紅色燈光 | 常亮/閃爍 | 當前電量 0%-10% |
| 黃色燈光 | 常亮/閃爍 | 當前電量 11%-50% |
| 綠色燈光 | 常亮/閃爍 | 當前電量 51%-99% |
| 綠色燈光 | 常亮 | 當前電量 100% |

6 保養維護

- 1.用微濕的毛巾清潔設備表面，然後用軟布擦幹。
- 2.在存放或出門旅行時，放在配套的便攜包中。
- 3.應存放於乾燥、通風良好，無腐蝕性氣體的地方。
- 4.長時間不使用應清潔後包裝儲存，建議每隔1個月充電一次。
- 5.本產品適用於汽車、火車、輪船、飛機運輸方式。運輸中應固定好本產品，防止劇烈振動、碰撞、翻滾和跌落，並向上、輕放和防雨。
- 6.為了保護環境，不要隨意廢棄，請根據各個部位的廢棄方法進行廢棄。

! 保養的時候，一定要把電源線拔掉，但是不要用濕手去拔除電線。

廢棄方式

本產品所用的鋰離子電池是可回收再生的貴重資源，請在使用完畢廢棄之時，將鋰離子電池取出，交給可進行充電式電池回收再生處理的專業機構進行處理。

電池拆除步驟：

撬開底部可將電池從器具中取出（用戶不能自行更換電池）：

- 一廢棄器具前，必須將電池從器具中取出；
- 一在取出電池時，器具必須斷電；
- 一電池應安全地處理。

7 故障診斷

本章列出了關於本產品最常見的問題。如果您無法在其中找到您所遇問題的答案，請聯繫服務熱線或您所在地區的授權服務中心。

| 故障描述 | 故障排除 |
|--|--|
| 按摩頭滑出或掉落 | 檢查按摩頭是否安裝到位 |
| 產品無法開機 | 檢查電量是否充足 (若長時間未使用先充電8小時以上) |
| 產品無法充電 | 1.檢查充電頭電壓和電流是否與產品要求匹配 2.檢查充電連接口和電源是否插到位 |
| 連續運行10分鐘後突然停止 | 此現象為長時間運行保護功能設定，由運行轉為待機模式，短按按鍵可重新啟動，屬於正常現象 |
| 按摩頭堵轉後停止出力 | 此現象為運行異常保護功能設定，由運行轉為待機模式，短按按鍵可重新啟動，屬於正常現象 |
| 合理使用產品可有效延長使用壽命，建議： 1.使用過程中勿扔勿摔。 2.最長連續使用時間建議不要超過30分鐘，使用或存放時遠離潮濕環境。 3.長時間不使用請每隔1個月充一次電。 | |

長時間未使用後，務必先確認功能正常，才能再次使用。

| 定期檢查 | 有無以下故障 | 若出現上述故障，為了防止引發事故，請立刻停止使用，並切斷電源。請送往本公司維修點。 |
|------|---|---|
| | <ul style="list-style-type: none">· 電源線或者插頭發熱· 電源線有深深的傷痕或者變形、有焦味· 工作中有異常的聲音或者振動· 開啟開關後，不正常工作· 有其他異常或者故障 | |

注意：
如果無法排除故障或產品仍無法理想操作，與售後服務人員聯繫，切勿自行拆卸或嘗試維修。

8 主要技術參數

| | |
|------|-------------|
| 產品名稱 | 飛利浦迷你按摩槍 |
| 產品型號 | PPM7303 |
| 工作電壓 | 7.4V --- |
| 工作功率 | 10W |
| 充電電壓 | 5V --- |
| 充電電流 | 2A |
| 電池容量 | 1300mAh |
| 介面類型 | USB Type-C |
| 充電時間 | 4小時 |
| 產品淨重 | 303g |
| 產品尺寸 | 75x38x153mm |
| 檔位調節 | 5擋調節 |
| 供電方式 | 可充電鋰電池 |
| 生產日期 | 見產品合格證 |

9 產品保修服務指南

保修及服務

此產品是一件設計精良，用高品質元件製造之家用電器，在正常使用及保養下應能發揮其優越性能。在購買日期後起計兩年內，凡經本公司特約維修站人員確認為正常使用情況下，因製作工藝或原配件造成之損壞，您都將獲得免費保修服務。此免費服務不包括需時常更換的消耗品，運輸費及維修人員上門服務費，維修時請提供有效購買憑證。

以下情況將不能獲得免費服務

1. 使用不當引起的人為損壞，例如接入不適當配件、不適當之安裝、不依說明書使用、錯誤使用或疏忽而造成之損壞等。
2. 因運輸及其他意外而造成之損壞。
3. 非經本公司認可之維修和改裝。
4. 其他因不可抗力（如自然災禍，電壓異常等）造成的損壞。
5. 一般家庭以外使用（如工業、商業用等）而造成的損壞。
6. 正常使用引起的產品老化，磨損等，但不影響產品使用。

該說明作為在規定期限及條件之內進行免費維修的宣傳，並不限製消費者的法定權力。

若您需諮詢相關咨訊，或遇困難事項時，請聯絡本公司當地維修服務中心，或向服務熱線咨詢。

香港：

服務熱線：852-3188-4987

服務郵箱：philips.massage.hk@centuryfield.com

臺灣：

服務熱線：0800-661-600

服務郵箱：Philips.massager@xander.com.tw

保修卡

| | | | |
|---------|----|------|--|
| 產品型號 | | 用戶姓名 | |
| 銷售單位 | | 聯繫電話 | |
| 購買日期 | | 出廠編號 | |
| 維修內容 | | 用戶地址 | |
| 特別技術服務站 | 時間 | 保修人員 | |
| | | | |
| | | | |
| | | | |

10 裝箱清單

| | | | |
|-----|-----|-----|-----|
| 主機 | 1 × | 按摩頭 | 6 × |
| 收納袋 | 1 × | 充電線 | 1 × |
| 說明書 | 1 × | 合格證 | 1 × |