


**PHILIPS
NORELCO**

QP6510



BC

Manufactured for: Philips Personal Health
a division of Philips North America LLC
P.O. Box 10313, Stamford, CT 06904, USA

 This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco is a registered trademark of Philips North America LLC.

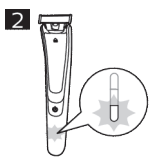
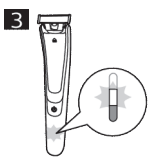
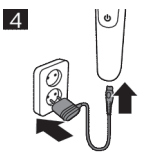

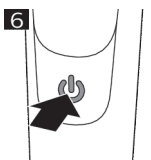

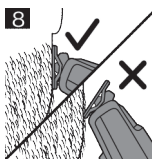
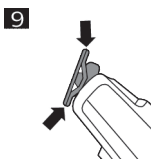
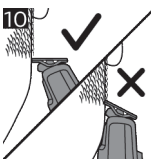

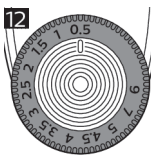
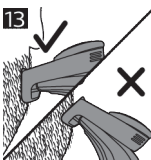


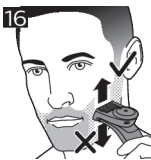

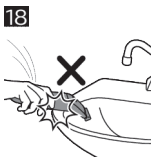


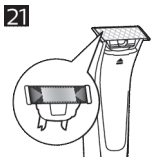



PHILIPS and Philips shield are registered trademarks of Koninklijke Philips N.V.

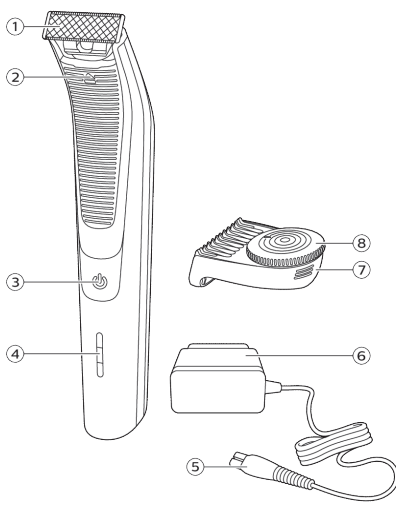
©2024 Philips North America LLC. All rights reserved.

4222.002.8606.2 (02/06/2024)



>75 % recycled paper
>75 % papier recyclé

- 2 
- 3 
- 4 
- 5 
- 6 
- 7 
- 8 
- 9 
- 10 
- 11 
- 12 
- 13 
- 14 
- 15 
- 16 
- 17 
- 18 
- 19 
- 20 
- 21 
- 22 
- 23 
- 24 



English

IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following:

Read all instructions before using this product.

DANGER

To reduce the risk of electric shock:

- Do not reach for a corded product that has fallen into water. Unplug immediately from the power outlet.
- The power cord and the accessories connected to it are not for immersion or for use in shower.
- Do not use an extension cord with this product.
- Do not place or store the product where it can fall or be pulled into a tub or sink. Do not place or drop the product into water or other liquid.
- Always unplug this product from the electrical outlet immediately after (re)charging.
- Remove power cord from power outlet and product before cleaning.
- The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- Close supervision is required when this product is used by, on, or near children, or persons with limited physical, sensory, or mental capabilities or invalids.
- Use this product only for its intended household use as described in this manual. Do not use attachments not recommended by Philips North America LLC.
- Never operate this product if it has a damaged power cord, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-3050.
- Keep the power cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the adapter.
- Do not charge, clean or plug in product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always check cutters, cutting unit and guards before using the product. Do not use the product if cutters, cutting unit or guards are damaged, as injury may occur.
- Always attach power cord to product first, then to power outlet. Be certain plug is inserted firmly into product up to mark indicated on plug. To disconnect, turn product off then remove power cord from outlet.
- Keep the power cord dry at all times. Do not handle with wet hands.

- Never put the product in direct sunlight or store at a temperature above 140°F (60°C).
- To prevent possible damage to the power cord, do not wrap power cord around the product.
- This product is for use on human hair only. Do not use the product for any other purpose.
- Always store the product, attachments and power cord in a moisture-free area. Make sure the cord is disconnected from the product.
- Do not attempt to open the product to remove or replace the built-in rechargeable battery.
- Only use the power cord and other accessories supplied with the product.

SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

Introduction

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at

www.norelco.com/register.

General description (Fig. 1)

- 1 Blade
- 2 Blade release slide switch
- 3 On/off button
- 4 Battery status indicator
- 5 Small plug
- 6 Power plug
- 7 Precision trimming comb
- 8 Hair length setting wheel



This symbol indicates that the product can be used in the bath or shower.

Charging

Charging takes approx. 1 hour.

Charge the product before first use and when the display indicates that the battery is almost empty.

- Charging or using the product at temperatures below 40°F (4,5°C) or higher than 95°F (35°C) adversely affects the lifespan of the battery.
- If the product is subjected to a major change in temperature, pressure or humidity, let the product acclimatize for 30 minutes before use.

Battery status indications

- When the battery is almost empty, the bottom light of the battery status indicator flashes orange (Fig. 2).
- When the product is charging, first the bottom light flashes white and then lights up white continuously (Fig. 3). Then the second light flashes and then lights up continuously, and so on until the product is fully charged.
- Quick charge: after approx. 5 minutes charging, the product contains enough energy for 5 minutes use. During quick charge the lights of the battery status indicator will light up continuously one after another and then all switch off. This will repeat itself until quick charge is finished.
- When the battery is fully charged, all lights of the battery charge indicator light up white continuously.

Note: Approx. 30 minutes after the battery is fully charged or when you disconnect the product from the outlet, the battery status indicator turns off automatically.

Charging with the power cord

- 1 Make sure the product is turned off.
- 2 Insert the small plug into the product and put the power plug in any 120V AC outlet (Fig. 4).
- 3 After charging, remove the power plug from the wall outlet and pull the small plug out of the product.

Operating time

When the product is fully charged, it has a cordless operating time of up to 60 minutes.

Note: An adapter plug may be necessary for cord usage in some foreign countries. Use an attachment plug adapter of the proper configuration for the power outlet.

Using the product

Always check the product and all accessories before using. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Note: This product is for cordless use only (Fig. 5).

- Use this product for its intended household use as described in this manual.
- For hygienic reasons, the product should only be used by one person.
- Trimming is easier when the skin and hair are dry.
- Use the product to trim, edge or shave facial hair (beard, mustache and sideburns).
- Trim with the trimming comb to obtain a certain length.
- Take your time when you first start to use the product. You have to gain practice with the product.
- Allow some time for the skin to adjust to the product.
- Use the blade on a clean face. The blades go blunt faster if on skin that isn't clean.
- Do not use the blade when damaged or broken. Replace the blade immediately if it is damaged.

This product is not intended for shaving, edging or trimming hairs on lower body parts or scalp hair.

Turning the product on and off

- 1 Press the on/off button once to turn the product on or off (Fig. 6).

Shaving

- Make sure that the blade is in full contact with the skin by placing it flat on the skin.
 - For the best result, move the product against the grain.
 - Make long strokes while pressing lightly.
 - Use the product dry or wet with gel or foam, even in the shower.
 - Shaving a clean beard and face gives the best results.
- 1 Turn the product on (Fig. 6).
 - 2 Place the blade on the skin and move the product up or against the grain in long strokes while pressing lightly (Fig. 7).

Note: Make sure you hold the surface of the blade flat against your skin (Fig. 8).

- 3 Turn off and clean the product after every use (see 'Cleaning').

Edging

- Use both edges of the blade to create sharp lines and perfect edges.
 - Hold the product in such a way that the blade is perpendicular to the skin and one of its edges touches the skin. This allows more precise detailing of sideburns and the area around the mouth and nose.
- 1 To create sharp edges and lines, you can use either edge of the blade (Fig. 9).
 - 2 Turn the product on (Fig. 6).
 - 3 Place the edge of the blade perpendicular onto the skin (Fig. 10).
 - 4 Make straight strokes while applying gentle pressure (Fig. 11).
 - 5 Turn off and clean the product after each use (see 'Cleaning the product').

Trimming with comb

- The precision trimming comb allows you to trim hair to different lengths. When you trim for the first time, start at the highest length setting to familiarize yourself with the product.
- The settings on the wheel correspond to the remaining hair length after trimming in millimeters. You can select a length from 0.5mm (1/64 in.) to 9mm (23/64 in.) (Fig. 12).
- Always trim in the direction of the teeth of the precision trimming comb making sure the flat part of the comb is in full contact with the skin for an even trimming result (Fig. 13).

- Since all hairs do not grow in the same direction, you may want to try different trimming directions (i.e. upwards, downwards, or across). Practice is best for optimum results.
 - Make sure to always move the product against the grain.
 - Trimming is easier when the skin and hair are dry.
- 1 Place the front part of the comb onto the blade and push the projection at the back of the comb into the product ('click') (Fig. 14).
 - 2 Turn the hair length setting wheel to select the desired hair length setting (Fig. 15). The settings on the wheel correspond to the remaining hair length after trimming. You can select a length from 0.5mm (1/64 in.) to 9mm (23/64 in.) (Fig. 12).
 - 3 Turn on the product (Fig. 6).
 - 4 Place the comb onto the skin and move the product upwards slowly, against the grain (Fig. 16).
 - 5 Turn off and clean the product after each use (see 'Cleaning').
 - 6 To remove the comb, pull the back part off the product and then slide the comb off the blade (Fig. 17).

Cleaning

Clean the product after every use.

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Do not tap the product or blade against a surface to remove hairs and water as this may cause damage to the product and blade (Fig. 18). If the blade is damaged, replace immediately.

Never dry the blade with a towel or tissue, as this may cause damage.

Cleaning the product

- 1 Switch off the product.
- 2 Remove the comb from the blade (Fig. 17).
- 3 Blow off any hairs that have accumulated on the blade and/or comb (Fig. 19).
- 4 Switch on the product for approx. 15 seconds and rinse the blade with lukewarm water (Fig. 19).
- 5 Rinse the comb for approx. 15 seconds with lukewarm water (Fig. 20).
- 6 Carefully shake off excess water and let all parts air dry completely.

Note: The blade is fragile. Handle it carefully. Replace the blade immediately if it is damaged.

This product has no other user-serviceable parts. For assistance call 1-800-243-3050.

Storage

- Always attach the precision trimming comb on the blade to protect the blade from damage during traveling or storage (Fig. 14).
- Make sure the product and attachments are completely dry before storing.
- Be sure the product is switched off. Remove the power cord from power outlet and the product before storing it in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around the product when storing.
- Store cord and other accessories in a safe location where these will not be cut or damaged.
- Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

Replacement

Blade wear indicator

For optimal cutting and gliding performance, replace the blade every 4 months or when it no longer provides the shaving or trimming results you expect. This advice is based on two full shaves a week and actual results may vary. The blade is equipped with a blade wear indicator. A green bar will gradually appear on the blade as you use it (Fig. 21). When it is highly visible, it is recommended to replace your blade for the best OneBlade experience. Replace the blade when you are not satisfied with its performance. Always replace with an

original Philips Norelco blade (see 'Accessories').

Depending on your usage behavior, the exact lifetime of the blade could be longer or shorter. Similar to a manual blade, the blade becomes blunt over time, which results in increased hair pulling and reduced cutting performance.

Replacing the blade

- 1 Turn off the product.
- 2 Carefully push the blade release slide switch upwards while holding the blade on both sides (Fig. 22). This will prevent the blade from flying away.
- 3 Hold the new blade on both sides and press it onto the handle ('click') (Fig. 23).

Note: Be careful, the edges of the blade are sharp. When you hear a click, the new blade is placed correctly and ready for use.

Accessories

Replacement parts and accessories may be purchased at a store near you or on our website www.philips.com/store.

The following accessories are available:

- Model QP210 Philips Norelco Replacement Blade, 1-Pack
- Model QP220 Philips Norelco Replacement Blade, 2-Pack
- Model QP230 Philips Norelco Replacement Blade, 3-Pack
- Model QP610 Philips Norelco Body Kit
- Model QP620 Philips Norelco Face + Body Kit

Assistance

For assistance, visit our website:

www.philips.com/support or call toll free

1-800-243-3050.

Disposal

- This product contains a rechargeable lithium-ion battery which must be disposed of properly. Contact your local town or city officials for battery disposal information. You can also call 1-800-822-8837 or visit www.call2recycle.org for battery drop-off locations.
- For assistance, visit our website www.philips.com/support or call 1-800-243-3050 toll free.
- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. For recycling information, please contact your local waste management facilities or visit www.recycle.philips.com

Full Two-Year Warranty

Philips North America LLC warrants this new product (except blade and guards) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage or batteries.*

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/support. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips North America LLC.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

45-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your product send the product back and we'll refund you the full purchase price.

The product must be shipped prepaid by insured mail, insurance prepaid, have the

original sales receipt, indicating purchase price and date of purchase.

We cannot be responsible for lost mail.

The product must be postmarked no later than 45 days after the date of purchase.

Philips reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

To obtain the money-back guarantee service, please go to

www.PhilipsMoneyBack.com and follow the simple 3-step process.

Delivery of refund check will occur 6–8 weeks after receipt of returned product.