






Specifications are subject to change without notice  
© 2024 Koninklijke Philips N.V.  
All rights reserved.



3000.130.5954.1 (12/03/2024)

>75 % recycled paper

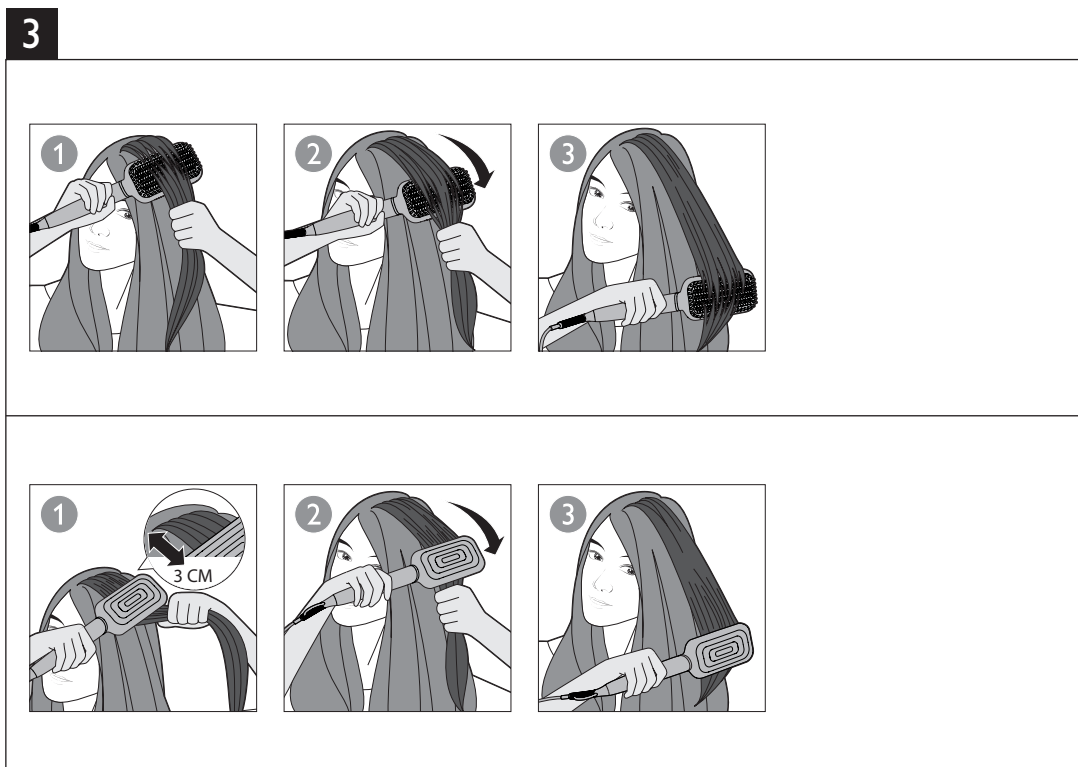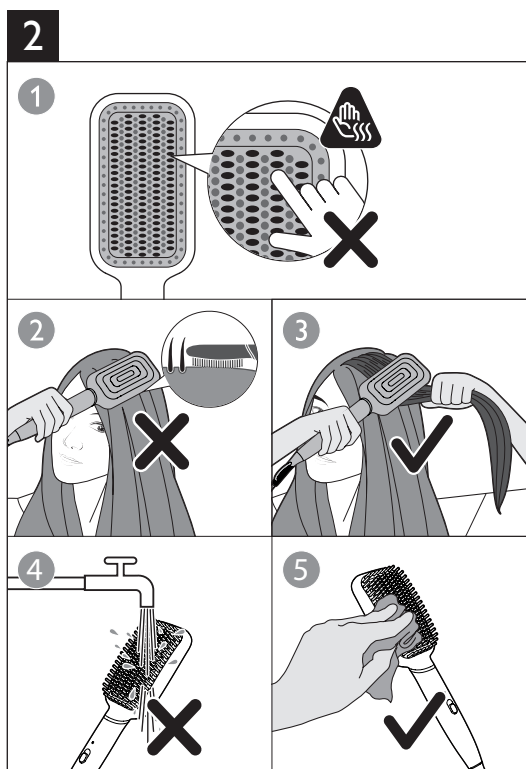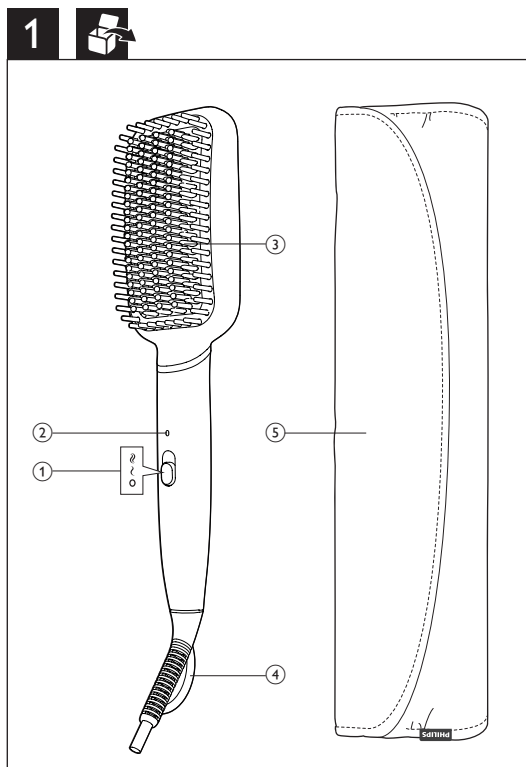

## English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### 1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the supply cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your warranty becomes invalid.
- Do not wind the supply cord round the appliance.
- Only use the appliance on dry hair.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as the bristles are hot and avoid contact with the skin.
- Always place the appliance on a heat-resistant, stable flat surface. The hot brush should never touch the surface or other flammable material.
- Avoid the supply cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Do not operate the appliance with wet hands.
- Keep the brush clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.

- The metal bristles have coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on color-treated hair, the brush may be stained.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.
- Do not clean any part of the brush under tap water as it is extremely dangerous.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.

## Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

## Recycling

- This symbol means that electrical products shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical products.



## 2 How to use

### Before use:

#### Note

- Only use the brush on dry hair.
- Bristles are hot. Do not touch the bristles nor put the bristles too close to your hair roots or scalp, to avoid unintended burns.
- Some parts of the brush may be hot. Hold the product by its handle.
- Remove your fingers when the brush is close to hair ends to avoid touching the bristles.
- Do not wash the brush under running water.

- 1 Connect the plug to a power supply socket.
- 2 Comb your hair thoroughly and divide them into small sections.
- 3 Slide the temperature switch ( ① ) to select your desired setting according to the table as below.

| Hair Type          | Temperature Setting |
|--------------------|---------------------|
| Thin / Medium hair | ⌘ - 170°C           |
| Thick hair         | ⌘ - 200°C           |

- The indicator ( ② ) will keep blinking until the appliance is ready for use.

### To straighten your hair ( Fig.3 )

- 1 Use a round brush or comb to detangle your hair before using.
- 2 Select one section of hair and put the heated brush ( ③ ) underneath the hair strand with bristles facing upwards, about 3cm away from your hair roots.
- 3 Hold the selected hair section taut. Slide down the brush slowly to your hair ends in a single motion and slightly turn in the brush as you reach the ends to give soft flicks to the ends.
- 4 Allow the section of hair to cool for 2-3 seconds. On the same hair with brush facing downwards, hold the hair taut and slowly slide down to your hair ends in a single motion without stopping.
- 5 Repeat steps 2-4 as necessary until you get your desired results.
- 6 To turn off the appliance, slide the switch ( ① ) to O.
- 7 Let the hair sections cool down before you finger-comb the hair into its final style. For long lasting results, mist with hairspray.

### Tips and Tricks

- Flatten the selected section of hair between your fingers before placing hair on the brush so that hair is spread evenly across the brush.
- Place selected hair as close as possible to the heated base of the brush to ensure there is good contact with hair for better styling results.

### After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 Clean the appliance and bristles by damp cloth and use your fingers to remove hair or dust on the brush.
- 4 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop ( ④ ) or store in the pouch ( ⑤ ) supplied when it cools down.

## 3 Support

For all product support such as frequently asked questions, please visit [www.philips.com/support](http://www.philips.com/support).

## 4 Troubleshooting

| Problem   | Cause   | Solution   |
|---|---|--|
| The appliance does not work at all.                   | The power socket to which the appliance has been connected may be broken. | Check the appliance is plugged in correctly.<br>Check the fuse for this power socket in your home.   |
| The hair strand is not straight enough after styling. | Temperature setting is too low to reach the desired style.                | Brush your hair when the indicator stops blinking.<br>Change temperature setting to ⌘.<br>Put the selected hair strand close to the heating base of the brush. |



Always there to help you

Visit us at <https://www.philips.co.in/>  
Contact at: 1860 180 1111, 1800 102 2929  
Or [customer care.india@philips.com](mailto:customer care.india@philips.com)

PHILIPS

## Warranty card

Serial No.:

Dealer's Name: \_\_\_\_\_

Dealer's Stamp: \_\_\_\_\_

Customer's Name and Address: \_\_\_\_\_

Model No. \_\_\_\_\_

Bill No. \_\_\_\_\_ Amount: \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Dealer Signature \_\_\_\_\_

### Warranty and Service

For any information or problem, contact your local Philips dealer or authorized service center. For a list of authorized Philips service centers visit: [www.philips.com](http://www.philips.com) or contact our consumer care at 1800 102 2929 (Toll free) or 1860 180 1111 (standard call rates apply)

All consumables and parts susceptible to normal wear and tear are not covered under warranty.

### Warranty Card

This apparatus is covered under warranty against any defect due to defective material or workmanship for TWO YEARS from the date of purchase. Should a defect develop during the period of warranty, PHILIPS INDIA LTD. undertakes to repair the apparatus FREE OF CHARGE at any of the Philips authorized Service Centres.

The warranty is not valid in case:

1. Apparatus is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Philips Authorized service centre.
4. Modifications of any nature made in the apparatus.
5. Tampered serial number.
6. Incomplete warranty card after purchase.
7. Product if used for commercial purpose (i.e. other than domestic use).
8. Usage of parts not recommended by Philips or those made by other manufacturers.

PHILIPS INDIA LIMITED,  
3rd FLOOR, TOWER A, DLF IT PARK, 08 BLOCK AF,  
MAJOR ARTERIAL ROAD, NEW TOWN (RAJARHAT),  
KOLKATA-700156, WEST BENGAL