





www.philips.com

© 2024 Koninklijke Philips N.V. All rights reserved. Specifications are subject to change without notice Trademarks are the property of Koninklijke Philips N.V. (Royal Philips) or their respective owners

©2024 Koninklijke Philips N.V. 保留所有权利。 规格如有更改,恕不另行通知。 商标由Koninklijke Philips N.V.及各自所有者所有。

3000.130.5595.1 (17/04/2024)











Important safety information

Only use the product for its intended purpose. Read this important information carefully before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. Accessories supplied may vary for different products.

The box shows which accessories are supplied with your product and whether your product is Bluetooth enabled.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit with output rating 5 V ===, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) supply unit. A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/ support. If you need support finding the correct USB supply unit, contact the Consumer Care Center in your country (see the international warranty leaflet for contact details). Using a non-certified supply unit may cause hazards or
- Keep the USB cable, the USB supply unit and the charging stand (if provided)
- This shaver is waterproof (Fig. 2). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- Do not modify the supply unit. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision
- Unplug the appliance before cleaning it with water Do not use a damaged appliance. Replace damaged parts with new Philips
- Only use cold or lukewarm water to clean the appliance.
- Because of hygiene, only one person should use the appliance Never use compressed air, scouring pads, abrasive cleaning agents or
- aggressive liquids to clean the appliance.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 5 °C and 35 °C. Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact
- Do not place products and their batteries in microwave ovens or on induction
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries. If batteries are damaged or leaking, avoid contact with the skin or eyes. If this
- occurs, immediately rinse well with water and seek medical care

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Support

For all product support such as frequently asked questions, please visit

www.philips.com/support. Parts that are subject to normal wear (such as shaving heads and cutting units) are not covered by the international warranty.

Troubleshooting This chapter summarizes the most common problems you could encounter with

the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Shaver

Problem	Possible cause	Solution
The appliance does not work when I press the on/off button.	The appliance is still connected to a power source. For safety reasons, the appliance can only be used without cord.	Unplug the appliance and press the on/off button to switch on the appliance.
	The rechargeable battery is empty.	Recharge the battery.
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them.
The appliance does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads.
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads thoroughly.
Water is leaking from the bottom of the appliance.	During cleaning, water may collect between the inner body and the outer shell of the appliance.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

Recycling

Problem

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 3).
- Follow your country's rules for the separate collection of electrical products and batteries

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry. To avoid accidental short-circuiting of batteries after removal, do not let

battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

- Check if there are screws in the housing of the appliance. If so, remove them. Remove any additional screws, panels or parts of the appliance until you see
- the printed circuit board with the rechargeable battery.
- Remove the rechargeable battery.

简体中文

重要安全信息

仅可将本产品用于预期用途。 使用本产品及其电池和附 件之前,请仔细阅读本重要信息,并妥善保管以供日后参 考。误用可能会导致危害或严重伤害。 随附的附件可能因 产品而异。

包装盒上会显示产品随附的附件以及产品是否支持蓝牙。 警告

- 为产品充电时,请必须使用符合GB4706.1-2005标准 的5V===、≥1A、IPX4安全超低电压(SELV)电源适配 器,以确保电气安全。在浴室等潮湿环境中充电时,安 全起见,请仅使用IPX4(防溅型)电源部件。请访问 www.philips.com/support_选购合适的电源部件(例 如飞利浦HQ87)。在选购恰当的USB电源部件时,如 果需要支持,请联系所在国家/地区的客户服务中心 (请 参阅国际保修卡了解详细联系信息)。使用未经认证的 电源适配器可能会导致危害或严重伤害。
- 保持USB充电线、USB电源部件和充电座(如有提供) 干燥(图1)。
- 警告符号注释:禁止用在打开的水龙头下进行清洗 (图 1)。
- 该剃须刀具有防水性能 (图 2)。 适合在沐浴或淋浴时使 用,也可以放在水龙头下清洗。 出于安全原因,该剃须 刀在使用时不能连接电线。
- 符号注释:适合于在洗澡或淋浴时使用(图 2)。允许 在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器 具。
- 请勿改装电源部件。
- 本产品也可以由8岁或以上年龄的儿童以及肢体不健 全、感觉或精神上有障碍或缺乏相关经验和知识的人士 使用,但前提是有人对他们使用本产品进行监督或指 导,以确保他们安全使用,并且让他们明白相关的危 害。切勿让儿童玩弄本产品。不要让儿童在无人监督 的情况下对本产品进行清洁和保养。
- 用水清洁产品前,请先将电源插头拔掉。
- 请勿使用已经损坏的产品。请用新的飞利浦部件更换损
- 坏的部件。
- 请仅使用冷水或温水清洁产品。 出于卫生考虑,仅能由一个人使用本产品。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液 体清洁设备。
- 冲洗剃须刀时, 水可能从产品底部的插口漏出。 这是正 常的,而且没有危险,因为所有电子元件都封闭在剃须 刀内部的密封电源部件中
- 请勿在包含电动空气清新器的墙壁插座上或其周围使用 电源部件, 以免电源部件受到不可修复的损坏。
- 请仅使用飞利浦原装附件或消耗品。
- 充电、使用和存放本产品的温度应介于5°C至
- 35°C之间。 请将产品和电池远离火源,切勿将其暴露于阳光直射处
- 或高温下。 如果产品异常发热或发出异味、变色或充电时间比平时
- 长,请停止使用并停止为其充电,并联系飞利浦。
- 切勿将产品及其电池放置在微波炉中或电磁炉上。 为防止电池发热或释放有毒有害物质, 切勿打开、改
- 装、刺穿、损坏或拆卸产品或电池。 切勿使电池短路、 过度充电或反向充电。
- 如果电池损坏或出现泄漏,请避免与皮肤或眼睛接触。 如果不慎接触,请立即用清水冲洗并就医。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准 和法规。

支持

有关常见问题等所有产品支持,请访问

www.philips.com/support.

正常使用会出现磨损的部件(例如剃须刀头和修剪部件) 不在国际保修条款的涵盖范围之内

	产品中有害物质的名称及含量						
有害物质							
铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)		
Х	0	0	0	0	0		
Х	0	0	0	0	0		
Х	0	0	0	0	0		
	(Pb) X X	(Pb) (Hg) X O X O	铅 (Pb)	铅 (Pb) 录 (Hg) (Cd) 大价铬 (Cr (VI)) X O O O X O O O	铅 (Pb) 录 (Hg) (Cd) 六价铬 (PBB) X O O O X O O O		

- 该表格中所显示的"有害物质"在产品正常使用情况下不
- 会对人身和环境产生任何伤害。 该表格中所显示的"有害物质"及其存在的部件向消费者 和回收处理从业者提供相关物质的存在信息,有助于产 品废弃时的妥善处理。

PHILIPS

产品: 飞利浦电动剃须刀型号: S5618 额定电压: 3.6V === 额定输入功率: 1.7W 充电电压/电流: 5V === /1A 生产日期: 请见产品本体产地: 中国广东珠海

珠海经济特区飞利浦家庭电器有限公司

IPX7

珠海市金湾区三灶镇定湾二路365号全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005,

GB4706.9-2008制造 不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V === 、≥1A、IPX4电源适配器,以确保电气安全。

保留备用

发行日期: (17/04/2024)

故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根 据以下信息解决问题,请访问 www.philips.com/support 查阅常见问题列表,或联系您所在国家/地区的客户服务 中心。

剃须刀

	问题	可能的原因	解决方法	
	按下开/关钮时,产品不工作。	产品仍连接电源。 出于安全原因,本 产品在使用时不能 连接电线。	拔掉产品插头并按 开/关按钮打开产 品。	
		充电电池的电量已 耗尽。	给电池充电。	
		旅行锁已被激活。	按住开/关按钮 3 秒钟以禁用旅行 锁。	
		剃须刀头部件被污 染或损坏,导致马 达无法运行。	彻底清洁剃须刀头 或将其更换。	
	产品的剃须效果 不如以前好。	剃须刀头已损坏或 磨损。	更换剃须刀头。	
		毛发或污垢堵塞了 剃须刀头。	彻底清洁剃须刀 头。	
	水从产品底部漏 出。	在清洁过程中,水可能聚集在产品的机身内部与外壳之间。	这是正常现象,而 且没有危险,因为 所有电子元件都封 闭在产品内部的密 封电源部件中。	

回收

- 此符号表示电器产品和电池不能与一般的生活垃圾一同 弃置(图3)。
- 请遵守您所在国家/地区有关分类回收电器产品和电池 的规定。

取出内置充电电池

在废弃器具前,必须将电池从器具中取出。在取出电池 时,器具必须要断电。电池应安全地处置。

当您使用工具打开产品时以及在您弃置充电电池时,请采 取必要的安全保护措施

处理电池时,请确保您的双手、产品和电池都是干燥的。


为避免电池拆卸后发生意外短路,切勿让电池端子接触金 属物体(例如硬币、发夹、戒指)。切勿用铝箔包裹电 池。在丢弃之前,请用胶带将电池端子粘住或将电池放在 塑料袋中

- 1 检查产品的前面和后面是否有螺丝。如果有,请将其拆
- 2 用螺丝刀卸下产品的前面板和/或后面板。必要时还需要 拆下更多的螺丝和/或部件,直到您看见装有充电电池的 印刷电路板为止。
- 3 卸下充电电池。


包装盒内有什么? 7

随附的附件可能因产品而异。包装盒上会显示随附于您产品的附件。




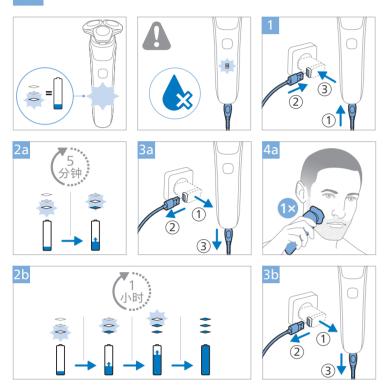



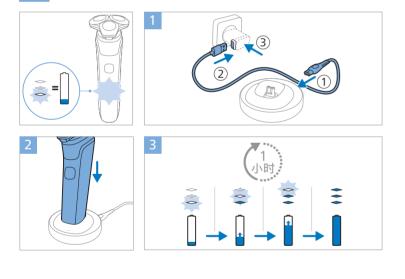

使用前拔掉充电器

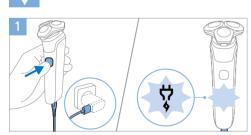

剃须



使用修剪器



6 在水龙头下冲洗剃须刀



旅行锁



如何更换剃须刀头?

