PHILIPS

Portable Radio

2000 Series

TAR2509



User manual

Register your product and get support at: www.philips.com/support

Contents

1	Important Safety Hearing safety Notice	2 2 2 3
2	Your Portable Radio Introduction What's in the box Overview of the portable radio	3 3 3 4
3	Get started Install batteries Connect power	4 4 4
4	Listen to FM/AM Radio Tune to radio stations Adjust volume Connecting to headphones	5 5 5
5	Product information	6
6	Troubleshooting	6

1 Important

Safety

- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the portable radio.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the portable radio:
 - Install all batteries correctly, + and as marked on the unit.
 - Remove batteries when the unit is not used for a long time.
 - The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- This portable radio shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the portable radio (e.g. liquid filled objects, lighted candles).

Hearing safety



Listen at a moderate volume:

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound.
 So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing.
 To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones:

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use with caution or temporarily discontinue use in potentially hazardous situations.
 Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Notice

This product complies with the radio interference requirements of the European community. Hereby, TP Vision Europe B.V. declares that the product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on www.philips.com/support.



This product complies with the radio interference requirements of the EuropeanCommunity.



This product is designed and manufactured with high-quality materials and components, which can be recycled and reused.



This symbol means the product must not be discarded as household waste and should be delivered to an appropriate collection facility recycling. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.



This symbol means that the product contains batteries covered by European Directive (EU) 2023/1542 which cannot be disposed of with normal household waste. Inform yourself about the the local separate collection system for electrical and electronic collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

2 Your Portable Radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

Introduction

With this portable radio, you can

listen to FM/AM radio


What's in the box

Check and identify the contents of your package:

- Main unit
- Power cords
- Quick start guide
- · Safey sheet
- Warranty

Overview of the portable radio

- ① Telescopic antenna
 - improves FM reception.
- 2 TUNING
 - in FM/AM mode, fine tunes a station.
- 3 Volume / On off
 - switch on the set.
 - adjusts the sound level.
- **4** Band selector
 - selects the waveband: FM or AM.
- **⑤ TONE**
 - selects NEWS or MUSIC mode.
- 6
 - 3.5 mm headphones socket.
- ⑦ LED Indicator
 - Lights up after locking FM signal.
- ® Radio Frequency Pointer
- 9 Battery compartment
- @ AC IN
 - 220-240V 50-60Hz.

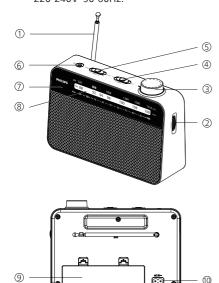

3 Get started

Always follow the instructions in this chapter in sequence.


Install batteries



Caution

- Risk of explosion! Keep the batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Batteries contain chemical substances, so they should be disposed of properly.
- Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.

Insert 2 x 1.5V R20/UM1/D batteries (not included) with correct polarity (+/-) as illustrated.

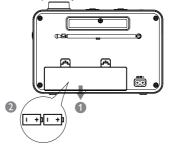

Connect power

Connect the supplied AC power cord to:

- the AC MAINS iack on the main unit.
- the wall outlet.




Caution

- Risk of product damage! Make sure that the power voltage corresponds to the voltage printed on the back or underside of the portable radio.
- Risk of electrical shock! When you unplug the power cord, always pull the plug from the socket. Never pull the cord.



Note

 The type plate is located at the bottom of the portable radio.

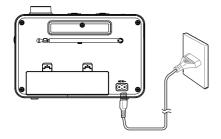

4 Listen to FM/AM radio



Note

- Keep the portable radio away from other electronic devices to avoid radio interference.
- For better reception, fully extend and adjust the position of the FM antenna.

Tune to radio stations

- 1 Turn the Volume/On off control to switch on the set.
- 2 Set the band selector to FM or AM.
- **3** Select your station using the **TUNING** control.
- **4** To switch off the radio, turn the Volume/On off control to **OFF**.

Adjust volume

Adjust the sound with the Volume/On off control.

Connecting to headphones

You can connect headphones to the headphone socket.

-> The loudspeakers will then be switched off.

Adjust Tone

Set the Tone selector to select **News** or **Music** mode.

5 Product information



Note

 Product information is subject to change without prior notice.

Power

Battery type	D SIZE(LR20)
Battery voltage	1.5V
Number of batteries	2
AC input	220-240V 50-60Hz

Tuner/Reception/Transmission

Tuner bands	FM 88 - 108 MHz
	AM 520 - 1710 KHz

Sound

Sound system	Mono	
Volume control	Rotary (analogue)	
Output power	300 mW RMS	

Connectivity

Audio/Video output	Headphones	
	(3.5mm)	

General information

Dimensions (W x H x D)	210 x 149.5x 67 mm
Weight (Main unit)	668 g

6 Troubleshooting



Warning

Never remove the casing of the product.

To keep the warranty valid, never try to repair the device yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips webpage (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Make sure that the AC power plug of the unit is connected properly.
- Make sure that there is power at the AC outlet.
- Batteries may be dead or incorrectly inserted. -> Insert (fresh) batteries correctly.

No sound

- Adjust the volume.
- Check if headphones are connected to the set. If yes, disconnect the headphones.

Poor radio reception

• Fully extend and adjust the position of the antenna.



 $2024 \otimes MMD$ Hong Kong Holding Limited. All rights reserved. Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.



