 
 
 
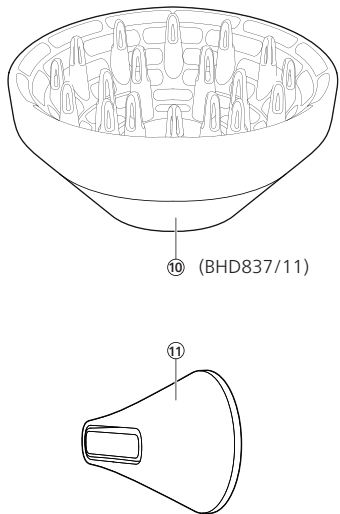 


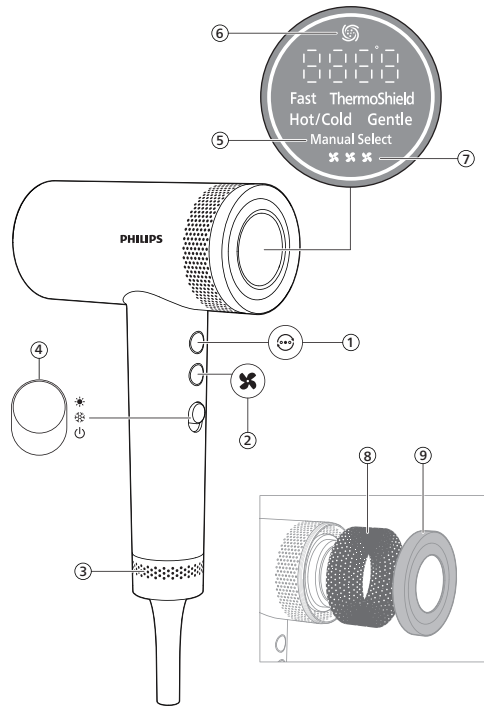


Preset Mode

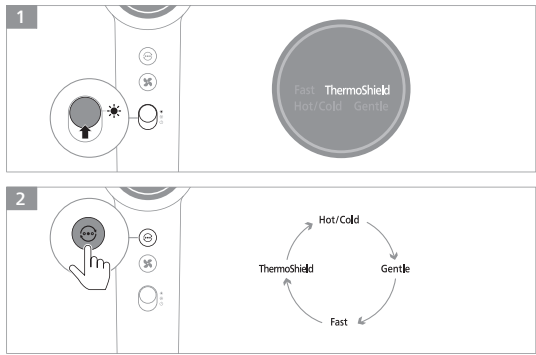







Manual Select

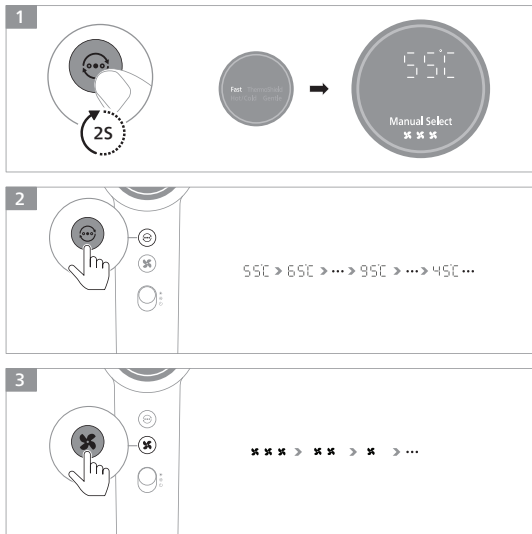

 Fast ThermoShield

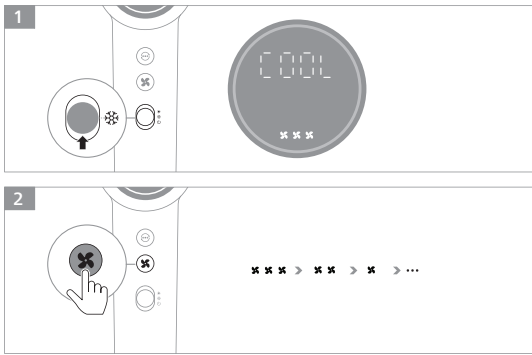

ThermoShield

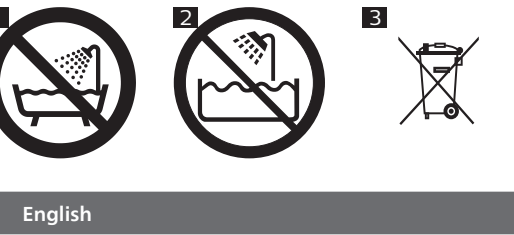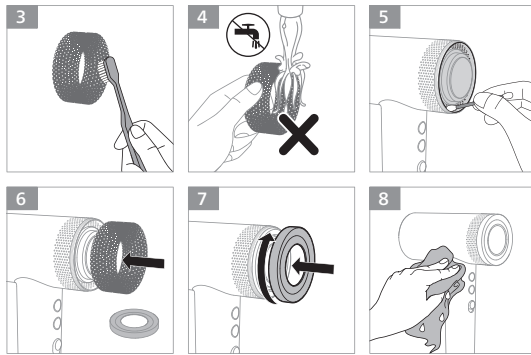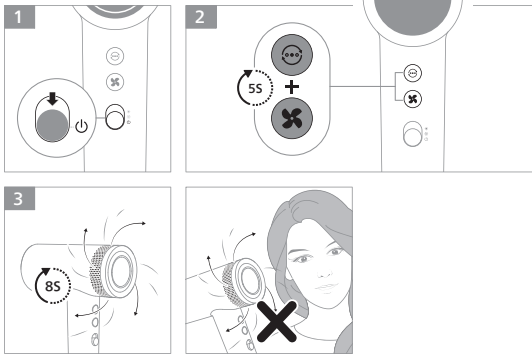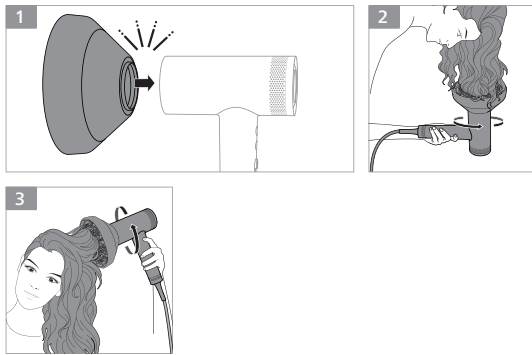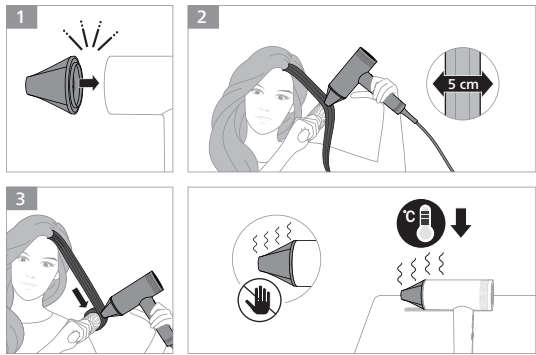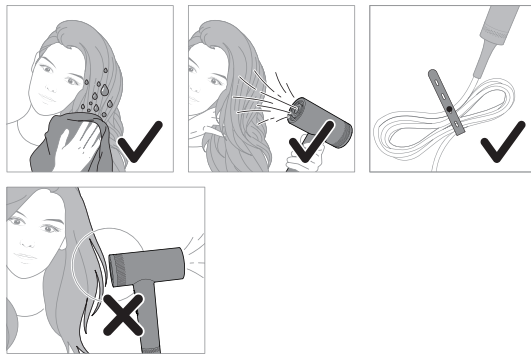      

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

Warning

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard, even when the appliance is switched off.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water (Fig. 1).
- The supply cord cannot be replaced. If the supply cord is damaged, you must have the appliance replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- WARNING: Do not use this appliance near water.
- Always unplug the appliance after use.
- Do not pull on the supply cord after using. Always unplug the appliance by holding the plug.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in the user manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your warranty becomes invalid.
- Do not wind the supply cord around the appliance.
- Wait until the appliance has cooled down before you store it.
- Do not operate the appliance with wet hands.

- Always return the device to a service center authorized by Philips for examination or repair. Repair by unqualified people could cause an extremely hazardous situation for the user.
 - Do not connect the appliance with a plug adapter. If really necessary, only use a certified plug adapter.
 - If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
 - Do not insert metal objects into the air grilles to avoid electric shock.
 - Never block the air grilles.
- Electromagnetic fields (EMF)**
- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.
- Recycling**
- This symbol means that electrical products shall not be disposed of with normal household waste (Fig. 3).
 - Follow your country's rules for the separate collection of electrical products.
- Overview**
- 1 Manual button
 - 2 Speed button
 - 3 Ring of the handle
 - 4 Power on/off switch
 - 5 Manual Select
 - 6 Auto-clean mode
 - 7 Speed setting
 - 8 Foam
 - 9 Air inlet grille cover
 - 10 Diffuser (BHD837 / (11) only)
 - 11 Nozzle
- Dry your hair**
- When the dryer is plugged in without switching on, it will automatically enter standby mode. The dryer's handle might have some warmth after a while, which is normal and safe to use.
- When the appliance is powered on, ions are automatically and continuously dispensed, reducing frizz and providing additional shine.
- 1 Connect the plug to a power supply socket.
 - 2 Attach the nozzle or diffuser (BHD837 / (11) only) onto the hairdryer for precise drying.
- Do not touch/remove the accessory until it cools down.**
- 3 (BHD837 / (11) only) To enhance volume for curls and bouncy style, attach the diffuser onto the hairdryer. Insert the pins into your hair to touch your scalp and make rotating movements.
 - 4 Slide the power on/off button to . Press and hold the mode button for 2 seconds to switch between Preset and Manual Select.
- Support**
- For all product support, power consumption details and the EU Declaration of Conformity, please visit www.philips.com/support.

