



 
1、将按摩器舒适放置于需要按摩的部位处（腿部、足底）。

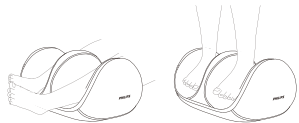

电源



2、在关机状态下短按电源按键, 默认进入足部模式和开启热敷功能, 对应指示灯长亮。


3、产品默认设定为15分钟定时关机。若在按摩过程中需要中途停止, 请短按关机。



短按关机

足部模式



4、在开机状态下按此键, 开启足部按摩模式, 对应的指示灯长亮。

3

5、在开机状态下按此键, 开启腿部按摩模式, 对应的指示灯长亮。

腿部模式



力度



6、开机默认低速挡, 指示灯慢闪; 再按力度键转高速挡, 指示灯长亮。

7、开机后默认进入加热功能, 对应指示灯长亮。在加热功能开启状态下按此按键, 则关闭加热功能, 对应的指示灯灭。

热敷



- !** 1、产品外套不可拆下清洗。
- 2、使用之后不要放在阳光直射的地方或者湿气很大的地方。
- 3、保养的时候, 一定要把适配器拔掉, 但是不要用湿手去拔除适配器。
- 4、长时间不使用的情况下, 应关闭电源并拔出适配器, 将按摩器存放在原包装中, 以防尘套覆盖。
- 5、请勿使用酒精、油漆稀释剂、汽油或洗甲水。否则可能损坏本产品或引起部件龟裂或褪色。
- 6、禁止整个人站立在产品上, 避免产品被压坏, 造成可能引发的危险。

4

PHILIPS

Foot Massager


Foot Massager


PPM6331




Quick Start Guide

1. Place the massager comfortably on the area needed to be massaged (legs or soles of feet).

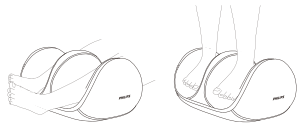


2. Press the power button  in the shutdown state to turn on the massager, and the massager enters the foot massage mode and turns on the hot compress function. The corresponding indicator light remains on.

3. Automatic shutdown time of the massager is set to be 15 minutes. If you need to stop halfway during the massage, please press the power button  to turn it off.




Press the button to turn off



4. Press this button  in the power-on state to enter the foot massage mode, and the corresponding indicator light remains on.


5. Press this button in the power-on state to enter the leg massage mode, and the corresponding indicator light remains on.



6. The intensity is in low speed level by default when the massager is powered on, and the indicator light ashes slowly; press the intensity button again to switch to the high speed level and the indicator light remains on.

7. The hot compress function turns on by default when the massager is powered on, and the corresponding indicator light remains on; press this button to turn off the hot compress function and the corresponding indicator light goes out.



-  1. The product cover cannot be removed for cleaning.
- 2. Do not place the product in direct sunlight or places with high humidity after use.
- 3. During maintenance, be sure to unplug the adapter, but do not remove the adapter with wet hands.
- 4. When the product is not in use for a long time, turn off the power and unplug the adapter, and then store the massager in its original package with a dust-proof cover.
- 5. Do not use alcohol, paint thinner, gasoline or nail polish remover, which may damage the product or cause parts to crack or discolor.
- 6. It is not allowed to stand on the product to avoid the product from being crushed and causing possible danger.



Visit us

www.philips.com

There may be certain differences between the content of this manual and your product. Please refer to the actual product. We reserve the right to update the product at any time without prior notice.

© 2023 AquaShield

All rights reserved

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Guangdong Deerma Technology Company Limited and Guangdong Deerma Technology Company Limited is the warrantor in relation to this product.

Made in China

