



Visit us

[www.philips.com](http://www.philips.com)

There may be certain differences between the content of this manual and your product. Please refer to the actual product. We reserve the right to update the product at any time without prior notice.

© 2023 AquaShield

All rights reserved

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Guangdong Deerma Technology Company Limited and Guangdong Deerma Technology Company Limited is the warrantor in relation to this product.

Made in China

Rev A SEP 23



**PHILIPS**

Foot Massager

Foot Spa Massager

PPM6501



**User Manual**

# Contents

---

## 1 Readme

Symbol Description

People Restricted or Prohibited from Use

Precautions for Use

Precautions for Maintenance

---

## 2 Product Features

---

## 3 Components

---

## 4 How to Use

---

## 5 Maintenance

Cleaning

Storage

---

## 6 Troubleshooting

---

## 7 Technical Parameters

---

## 8 Service Guideline for Warranty

Warranty and Service

Warranty Card

---

## 9 Packing List

---

# 1 Readme

---

Please read this manual carefully before using the product and keep it properly. The manual is available at [www.philips.com](http://www.philips.com)

## Symbol Description

To avoid personal injury or property damage, be sure to observe the contents below.

- The following symbols are used to illustrate what you should observe.


---

 Indicates prohibition

 Indicates the actions that need to be subject to instructions


---

## People Restricted or Prohibited from Use

 The product should be used with caution by the following group

- People who have a pacemaker or other related medical electrical products implanted in their bodies.
- People with malignant tumors.
- People with heart disease.
- People who are pregnant or postpartum women.
- People with highly limited nerve endings due to diabetes.
- People with skin trauma.
- People whose body temperature is above 38 °C.
- People who have current back pain or past pain in head, waist and feet.

- People who are easy to suffer from numbness in their hands and feet
- People who have difficulty with respirators
- People suffering from hypertension
- People with acute symptoms such as visceral diseases (gastritis, hepatitis, gastroenteritis)
- People who have lost skin temperature sensation
- People who have experienced low-temperature burns
- People who have vascular disorders
- People who use restorers
- People with abnormal body sensations



 The product is not allowed to be used by the following groups/ under the following circumstances

- This product is not suitable for patients with heart disease, severe thrombosis and cerebral stasis, or can only be used after consulting a doctor.
- Children, disabled individuals, mentally disabled individuals, elderly individuals with slow reactions, and those who are not sensitive to heat or cold should use this product with the help of others.
- People who are sensitive to heat should not use this product because its heated surfaces are prone to temperature rise.
- People with inflammation, trauma, skin burns in the feet should not use this product.
- Stop using the product immediately in case of abnormal reactions such as back pain, dizziness, vomiting, palpitation during use.
- This product is set for 30-minute timing at a time. Do not use it for more than 30 minutes each time. After each use, stop the device for 30 minutes to ensure the extension of its service life.
- Do not use it for purposes other than foot massage.


- Do not use the product under the following circumstances:
    - When you are severely tired
    - Within 30 minutes before and after meals
    - When you are drunk
- 

## Precautions for Use

- ❗ The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.
- ❗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ❗ Children should be supervised to ensure that they do not play with the appliance.
- ❗ If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- ❗ Ensure that the power cord and plug are dry and away from heat sources during use.
- ❗ This product should be placed horizontally during use, and should also be placed horizontally for safekeeping after use.
- ❗ If liquid leaks from the device, it cannot be used again.
- ❗ If reusing the product that has not been used for a long time, it is necessary to confirm in advance whether the switches and functions are normal.
- ⊘ It is strictly prohibited to forcefully pull the power cord or use the power cord to hang this product, in order to avoid damage to the power cord.

- ⊘ It is strictly prohibited to use this product without water. After use, please cut off the power and unplug the power cord before pouring water.
  - ⊘ It is strictly prohibited to use the product in case of damage.
  - ⊘ It is strictly prohibited to stand or place heavy objects inside the product.
  - ⊘ Do not pour hot water above 46°C directly into the machine to avoid burns on feet or product deformation due to high temperature.
  - ⊘ The product cannot be added with corrosive or granular or oculent liquids.
  - ⊘ It is strictly prohibited to press or step on the upper cover or edge of basin when it is lled with water.
  - ⊘ Non-professional personnel are strictly prohibited from disassembling the product.
- 

## Precautions for Maintenance

- ❗ Keep the lter clean to avoid clogging and damaging the foot spa massager.
- ❗ Be sure to unplug the power cord during maintenance.
- ⊘ During maintenance, do not use volatile oil, thinner, alcohol, strong alkaline detergent, bleach, etc. for cleaning.
- ❗ The product with simple shockproof facilities is suitable for aviation, railway, highway, and ship transportation. During transportation, it is necessary to avoid rain and snow splashing, inversion, and collision.
- ❗ Keep this product out of reach of children.
- ❗ Make the device cool down before storing.
- ❗ Regularly inspect the device for signs of wear or damage. If there are such signs or if the appliance has been misused, it should be returned to the supplier before reuse.

 
 
## 2 Product Features

---

This product is designed to soak the feet in warm water, and effectively relax the feet by combining with bubble impact and massage wheel pressing feet, which is suitable for different people for foot massage.

## 3 Components

---

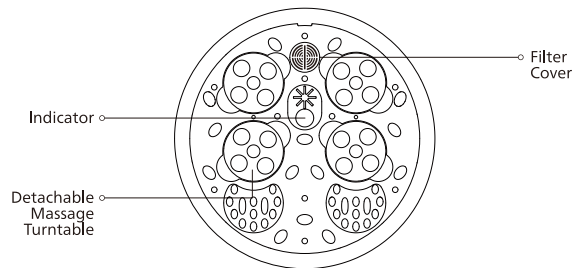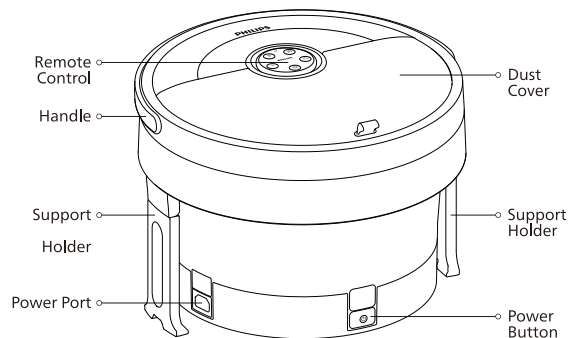

## 4 How to Use

---

 
### Operation

#### 1. Installation

(1) If the support holders have been installed on the massager: unfold the support holders and place it on the ground, and remove the dust cover.

While lifting the handle, press the massage turntable down until the massager unfolds normally.

(2) If the support holders are not installed on the massager: remove the dust cover and place the massager flat on the ground. While pressing one side of the massage turntable, lift the upper edge of the massager on the same side and lift it up to expand the massager to a certain angle; repeat the above on the other side to fully expand the massager. Then install the support holders according to the prompts on the massager.

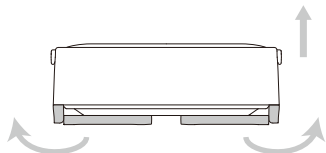

## 2. Add water and power on

Place the massager on a flat surface, add an appropriate amount of water (it is recommended to add warm water at about 35°C to reduce waiting time), and connect to a 220V~/50Hz household power supply. After power on, the buzzer makes three beeps, the indicator light in the massager flashes slowly, and massager enters the standby state.


**!** It is recommended that you do not add water exceeding 46°C to prevent scalding your feet. For your safety, when the water temperature exceeds 50°C, the device stops heating, accompanied by 10 warning sounds, and the indicator light flashes red 10 times and then it enters shutdown state. After the water temperature drops below 48°C, the device enters standby mode.


## 3. Power Button


(1) In standby state, hold the power button for 2 seconds to start the massager in Level I (40°C); press the power button again to switch to Level II (43°C); and then press the power button again to switch to Level III (46°C). Press the button to cycle through the three levels in sequence. When the water temperature reaches the specified temperature, the massage function will automatically turn on, and end after 30 minutes.


(2) In any working mode, hold the power button for 2 seconds, the buzzer will sound for 1.5 seconds, and then end the current mode and enter the standby state.


## 4. Remote Control


(1) After power on, aim the remote control into the massager and press  button. The buzzer sounds once, the indicator light in the massager displays in green, and the massager turns on Level I;

(2) In any working state, aim the remote control into the massager and press  button. The buzzer sounds once, the indicator light in the massager displays in green, and the massager turns on Level I;

(3) In any working state, aim the remote control into the massager and press  button. The buzzer sounds twice, the indicator light in the massager displays in blue, and the massager switches to Level II;

(4) In any working state, aim the remote control into the massager and press  button. The buzzer sounds twice, the indicator light in the massager displays in red, and the massager switches to Level III;

(5) In any working state, aim the remote control into the massager and press  button to turn on / off the massage function;

(6) In any working state, aim the remote control into the massager and press  button. The buzzer sounds for 1.5 seconds, and then end the current mode and enter the standby state.

## 5. Storage

 
(1) Pour out the water in the massager and let it dry;

(2) Place the massager upside down on the ground with a soft carpet;

(3) Press down on both sides of the massager bottom shell at the same time to fold it;

(4) Pull gently the support holders inward to fold it close to the bottom shell;

(5) Put the massager upwards with the dust cover, put the remote control in place, and the storage is complete.

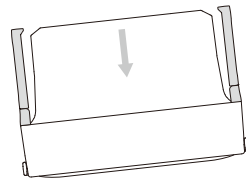

(Place upside down)

## 5 Maintenance

### Cleaning

1. Confirm that the massager is unplugged before cleaning.
2. Pour out the water in the massager.
3. Wipe the surface of the massager with a soft cloth.
4. Do not wipe the power socket with a wet towel.
5. Do not use corrosive liquids to clean the massager.

### Storage

1. Empty the water inside the massager, and then drain it in a safe, ventilated, dry and cool place.
2. Fold the massager with the dust cover, and store the power cord properly.
3. Place the massager in the packaging box, and store it in a safe, ventilated, dry and cool place.

## 7 Troubleshooting

This chapter lists the most common problems to the product. If the problems you encounter are not included in the following tables, please call our service hotline or contact the authorized service center in your region.

Fault Description	Fault	Solution
No power	The leakage protection plug is not plugged in or turned on	Insert the leakage protection plug properly and press the reset button.
Massage function failure	The water temperature has not reached the default temperature, so the massage function has not been activated	Use the remote control to turn on the massage function.
	The motor load is too large or the motor working time is too long, and the massager turns on automatic protection.	Turn off the massager and unplug the leakage protection plug, wait half an hour before restart.
Buzzer beeps continuously 5 times, and the indicator flashes red 5 times	Temperature sensor failure	Contact after-sales service
Buzzer beeps continuously 10 times, the indicator flashes red 10 times and then goes out	Overtemperature protection	Turn off or add cold water to cool down the massager.
No sound or light display at all times	Possible overcurrent protection	Contact after-sales service

If the product has been left unused for a long time, be sure to confirm that its functions are normal before using it again

Regular check	Check for the following faults	
	<ul style="list-style-type: none"><li>• Whether the power cord or plug is hot</li><li>• Whether the power cord is deeply scarred or deformed, or has a burnt smell</li><li>• Whether there is abnormal sound or vibration during work</li><li>• Whether the product can work properly after switch on</li><li>• Whether there are other abnormalities or faults</li></ul>	In the event of the above faults, stop using the device immediately and cut off the power supply to prevent accidents. Please send it to our maintenance center.

**Note:** If the fault cannot be eliminated or the product still cannot be operated satisfactorily, contact the after-sales service personnel, and do not disassemble or attempt to repair it by yourself.

## 8 Technical Parameters

Product Name	Philips Foot Spa Massager
Product Model	PPM6501
Rated Voltage	220-240V~
Rated Frequency	50-60Hz
Rated Power	800W
Rated Capacity	8L
Net Weight	4.2kg
Folded Size	380×380×125mm
Unfolded Size	380×380×280mm

## 9 Service Guideline for Warranty

### Warranty and Service

If you need information or have any questions, please visit [www.philips.com/-support](http://www.philips.com/-support) or contact consumer service center in your country/region. If there is no consumer service center in your country/region, please contact your local distributor.

Within two years from the date of purchase, you will receive free warranty service for any damage caused by manufacturing process problems, or any damage to components under normal use conditions confirmed by our maintenance service personnel.

Warranty service excludes frequently replaced consumables, auxiliary equipment, shipping cost and door-to-door service. Please show proof of purchase to service personnel when servicing.

Malaysia

Consumer Care: +60-128868274

Email: [philips.massager@realtmy.net](mailto:philips.massager@realtmy.net)

Singapore

Consumer Care: +65-89420233

Email: [philips.massager@realtsg.net](mailto:philips.massager@realtsg.net)

Philippines

Consumer Care: +63-960411314

Email: [Philips.massager.ph@orrohome.com](mailto:Philips.massager.ph@orrohome.com)

Thailand

Consumer Care: +66-20051888

Email: [Philips\\_massager@orrohome.co.th](mailto:Philips_massager@orrohome.co.th)



Indonesia  
Consumer Care: +021-39715012 / +021-39715013  
Email: Philips\_Massager.ID@orrohomeindonesia.com

Vietnam  
Consumer Care: +84-909800829  
Email: Philips.massager.VN@orrohome.vn

Warranty Card

Product Model		User Name	
Sales Agency		Phone Number	
Date of Purchase		Serial Number	
Special Technical Service Center		User Address	
Items of Maintenance	Date	Service Personnel	

10 Packing List

Massager	1×	User Manual	1×
Quick Start Guide	1×	Power Cord	1×

目录

1	用户必读	8	产品保修服务指南
	符号描述		保修及服务
	适用人群		保修条例
	使用注意事项		保修卡
	保养的注意事项		
2	产品功能	9	装箱清单
3	部件名称		
4	使用方法		
5	保养维护		
	清洁方式		
	储存方式		
6	故障诊断		
7	主要技术参数		


# 1 用户必读


产品使用前请仔细阅读并妥善保管本说明书。本说明书可在[www.philips.com](http://www.philips.com)获取。

## 符号描述

为避免造成人身危害或财产损失，请务必遵守以下内容。

· 用以下图示来分别说明希望遵守的内容。

 表示禁止

 表示需要根据指示去做

## 适用人群

 以下人群应谨慎使用





- 体内有植入起搏器或其他医用电器产品的人群
- 恶性肿瘤患者
- 心脏病患者
- 孕妇或者产妇
- 糖尿病引起的高度神经末梢有障碍的人群
- 皮肤受过创伤的人群
- 体温38°C以上的人群
- 现在腰疼或者过去头、腰、脚有过疼痛的人群
- 手脚容易麻木的人群
- 对呼吸器有障碍的人群
- 高血压症人群
- 内脏疾病(胃炎，肝炎，肠胃炎)等急性症状的人群

- 对皮肤温度感丧失人群
- 有过低温烧伤人群
- 血管障碍相关的人群
- 使用复原器的人群
- 身体感觉异常的人群

 以下人群/情况禁止使用

- 心脏病患者、严重血栓脑淤血患者不适合使用本产品，或在向医生咨询后方可使用
- 小孩、残疾人士、弱智人士、反应迟钝的老人以及冷热不敏感者，应在他人帮助下使用本产品
- 加热的表面容易温度上升，对热很敏感的人群也请不要使用
- 足部有炎症、外伤、皮肤烫伤等暂勿使用本产品
- 使用过程中，感觉腰疼，头晕，呕吐，悸动等身体异常反应的时候，请立即停止
- 本产品单次定时30分钟，每次使用请不要超过30分钟，使用后请让机器休息30分钟以确保机器寿命的延长
- 不要用在足部按摩以外用途上
- 下列的情况不宜使用
  - 剧烈疲劳的时候
  - 饭前、饭后30分钟之内
  - 醉酒之后

## 使用注意事项

-  器具具有发热表面。对热不敏感的人使用时必须注意。
-  本电器不适用于身体、感官或智力能力下降或缺乏经验和知识的人员(包括儿童)使用，除非由负责他们安全的人员对他们的使用进行监督或指导。
-  应监督儿童，确保他们不玩电器。
-  如果电源软线损坏，必须用专用软线或从其制造商或维修部买到的专用组件来更换。

- ❗ 使用时要确保电源线及插头干燥，并远离热源。
- ❗ 使用本机器应水平放置，使用结束后也应水平放置保管机器。
- ❗ 如果液体从器具中泄露，则不能再继续使用该器具。
- ❗ 长期没有使用，再次使用的时候，务必事先确认开关等是否正常。
- ⊘ 严禁用力拉扯电源线或使用电源线拖挂本产品，以免造成电源软线损伤。
- ⊘ 严禁无水状态下使用本产品，使用结束后，请切断电源并拔掉电源线后再倒水。
- ⊘ 严禁在产品有损坏的情况下使用。
- ⊘ 严禁在机器内站立或将重物放置于机器中。
- ⊘ 请勿将46℃以上热水直接倒入机器中，以免引起脚部烫伤或产品高温变形。
- ⊘ 产品中不可加入含腐蚀性或带有颗粒、絮状的液体。
- ⊘ 严禁在有水情况下按压、踩踏盆体上盖或上盖边缘。
- ⊘ 严禁非专业人员拆解机器。

 
## 保养的注意事项

 
- ❗ 保持过滤网的清洁，以免堵塞损坏足浴按摩器。
- ❗ 保养的时候，务必把电源线拔掉。
- ⊘ 保养的时候，请不要使用挥发油、稀释剂、酒精、强碱性洗涤剂、漂白剂等清洗。
- ❗ 产品设有简易的防震设施，适合航空铁路、公路及轮船运输。运输过程中应避免雨雪淋溅、倒置和碰撞。
- ❗ 请将本产品放在儿童接触不到的地方。
- ❗ 存放器具时，先让器具冷却下来。
- ❗ 经常检查器具上是否有磨损或损坏的迹象，如果有这种迹象，或如果此器具已经被误用，则应在再次使用前将器具返回到供应商处。

## 2 产品功能

本产品通过温水浸泡足部，配合气泡冲击、按摩轮顶压足底，有效放松足部，适合不同人群用于足部按摩。

## 3 部件名称

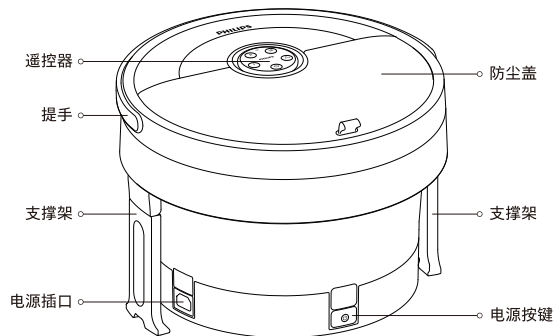

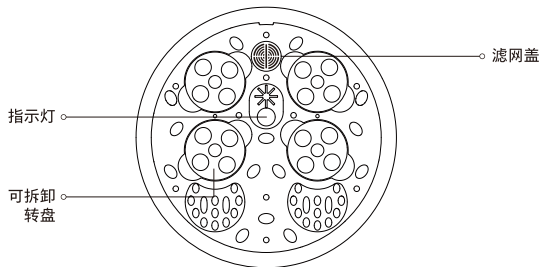


## 4 使用方法

### 使用操作

#### 1. 安装步骤

 - (1) 支撑架已装在机器上: 只需展开支撑架放于地面, 取下防尘盖, 一边提起提手, 一边向下按压按摩转盘, 直到正常展开。
- (2) 支撑架没有装在机器上: 取下防尘盖, 按摩器平放于地面, 一边按住按摩转盘一侧, 一边提住按摩器同侧上沿往上提, 让按摩器展开一定角度; 换一侧重复上述动作, 把按摩器完全展开; 然后根据机器上的标示装上支撑架即可。

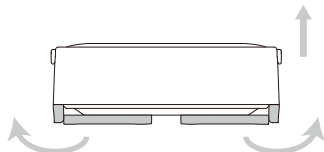

#### 2. 加水通电







将机器平放, 加适量水 (建议加35℃左右温水, 以减少您等待时间), 通220V~/50Hz家用电源, 接通电源后, 蜂鸣器发出三声响声 (滴—滴—滴—), 按摩器内指示灯缓慢闪烁, 进入待机状态。

- ❗ 建议您不要加入超过46℃的水, 以防烫伤脚部。为了您的安全, 当水温超过50℃时, 设备停止加热, 伴随10声警示音, 同时指示灯红色闪烁10次, 然后进入关机状态; 水温降低至48℃以下后, 设备进入待机状态。

#### 3. 电源按键

 
- (1) 在待机状态下长按按摩器上的电源按键2秒, 机器启动I挡 (40℃); 再次短按电源按键, 切换到II挡 (43℃); 再次短按电源按键, 切换到III挡 (46℃), 依次循环。当水温达到指定温度后, 按摩功能自动开启, 30分钟后自动结束。
- (2) 在任何工作状态下, 长按按摩器上的电源按键2秒, 蜂鸣器长响1.5秒, 结束当前模式进入待机状态。

#### 4. 遥控器

- (1) 在机器通电状态下, 用遥控器对准按摩器内按  键, 蜂鸣器响一声, 按摩器内指示灯亮绿灯, 机器开启I挡;
- (2) 在任何工作状态下, 用遥控器对准按摩器内按  键, 蜂鸣器响一声, 按摩器内指示灯亮绿灯, 机器开启I挡;
- (3) 在任何工作状态下, 用遥控器对准按摩器内按  键, 蜂鸣器响两声, 按摩器内指示灯亮蓝灯, 机器开启II挡;
- (4) 在任何工作状态下, 用遥控器对准按摩器内按  键, 蜂鸣器响三声, 按摩器内指示灯亮红灯, 机器开启III挡;
- (5) 在任何工作状态下, 用遥控器对准按摩器内按  键, 可开启或关闭按摩功能;
- (6) 在任何工作状态下, 用遥控器对准桶内按  键, 蜂鸣器长响1.5秒, 结束当前模式进入待机状态。

## 5. 收纳步骤

- (1) 将按摩器内水倒尽晾干;
- (2) 把按摩器倒置于放有软垫的地面上;
- (3) 双手向下按压按摩器底壳两侧, 使其折叠;
- (4) 用手向内扳动支撑架, 使其折叠靠近于底壳;
- (5) 正放按摩器, 盖上防尘盖, 遥控器放置到位, 收纳完成。

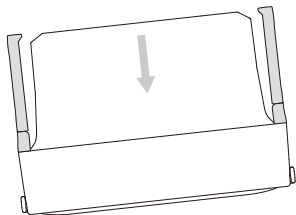

(倒置)

## 5 保养维护

### 清洁方式

1. 清洁前请确认插头拔出。
2. 将按摩器内的水倒尽。
3. 用软布擦拭按摩器表面。
4. 请勿用沾水毛巾擦拭电源线插口。
5. 请勿用腐蚀性液体清洁机器。

## 存储方式

1. 将按摩器体内的水倒尽, 放置在安全、通风、干燥、阴凉处沥干。
2. 将按摩器折叠, 盖上防尘盖, 电源线收纳好。
3. 放入包装箱内, 再放置在安全、通风、干燥、阴凉处。

## 6 故障诊断

本章列出了关于本产品最常见的问题。如果您无法在其中找到您所遇问题的答案, 请联系服务热线或您所在地区的授权服务中心。

故障描述	故障	故障排除
不通电	漏电保护插头是否插好或开启	按正确的方法插好漏电保护插头并按下复位按键
按摩功能不工作	水温没达到默认温度 没开启按摩功能	遥控器开启按摩功能
	电机负载过大或电机工作时间过长, 足浴器启动自动保护	关机拔掉漏电保护插头, 等待半小时再开启
蜂鸣器连续响5声, 红光闪烁5次	温度传感器故障	联系售后客服处理
蜂鸣器连续响10声, 红光闪烁10次后熄灭	超温保护	关机或加冷水降温
一直无任何声响及灯光显示	可能是过流保护	联系售后客服处理

长时间未使用后，务必先确认功能正常，才能再次使用。		
定期 检查	有无以下故障	若出现上述故障，为了防止引发事故，请立刻停止使用，并切断电源。请送往本公司维修点。
	<ul style="list-style-type: none"> <li>· 电源线或者插头发热</li> <li>· 电源线有深深的伤痕或者变形、有焦味</li> <li>· 工作中有异常的声音或者振动</li> <li>· 开启开关后，不正常工作</li> <li>· 有其他异常或者故障</li> </ul>	

#### 注意：

如果无法排除故障或产品仍无法理想操作，与售后服务人员联系，切勿自行拆卸或尝试维修。

## 7 主要技术参数

产品名称	飞利浦足浴按摩器
产品型号	PPM6501
额定电压	220-240V~
额定频率	50-60Hz
额定功率	800W
额定容量	8L
产品净重	4.2kg
折叠尺寸	380×380×125mm
打开尺寸	380×380×280mm

## 8 产品保修服务指南

### 保修及服务

如果您需要信息或有任何问题，请访问[www.philips.com/support](http://www.philips.com/support)或联系您所在国家/地区的消费者服务中心。如果您所在的国家/地区没有消费者服务中心，请联系当地经销商。自购买之日起两年内，因制造过程问题造成的任何损坏，或经我们维修服务人员确认的在正常使用状况下的部件损坏，您将获得免费保修服务。保修服务不包括经常更换的耗材、辅助设备、运输费用和上门服务。维修时请向服务人员出示购买凭证。

#### 马来西亚

服务热线: +60-128868274

服务邮箱: [philips.massage@real.tmy.net](mailto:philips.massage@real.tmy.net)

#### 新加坡

服务热线: +65-89420233

服务邮箱: [philips.massage@real.tsg.net](mailto:philips.massage@real.tsg.net)

#### 菲律宾

服务热线: +63-960411314

服务邮箱: [Philips.massager.ph@orrohome.com](mailto:Philips.massager.ph@orrohome.com)

#### 泰国

服务热线: +66-20051888

服务邮箱: [Philips\\_massager@orrohome.co.th](mailto:Philips_massager@orrohome.co.th)

#### 印度尼西亚

服务热线: +021-39715012 / +021-39715013

服务邮箱: [Philips\\_Massager.ID@orrohomeindonesia.com](mailto:Philips_Massager.ID@orrohomeindonesia.com)

#### 越南

服务热线: +84-909800829

服务邮箱: [Philips.massager.VN@orrohome.vn](mailto:Philips.massager.VN@orrohome.vn)

保修卡

产品型号		用户姓名	
销售单位		联系电话	
购买日期		出厂编号	
特别技术服务站		用户地址	
维修内容	时间	保修人员	

9 装箱清单

主机	1 ×	说明书	1 ×
快速入门指南	1 ×	电源线	1 ×