

## English

### Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

#### Warning

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard, even when the appliance is switched off.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water (Fig. 1).
- The supply cord cannot be replaced. If the supply cord is damaged, you must have the appliance replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- WARNING: Do not use this appliance near water.
- Always unplug the appliance after use.
- Do not pull on the supply cord after using. Always unplug the appliance by holding the plug.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in the user manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your warranty becomes invalid.

- Do not wind the supply cord around the appliance.
- Wait until the appliance has cooled down before you store it.
- Do not operate the appliance with wet hands.
- Always return the device to a service center authorized by Philips for examination or repair. Repair by unqualified people could cause an extremely hazardous situation for the user.
- Do not connect the appliance with a plug adapter. If really necessary, only use a certified plug adapter.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### Recycling

- This symbol means that electrical products shall not be disposed of with normal household waste (Fig. 2).
- Follow your country's rules for the separate collection of electrical products.

 
### Overview

- 1 Manual button
- 2 Power on/off & speed switch
- 3 Ring of the handle
- 4 Lock/Unlock mark
- 5 Foam
- 6 Removable air inlet grille cover

### Dry you hair

When the dryer is plugged in without switching on, it will automatically enter standby mode. The dryer's handle might have some warmth after a while, which is normal and safe to use.

When the appliance is powered on, ions are automatically and continuously dispensed, reducing frizz and providing additional shine.

- 1 Connect the plug to a power supply socket.
- 2 Slide the power on/off & speed switch to low ● or fast speed ● as desired.
- 3 Press the mode button  to select your desired setting according to the table as following:

Mode (Indicator)	Function
Fast (Orange light)	Dry shower-wet hair quickly
ThermoShield (Yellow light)	Dry your hair at a constant caring temperature
Cool (Blue light)	Cool airflow to cool down your hair
Hot/Cold (Orange/Blue light)	Dry hair with an alternating hot and cold airflow for more comfortable drying experience

- The hairdryer comes with memory feature, it can remember the last used settings.

#### After use:

- 1 Switch off the appliance, unplug it and let it cool down.
- 2 Clean the appliance with a damp cloth.
- 3 It is suggested to use the auto-clean mode once a month, - To activate the clean mode, you should turn off the hair dryer first.
- Short press the mode button and then press and hold it for 3 seconds.
- The auto-clean mode will run for 8 seconds. You can stop auto cleaning by pressing the mode button.
- 4 Unlock the air inlet grille cover to remove hair and dust, and use a toothbrush to gently clean the foam. Make sure to put foam back after thorough cleaning.

**Do not rinse the foam under tap water.**

### Troubleshooting

Problem	Cause	Solution
The appliance does not work at all. And/or false flashing of white light constantly.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.
The appliance may have overheated and switched itself off.		Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc. Clean the air inlet grille.
The appliance may not be suitable for the voltage to which it has been connected.		Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.
There is bad smell for the first-time of use.	The smell may come from the new appliance.	The smell will gradually disappear after a few uses. Please try to dry your hair in a well-ventilated room.
There is burning smell when drying my hair.	If there is some dust or residue left in the appliance, it may be burnt due to the high temperature and produce odor.	Turn off the appliance and wait until it cools down. Check if any residues left. Remove dirt from the air inlet grille and keep it clean regularly.
I hear annoying noise when using auto-clean mode.	The motor setting is different under auto-clean mode.	Use auto-clean mode once a month to avoid blocking.

### Support

For all product support such as frequently asked questions, please visit [www.philips.com/support](http://www.philips.com/support).



简介

感谢您的惠顾，很高兴您选择Philips！为了让您能充分享受Philips提供的支持，请在 **www.philips.com.cn/welcome** 上注册您的产品。

重要安全信息

使用产品之前，请仔细阅读本重要信息，并妥善保管以供日后参考。

警告

- 本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。不得让儿童玩耍本产品。不要让儿童在无人监督的情况下进行清洁和保养。
- 在浴室中使用本产品时，请在使用后拔下电源插头，因为产品在关闭的情况下靠近水源也会引发危险。
- 为了增加保护，建议在浴室供电的电气回路中安装一个额定剩余工作电流不超过 30 毫安的剩余电流装置 (RCD)。详情请向安装商咨询。
- 警告：不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具 (图 1)。
- 警告符号注释：禁止在洗澡或淋浴时使用。
- 不得更换电源线。如果电源线损坏，为避免危险，必须由飞利浦或其授权的服务中心，或类似的专职人员来更换电源线。

- 警告：请勿在靠近水的地方使用本产品。
- 使用后务必拔下产品的插头。
- 使用后请勿拉扯电源线。拔下产品插头时，请握紧插头。
- 连接产品之前，请确保产品上标示的电压与当地电源电压相符。
- 请勿将本产品用于本用户手册中说明以外的任何其他用途。
- 请勿对假发使用本产品。
- 当产品连接了电源时，切勿让其无人看管。
- 切勿使用其他制造商生产的或未经飞利浦特别推荐的任何配件或部件。如果您使用了此类配件或部件，本产品的保修将会失效。
- 切勿将电源线缠绕在产品上。
- 待产品完全冷却后再存放。
- 切勿用湿手操作本产品。
- 本设备应送往由飞利浦授权的服务中心检查或维修。由不合格人员进行维修可能将用户置于极度危险的境地。
- 切勿使用插头适配器连接本产品。如必须使用，请只使用经过认证的插头适配器。
- 如果产品过热，它将自动关闭电源。拔掉产品插头，让其冷却几分钟。再次启动产品之前，请检查出风口，确保其未被绒毛、头发等杂物堵塞。
- 切勿将金属物体插入风口，以免触电。
- 切勿阻塞电吹风风口。

电磁场 (EMF)

本Philips产品符合所有有关暴露于电磁场的适用标准和法规。

回收

- 此符号表示电器产品不能与一般的生活垃圾一同弃置 (图 2)。
- 请遵守您所在国家/地区有关分类回收电器产品的规定。


概览

- 1 手动按钮
- 2 电源开关和调速开关
- 3 手柄环
- 4 锁定/解锁标志
- 5 海绵
- 6 可拆卸进风口盖

吹干头发

注意：当吹风机插入电源而未启动时，会自动进入待机模式。吹风机使用一段时间后，手柄可能会变热，这是正常现象，可继续安全使用。

产品接通电源后，可自动且持续地释放负离子，令秀发更加顺滑、亮泽。

- 1 将插头连接至电源插座。
- 2 滑动电源开/关和调速开关，可根据需要降低 ● 或提高风速 ●。
- 3 根据下表，按下模式按钮  选择您所需的设置：

模式 (指示灯)	功能
热风 (橙色灯)	快速吹干湿透的头发
防热温控 (黄色灯)	在恒定护理温度下吹干头发
冷风 (蓝色灯)	冷风用于冷却秀发
冷热循环 (橙色/蓝色灯)	交替使用冷热气流吹干头发，享受更加舒适的干发体验

- 电吹风具有记忆功能，能够记住上次使用的设置。

使用后：

- 1 应关闭产品，拔下电源插头，并使其冷却。
- 2 用湿布擦拭本产品。
- 3 建议每月使用一次自动清洁模式，
- 要启用清洁模式，首先需关闭电吹风。
- 短按模式按钮，然后再按住此按钮 3 秒钟。
- 自动清洁模式将运行8秒。如需停止自动清洁，请按下模式按钮
- 4 打开进风口盖以清除毛发和灰尘，并使用牙刷轻柔地清洁海绵部分。彻底清洁后，确保将海绵放回原处。

切勿在水龙头下冲洗海绵。

故障种类和处理方法

问题	原因	解决方法
产品完全无法工作。以及/或者白光不断闪烁。	产品所连接的电源插座可能已损坏。	检查设备已正确插入。检查您家中电源插座的保险丝。
	产品可能过热，自动关闭电源。	拔掉产品插头，让其冷却几分钟。再次启动产品之前，请检查出风口，确保其未被绒毛、头发等杂物堵塞。清洁进出风口。
	所连接的电源电压可能不适用于本产品。	确保产品型号铭牌上标示的电压与当地电源电压相符。

问题	原因	解决方法
首次使用有异味。	新产品可能会有气味。	使用几次后气味会逐渐消失。请尽量在通风良好的房间内吹干头发。
吹干头发时有烧焦的气味。	如果产品内部有灰尘或残留物，可能会因高温而被烧焦并产生异味。	关闭产品，等待直至产品冷却。检查是否有残留物。定期清除进风口的灰尘并保持清洁。
使用自动清洁模式时，产品发出恼人的噪音。	自动清洁模式下的马达设置有所不同。	每月使用一次自动清洁模式，以避免阻塞。

支持

有关常见问题等所有产品支持，请访问 **www.philips.com.cn/support**。  
保留备用  
出版日期： 2024-07-02

产品中有害物质的名称及含量						
部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑胶件	○	○	○	○	○	○
五金件	○	○	○	○	○	○
电源线	○	○	○	○	○	○
马达组件	○	○	○	○	○	○
发热架组件	X	○	○	○	○	○
PCBA组件	X	○	○	○	○	○
本表格依据SJ/T 11364的规定编制。 ○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。						

\*该表格中所显示的“ 有害物质 ”在产品正常使用情况下不会对人身和环境产生任何伤害。  
\*该表格中所显示的“ 有害物质 ”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

PHILIPS

产品：飞利浦高速吹护机

型号：BHD727

额定电压：220V~

额定频率：50Hz

额定输入功率：1400 W

生产日期：请见产品本体

产地：中国广东东莞

飞利浦（中国）投资有限公司

上海市静安区灵石路718号A1幢

全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.15-2008, GB4343.1-2018及 GB17625.1-2022制造