

快速使用指南

技术参数

尺寸	成型尺寸: 148×210 mm
材质	128g双铜纸+过哑油
工艺	印刷: 单黑印刷
成型方式	折叠
特殊说明	

公差设定

纸本类	公差表 (此处为默认公差, 单独标注的公差范围除外) 单位: mm					
	尺寸范围	0-60	>60-100	>100-150	>150-200	>200-600
	尺寸公差	±1.0	±1.5	±2.0	±2.5	±3
图文位置偏移公差		±2.0				±3



封面



封底

*此页非印刷&刻录页

CVTE
Dream·Future

广州视源电子科技股份有限公司
GUANGZHOU SHIYUAN ELECTRONIC CO.,LTD.

文件图号	CEXXWA-G05-S51304-V1.1 使用指南-PHILIPS	适用于	
制作人	刘雅静	审核人	罗艳霞
批准人	/		

 
变更履历：

版本	更新内容	日期	创建人
V1.0	第一版	2023/12/13	刘雅静
V1.1	更新清单	2024/08/07	刘雅静
V1.2			
V1.3			
V1.4			

*此页非印刷&刻录页



Contents



LCD display




Remote Control and
AAA batteries x 2




Quick Start Guide x 1



Power cable x 3

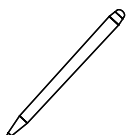


Stylus x 2

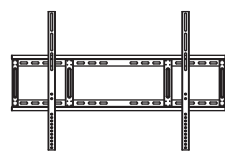

Wall Mount x 1



 Wireless module x 1




Touch Usb Cable x 1



*Contents may vary by region.
Display design and accessories may differ from the
images shown above.




1 Unboxing

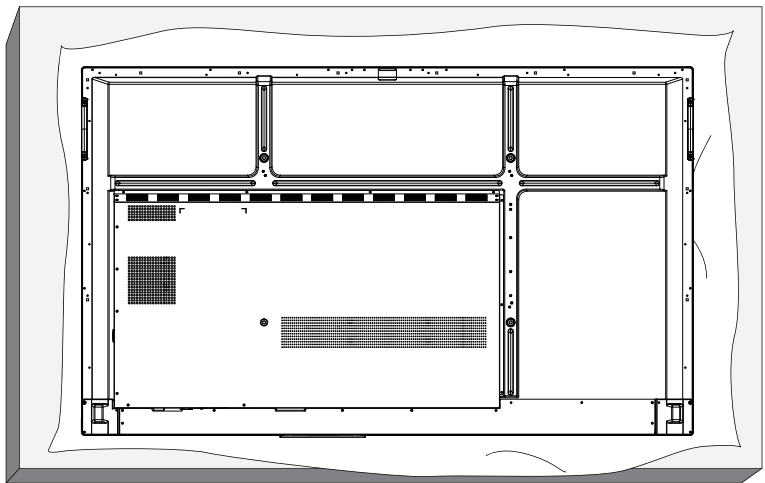


2 Control Panel

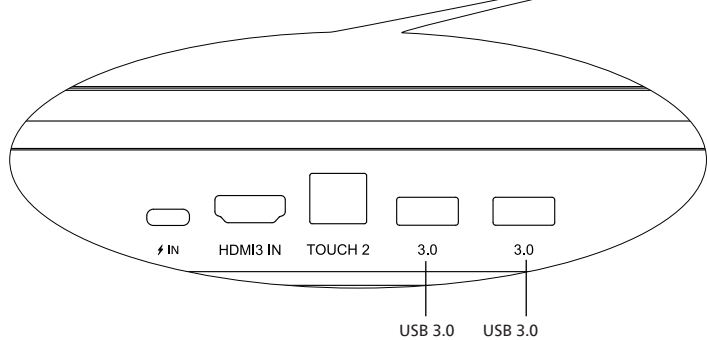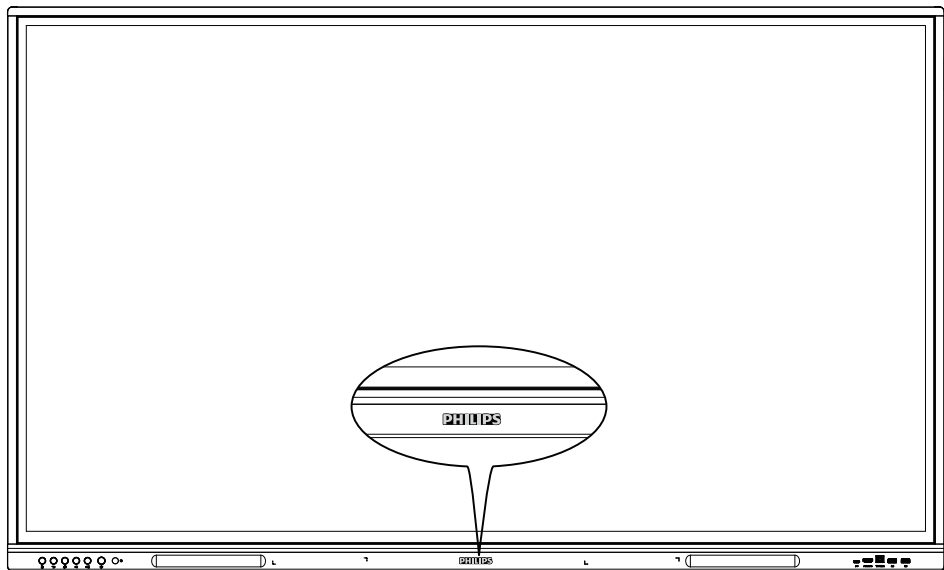


3 Input/Output Terminals

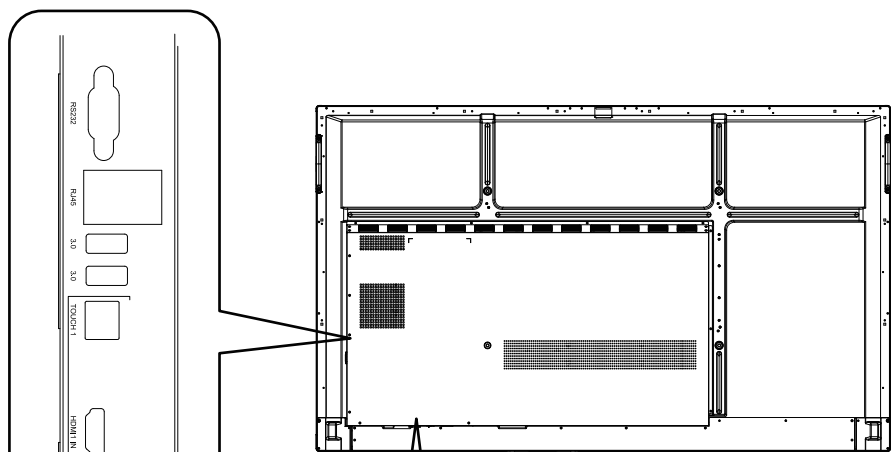


4 Connection

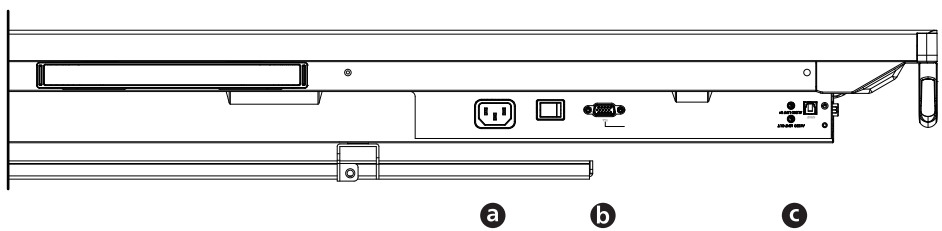

AC IN


 


VGA

 

AUDIO IN
AUDIO OUT

 5 Installation

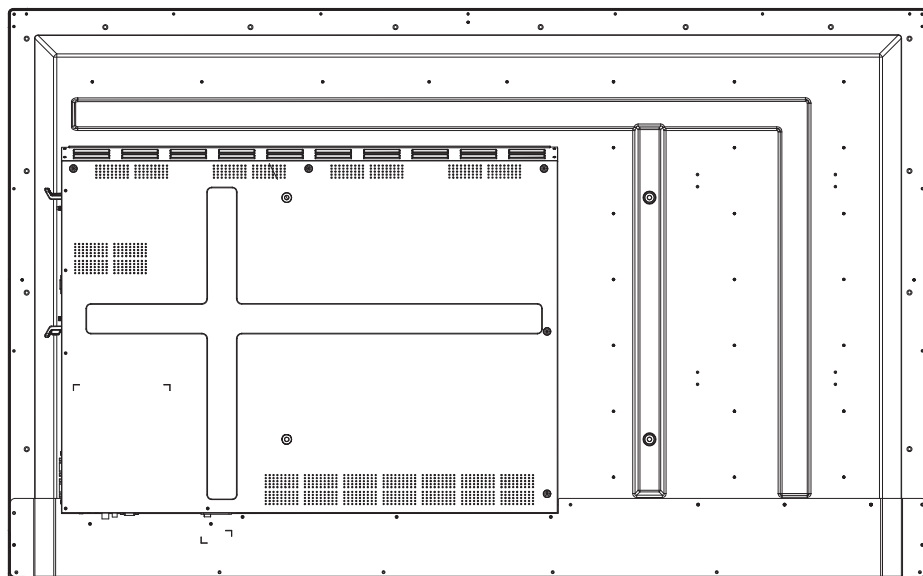


M8* (10+X) mm
(X=Wall mount thickness)


65BDL3152E/00: 400mm x 600mm
75BDL3152E/00: 400mm x 800mm
86BDL3152E/00: 600mm x 800mm

6 Installing the Wall Mount


1. Unpack the wall mount plate and all accessories.

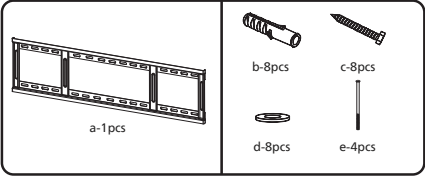

3. Take 8 pcs of expansion rubber plug (b) and screw them into the wall. It is recommended to use a 10 mm impact drill bit to fix them.

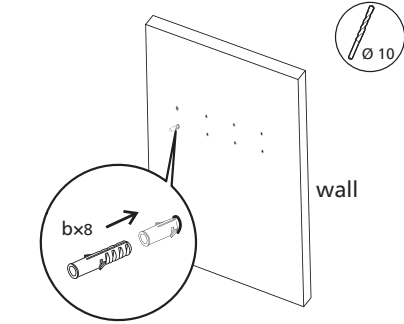

5. Mount the display on the bracket and slide it down vertically. Keep the display in the center of the bracket.

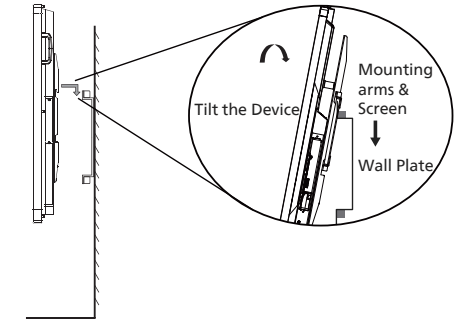

Safety Instructions

• Placement

Do not place the unit on an unstable cart, stand, tripod, bracket, table, or shelf.
Do not expose the unit to direct sunlight and other sources of heat.
Do not put the unit near appliances that generate magnetic fields.
Do not handle liquids near or on the unit.
Never spill liquid of any kind into the unit.
Do not put heavy objects on top of the unit.

• Power Supply

Check that the unit's operating voltage is identical to your local power supply.
Please unplug power supply and aerial plug during thunderstorms or lightning.
Unplug the power supply if you are not going to use it for an extensive period of time.
Please keep power cord from physical or mechanical damage.
Ensure the use of an approved power cord at all times.
Check and ensure the AC source is connected with the ground.

• LED Screen

Never use any other hard or sharp object to replace the writing pen.
Unplug the power supply before cleaning.
Clean the screen with a soft, dustless and dry cloth.
Never use water or the spray type detergent to clean the unit.
For deep cleaning, contact an authorized service center.
Please don't display the high brightness image on the screen for an extended period.

• Sight Distance

The best distance between the audience and the screen is 3-4 times the screen diagonal length.
The maximum viewing angle between the audience and the screen is 176 degrees.


7 Installing the Wireless Module

Please make sure that the following items are ready before setting up the wireless module.


1×LCD display
1×Wireless Module
2×Screws (CM3×6mm)

⚠ Please make sure the power cord of the display is disconnected before installation.

Step 1: Remove the Mylar strip on the bottom of the display. Use a Phillips screwdriver to loosen two screws and remove the cover.

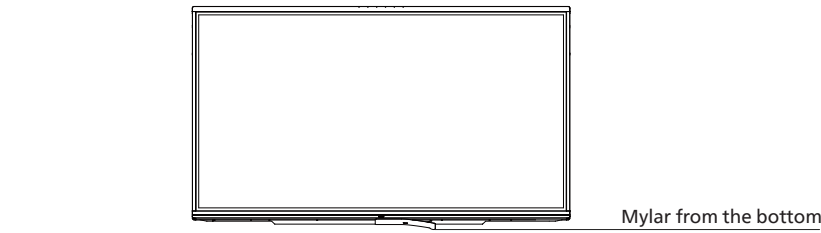

Step 2: Insert the wireless module into the wireless module slot and fix it with screws.

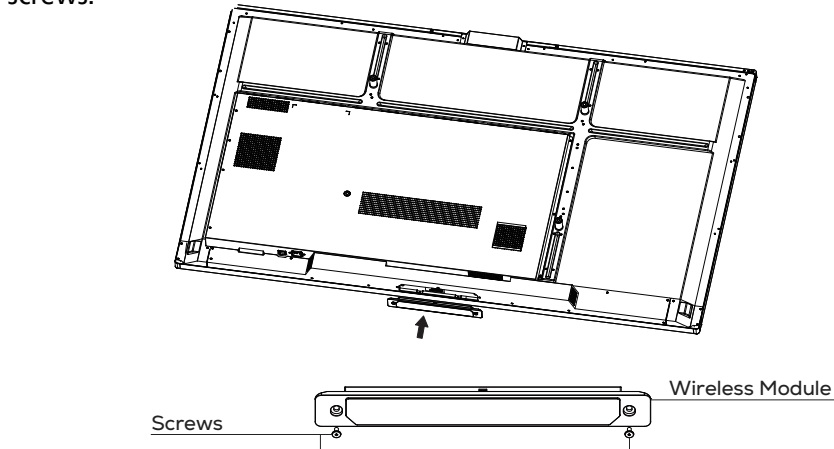

Note: The wireless module works only when it is inserted into the above slot.

• Humidity

Do not expose the unit to rain, dampness, or place it near water.

• Ventilation

Ensure that the unit has enough space for ventilation around: left, right and back >10cm, top> 20cm.

• Earphone

Prolonged use of earphones with high volume may affect hearing. Please turn down the volume in advance before using earphones.

• Standby

It will enter standby mode but not turn off the unit when the standby key is pressed.

• Battery

Accurately transact and recycle scrap batteries after use. To avoid danger, do not let children touch the battery.

• Notes for Cleaning

There are heat sinking holes on the back cover, do not spray water.

• Power Switch Status Signs

“I” means power on, “O” means power off.

• Notes for Maintenance


This device can only be maintained by certified engineer.

PHILIPS

Collaboration
Display

3000 Series

65BDL3152E
75BDL3152E
86BDL3152E

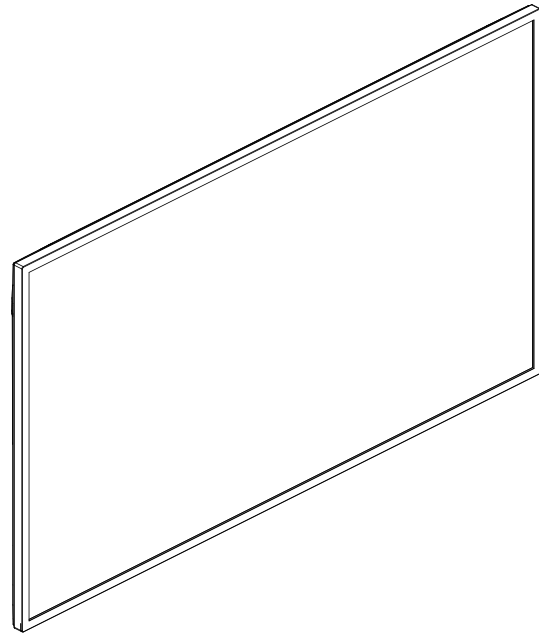

Quick start



For more information, please visit:
<https://www.philips.com/ppds>



Version: V1.00 2023-12-27

TPV USA Corp
6525 Carnegie Blvd #200
Charlotte, NC 28211
USA

2024 © TOP Victory Investments Ltd. All rights reserved.

This product has been manufactured by and is sold under the responsibility of Top Victory Investments Ltd., and Top Victory Investments Ltd. is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

Specifications are subject to change without notice.



Q41G75M181329A